




STONE-LOOK RAPID INDUCTION AREA HEATER

Item # 52541

Model # HYPH4601-9

For Domestic Outdoor Use Only,
not for Commercial Use.

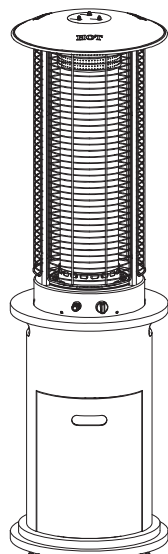

**IMPORTANT: RETAIN FOR
FUTURE REFERENCE
READ CAREFULLY**

DANGER:

If you smell gas:



- ☐ Shut off gas to the appliance.
- ☐ Extinguish any open flame.
- ☐ If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

WARNING: Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. A propane cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



WARNING: For outdoor use only.



WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

Save these instructions for future use. If you are assembling this unit for someone else, give this manual to him or her to read and save for the future.

INSTALLER: Leave this manual with the appliance.

CONSUMER: Retain this manual for future reference.



DANGER: CARBON MONOXIDE HAZARD



This appliance can produce carbon monoxide which has no odor.

Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.



THANK YOU

We appreciate the trust and confidence you have placed in GHP Group Inc through the purchase of this gas fire pit. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing GHP Group Inc!

Safety Information

Before you assemble or operate this unit, please carefully read this entire manual. Failure to do so may result in a fire, explosion, injury or death



WARNING

- The installation of this unit must adhere to local codes or Propane Storage and Handling Code, CSA B149.2.
- **THIS UNIT IS INTENDED FOR OUTDOOR USE ONLY!** This product shall be used outdoors, in a ventilated space and shall not be used in any enclosed area.
- This unit is to be used with propane gas only! (sold separately)
- Do not attach a remote gas supply to this unit.
- Only use propane gas for this unit.
- Solid fuels shall not be burned in this appliance.
- When igniting this unit, stay away from the burner as the flame will light up and may cause injury.
- **LP GAS WARNING:** Do not use any more than 1/4in depth lava rocks/pumice stones/LavaGlass® above the burner holes. Doing so will suffocate the flame.
- If the propane gas tank is leaking gas, you may see or smell it, or hear a hiss. Do the following:
 1. Disconnecting the propane gas tank.
 2. Do not attempt to fix the problem yourself.
 3. Contact your gas supplier or fire department for help.
- Applying too much propane may result in gas pooling and will not burn. Allow fresh air into the unit so that the remaining gas may escape.
- Do not use a flame to check for gas leaks.
- Manifold pressure: 11 inch w.c. (2.74kPa).
- Use LP propane tanks with the following dimensions: diameter 12 in, height 18 in - capacity 20 lbs.
- You must use a propane tank that has a collar to protect the gas valve.
- **DO NOT** fill tank over 80 percent full.
- The tank system must be set up for vapor withdrawal.
- Discontinue use if any part of the propane tank is damaged. Rust and dents may be hazardous and should be inspected by a gas supplier.
- Do not burn anything other than the provided material for this fire table.
- Keep away from the unit for the first 20 minutes after igniting your unit for the first time as lava rocks/pumice stones/LavaGlass® could pop out and cause injury. Should any rocks pop out, discard them.
- Always ensure that lava rocks/pumice stones/LavaGlass® are completely dry before use. Failure to do so will cause them to crack or pop.
- Do not operate unit until all parts are fully assembled.
- Do not paint or color any part of this heating unit.
- Unit may be hot while in use, do not attempt to move it while in use.
- Never leave this heating unit unattended while in use.
- This unit is not intended for cooking.
- Keep any flammable items away and do not use any other fireplace cover for this unit
- Keep a safe distance to avoid burning skin or clothing.
- Do not sit or rest hands or feet on this heating unit.

Safety Information (continued)

- Never place hands or fingers on upper portion of this unit while in use.
- Keep all electrical cords and fuel supply hose away from heated surfaces.
- Cover must be removed when burner is in operation.
- Combustible material should not be within 24 inches of the top of the unit, or within 24 inches around the entire unit.
- Keep the appliance area clear and free from combustible material, gasoline and other flammable vapors and liquids.
- If the flame goes out while burning, turn the gas valve off. Wait 5 minutes before repeating the initial lighting procedure. Once you have a flame started, hold down the control knob for 1 minute.
- Do not add water into the unit.
- Do not operate unit if any part has been under water. Immediately call a qualified service technician to inspect the appliance and replace any part of the control system and any gas control that has been under water.
- Do not disconnect any part while unit is in use.
- Do not store a spare propane tank on or near this unit.
- If the heating unit is indoors, detach the propane tank and leave outdoors.
- Always remove protective cover before operating (if applicable).
- Do not operate on a boat or vehicle. This unit must be used on a flat surface and outdoors ONLY.
- Do not set the protective cover over the unit until it is turned off and completely cooled down.
- Check for leaks after not using the unit for long periods of time.
- **Children should never operate this unit. Children must be supervised while near this unit.**
- Keep gas tank at least 5 feet away from unit when lit. (if external tank)
- Maximum gas supply: 250 psi; Min. gas supply: 10 psi.
- **All installation and repair should be done by a qualified professional. This unit should be inspected annually and cleaned regularly.**
- Inspect all elements of this heating unit before each use. If there is damage, the burner must be replaced.
- Keep the hose out from any pathways to eliminate any accidental damage. (if external tank)
- Be aware of the hazards of high temperatures and stay away from the unit to avoid any burns or injury
- The gas supply tank should be constructed and marked with the specifications for the LP gas tanks of the U.S. Department of Transportation or the National Standard of Canada CAN/CSA-B339, LP gas tanks, spheres and tubes for Transportation of Dangerous Goods; and Commission.
- The LP gas tank must have a listed overfilling prevention device and a QCCI or Type I, (CGA791) LP gas tank connection.
- This heating appliance should not be used on plastic or artificial wood decks.
- **Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition**
- **Young children should be carefully supervised when they are in the area of the appliance.**
- **Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.**
- **Any guard or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.**
- **Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as**

Safety Information (continued)

necessary. It is imperative that the control compartment, burners and circulating airways of the appliance are kept clean.

IF APPLICABLE:

- Allow heating item to cool completely before placing on lid.
- DO NOT use heating item while lid is installed. Always remove the lid while heating item is in use.
- Storage of an appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance. A cylinder must be stored outdoors in a well-ventilated area out of the reach of children. A disconnected cylinder must have dust caps tightly installed and must not be stored in a building, garage or any other enclosed area.
- Place the dust cap on the cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.
- Installation of this appliance at altitudes above 2000 ft (610 m) shall be in accordance with local codes, or in the absence of local codes, ANSI Z223.1/NFPA 54 or CSA B149.1.
- Appliance may shut down in windy conditions in excess of 3 miles per hour (4.83 kilometers per hour).

Only use the regulator and hose assembly provided with this unit. Replacement parts must be supplied directly by manufacturer.


Inspect the burner before use of this unit. If the burner shows any kind of damage, do not operate the appliance. For assistance with repair or replacement of the burner or any other parts, call manufacturer at 1.877.447.4768.



NOTE: You must follow all steps to properly assemble this heating item. Make sure the gas valve is turned 'OFF' before assembling. Do NOT attempt to assemble without proper tools.

BE CAREFUL: WHEN CERTAIN MATERIALS OR ITEMS ARE STORED ABOVE, BESIDE OR UNDER THIS HEATER WHILE IN USE, THEY WILL BE SUBJECT TO RADIANT HEAT AND COULD BE SERIOUSLY DAMAGED.

- Combustible materials should not be within 24 inches of the top of the unit, or within 24 inches around the entire unit.

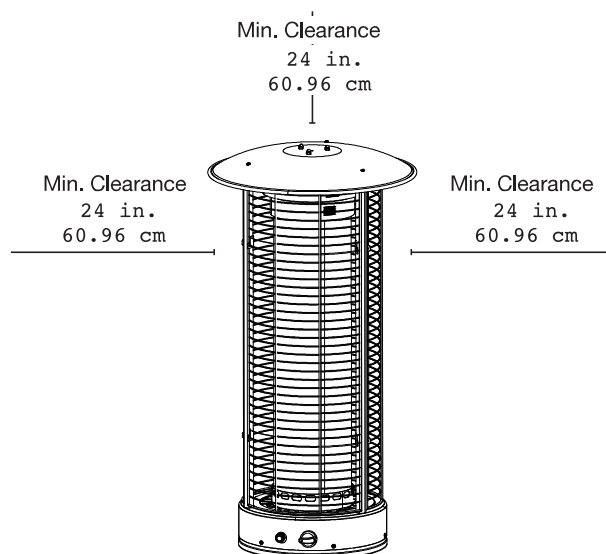

Warranty

1 YEAR LIMITED WARRANTY

WHAT IS COVERED

If within one year from the date of original purchase, this item fails due to a defect in material or workmanship, we will replace or repair at our option, free of charge.

WHAT IS NOT COVERED

This warranty does not cover defects resulting from improper or abnormal use, misuse, accident, or alteration. Failure to follow all instructions in the owner's manual will also void this warranty. The manufacturer will not be liable for incidental or consequential damages, or common erosion of outdoor products. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion of incidental or consequential damages may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Contact the Customer Service Team at 1-877-447-4768 or visit www.ghpgroupinc.com.

 
Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all pieces from the carton and make sure that you have all parts listed (refer to package contents list). If you are missing parts, please contact 1-877-447-4768 for further assistance.

TOOLS REQUIRED


Phillips screwdriver

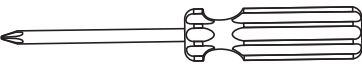

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.

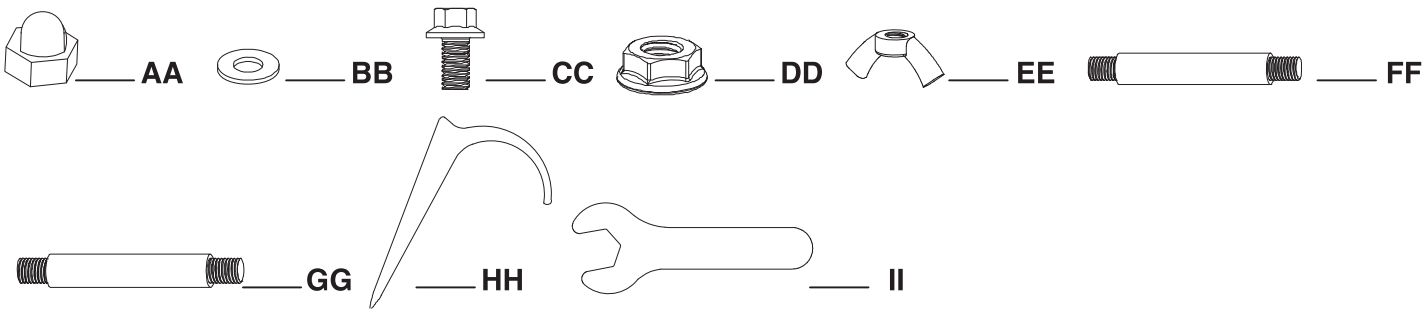

Part	Description	Quantity
AA	M6 cap nut	3
BB	M6 washer	3
CC	M6 x 10 screw	4
DD	M8 nut	3
EE	M5 wing nut	3
FF	M6 studs	3
GG	M8 studs	3
HH	Anchoring stake	4
II	Wrench	1


Assembly

1 Assembling the tank support

- Flip the body (G) upside down on a protected surface.
- Remove the glass tube (H).
- Attach the tank support (A) to the bottom of the body (G) using four M6 x 10 screw (CC). Flip the body (G) over.



NOTE: Make sure the wing nut on the tank support (A) faces the door on the body (G).

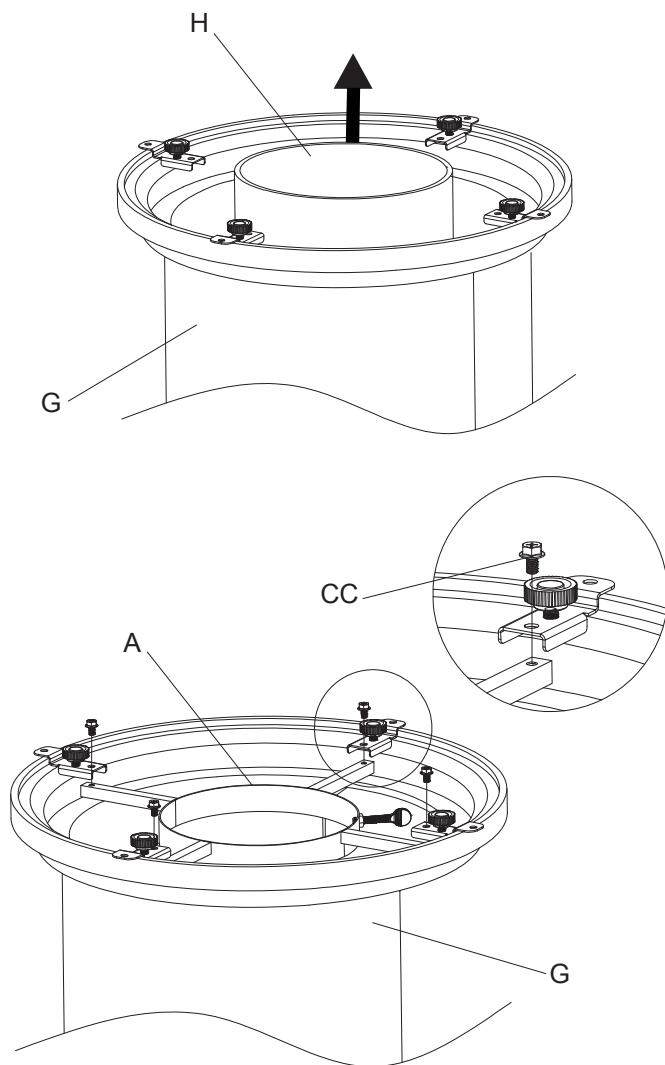


2 Assembling the upper supports

- Slide the three upper supports (J) into the slots in the burner at the top of the body (G).
- Be sure that they are fully inserted.
- Tighten the upper supports (J) with three M5 wing nuts (EE).




NOTE: Be sure that the hooks on the upper support are facing up.

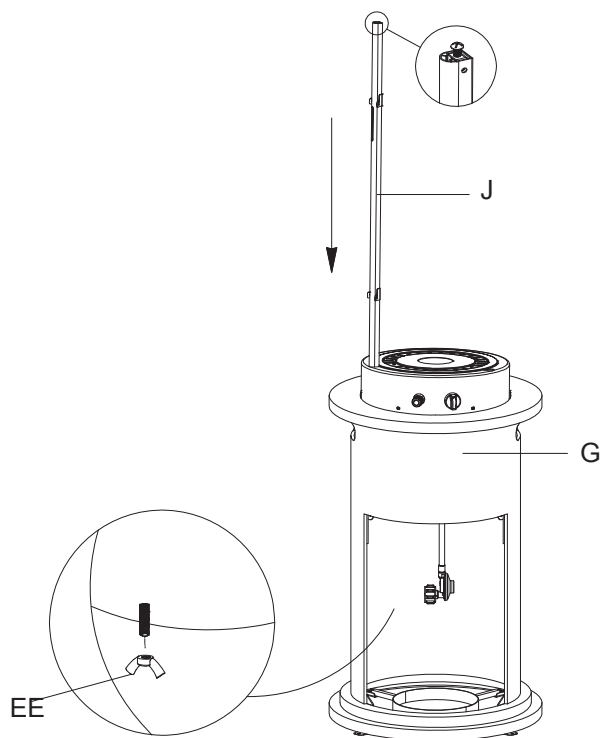

Assembly (continued)


3 Assembling the glass tube ring

- Remove the three preassembled screws from the burner at the top of the body (G).
- Attach the glass tube ring (B) to the top of the burner using the three screws you just removed.

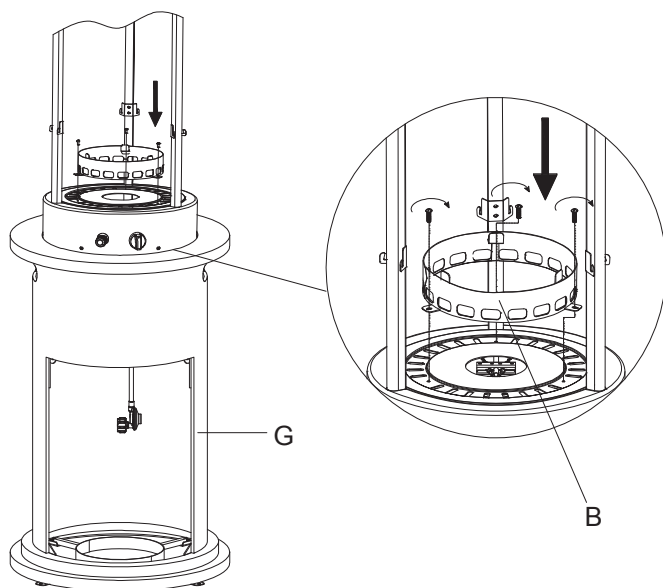


4 Assembling the upper and lower radiation screens

- Attach the upper radiation screen (E) to the lower radiation screen (F) using three M8 studs (GG) and three M8 nuts (DD).
- Turn the wing screw on the outside of the tank holder (G) clockwise to tighten the tank into the tank holder (G).

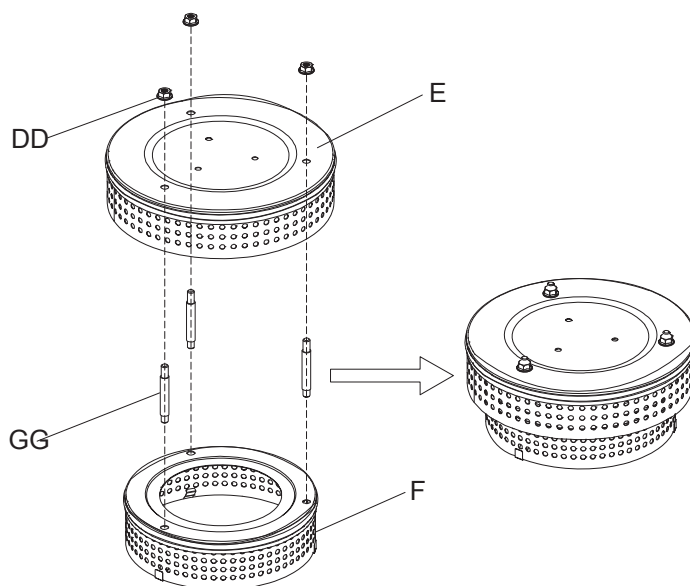


5 Assembling the reflector

- Attach the reflector (D) to the radiation screen assembly using three M6 studs (FF), three M6 washers (BB) and three M6 cap nuts (AA).
- Tighten with the included wrench (II).
- Make sure it is fastened securely and tighten connections by hand only.

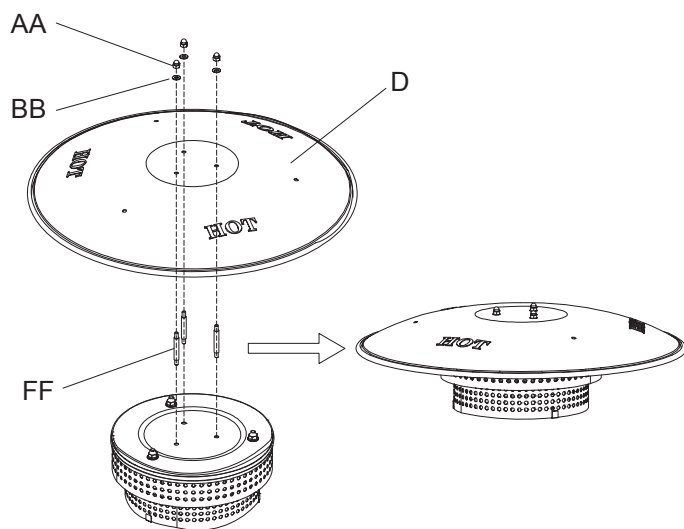


6 Assembling the reflector

- Remove the three preassembled screws from the upper supports (J).
- Place the reflector (D) onto the top of the upper supports (J).
- Replace the three screws removed at the beginning of this.
- Step to secure the reflector (D) to the upper supports (J).
- Tighten with a Philips screwdriver

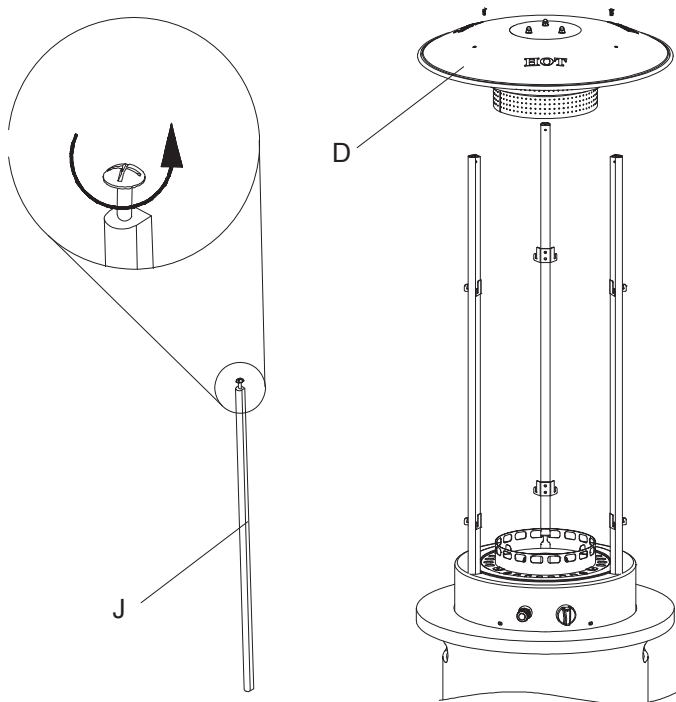

Pre-Assembly

PACKAGING CONTENTS

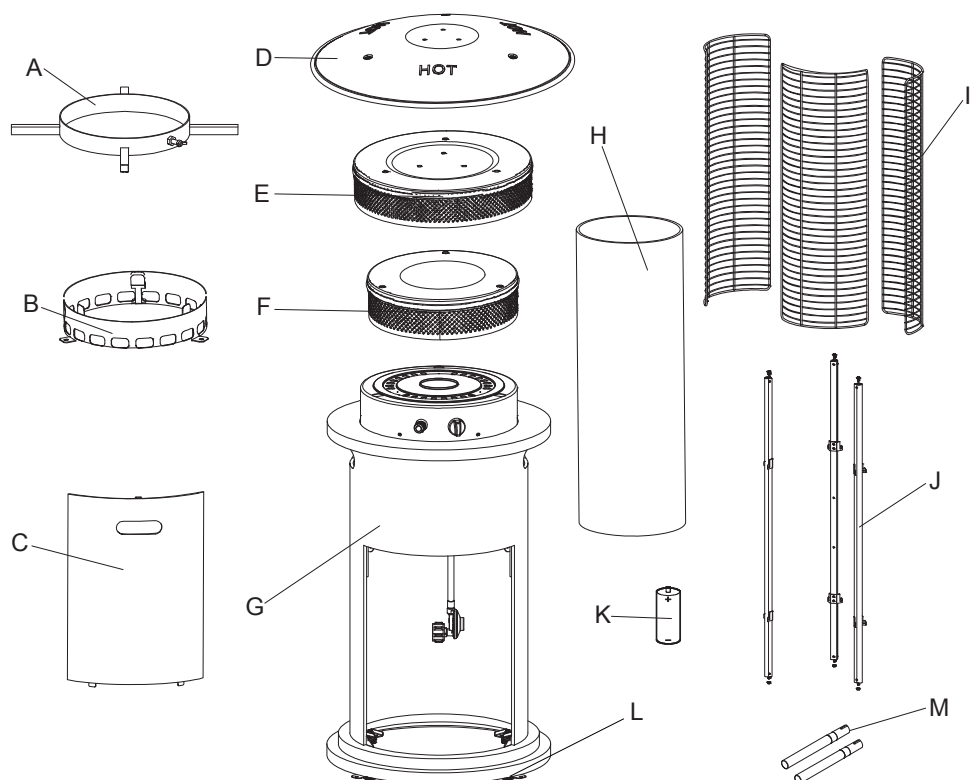

Part	Description	Quantity
A	Tank support	1
B	Glass tube ring	1
C	Door (pre-assembled)	1
D	Reflector	1
E	Upper radiation screen	1
F	Lower radiation screen	1
G	Body	1
H	Glass tube	1
I	Mesh Guard	3
J	Upper support	3
K	Battery (AA)	1
L	Feet (pre-assembled)	4
M	Touch-up pen	2


Assembly

1 Assembling the tank support

- Flip the body (G) upside down on a protected surface.
- Remove the glass tube (H).
- Attach the tank support (A) to the bottom of the body (G) using four M6 x 10 screw (CC). Flip the body (G) over.



NOTE: Make sure the wing nut on the tank support (A) faces the door on the body (G).

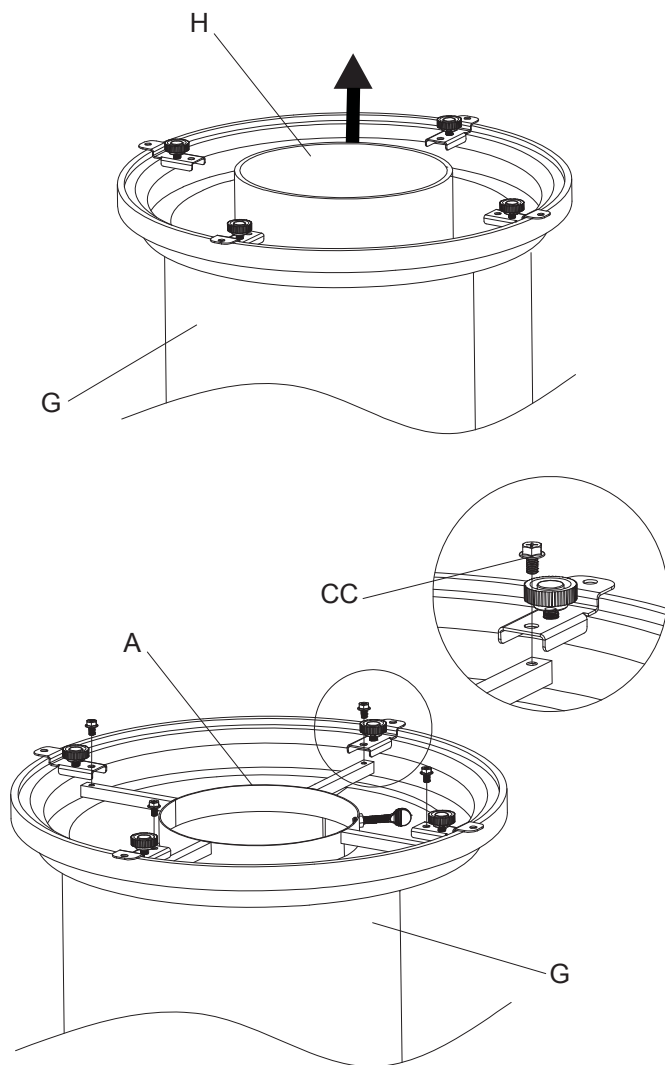


2 Assembling the upper supports

- Slide the three upper supports (J) into the slots in the burner at the top of the body (G)
- Be sure that they are fully inserted.
- Tighten the upper supports (J) with three M5 wing nuts (EE).




NOTE: Be sure that the hooks on the upper support are facing up.

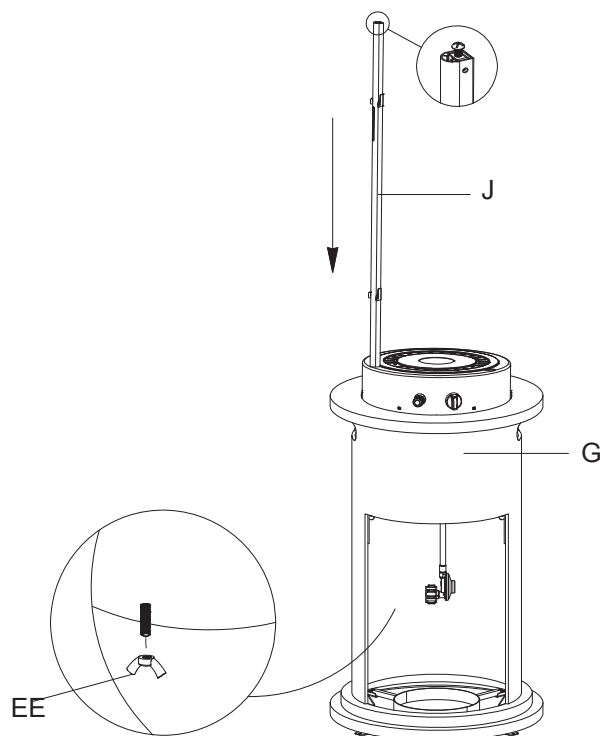

Assembly (continued)


3 Assembling the glass tube ring

- Remove the three preassembled screws from the burner at the top of the body (G).
- Attach the glass tube ring (B) to the top of the burner using the three screws you just removed.

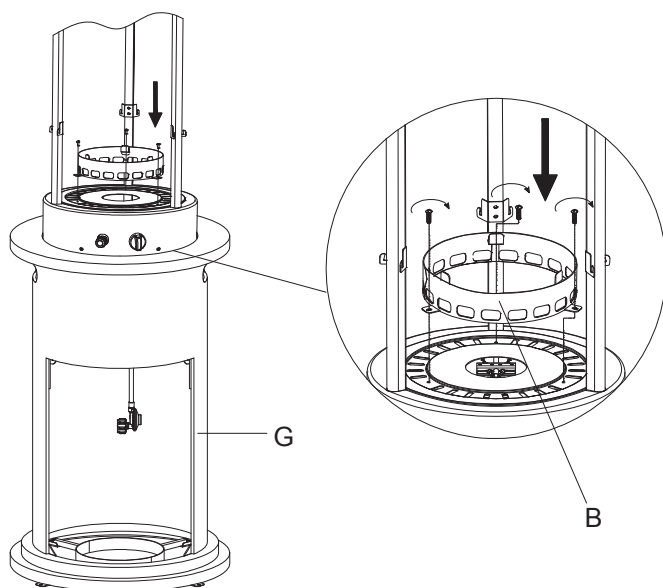

4 Assembling the upper and lower radiation screens


- Attach the upper radiation screen (E) to the lower radiation screen (F) using three M8 studs (GG) and three M8 nuts (DD).

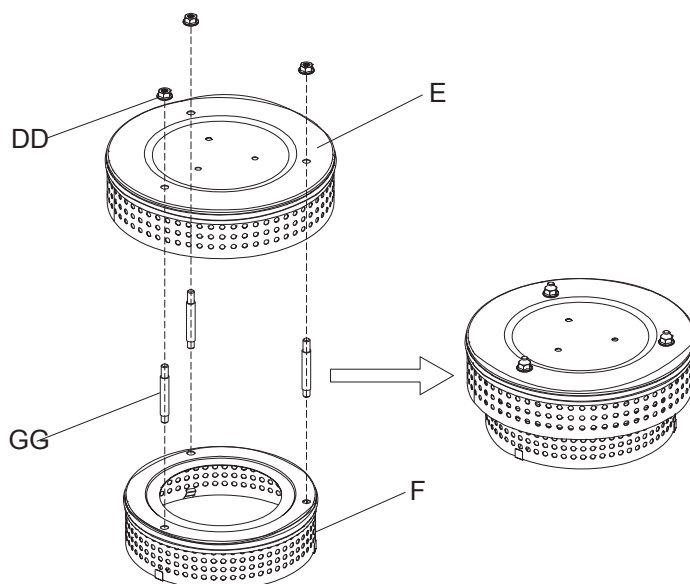

Assembly (continued)


5 Assembling the reflector

- Attach the reflector (D) to the radiation screen assembly using three M6 studs (FF), three M6 washers (BB) and three M6 cap nuts (AA).
- Tighten with the included wrench (II).

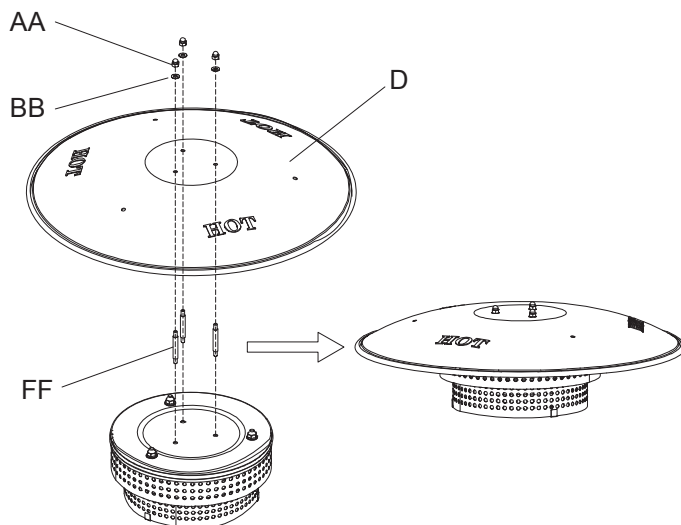

6 Assembling the reflector


- Remove the three preassembled screws from the upper supports (J).
- Place the reflector (D) onto the top of the upper supports (J).
- Replace the three screws removed at the beginning of this.
- Step to secure the reflector (D) to the upper supports (J).
- Tighten with a Philips screwdriver

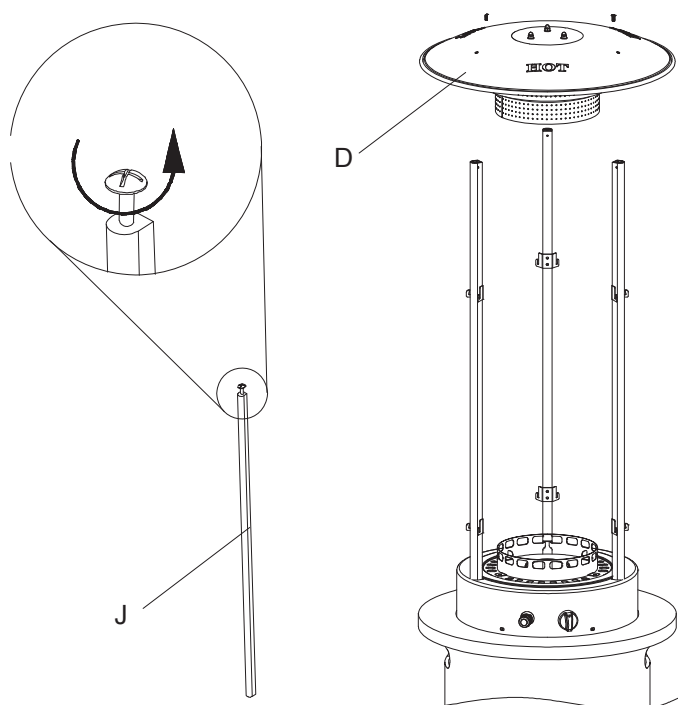

Assembly (continued)


7 Attaching the glass tube

- Carefully slide the glass tube (H) in between the upper supports (J) and place on top of the glass tube ring (B).

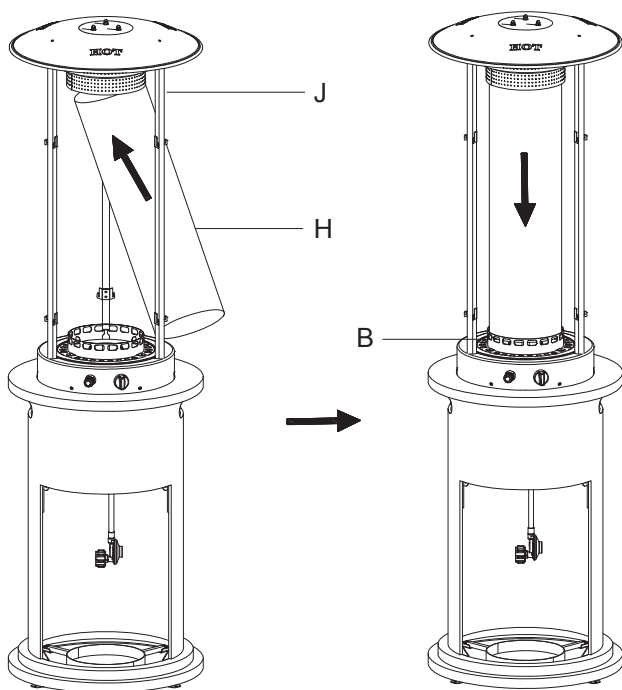

8 Attaching the mesh guards


- Attach the three mesh guards (I) onto the hooks at the top of the upper supports (J).

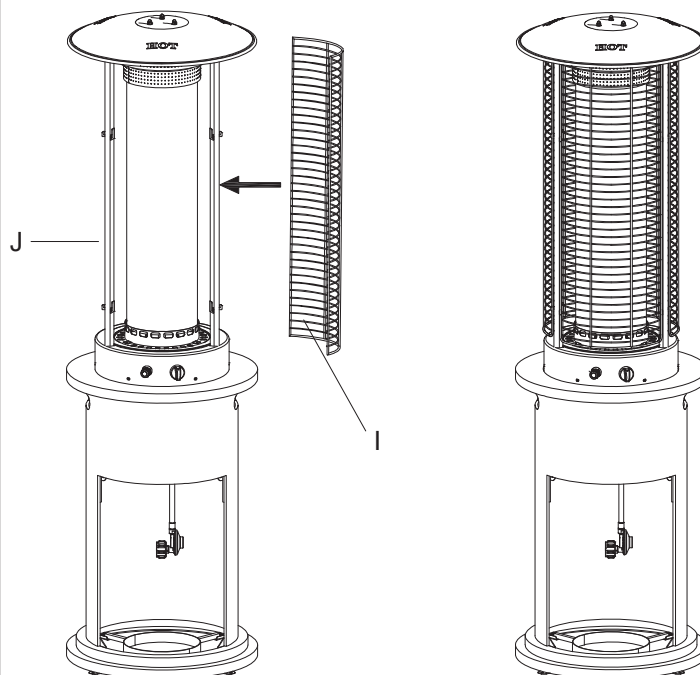

Assembly (continued)

9 Attaching the propane gas tank

- Remove door (C) from body (G).
- Place the propane gas tank (not included) into the tank support (A).
- Turn the preassembled wing screw clockwise to ensure the propane tank is secure

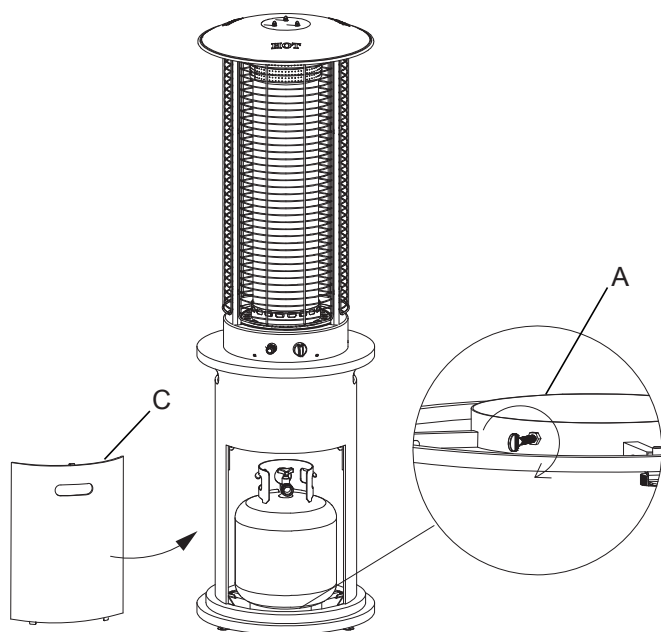


10 Attaching the regulator

- Turn the cylinder valve on the tank clockwise to close the propane tank.
- Attach the preassembled regulator to the cylinder valve by turning the regulator coupling nut clockwise
- Make sure it is fastened securely and tighten connections by hand only.




WARNING: Please inspect the rubber O-rings in the propane tank valve to ensure it is not worn before attaching regulator. Worn rubber O-ring can cause leaks, explosions and serious injury by propane tank.

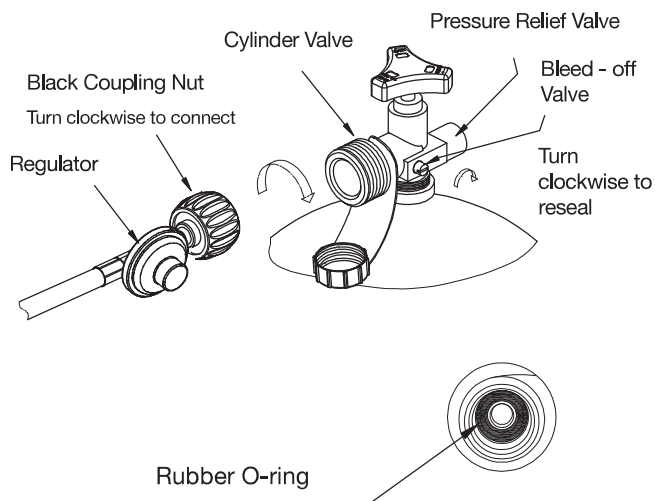

Assembly (continued)


11 Attaching the battery

- Unscrew the rubber cap on the electronic igniter and slide the battery (K) into the battery slot.
- Make sure the positive side of the battery faces outwards.
- Screw the electronic igniter cap over the battery tightly.

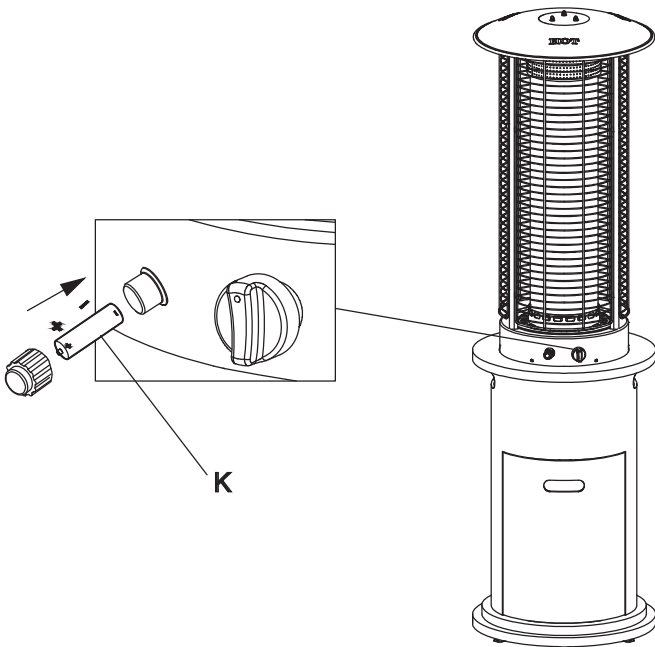

12 Attaching the anchoring stakes

- Use the four anchoring stakes (HH) to secure the heater in place to the ground

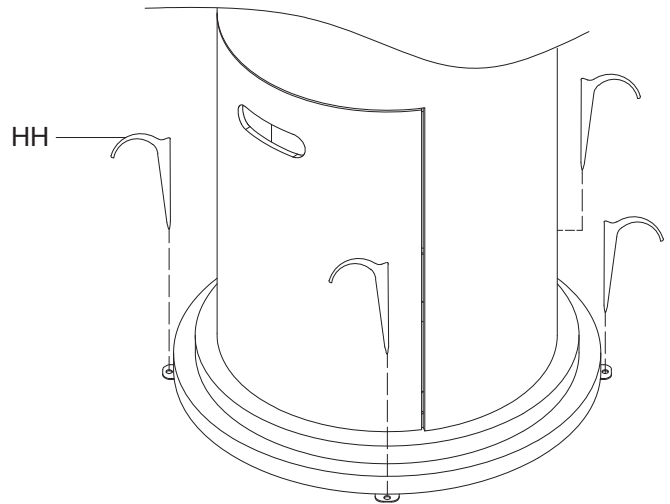

1 Performing a leak test

- The glass tube may break if it is wet while in use; never use the heater while it's raining outside
- Do not splash any liquid on the heater while it is in use.
- Keep children away from the unit while in use; the glass tube may be extremely hot while in use. Do not touch.
- Ensure that the heater is on a strong and flat surface. The heater may be damaged if the unit tips over.
- Never use the heater if the glass tube shows any cracks.

WARNING: Before performing a leak test, be sure that no sparks can occur and you are in a spacious outdoor area. Connect the propane gas tank to the regulator and turn the valve on the unit to the 'OFF' position. Brush a soap and water mixture on all connections. Turn the gas supply on; if bubbles occur on any connection there may be a leak. If you smell gas or a leak is discovered turn the gas valve off, disconnect propane gas tank and do not use the appliance until the leak is repaired.

Do not use the heating unit without inspecting the gas hose. If there are signs of wear or abrasion you must replace the hose (if applicable).

Wait 50 minutes after extinguishing flame prior to placing a lid (if applicable) or protective cover on heater.




2 Lighting the heater



WARNING: If the lighting instructions are not followed directly a fire or explosion may occur resulting in property damage, personal injury or death.

- Unscrew the ignition button on the burner to see if the battery (K) has already been placed inside. If the battery (K) is not already within the ignition button on the burner, please place the battery (K) into the ignition button slot.
- Make sure the ignition control knob is turned to the "OFF" position. Connect propane gas tank and slowly open the valve on the propane gas tank by turning the knob counterclockwise.
- Press in and turn the ignition control knob to the "pilot" position; hold down for 1 minute.
- Push the ignition button, while still holding down control knob down, to generate a spark.
- Check to see if there is a pilot light through the glass tube (H). If there is, turn the control knob to the "LOW" position.
- For maximum flame height and heat output, turn the control knob to the "HEIGHT" position.

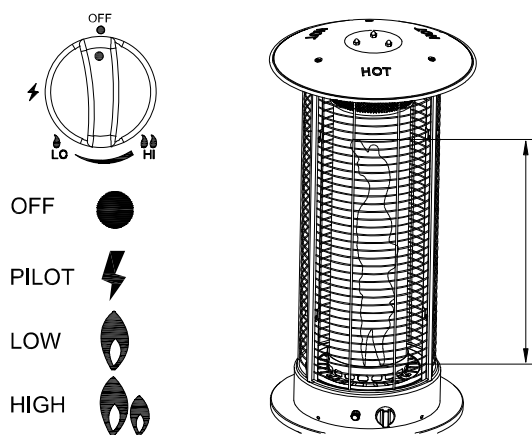

Operation (continued)

3 Extinguishing the fire

- ❑ Push and turn the ignition control knob clockwise to the “OFF” position.
- ❑ Turn the propane gas tank valve on the gas tank to close the gas supply and disconnect the propane gas tank.

Maintenance

- ❑ Before performing any maintenance always disconnect the propane gas tank.
- ❑ Store your product indoors during winter months. Avoiding extreme cold temperatures will protect the unit from exposure damage.
- ❑ Keep the heating item free and clear from combustible materials.
- ❑ Visually inspect the burner for any obstructions and keep the tank enclosure free and clear from debris.
- ❑ Use a soft brush to get rid of mild stains, loose dirt and soil after the burner and pumice stones/lava rocks/LavaGlass® are completely cooled down. Wipe down with a soft cloth.
- ❑ Harsh weather conditions may cause stubborn stains, discoloration, and possible rust columning.
- ❑ Permanent damage may occur if any powder or solvent comes in contact with painted or plastic components on this fire column.
- ❑ Keep the heating unit stored away from direct sunlight.
- ❑ If storing this unit inside, disconnect the propane gas tank from the gas valve.
- ❑ Not using manufacturer approved or supplied parts/accessories may result in a defective condition and void the warranty of this fire column.
- ❑ Carbon deposits may pose as a fire hazard; clean the reflector and inside of the glass tube with soap and water if any carbon deposits are present.
- ❑ Always place a lid (if applicable) or protective cover on the fire column when not in use.

Care and Cleaning

Envirostone® Surface Care

Our Envirostone® material has been sealed to prevent staining and moisture absorption, but it does require proper maintenance to ensure the integrity of the surface. Please see below for recommendations on maintaining your Envirostone® surface for years of pleasure:

Please see below for recommendations on maintaining your Envirostone® surface:


- ❑ Clean any spills immediately to prevent permanent surface staining or damage.
- ❑ Blot any liquid spills with a clean, dry cloth to avoid spreading the spill to the rest of the table.
- ❑ Clean your Envirostone® surface with a soft, clean cloth or sponge.

- ❑ Mix a solution of warm, clean water and mild dish soap to remove any surface dirt or mild spills.
- ❑ Rinse all soap solution off of the tabletop and dry it completely to prevent water spots.
- ❑ Regularly cleaning the Envirostone® surface will help extend the life of the product.
- ❑ Do not slide products across the Envirostone® surface to avoid permanent scratching and damage.
- ❑ Always use protective mats such as coasters or placemats when eating on an Envirostone® surface.
- ❑ These protective products will help absorb sweating on cool beverages and will block out any heat rings from appearing beneath a warm mug or plate.
- ❑ When placing hot dishes on an Envirostone® surface, always use mats or hot pads.
- ❑ Envirostone® surface must be covered at all times when not in use.
- ❑ Cover your product with an outdoor furniture cover when not in use to protect it from the elements.
- ❑ Store your product indoors during winter months.
- ❑ Avoiding extreme cold temperatures will prevent cracking of the tabletop

Troubleshooting

Problem	Cause	Solution
Pilot won't light.	❑ Gas valve may be off.	❑ Turn the gas valve on.
	❑ Gas tank maybe empty.	❑ Refill the gas tank.
	❑ Orifice may be blocked.	❑ Clean out the orifice.
	❑ Air is within supply system.	❑ Pump out air from all lines.
	❑ Loose connection.	❑ Check all fittings and tighten connections as necessary.
Burner won't light while using a match.	❑ Debris around the pilot.	❑ Clean out the debris.
	❑ Loose connection.	❑ Check all fittings and tighten connections as necessary.
	❑ Thermocouple is bad.	❑ Call for a replacement part and replace the thermocouple.
	❑ Gas leak within the line.	❑ Check all connections; call for a replacement part if anything is damaged.
Burner won't light	❑ Lack of gas pressure.	❑ Gas tank is almost empty.
	❑ Gas pressure is low.	❑ Gas tank is almost empty.
	❑ Orifice may be blocked.	❑ Clean out the orifice.
	❑ Control knob isn't on.	❑ Turn the control knob on.
	❑ Thermocouple is bad.	❑ Call for a replacement part and replace the thermocouple.
	❑ Pilot light assembly is bent or not in the correct location.	❑ Place pilot light in the correct location and retry lighting procedure.

Service Parts

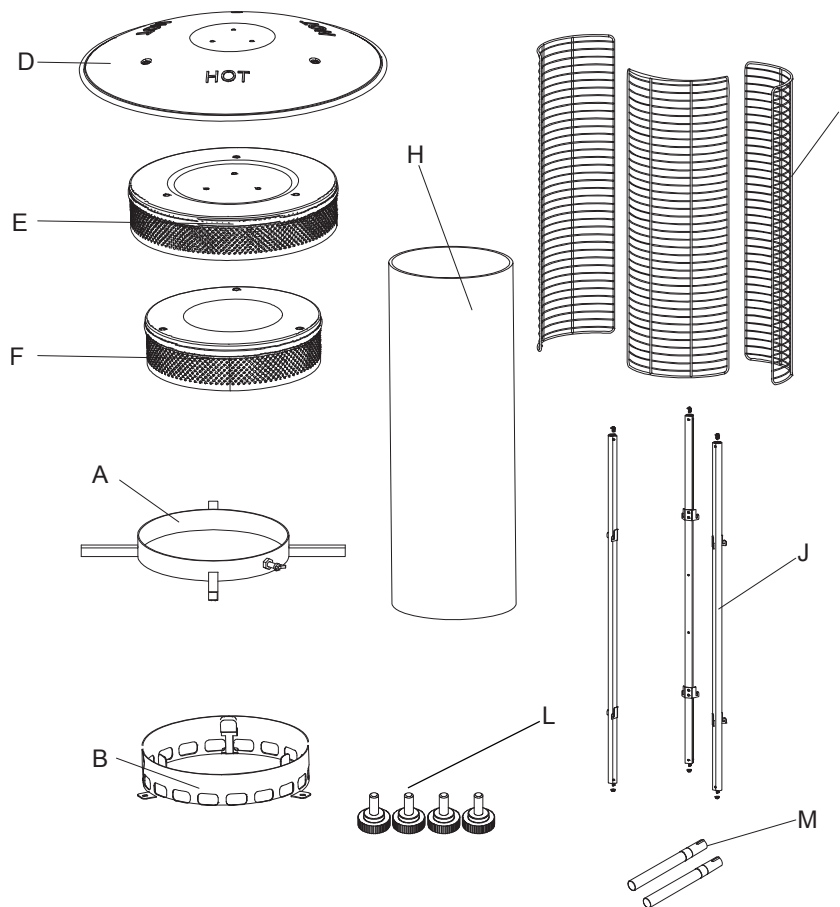

Part	Description	Spare Part Number
A	Tank support	30-07-980-B
B	Glass tube ring	30-07-664
D	Reflector	30-07-661
E	Upper radiation screen	30-07-662
F	Lower radiation screen	30-07-663
H	Glass tube	30-07-667
I	Mesh guard	30-01-668
J	Upper support	30-01-671
L	Feet (preassembled)	30-07-981-B
M	Touch-up pen	30-07-903-B