 


CASTLERY
x
Tan France

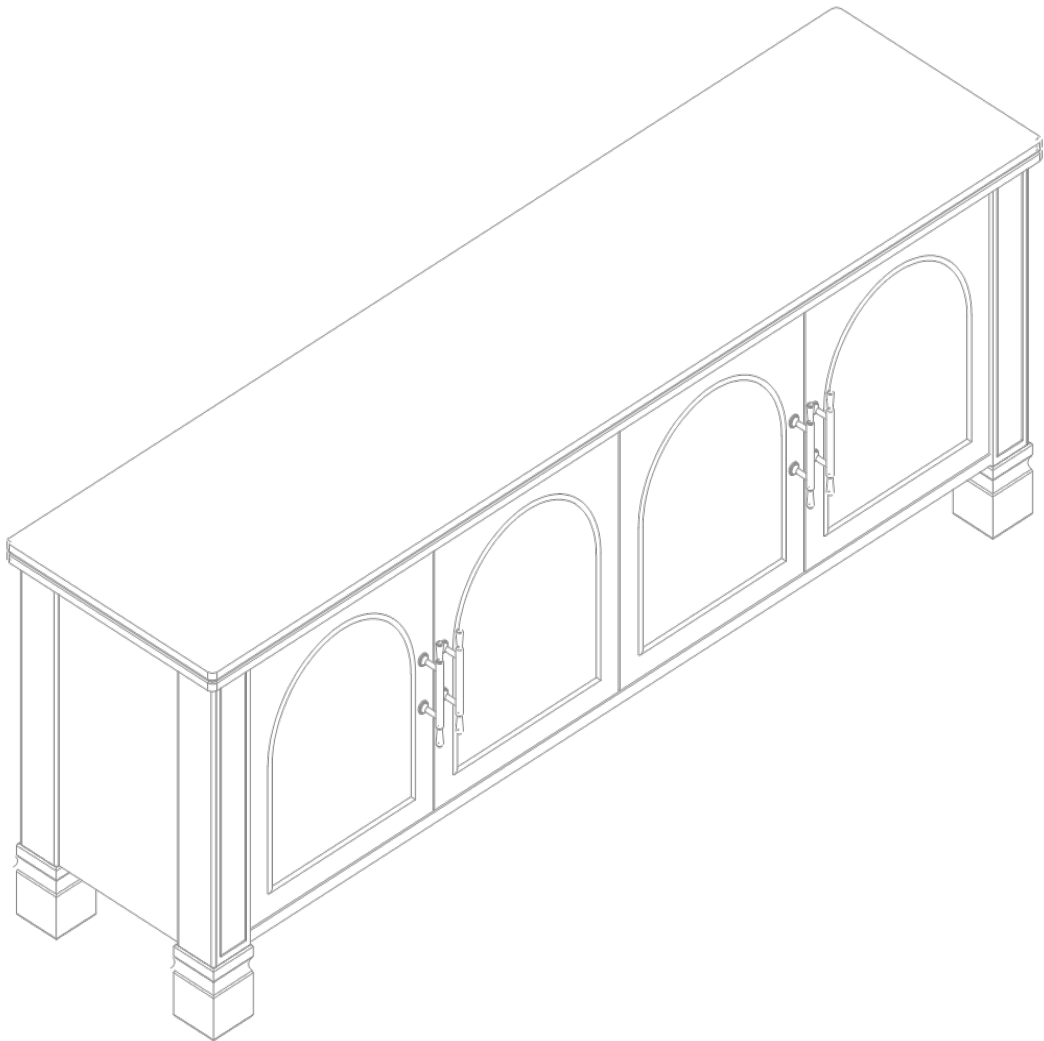

Rava TV Console

ASSEMBLY INSTRUCTIONS & CARE GUIDE

Hello there

We're so glad that our Castlery product has found a home with you. As proud makers of modern, quality furniture, we're confident that you will love and enjoy your purchase.

Setting it up is easy. Read on for a step-by-step guide to have your item assembled and ready for use.

Once you're done, consider sharing a photo on social media or leaving us a review. We'd love to see how you've styled it in your space.

Thank you for being part of the Castlery community!

Contact us.

 
For any enquiries or issues regarding your purchase, you can contact us via www.castlery.com/contact-us.




www.castlery.com




Before you start...

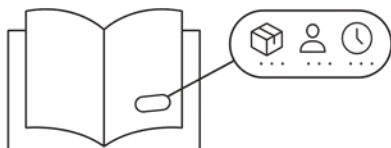

 
Check that you have received all cartons and familiarize yourself with the assembly requirements. This includes setting aside the allocated time required and having someone to assist you, if needed.

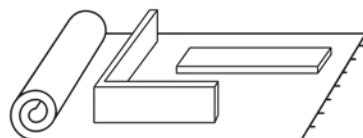

 
Ensure enough space for assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

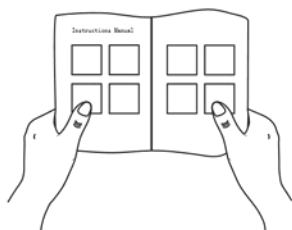

 
Read instructions carefully, and check that no parts are missing.

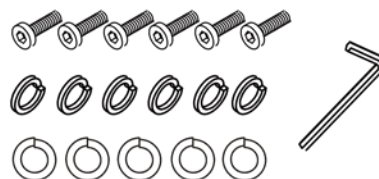

 
Lay out all hardware on a soft surface so you can easily identify them.

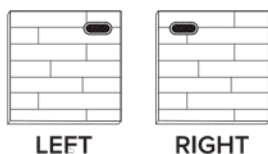

 Carefully identify all components to differentiate which pieces are left and right.

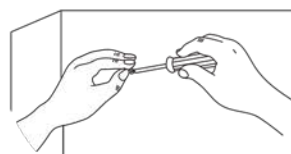

Carefully install your new product following the instructions stated. Don't skip ahead!

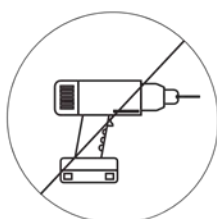



DO NOT over-tighten screws or use a drill. This will damage the product.



If you need further assistance, please contact us via www.castlery.com/contact-us.

Overview

  The bolts are in a red PE bag within box 1.

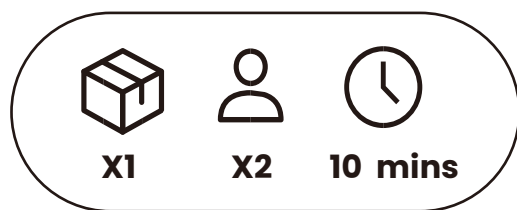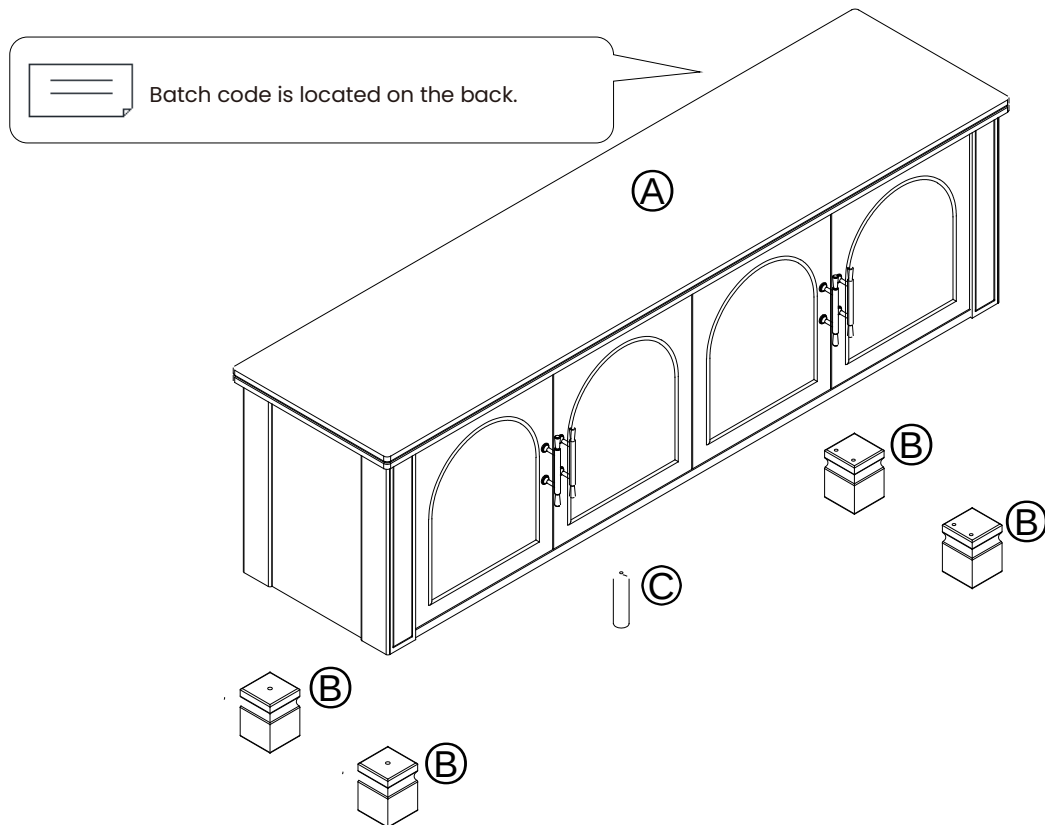


IMPORTANT: 2 persons needed for assembly.

- ⚠ This will help to minimize potential damage to the product or injury to persons during assembly.
- ⚠ There are inner box(es) that include components required to complete this assembly.
- ⚠ Please do not completely tighten all the hardware, until each assembly step is complete.
- ✓ Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note you will need the original package if you want to return the product later.
- ❓ If parts are missing or damaged, we will gladly ship your replacements parts free of charge. Please contact us via www.castlery.com/contact-us Illustrations in this guide are for reference only and may be slightly different from the actual object.

Parts

 
BOX 1 OF 1

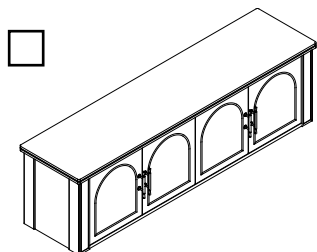

Ⓐ

Body

 
x1

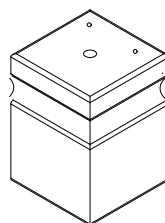

Ⓑ

Leg

 x4

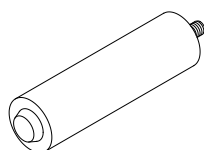


Ⓒ

Middle Leg

x1

Hardware

 BOX 1 OF 1

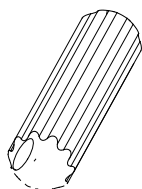


①

Dowel

ø8x30mmL

 x8

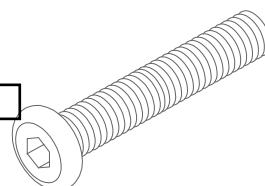


②

Bolt

ø5/16"x4"

 x4



③

Spring Washer

ø5/16"

x4

 


④

Washer

ø5/16"xø3/4"

x4

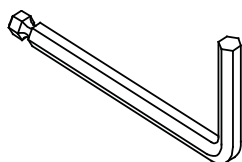

⑤

Allen Key

 
 
 
5mm

x1


Step 1




Do not take out the packaging material on the fixed shelf.

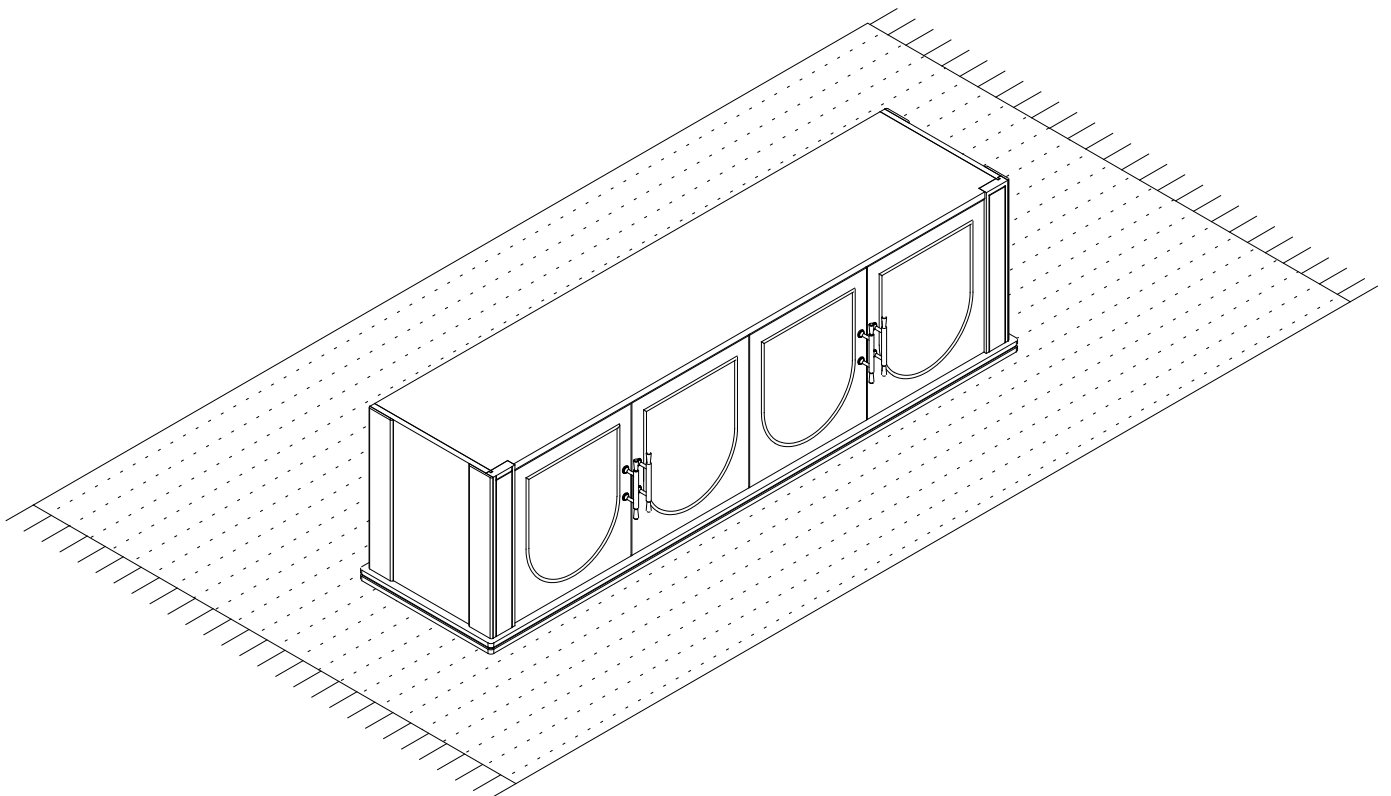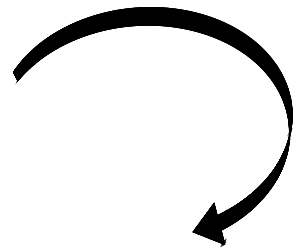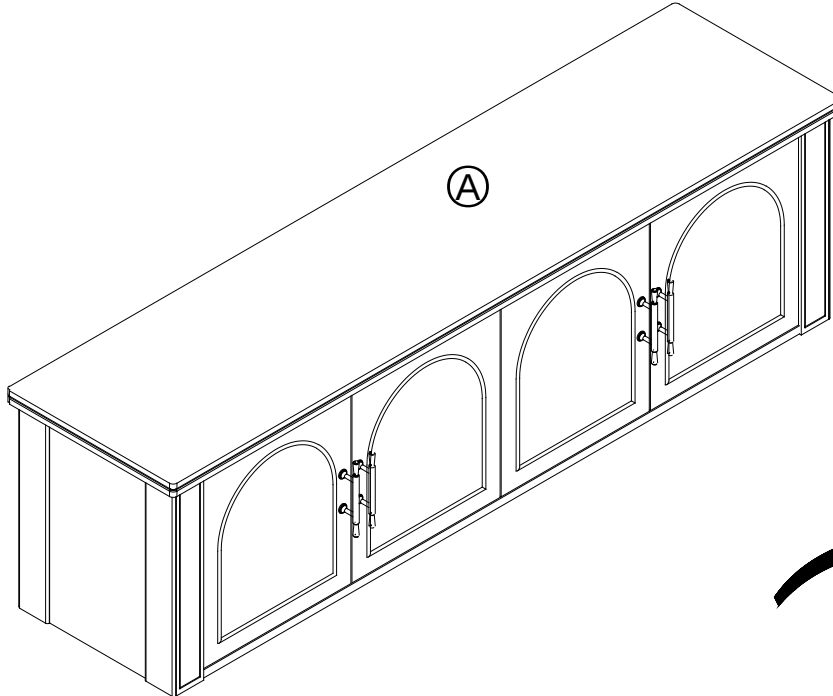


 
Step 2

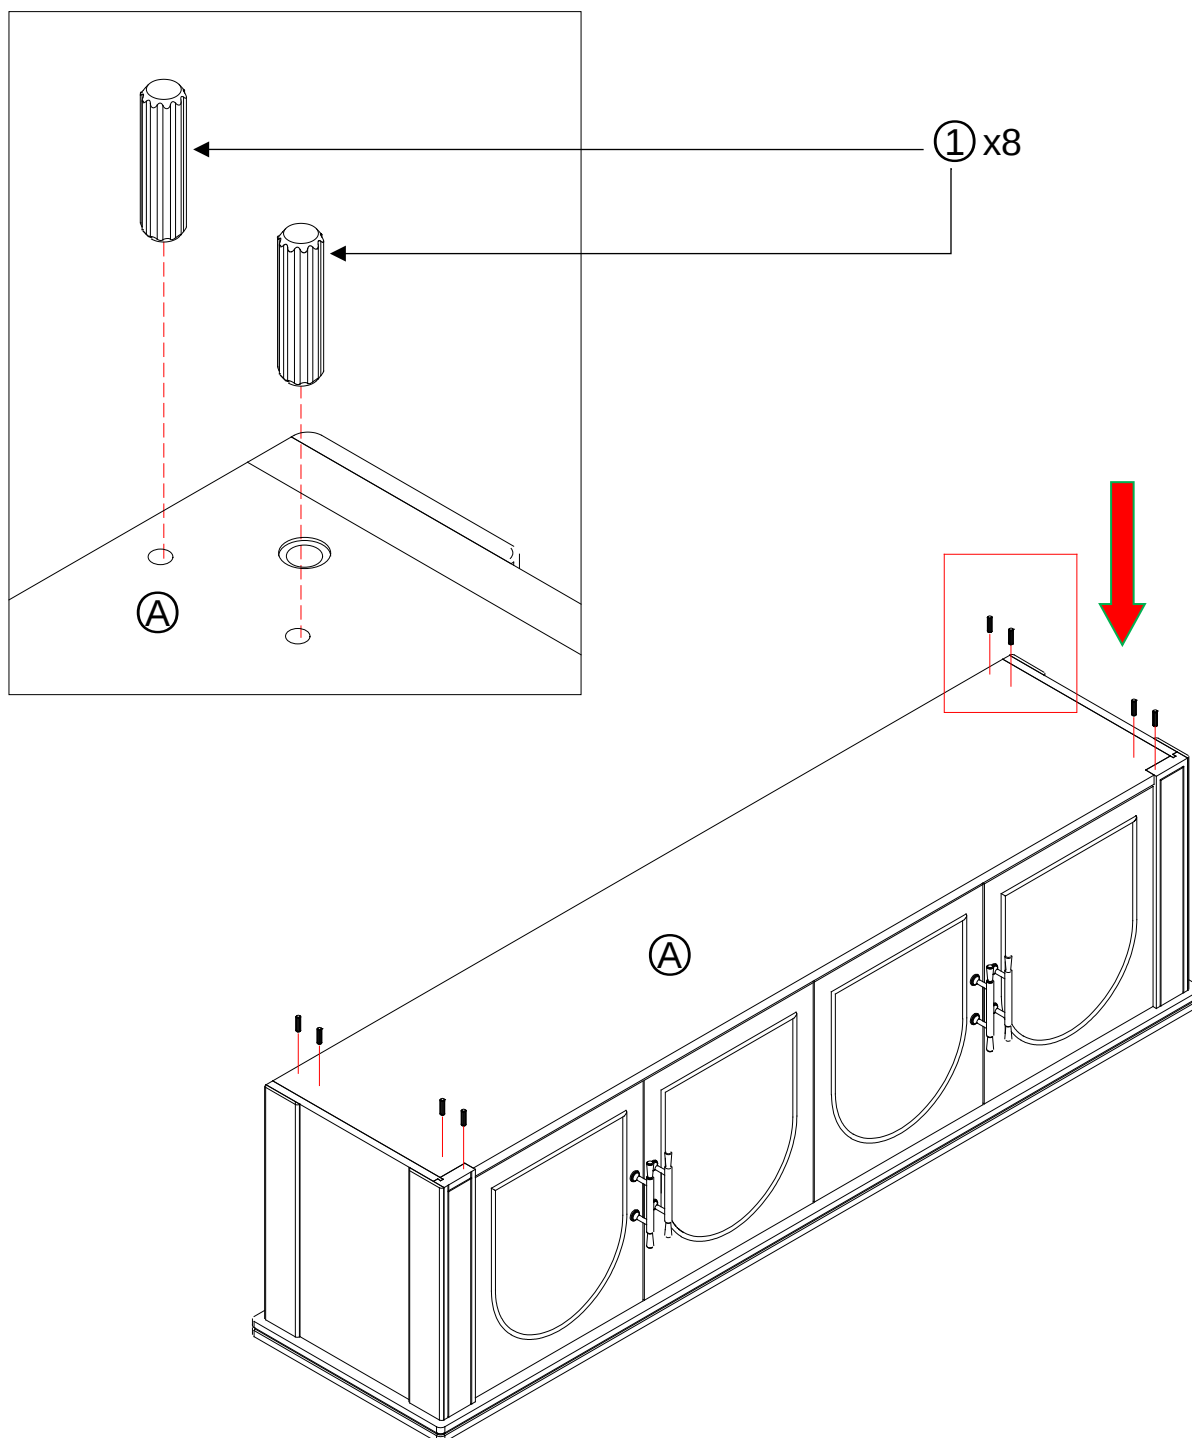

 
Step 3

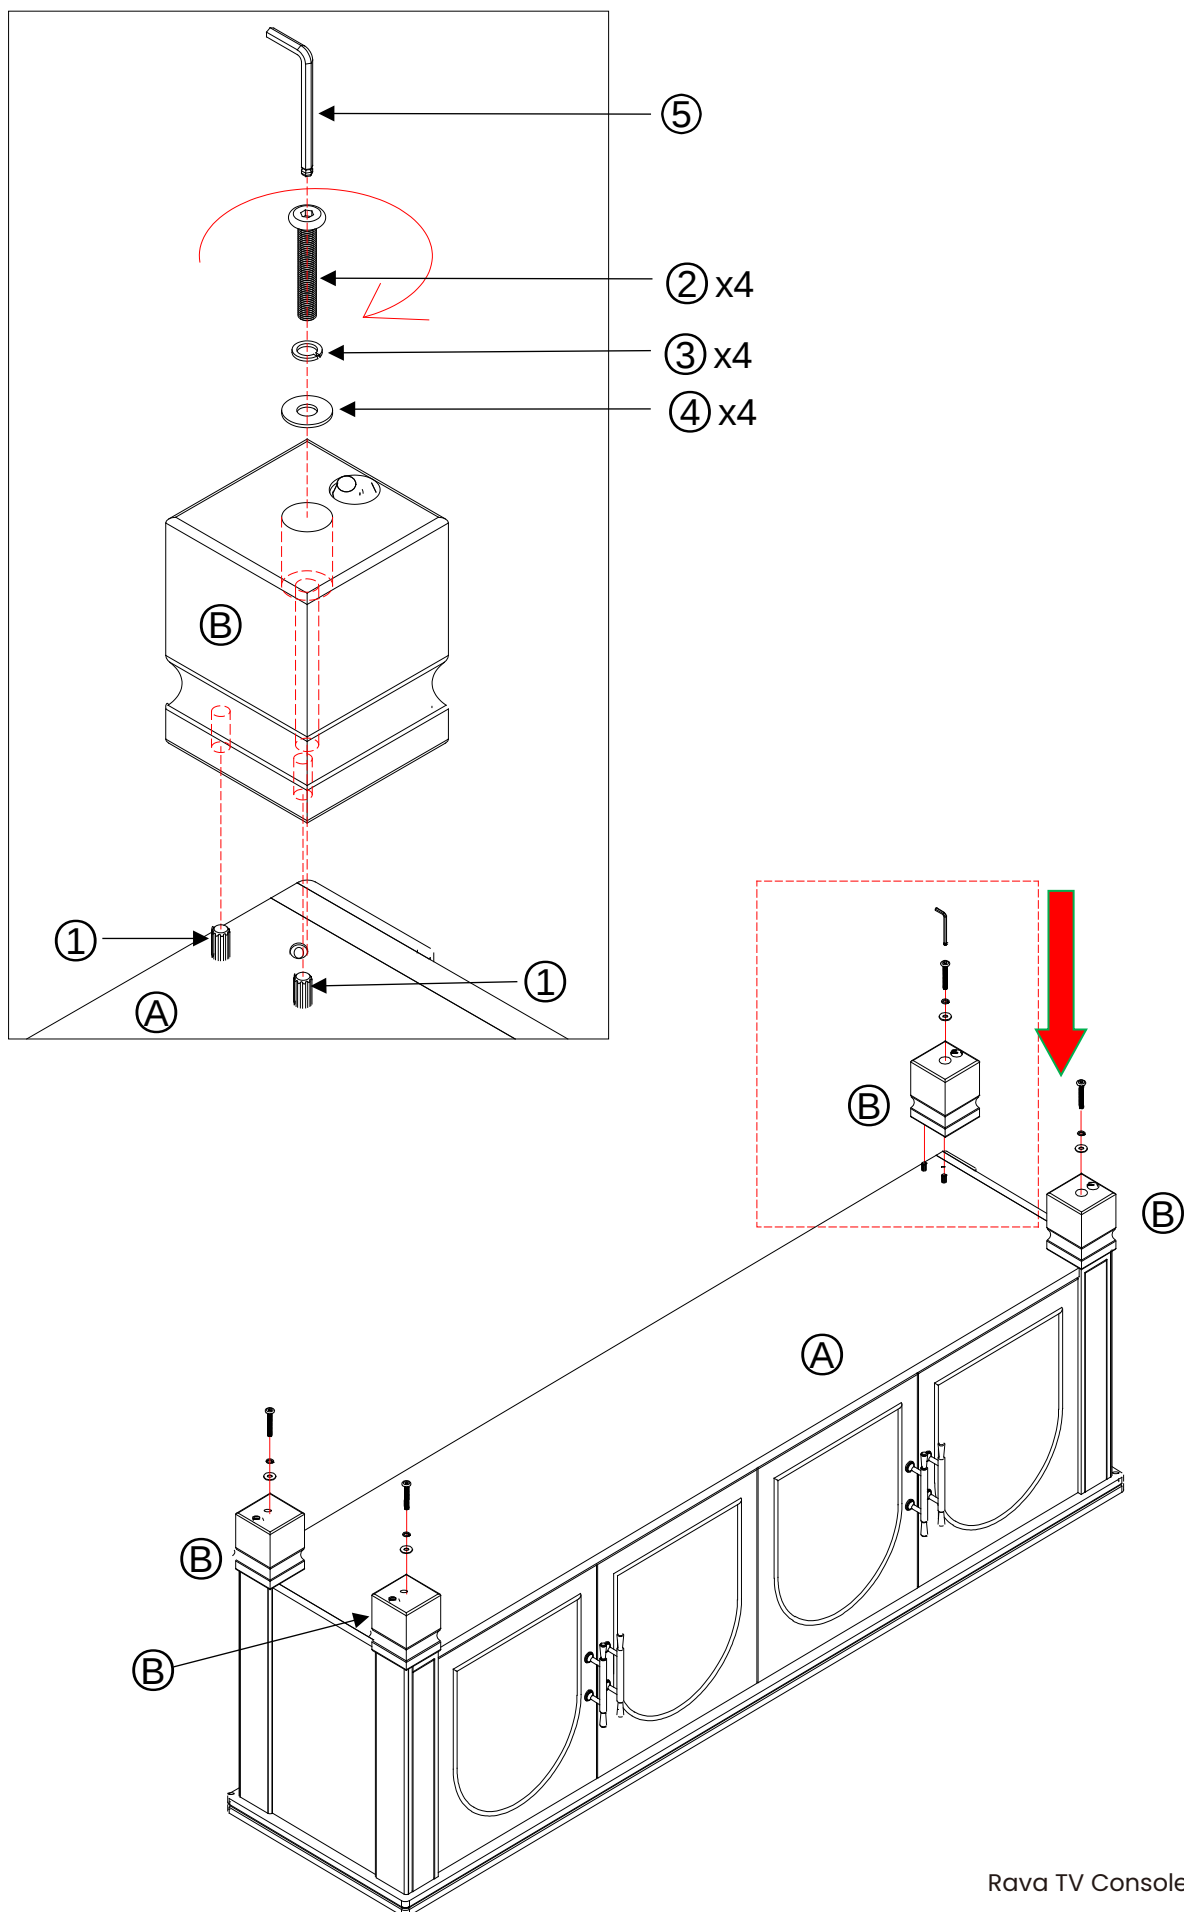

  
Step 4

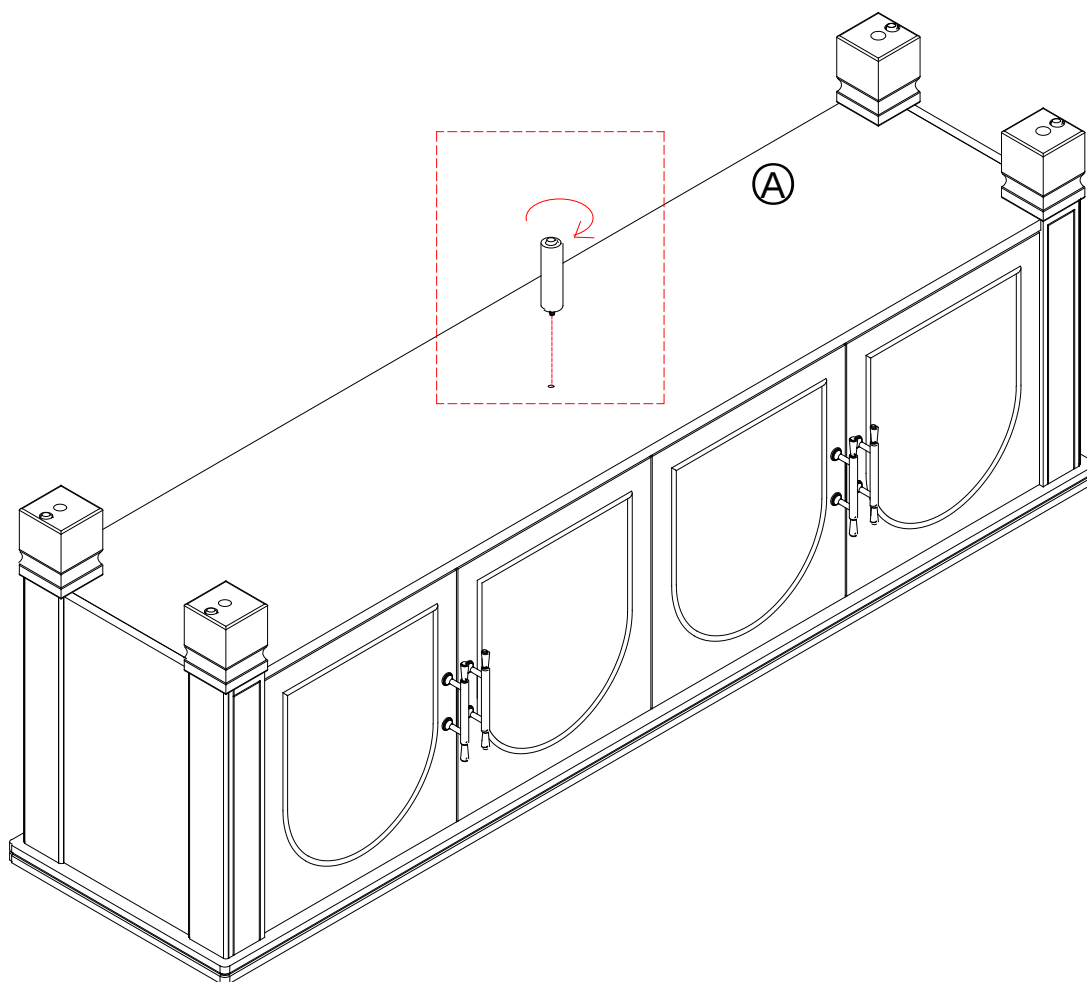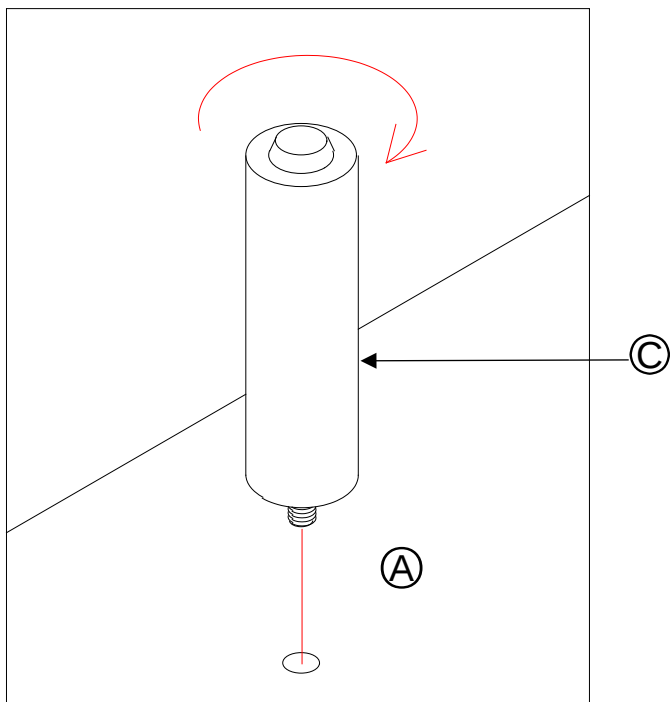

 
Step 5

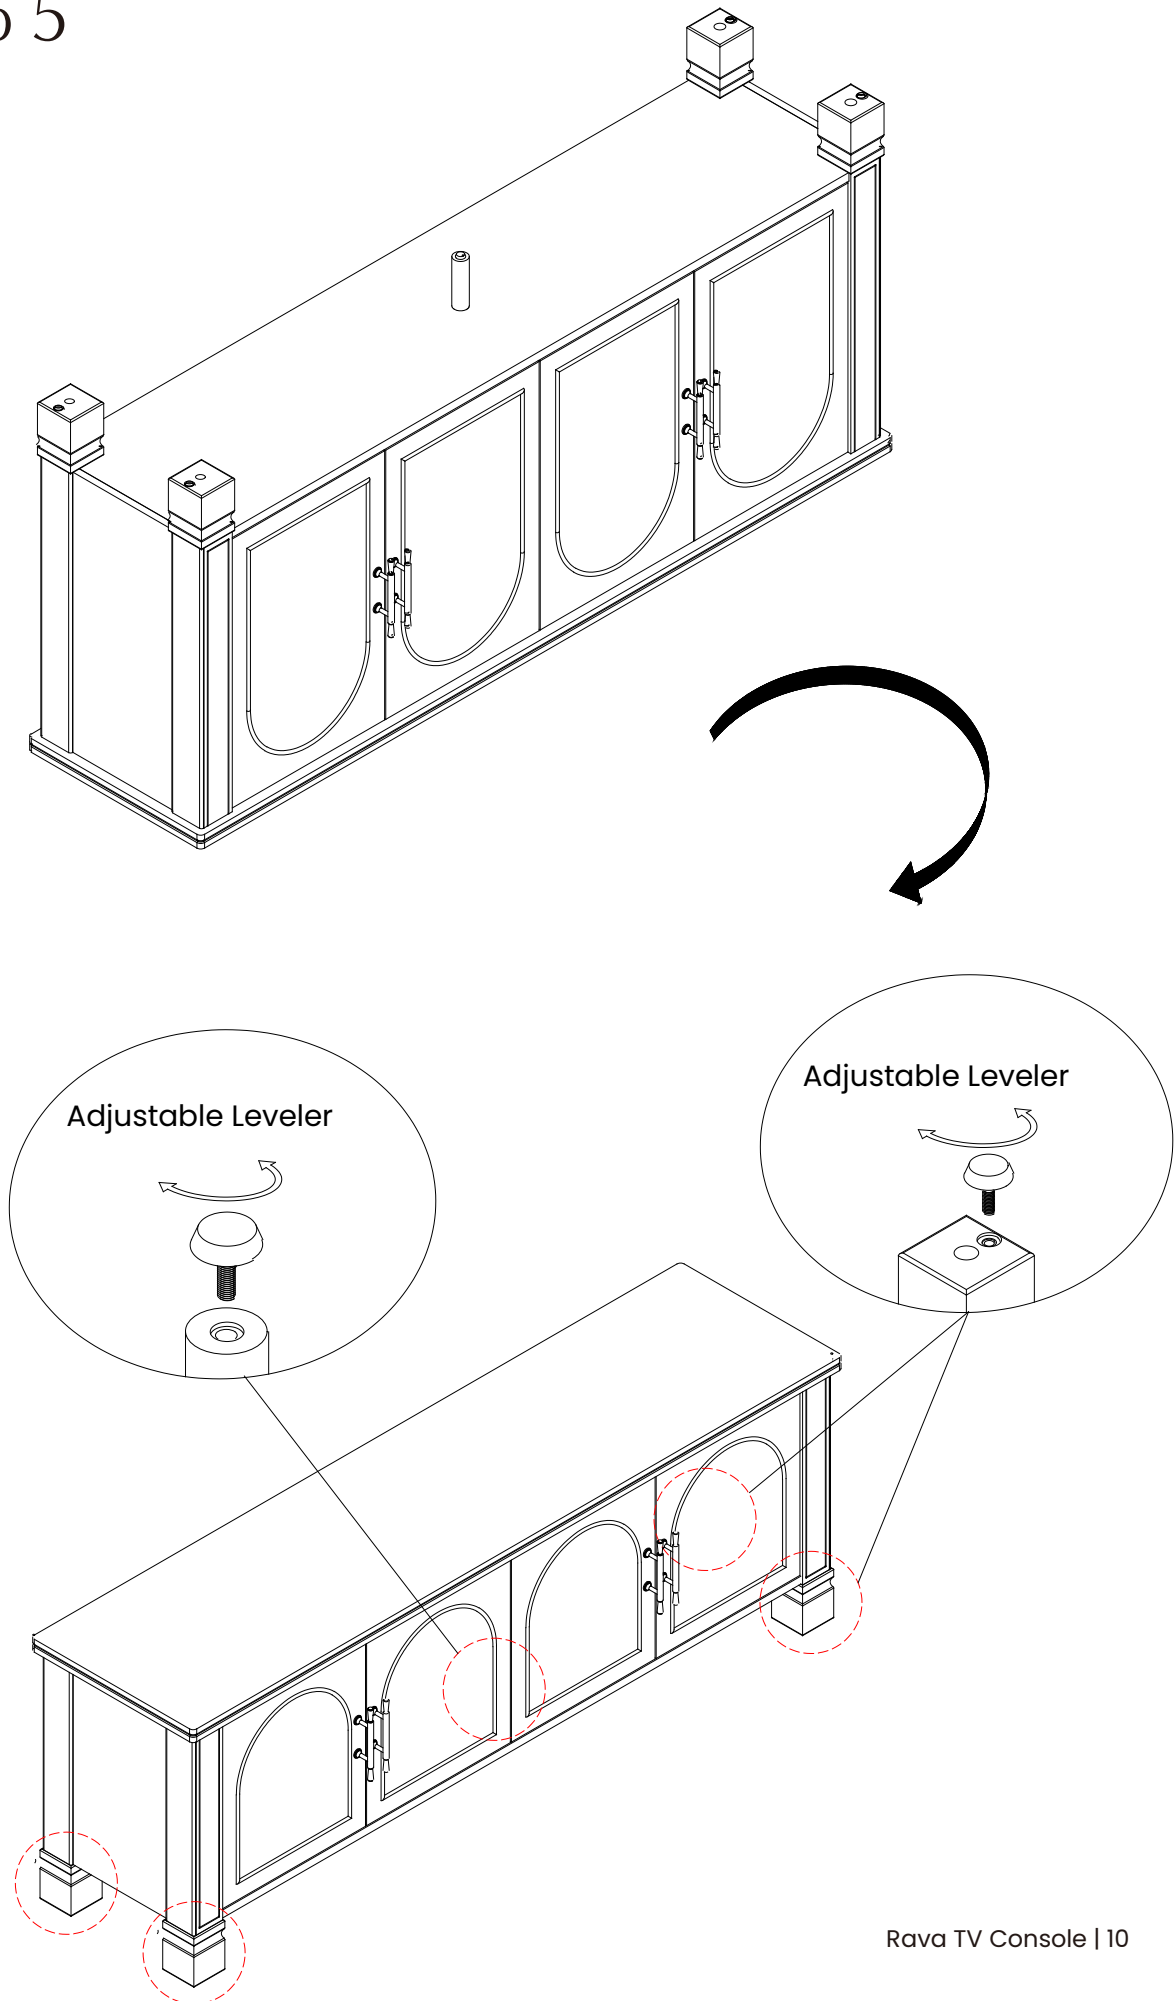

 Step 6

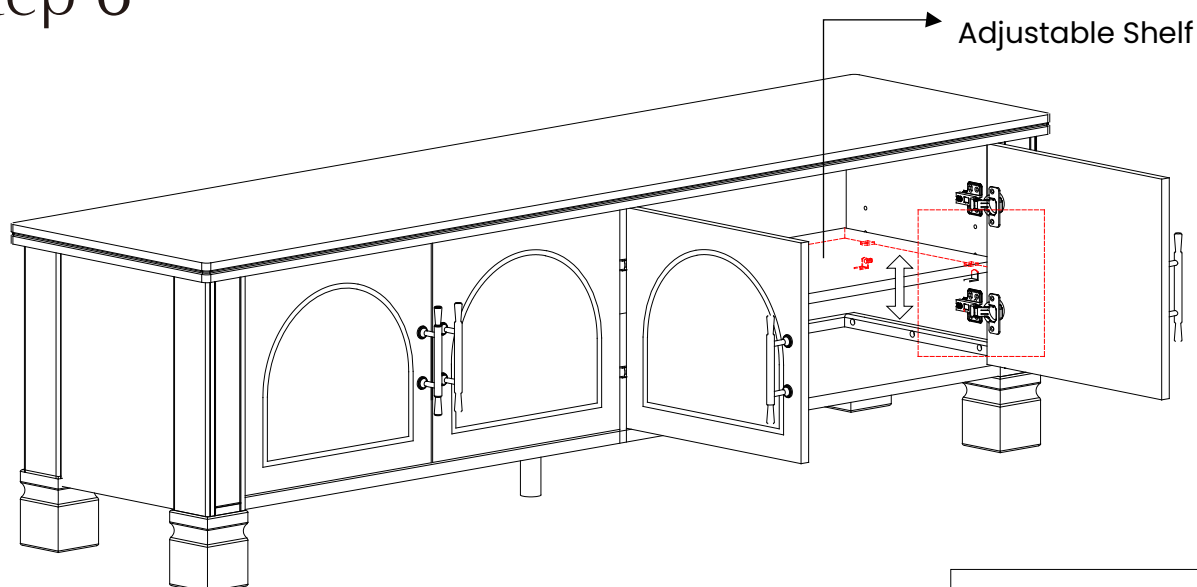

 Take out the packaging material on the fixed shelf.
Shelf position can be adjusted by adjusting the shelf pin.

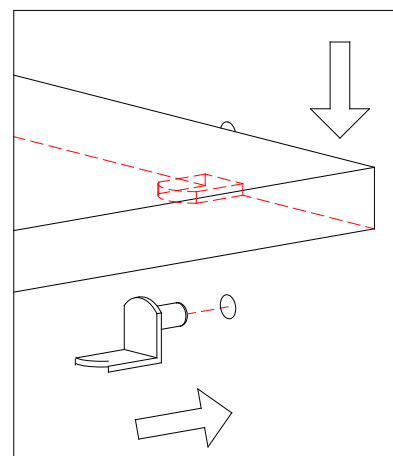

Ensure all bolts are tightened

Finished!

 
Congratulations, we're almost there!

Please perform the following checks:

1. Ensure all bolts are tightened.
2. Do not miss bolts installation.

Always lift your Castlery product when moving it to your preferred location. Levelers (if any) may slant if you drag your product.

Finally, clean the product with a damp cloth. You're all set! Enjoy your new living space, thanks to the addition of your Castlery product.

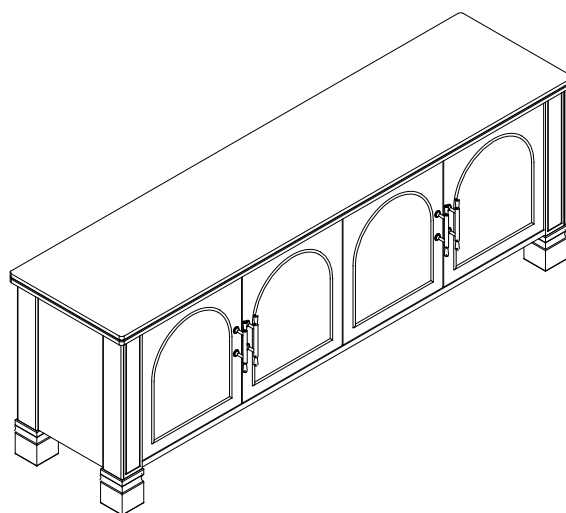

Note: Your actual product may have minor size differences due to manual measurements.

Care Instructions

Your furniture, if treated with respect and love, will last you a long time. Each piece requires light maintenance to maximize its longevity.

Storage Furniture Care

- Dust with a soft, dry cloth and clean with a slightly damp cloth.
- Avoid abrasive cleaners and placing rough or sharp objects on the surface.
- Keep furniture away from direct heat or sunlight.
- Wipe spills immediately.
- Use coasters or placemats where possible, to prevent discolouration of the surface.
- Lift when moving, do not drag.
- Periodically check that all connections are tightly secured.

Follow the care instructions and look after your furniture. In return, your furniture will look after you. For more information on our care instructions, visit our product website at www.castlery.com.

We hope to see you soon!



WARNING

We strongly recommend to permanently fix this product to a wall or other suitable surface.

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS secure your television with an anchor device or mount the television on a wall.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.