 


Arlen TV Console 150 CM

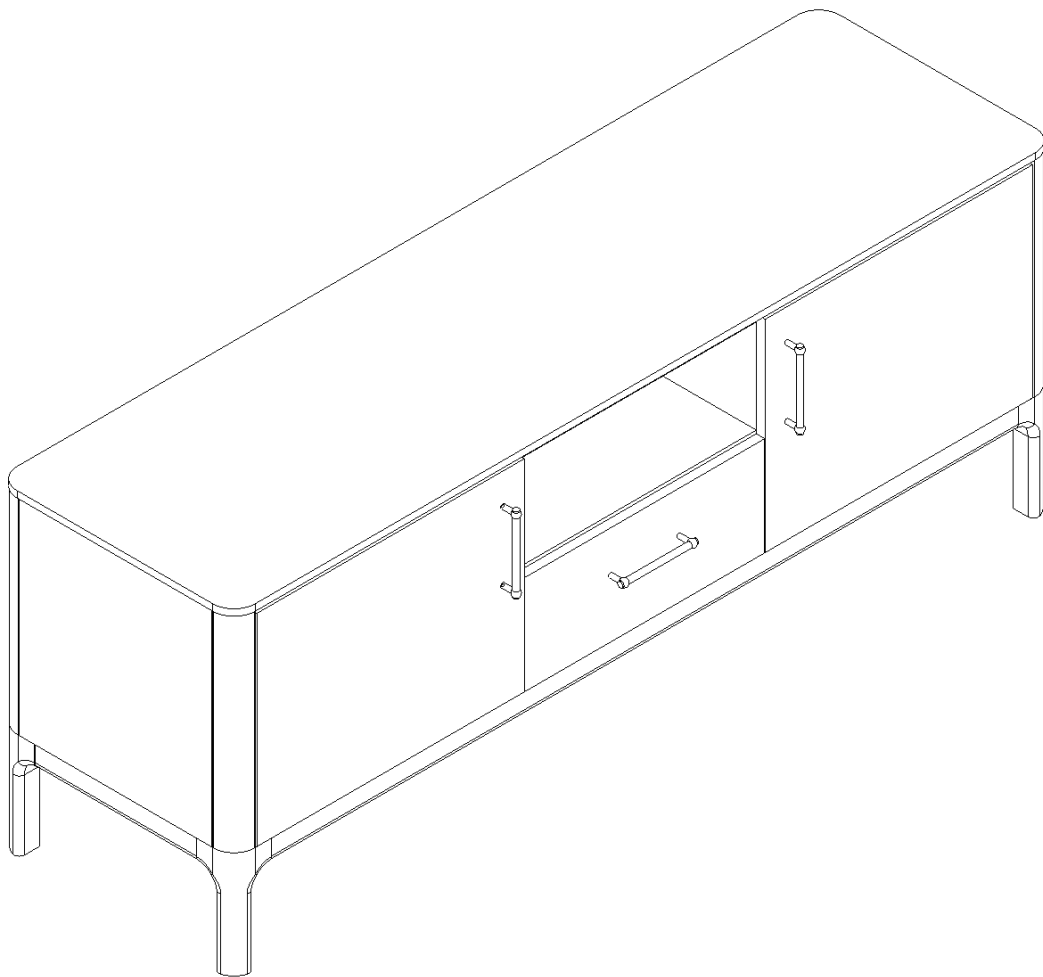

Hello there.

We're thrilled this Castlery piece has made it home.

We obsess over every joint, stitch, and finish because we design for real life—the spills, the lounging, the hosting, and the years that follow. So having a place in your home means a lot.

You're about to set it up and we've kept the steps simple. When you're done, share a photo or leave a review with **#AtHomeWithCastlery**. We love seeing our pieces in your homes.

Thanks again for choosing Castlery. Let's get building.

 
Contact us.

If you run into any issues or need a quick answer, we're here to help.


Reach us anytime at www.castlery.com/contact-us

www.castlery.com


Before you start...

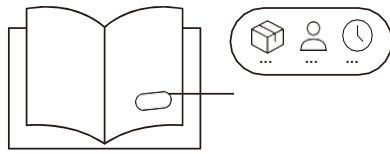

 
Confirm you have all cartons, review the assembly steps, set aside time, and get others to assist if needed.

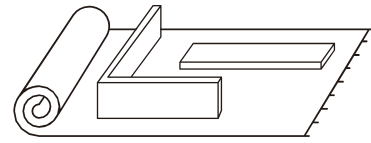

 
Ensure enough space for assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

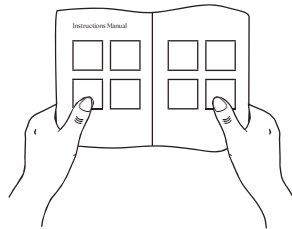

 
Read instructions carefully, and check that no parts are missing.

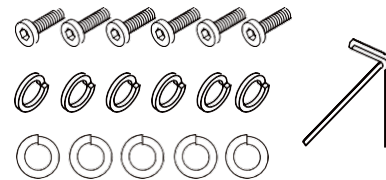

 
Lay out all hardware on a soft surface so you can easily identify them.

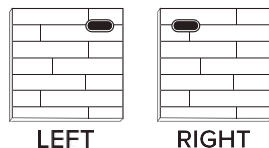

 
Carefully identify all components to differentiate which pieces are left and right.

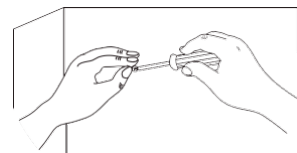

 Follow the instructions closely.
Don't skip ahead!

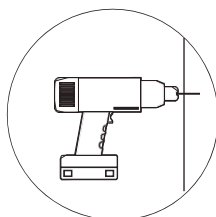


 DONOT over-tighten screws
or use a drill.

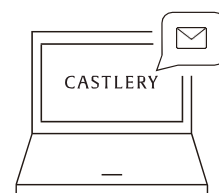

Need a hand? Contact us:
www.castlery.com/contact-us

 Overview

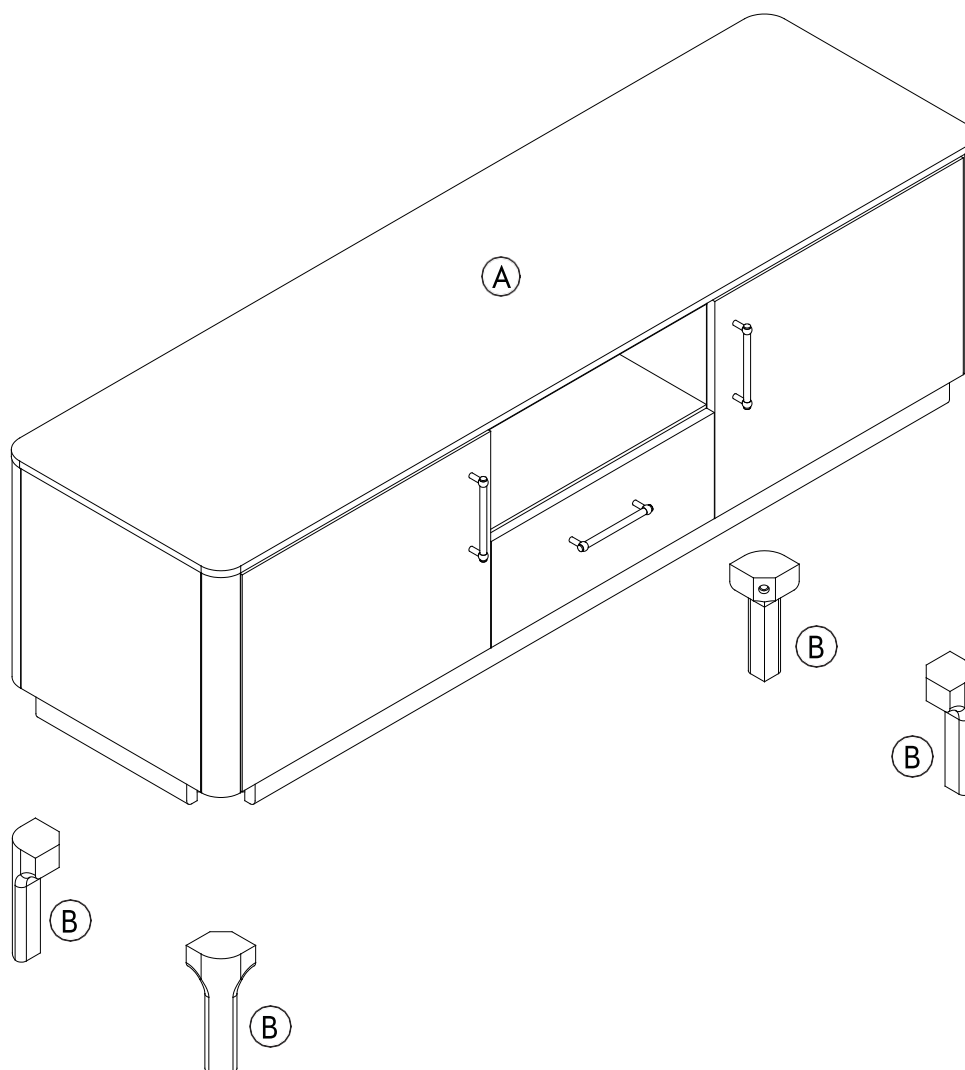

x1



x2



10 mins



IMPORTANT: 2 persons needed for assembly.

This will help to minimize potential damage to the product or injury to persons during assembly.



There are inner box(es) that include components required to complete this assembly.



Please do not completely tighten all the hardware, until each assembly step is complete.



 
 
Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note if applicable please keep the original package when you want to return the product later.



If parts are missing or damaged, we will gladly ship your replacements parts free of charge. Please contact us via www.castlery.com/contact-us. Illustrations in this guide are for reference only and may be slightly different from the actual object.






Parts

BOX 1 OF 1

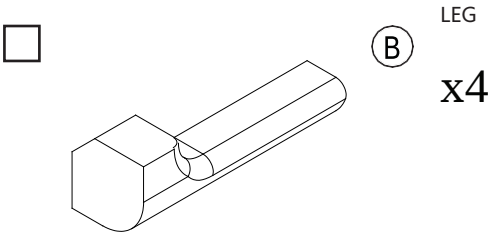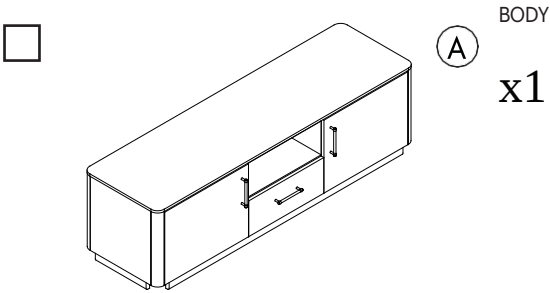

Hardware

     BOX 1 OF 1

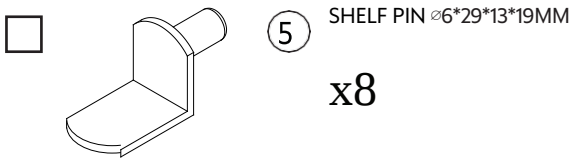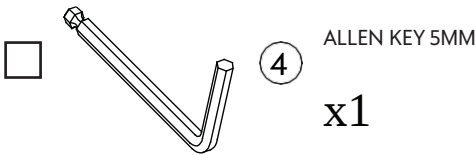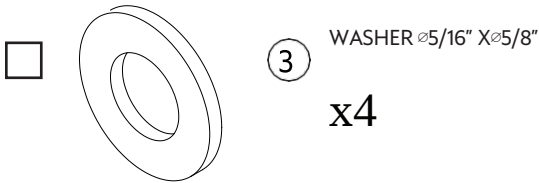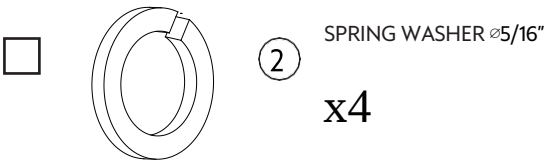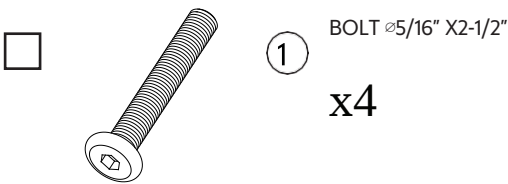


Step 1

Flip the body




 2 person required

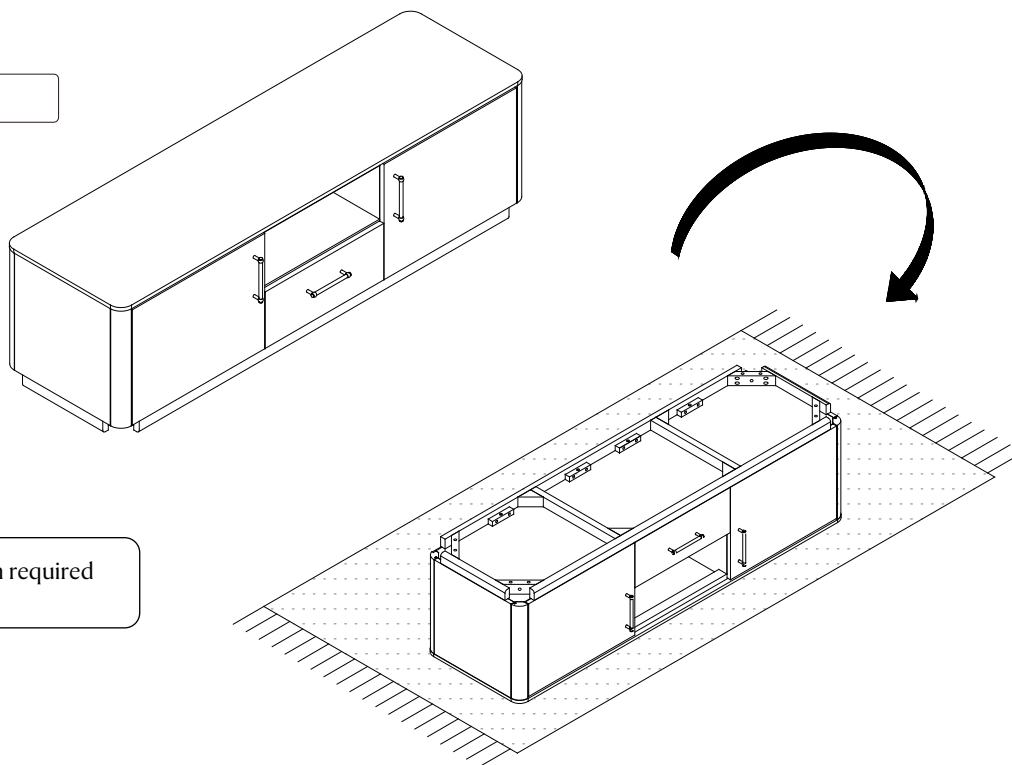

Step 2

 Install the leg

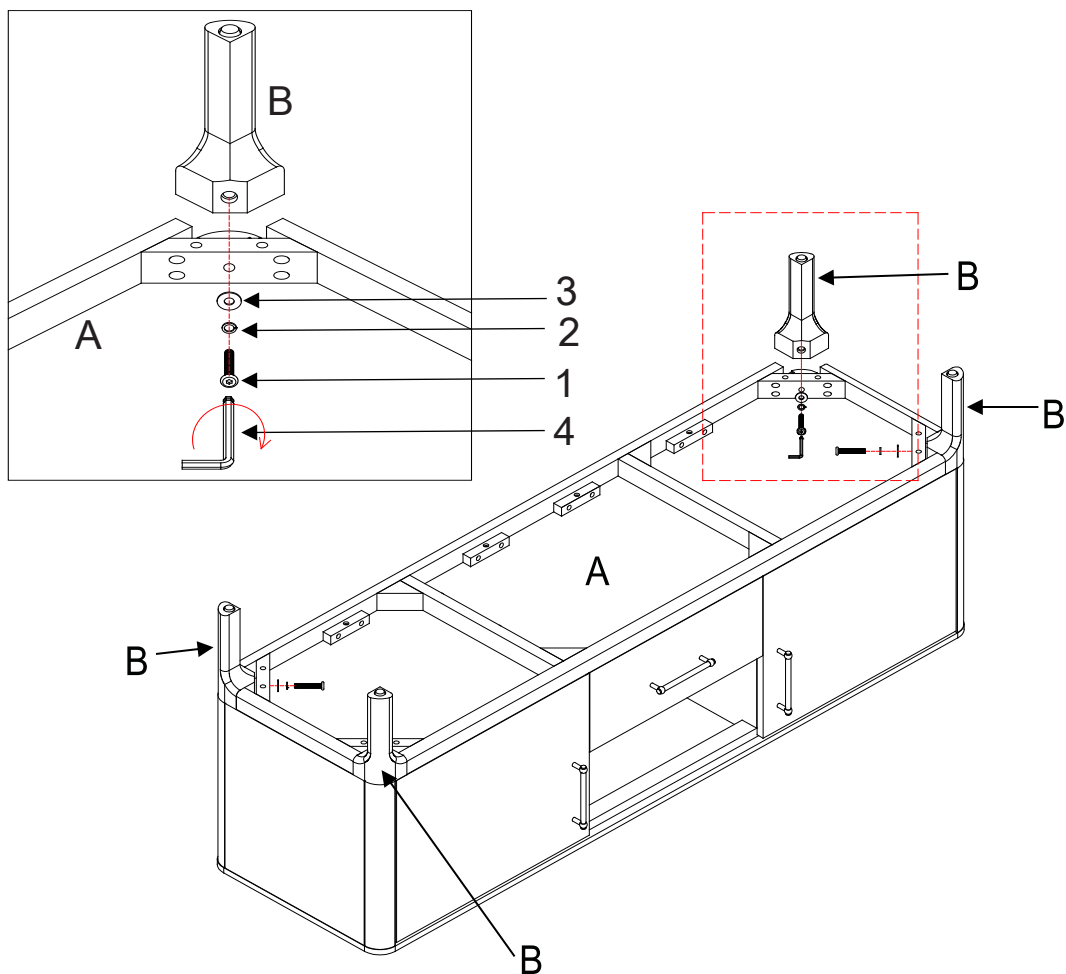


Step 3

Flip the TV Console




 2 person required

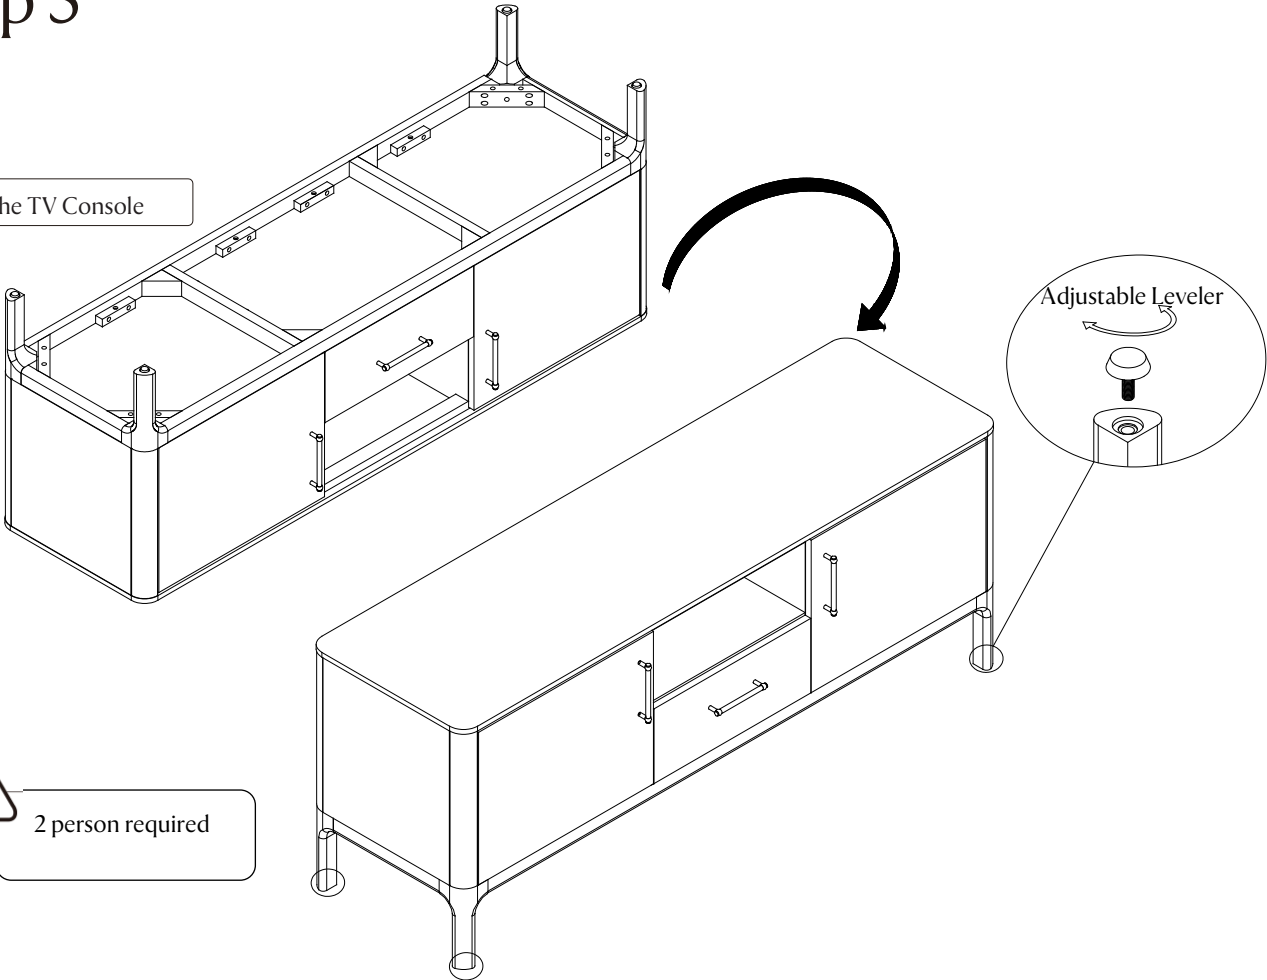


Step 4

 Install the shelves

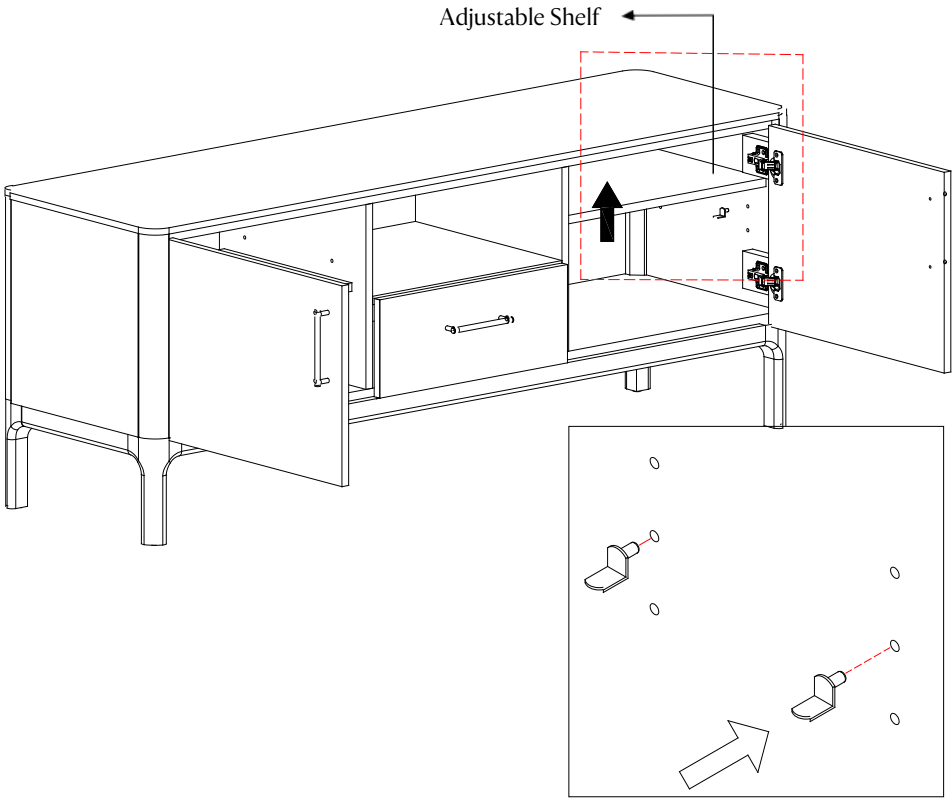

 Step 5

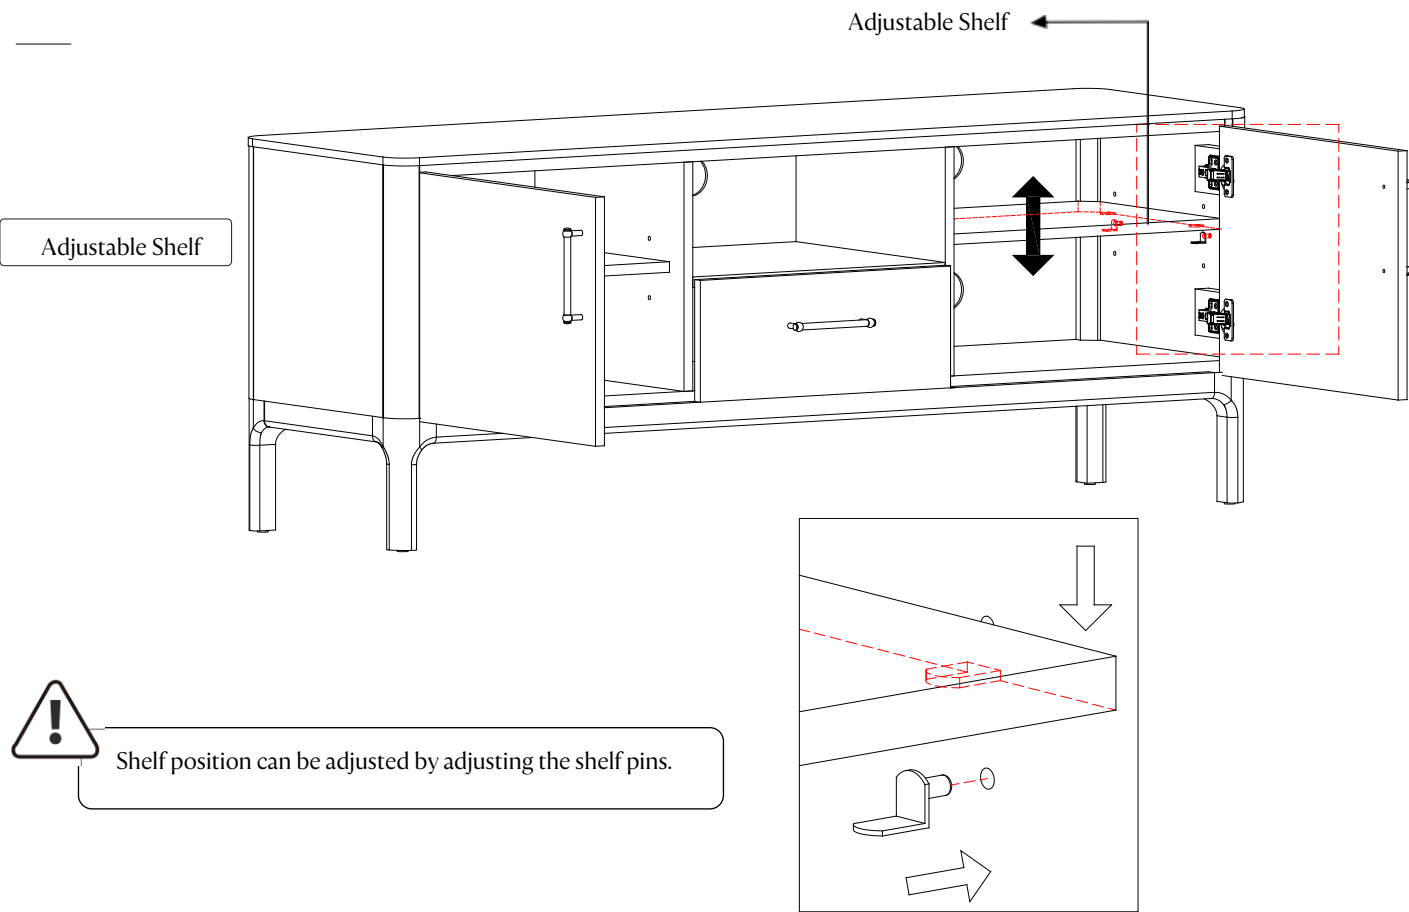

Finished!

Nice work. Just one last stretch.

 
Please remember to check:

- 01 Ensure all bolts are tightened properly.
- 02 Ensure all legs are balanced.

Always lift your Castlery product when moving it to your preferred location. Levelers (if any) may slant if you drag your product.

Finally, dust the product with a clean cloth (if needed).

Congratulations! Your Castlery piece is officially assembled. Now let the *living* begin.

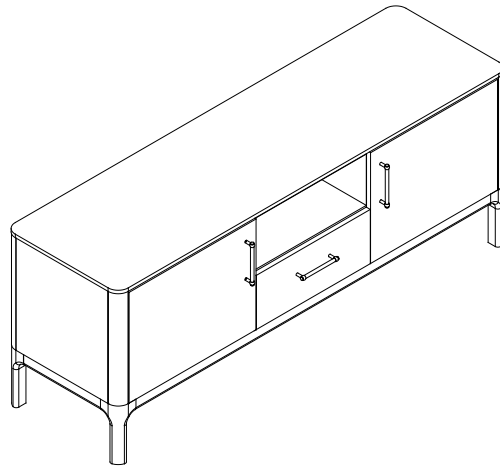

Note: Your actual product may have minor size differences due to manual measurements.

Care instructions

Your Castlery piece is built to last. Treat it with love and respect—it will reward you for years to come.

Storage Furniture Care

- 01 Dust with a soft, dry cloth and clean with a slightly damp cloth.
- 02 Avoid abrasive cleaners & placing rough or sharp objects on the surface.
- 03 Keep furniture away from direct heat or sunlight.
- 04 Wipe spills immediately.
- 05 Use coasters or placemats where possible, to prevent discolouration ("discoloration" for US) of the surface.
- 06 Lift when moving, do not drag.
- 07 Periodically check that all connections are tightly-secured.

The better you treat it, the better it gets. Find our full care guides at **castlery.com**.



WARNING



We strongly recommend to permanently fix this product to a wall or other suitable surface.

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS secure your television with an anchor device or mount the television on a wall.
- NEVER allow children to stand, climb, or hang on any drawers, doors or shelves.