

# FX Firmware Install Instructions

FX Units Models include: FX134a, FX1234, FX3030, MFX134a, MFX1234, MFX3030, 218-FFX134a, 218-FFX1234, 92015, 93109, 93110, W05040000, W05040101, W05040103

## 1 Purpose

This document describes the steps to do a full FX firmware install from self-extracting file. This procedure requires an SD Card and a computer with SD Read/Write capability.

## 2 FX Full Install Steps

- 2.1 ◆ Insert SD Card in PC
- 2.2 ◆ Delete all files on the SD Card
- 2.3 ◆ Double click or execute the self-extracting file (That matching the Brand of your unit)
- 2.4 ◆ When prompted for the extract location, select the SD Card drive
- 2.5 ◆ Click Extract
- 2.6 ◆ Power off the FX unit
- 2.7 ◆ Insert the SD Card in the FX unit (Remove Database Card if installed)
- 2.8 ◆ Power on the FX unit
- 2.9 ◆ Installation may take several minutes. When the unit returns to the main menu, it is complete
- 2.10 ◆ Remove the SD Firmware and reinstall Database Card

**WARNING:** For units with v2.16 Firmware or lower; TSB 2016-06-09 should be consulted prior to update