

Smooth RV Start[™] Inrush Current Management

Part Number: SSRV2



OWNER'S MANUAL (English)

For more information or updates, visit www.cpsproducts.com

FOR USE BY QUALIFIED PERSONNEL ONLY

OVERVIEW

Starting up is the hardest time in the life of any type of electrical equipment. Ever notice that light bulbs almost always burn out when you first turn them on and not while they are on? This is due to the huge current that rushes in whenever a switch is thrown and power is first applied. The compressor on your air conditioner consumes more power on startup than any other device in your RV. A compressor may consume 45,000 watts of power while the motor is trying to start—TEN times more power than it uses while running. In-rush current can damage the compressor's motor and that motor may start up more than 10,000 times in a single cooling season.

KEY FEATURES

- Quiet operation without a loud A/C startup jolting you awake
- Extend the life of the A/C exert less stress on compressor windings during startup

GENERAL SAFETY INSTRUCTIONS

Only trained and qualified service personnel should install this kit. Most states, countries etc. may require the installer to be licensed. Please check with your local government agency.



DANGER - ELECTRICAL SHOCK HAZARD - always disconnect the power source before attempting to install this kit. Failure to do so may result in severe electrical injury or even death.



CAUTION - EQUIPMENT DAMAGE - Failure to properly install this kit can and will cause permanent damage to the compressor and related components



INSTRUCTIONS

1. Disconnect all sources of power to the unit. Note that there may be more than one.
2. Locate and remove the electrical service access door or panel.
3. Mount the Kit potential relay and start capacitor in a suitable location within the service access panel. The unit should be mounted with the terminals up. Take care to mount the components so that all non-insulated live terminals are at least 1/2" away from all metal or electrical conducting parts or components. Mount in a location that will prevent water from coming in contact with the non-insulated live contacts.

NOTE: The SSRV2 has been pre-wired for your convenience. There are only 3 color coded wires which need to be connected. The Black wire will be connected to the Common side of the compressor. The Striped wire will be connected to the Start winding of the compressor and the Red wire will be connected to the Run winding of the compressor.

Common Black wire	Connect the loose end of the Black wire to T1 of the contactor. Check to see that the Common "C" terminal of the compressor also connects to T1. In most cases you will find a Black wire coming from the Common "C" terminal of the compressor.
Start Striped wire	Connect the loose end of the Striped wire to the Start winding side of the run capacitor. The Start winding side of the run capacitor is always marked "HERM". The Start winding side of the run capacitor can also be verified by following the yellow or orange or blue wire (in most cases) from the compressor "S" terminal to the Start winding side of the run capacitor.
Run Red wire	Connect the loose end of the Red wire to the Run winding side of the compressor. The Run winding is connected to T2 of the contactor as well as the common side of the run capacitor which is usually marked with a "C" or "=". The Run winding can be identified in most cases by a Red wire coming from the R terminal on the compressor. The Red wire from the start kit is normally connected at the "C" or "=" terminal on the run capacitor, but can also be connected to T2 of the contactor.

WIRING ILLUSTRATIONS

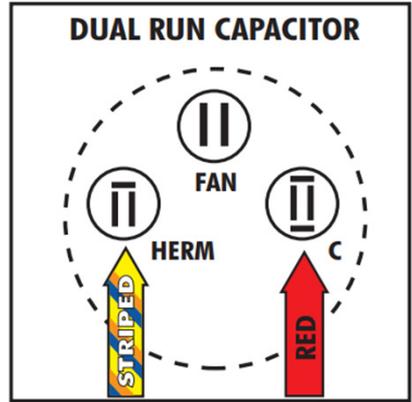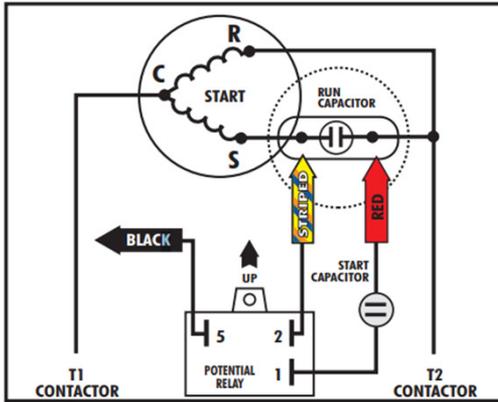

WARRANTY

CPS Products, Inc. guarantees that all products are free of manufacturing and material defects to the original owner for three years from the date of purchase. If the equipment fails, during the guarantee period it will be repaired or replaced (at our option) at no charge. This guarantee does not apply to equipment that has been altered, misused or solely in need of field service maintenance. All repaired equipment will carry an independent 90-day warranty. This repair policy does not include equipment that is determined to be beyond economical repair.

LOCATIONS

CPS PRODUCTS, INC. U.S.A.

1010 East 31st Street
Hialeah, Florida 33013, USA
Tel: 305-687-4121, 1-800-277-3808
Fax: 305-687-3743
E-mail: automotive@cpsproducts.com
Website: www.cpsproducts.com

CPS PRODUCTS N.V

Krijgsbaan 241, 2070
Zwijndrecht, Belgium
Tel: (323) 281 30 40,
E-mail: info@cpsproducts.be

CPS PRODUCTS CANADA LTD.

1324 Blundell Road
Mississauga, ON, L4Y 1M5
Tel: 905.615.8620
Fax: 905.615.9745
E-mail: info@cpsproducts.com
Website: www.cpsproducts.com

CPS AUSTRALIA PTY. LTD.

109 Welland Avenue
Welland, South Australia 5007
Tel: +61 8 8340 7055,
E-mail: sales@cpsaustralia.com.au



Scan the QR code to view installation instructions and videos.