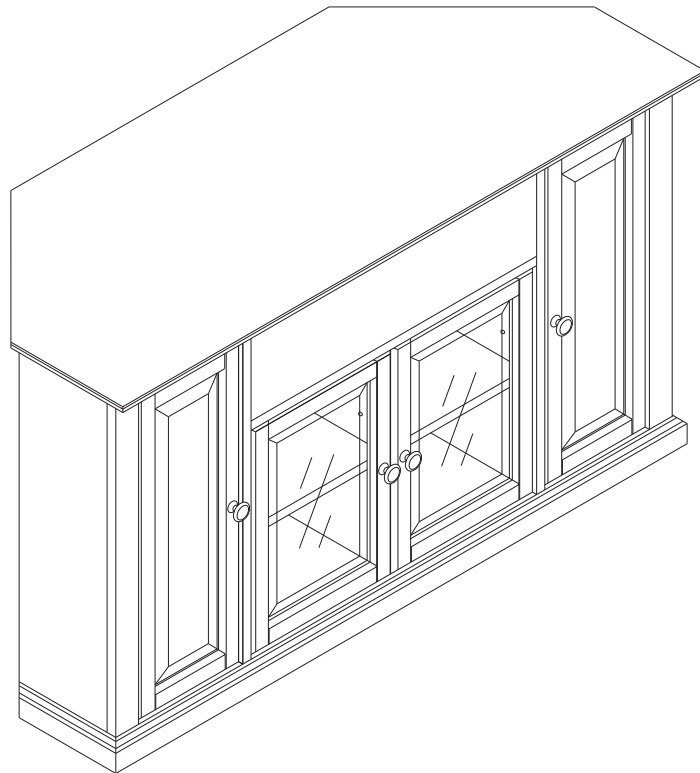 


CROSLEY

 
 

 
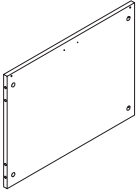 
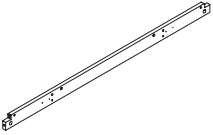 
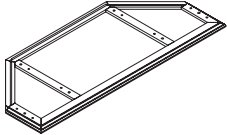 

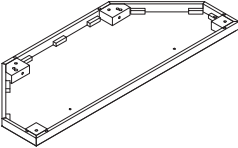 
 
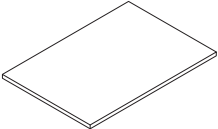 
 
 
 

 
FURNITURE

48 Inch Corner TV Stand Cabinet

 
 
 
 
 

 
 
 
 





CF100248



PART LIST


<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 
<p>LEFT PARTITION PANEL 1 PC</p>	<p>RIGHT PARTITION PANEL 1 PC</p>	<p>LEFT SIDE PANEL 1 PC</p>	<p>RIGHT SIDE PANEL 1 PC</p>	<p>FITED SHELF 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H2</p> 	<p>I</p> 	<p>J2</p> 
<p>TOP RAIL 1 PC</p>	<p>TOP PANEL 1 PC</p>	<p>SIDE BACK PANEL 2 PCS</p>	<p>BOTTOM PANEL 1 PC</p>	<p>MIDDLE BACK PANEL 1 PC</p>
<p>K2</p> 	<p>L</p> 	<p>M</p> 	<p>N</p> 	<p>O</p> 
<p>MIDDLE ADJUSTABLE PANEL 1 PC</p>	<p>SIDE ADJUSTABLE PANEL 2 PCS</p>	<p>LEFT DOOR GLASS 1 PC</p>	<p>RIGHT DOOR GLASS 1 PC</p>	<p>LEFT DOOR 1 PC</p>
<p>P</p>  <p>RIGHT DOOR 1 PC</p>				

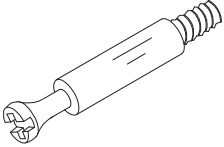  HARDWARE LIST
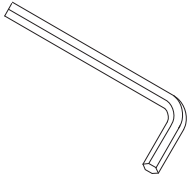
<p>#1</p> 	<p>#2</p> 	<p>#3</p> 	<p>#4</p> 	<p>#5</p> 
<p>CAM LOCK 12 PCS</p>	<p>CAM BOLT 12 PCS</p>	<p>WOOD DOWEL 24 PCS</p>	<p>SCREW 4 PCS</p>	<p>ALLEN BOLT 6 PCS</p>
<p>#6</p> 	<p>#7</p> 	<p>#8</p> 	<p>#9</p> 	<p>#10</p> 
<p>SPRING WASHER 6 PCS</p>	<p>FLAT WASHER 6 PCS</p>	<p>DOOR MAGNET 2 PCS</p>	<p>DOUBLE DOOR MAGNET 1 PC</p>	<p>ROUND HEAD SCREW 18 PCS</p>
<p>#11</p> 	<p>#12</p> 	<p>#13</p> 	<p>#14</p> 	<p>#15</p> 
<p>SHELF HOLDER 12 PCS</p>	<p>KNOB 4 PCS</p>	<p>ROUND HEAD BOLT 4 PCS</p>	<p>ALLEN WRENCH 1 PC</p>	<p>SAFETY SHRAP KIT 1 PC</p>

ADDITIONAL TOOLS(Not provided)

 
Note:It is not recommended to use power tools during assembly.however a screw gun can assist with mounting.




Phillips head screw driver

Step 1. Insert cam bolts (part #2) into pre-drilled holes of parts (A,B,C,D & G) using a phillips head screw driver as shown.

  Note: Do not overtighten cam bolts. stop tightening once threads on cam bolt are no longer visible.

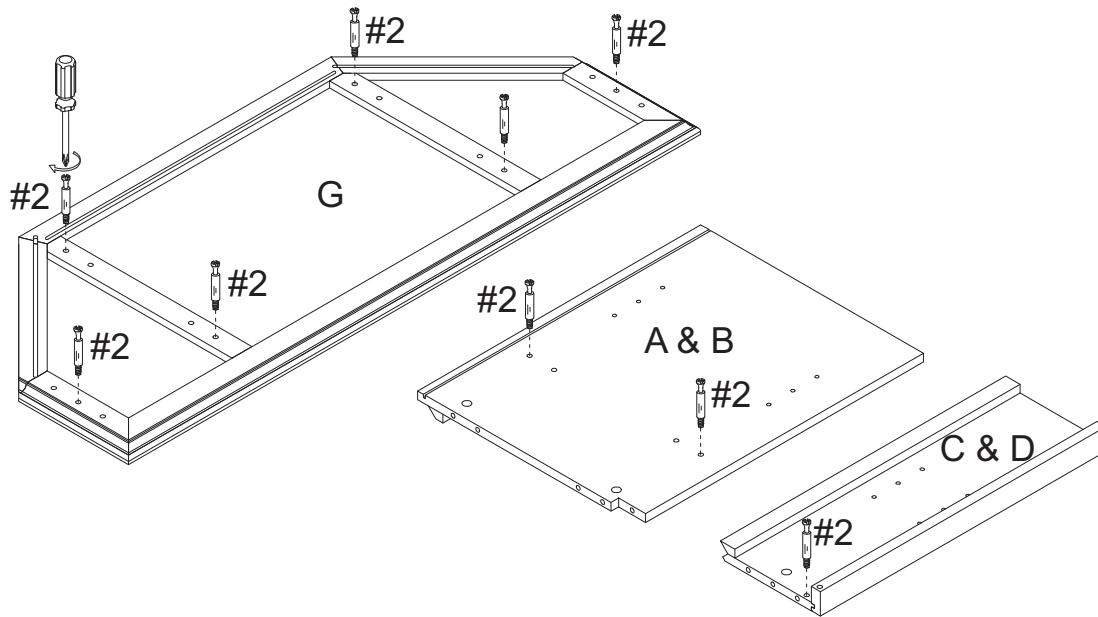


#2  x8


Step 2. Attach shelf (part E) to panel (part B) with wood dowels and cam locks as shown.


Carefully turn assemble parts (B & E) upright on the floor.

 Note: Cam locks must rotate full 180°. see pictured insert.

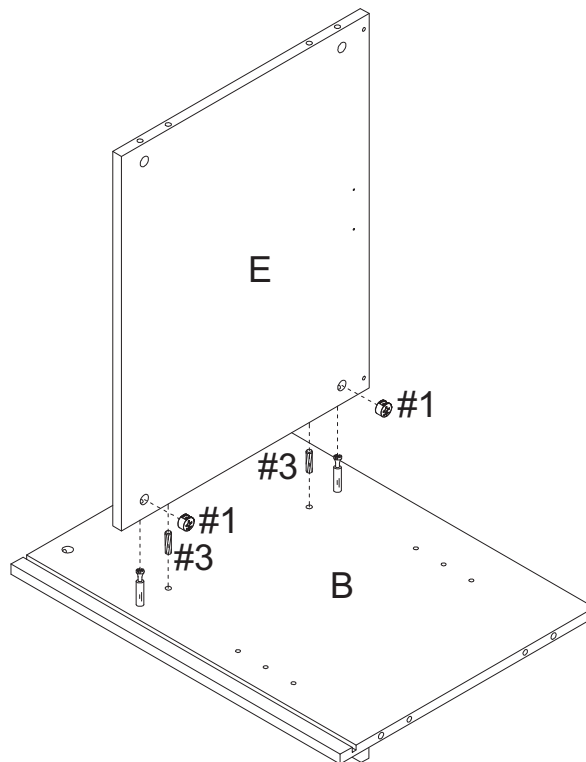

#1  x2


 
#3  x2

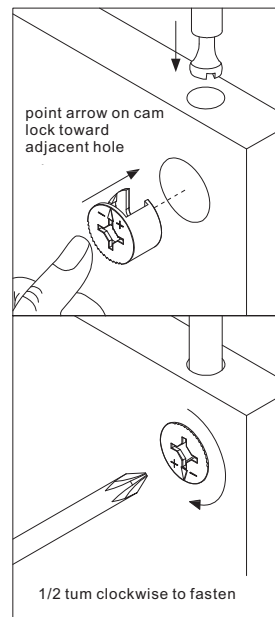 


Step 3. Attach part A to part E with wood dowels and cam locks as shown.

carefully turn over the assemble parts B,E & A upright with notched cutouts facing upward.

   Note: Cam locks must rotate full 180°. see pictured insert.

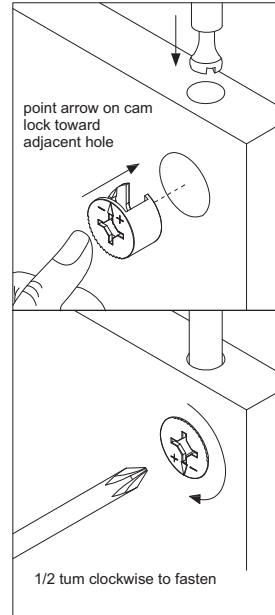 
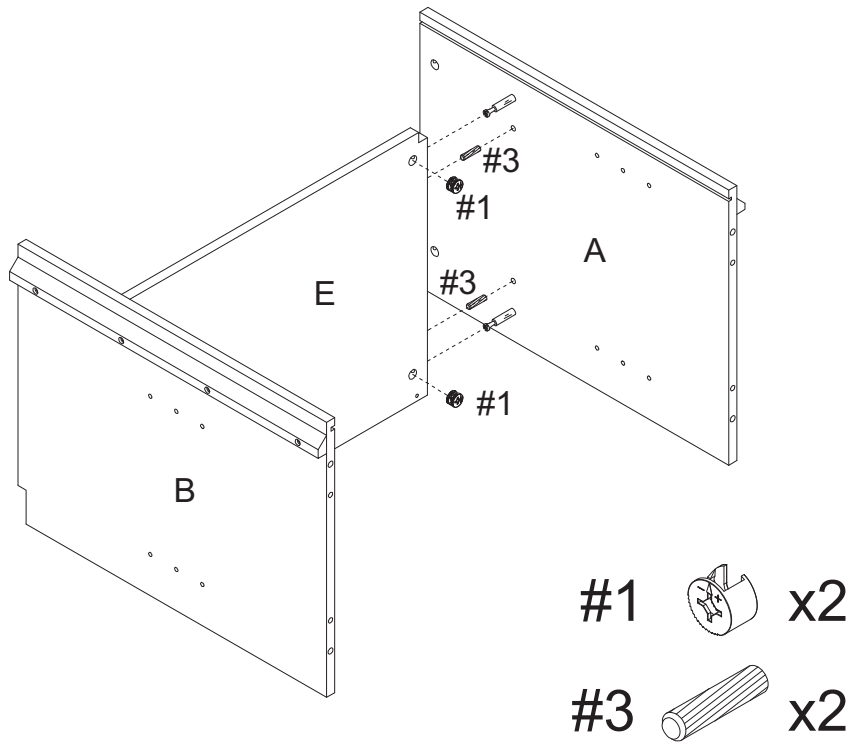 



 
Step 4. Attach rail (part F) to parts A & B with wood dowels and screws (part #4) into pre-drilled holes as shown.

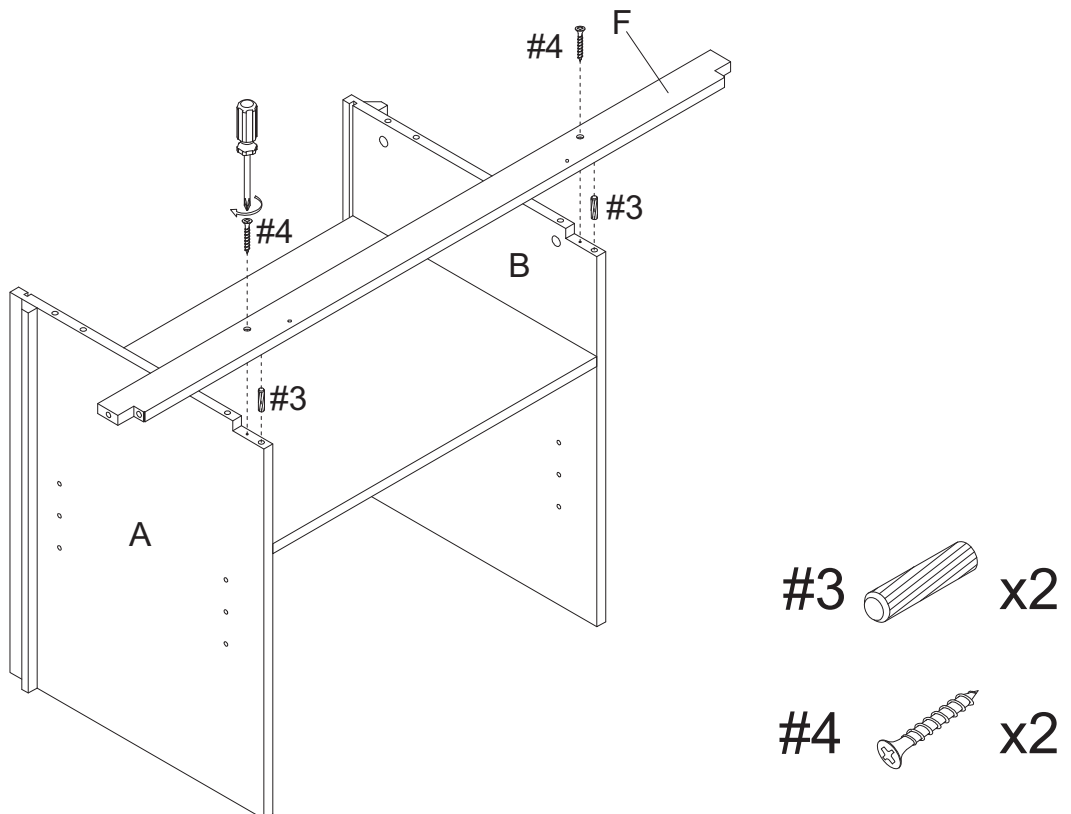

Step 5. Attach side panels (parts C & D) to rail (part F) using wood dowels and cam locks as shown.

 
 
Note: Cam locks must rotate full 180°. see pictured insert.

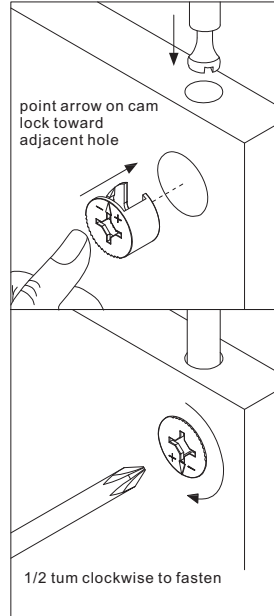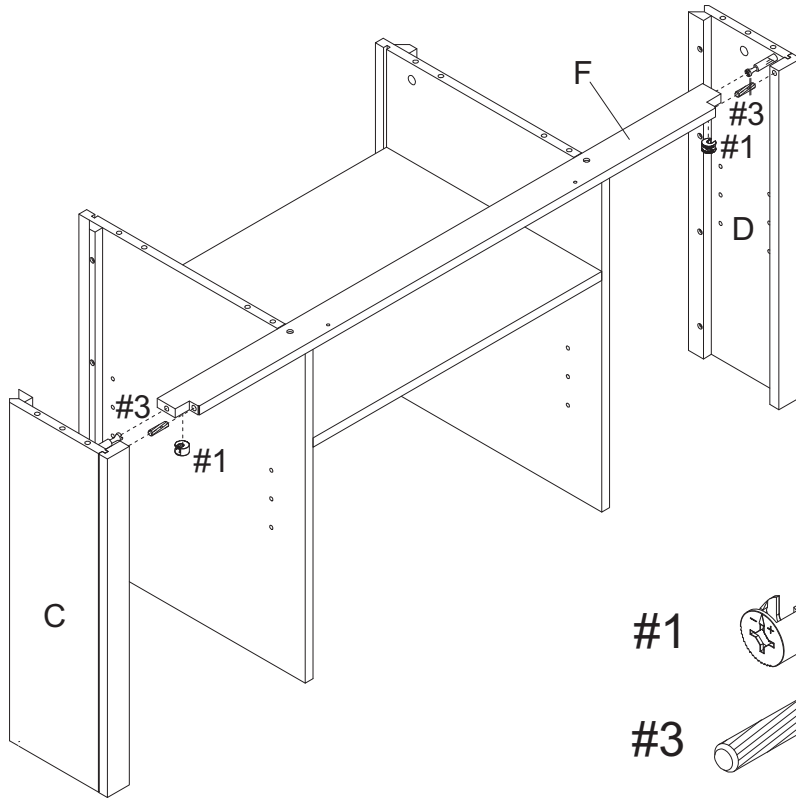
 
 


- #1  x2
- #3  x2

 
Step 6. Attach top (part G) to cabinet using wood dowels and cam locks as shown. secure rail (part F) to top (part G) using two wood screws (part #4) through pre-drilled hole as shown.

Note: Cam locks must rotate full 180°. see pictured insert.

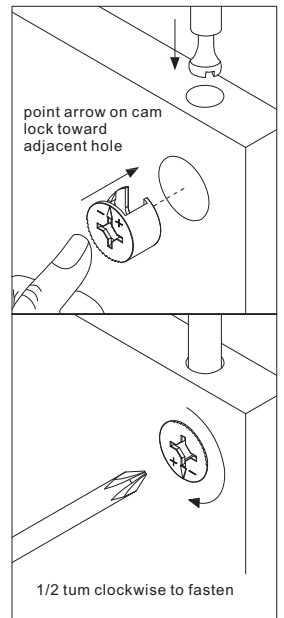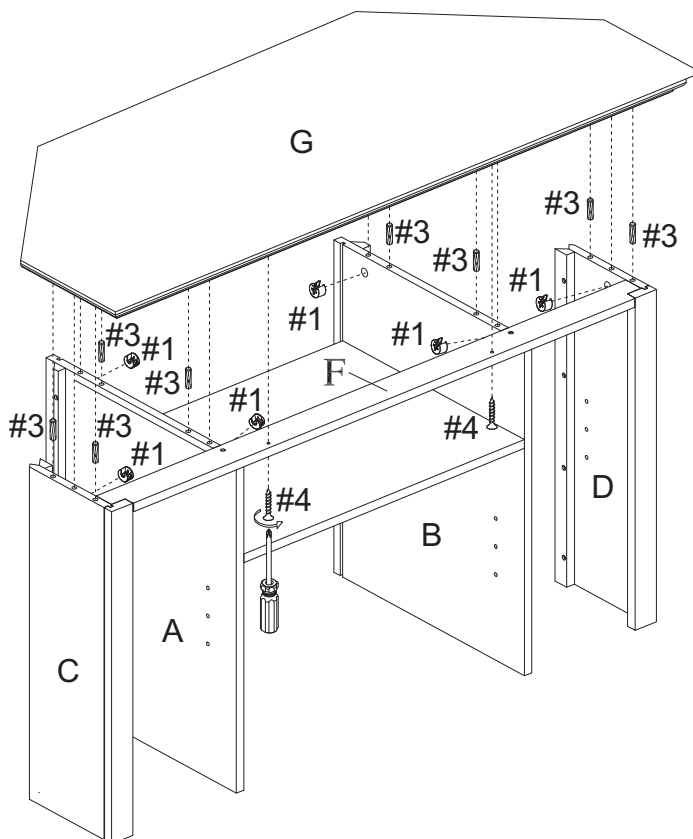


- #1  x6
- #3  x8
- #4  x2

Step 7. Carefully turn over the cabinet with the top on floor
slide back panels H2 and J2 into the grooves as shown.

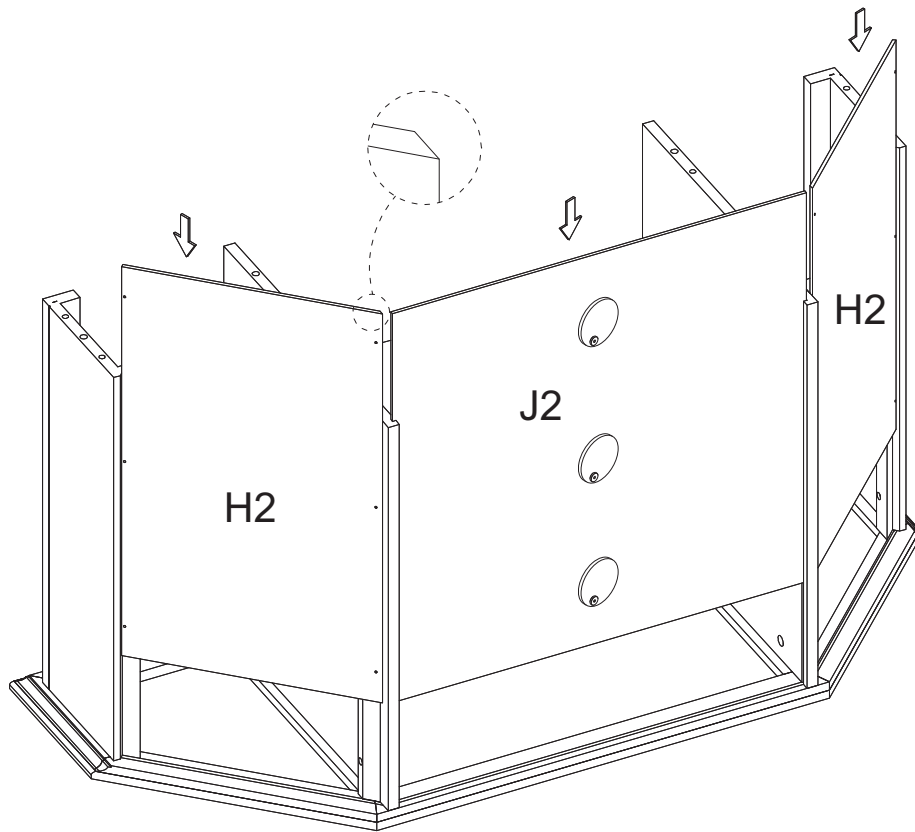


Step 8. Screw the round head screws (part #10) into pre-drilled
holes of side back panel H2 as shown.

 
Note: Be sure that panels (parts H2 & J2) are inserted
completely into the grooves of top (part G) before
attaching panels (parts H2)
with round head screws.

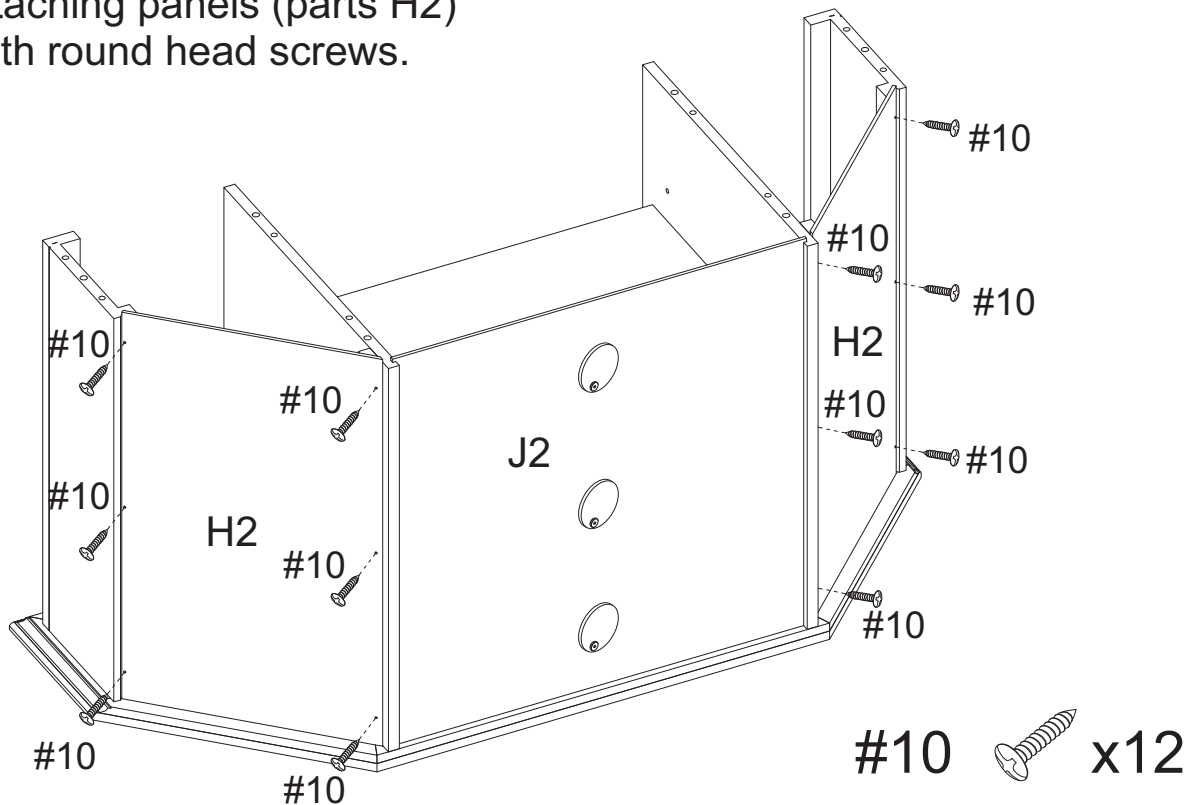

 Step 9. Attach double door magnet (part #9) to shelf (part E) and attach single door magnet (part #8) to rail (part F) using round head screws (part #10) into pre-drilled holes as shown. attach base (part I) to cabinet using wood dowels and allen bolts with spring\flat washers as shown. attach legs using socket head bolts & wood dowels (as shown in instruction manual included in carton with legs).


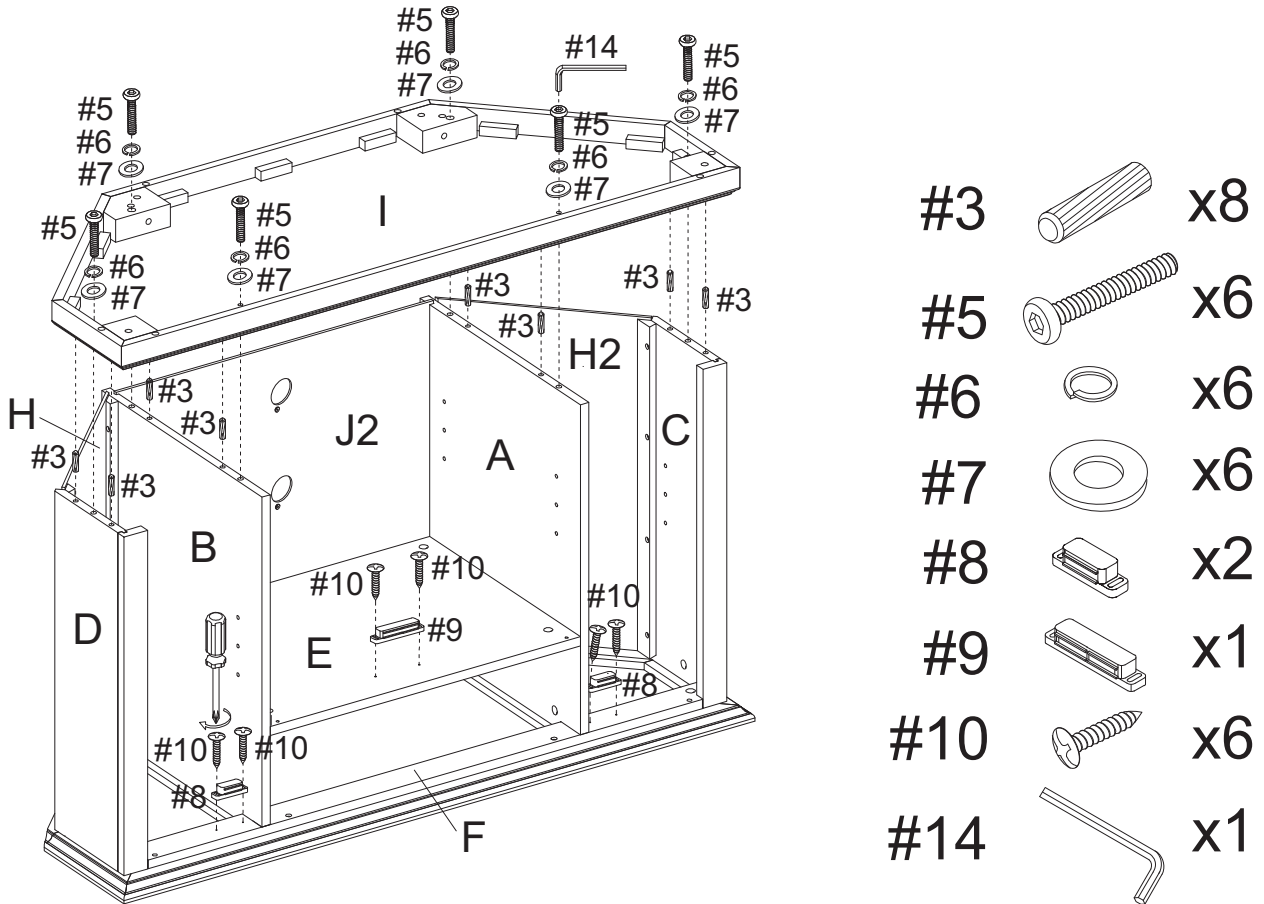


 Step 10. Carefully turn over the cabinet with the top upward insert the shelf holders (part #11) into desired position and add shelves.

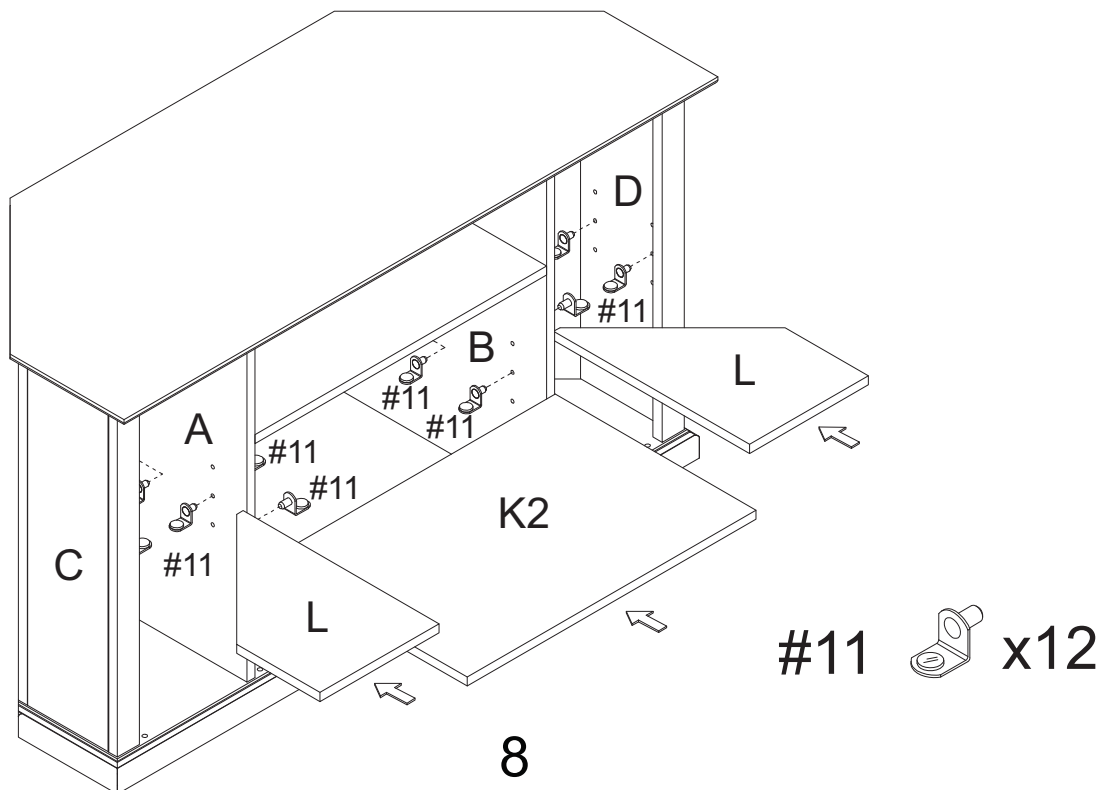


Step 11. Attach hardware knobs (part #12) to doors M,N,O & P using round head bolts (part #13) and a phillips head screw driver. attach doors to cabinet by placing bottom pin hinge into pre-drilled holes at bottom & depressing top spring loaded pin hinge to fit door into place.

  Note: Be sure pin hinges (top & bottom) have fully extended into the pre-drilled holes to secure doors into place.

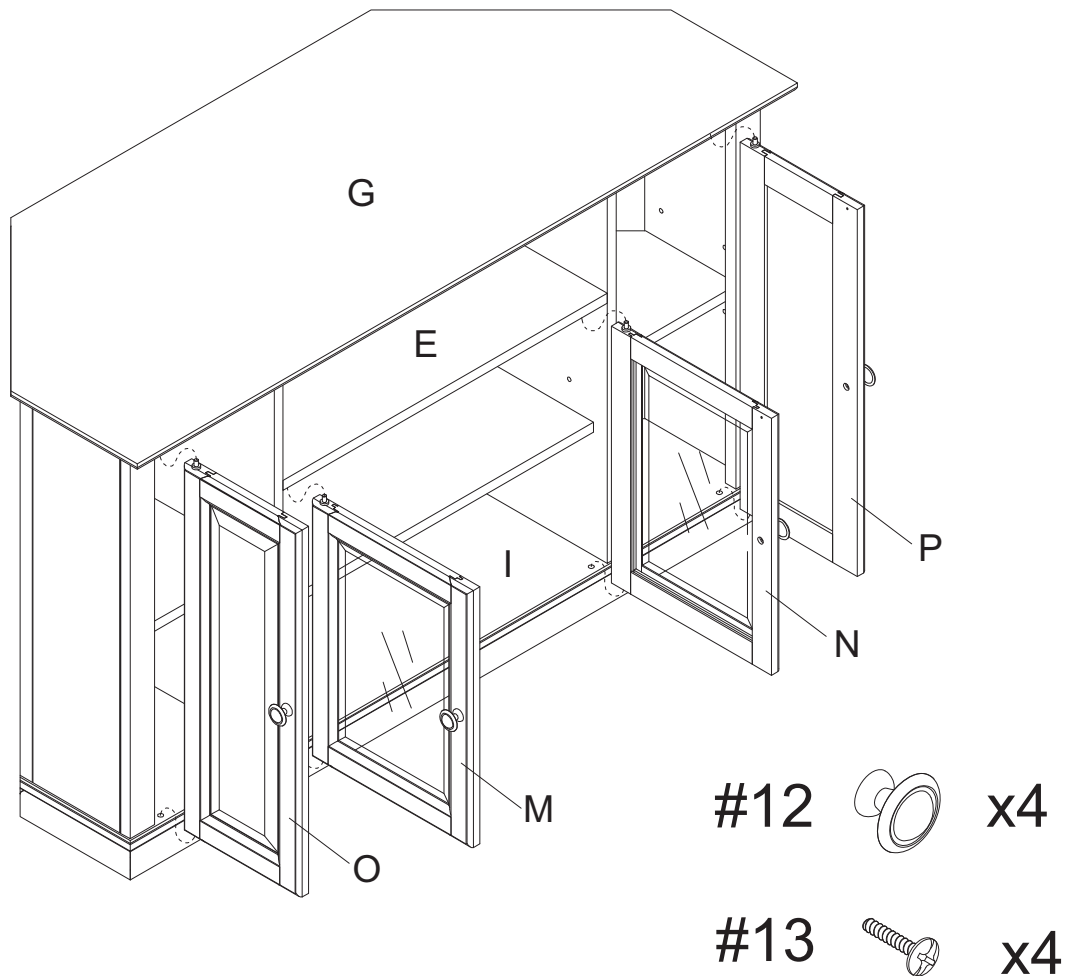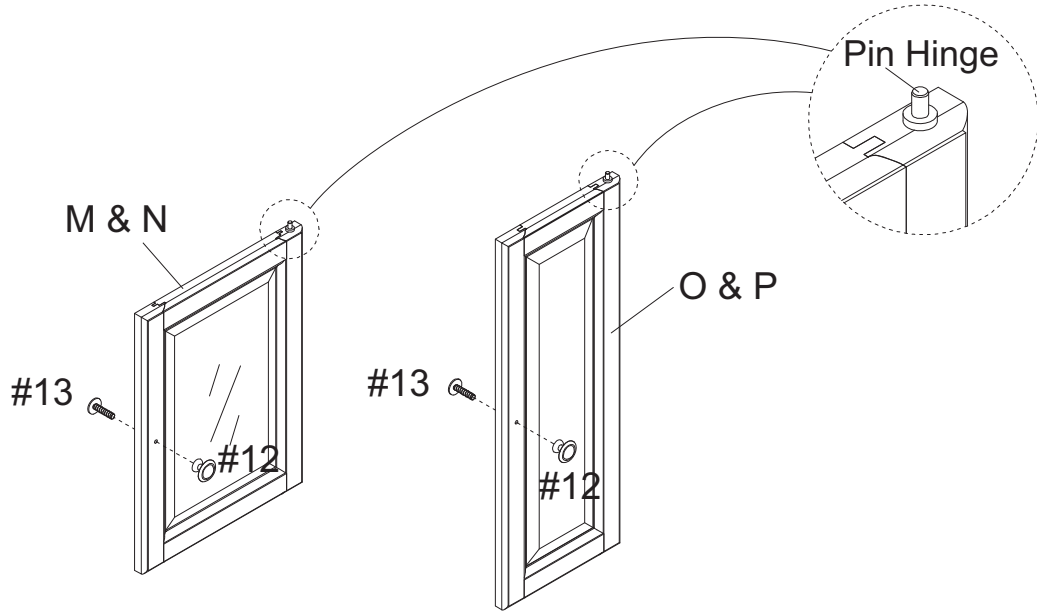


#15

 

SAFETY STRAP KIT

 1 PC

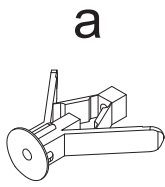

WALL ANCHOR

1 PC



 
WASHER

2 PCS




SHORT SCREW

1 PC



LONG SCREW

 
1 PC

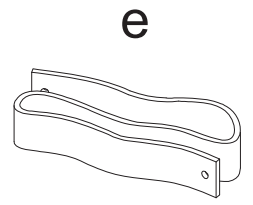

SAFETY WALLSTRAP

1 PC

 Note: This item is not intended for clothing storage use.

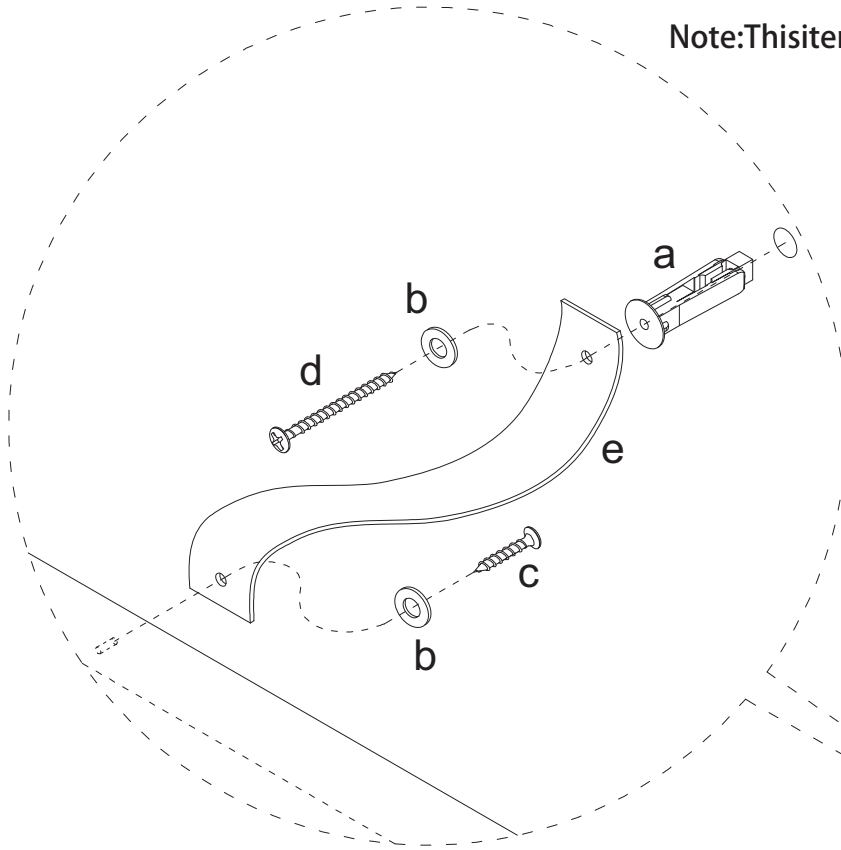


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install tipover restraint provided.

- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!



Step 12. MANDATORY

Safety wall strap assembly instruction

- 1). Insert the short screw (c) through the washer (b) and safety strap (e) and screw it into the top panel as shown.
- 2). Drill a 9mm hole at a point where you want to secure/attach your TV stand. Make sure that the height of the hole being drilled into the wall is equal to the height of the hole in the top panel of TV stand. Tap the wall anchor (a) into the hole.
- 3). Insert the long screw (d) through a washer (b) and the safety strap (e) into the wall anchor (a).

