 


# **CROSLEY**

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
---

## FURNITURE

 
 
 

 
 

 

 


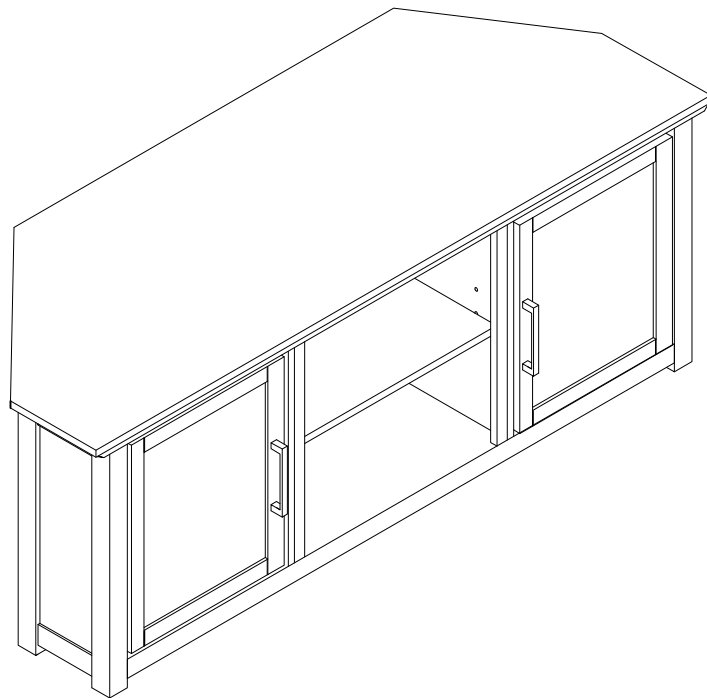

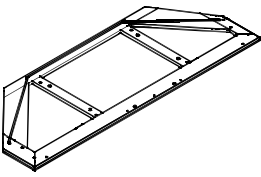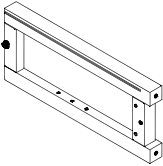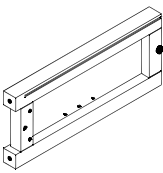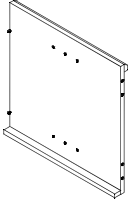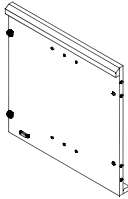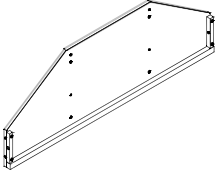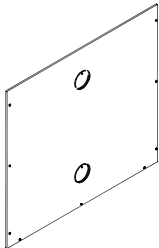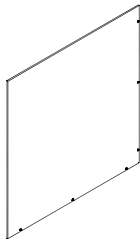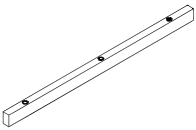

Corner TV Stand  
CF101248/CF101258



# PARTS LIST

 
<p>A2</p> 	<p>B2</p> 	<p>C2</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Left Partition Panel 1 PC</p>	<p>Right Partition Panel 1 PC</p>
<p>F2</p> 	<p>G2</p> 	<p>H2</p> 	<p>I2</p> 	<p>J2</p> 
<p>Bottom Panel 1 PC</p>	<p>Left Door 1 PC</p>	<p>Right Door 1 PC</p>	<p>Middle Adjustable Shelf 1 PC</p>	<p>Adjustable Shelf 2 PCS</p>
<p>K2</p> 	<p>L2</p> 	<p>M2</p> 	<p>N2</p> 	<p>O</p> 
<p>Middle Back Panel 1 PC</p>	<p>Back Panel 2 PCS</p>	<p>Top Rail 1 PC</p>	<p>Support Leg 4 PCS</p>	<p>Cover 2 PCS</p>

## HARDWARE LIST

#1  8*30mm	#2  Magnet 2 PCS	#3  7*3*15mm	#4  Handle 2 PCS	#5  5/32*22mm
Wood Dowel 18 PCS (Extra 1)	Magnet 2 PCS	Long Screw 4 PCS (Extra 1)	Handle 2 PCS	Round Head Bolt 4 PCS (Extra 1)
#6  Cam Bolt 6 PCS (Extra 1)	#7  Cam Lock 6 PCS (Extra 1)	#8  1/4*38mm	#9  Shelf Holder 12 PCS (Extra 1)	#10  8*4*32mm
Cam Bolt 6 PCS (Extra 1)	Cam Lock 6 PCS (Extra 1)	Bolt 2 PCS (Extra 1)	Shelf Holder 12 PCS (Extra 1)	Screw 3 PCS (Extra 1)
#11  7*38mm	#12  8*3*12mm	#13  Cam Sticker 6 PCS (Extra 1)	#14  Binding Post 2 SETS (Extra 1)	#15  M2
Tapping Bolt 4 PCS (Extra 1)	Short Screw 21 PCS (Extra 1)	Cam Sticker 6 PCS (Extra 1)	Binding Post 2 SETS (Extra 1)	Small Allen Wrench 1 PC
#16  M4				
Allen Wrench 1 PC				

## ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Step 1. Attach magnets (part #2) to partition panels (parts D2 & E2) using long screws (part #3) and phillips head screwdriver. Attach handles (part #4) to doors (parts G2 & H2) using round head bolts (part #5) and phillips head screwdriver.

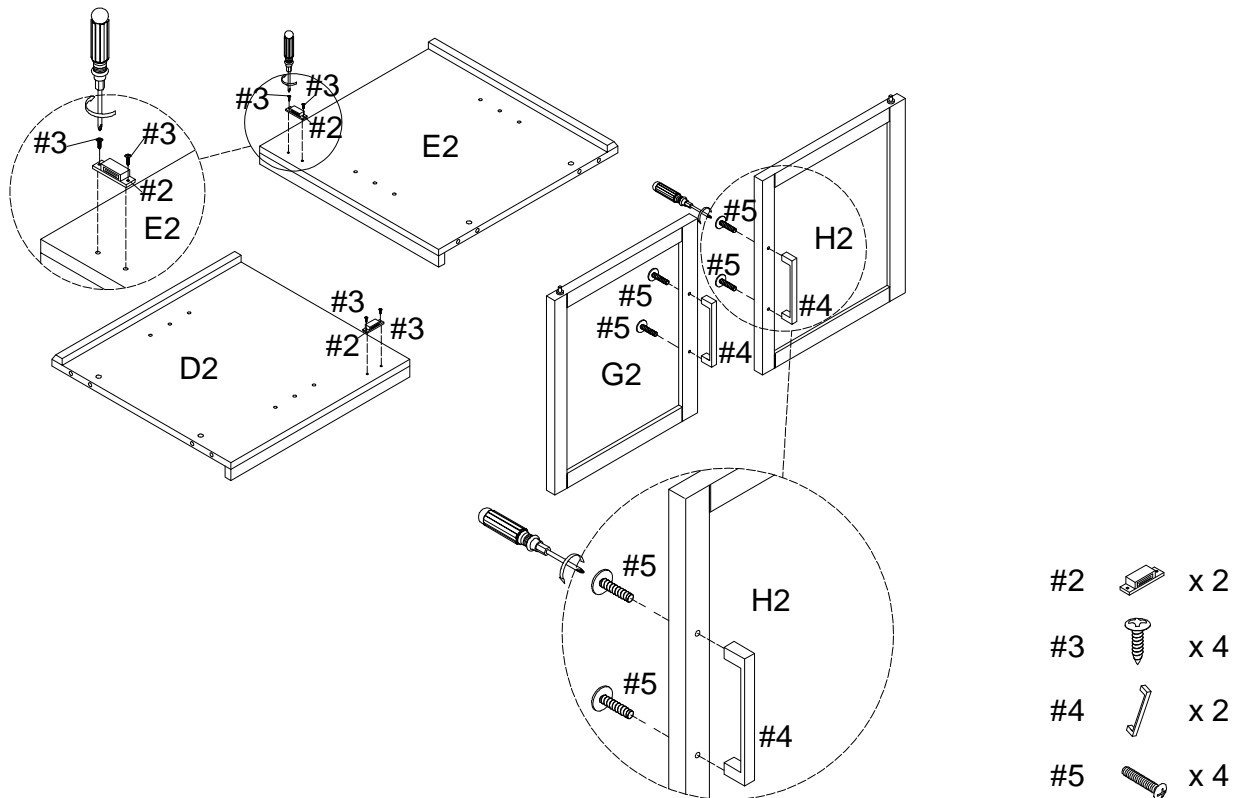


Step 2. Attach top rail (part M2) to top panel (part A2) using wood dowels (part #1), screws (part #10) and phillips head screwdriver. Insert cam bolts (part #6) into pre-drilled holes of top panel (part A2) using phillips head screwdriver.

  Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

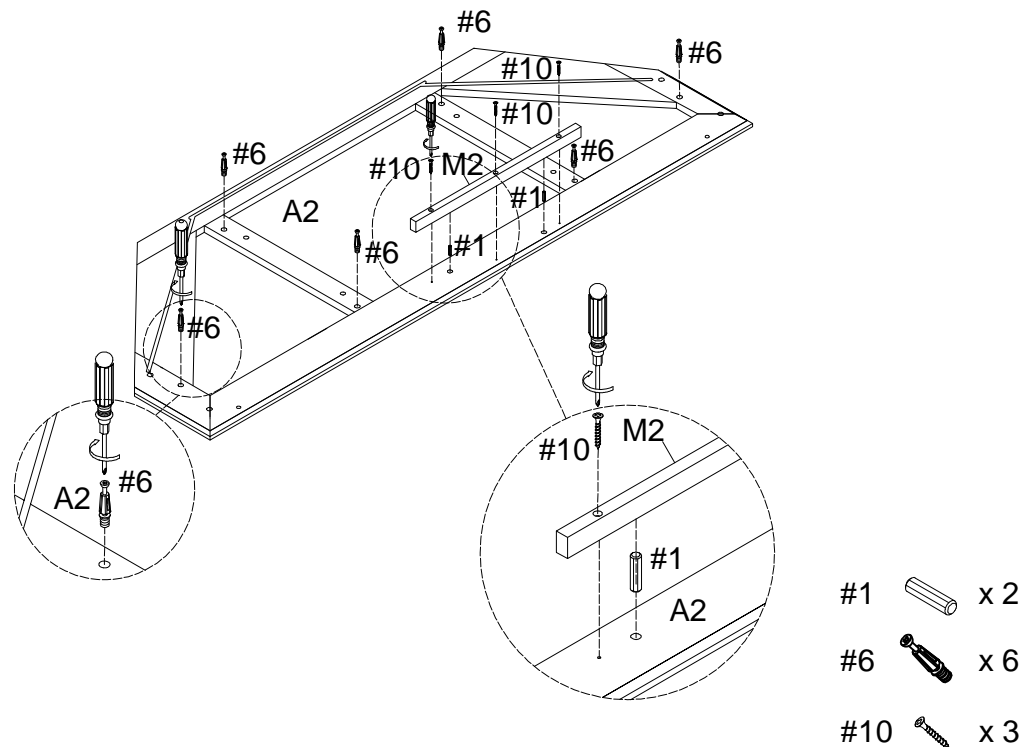




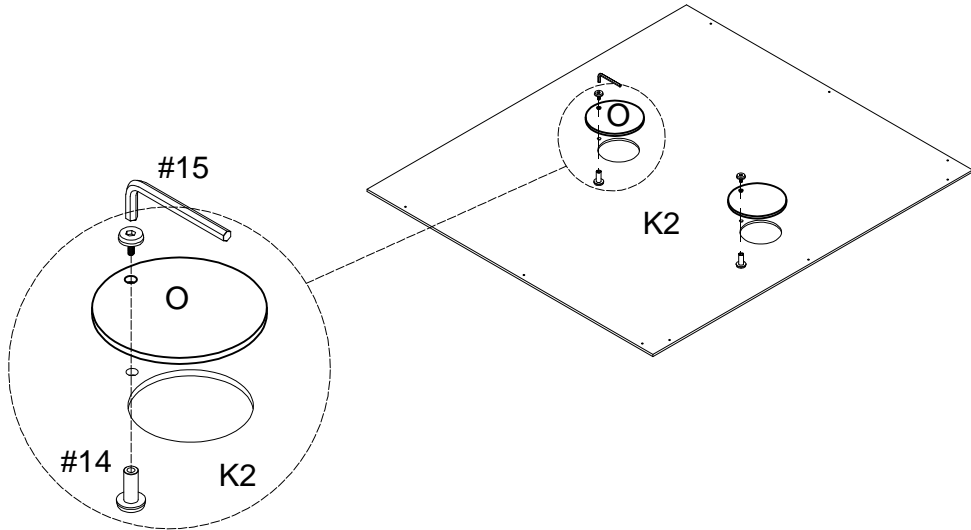

 Step 3. Attach covers (part O) to middle back panel (part K2) using binding posts (part #14) and small allen wrench (part #15).

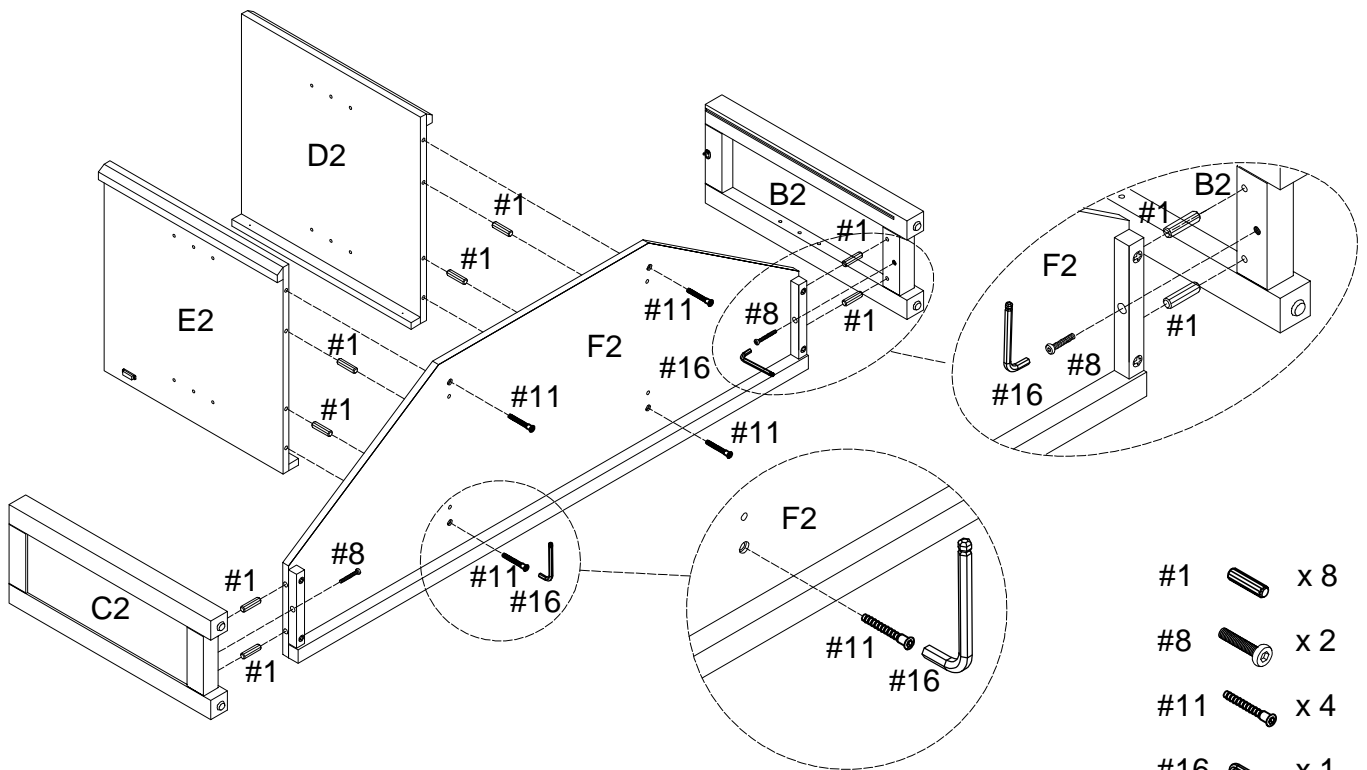


- #14  x 2
- #15  x 1

Step 4. Attach partition panels (parts D2 & E2) to bottom panel (part F2) using wood dowels (part #1), tapping bolts (part #11) and allen wrench (part #16). Attach panels (parts B2 & C2) to bottom panel (part F2) using wood dowels (part #1), bolts (part #8) and allen wrench (part #16).







 - #1  x 8
- #8  x 2
- #11  x 4
- #16  x 1

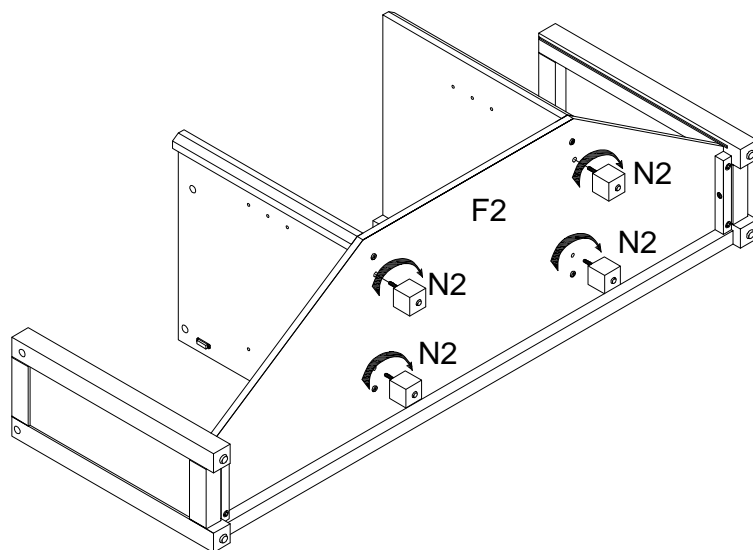  Step 5. Attach support legs (part N2) to bottom panel (part F2).

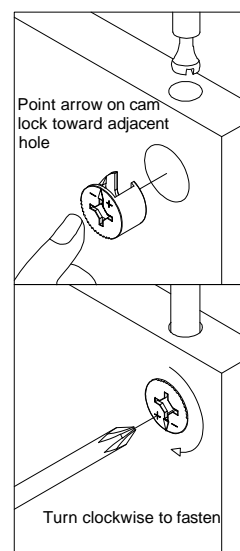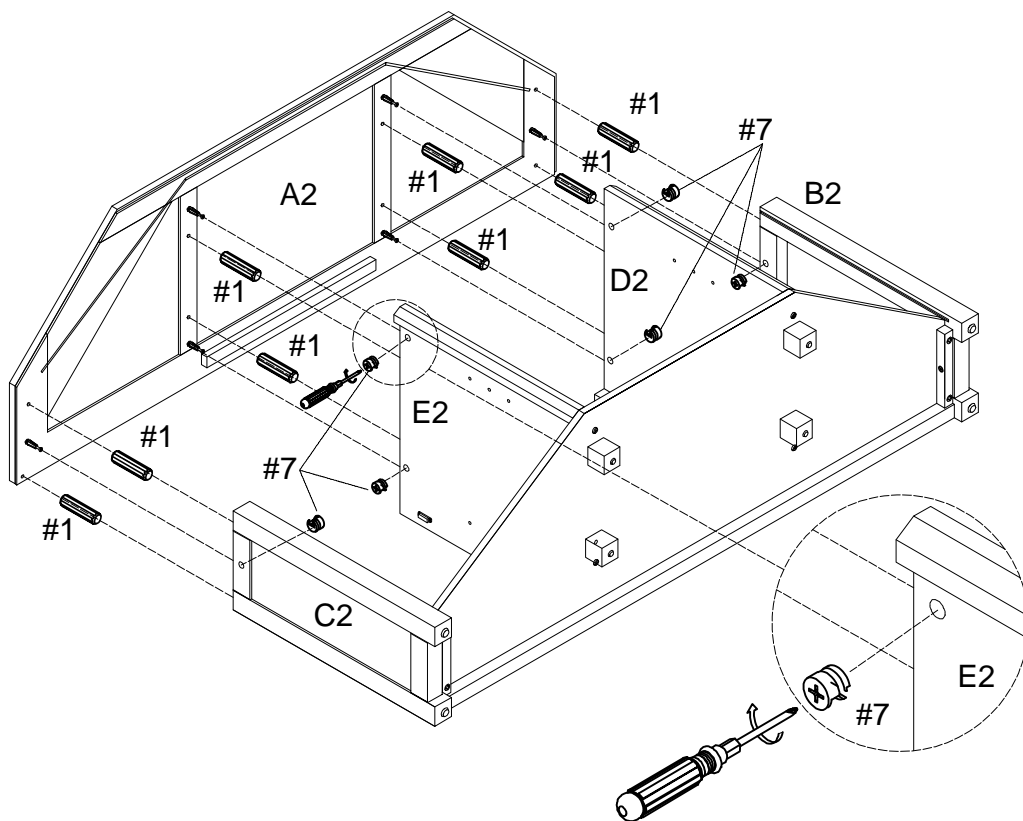


Step 6. Attach top panel (part A2) to assembled unit (parts B2, C2, D2 & E2) using wood dowels (part #1), cam locks (part #7) and phillips head screwdriver.  
Note: Cam locks must rotate a full 180°. See pictured insert.




- #1  x 8
- #7  x 6

 Step 7. Attach back panels (parts K2 & L2) to assembled unit (parts A2, B2, C2, D2, E2 & F2) using short screws (part #12) and phillips head screwdriver.

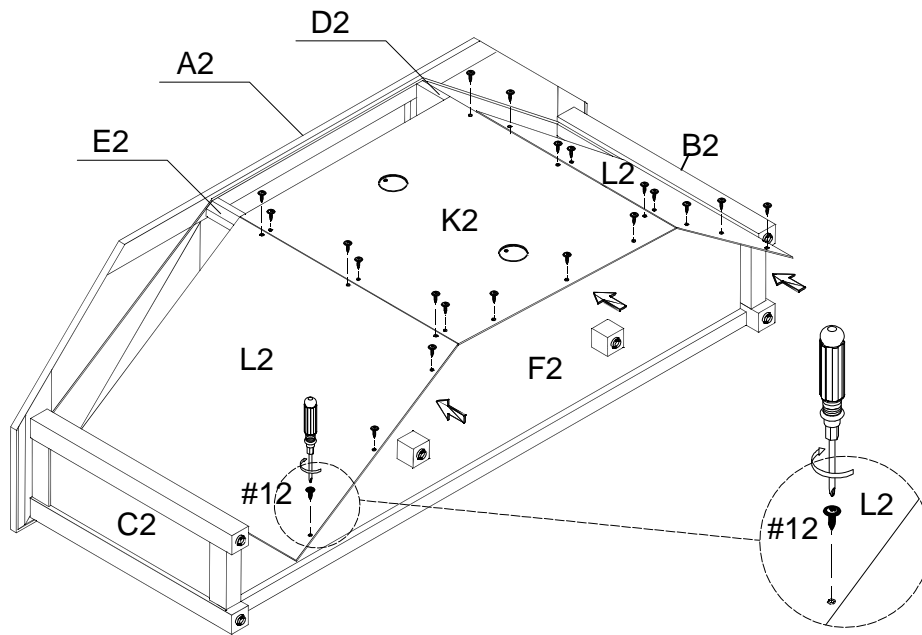

#12  x 21

 
Step 8. Carefully turn unit upright. Place shelf holders (part #9) into desired position and then slide adjustable shelves (parts I2 & J2) into place.

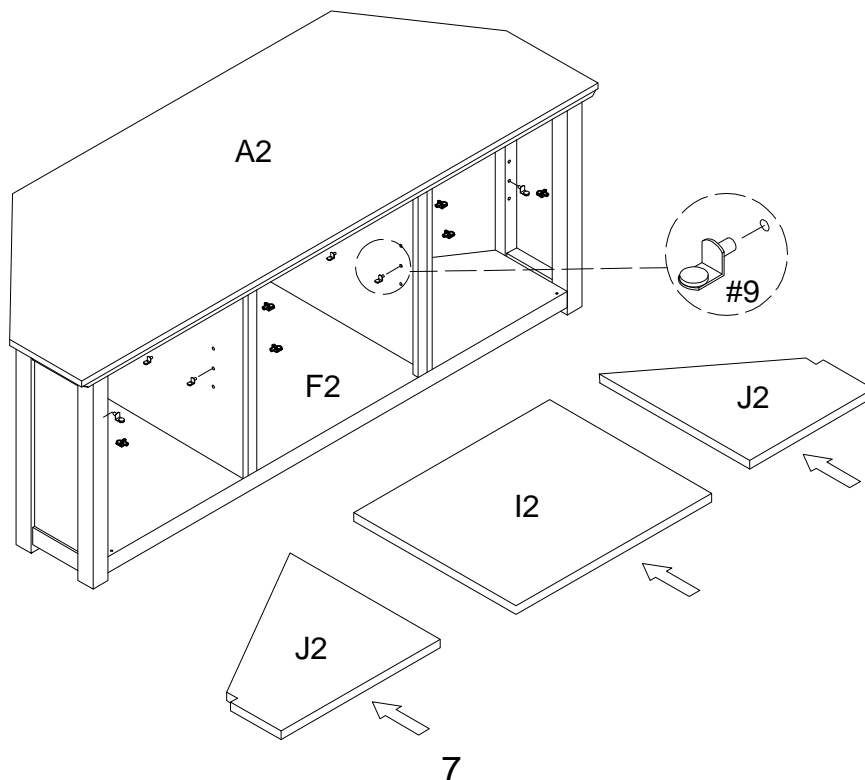

#9  x 12


Step 9. Attach doors (parts G2 & H2) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part F2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A2).

 Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

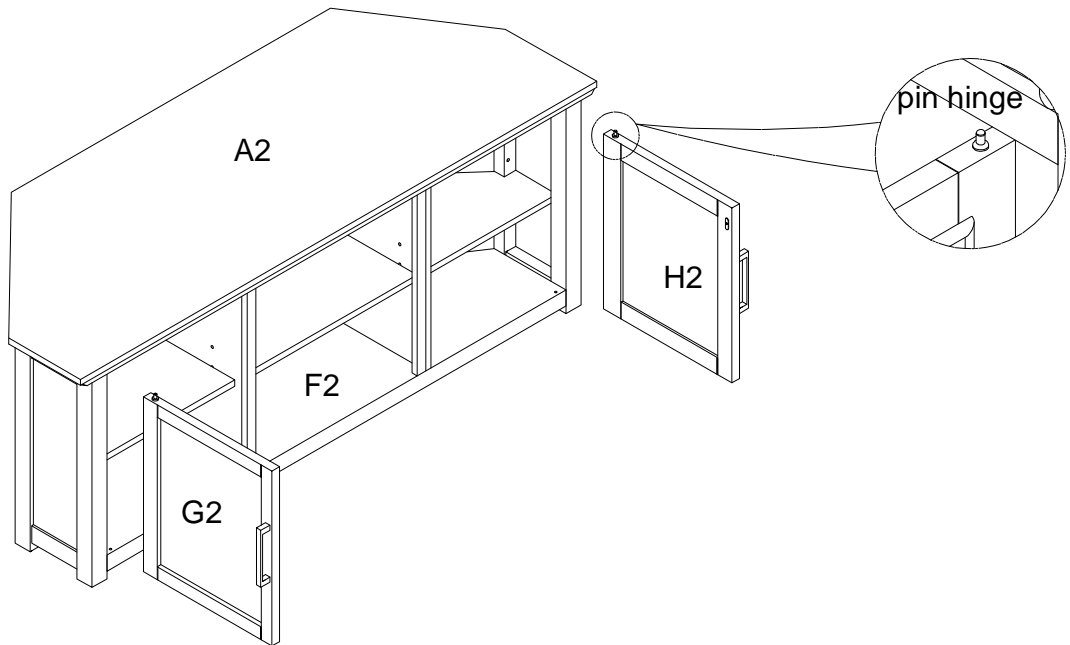

Step 10. Using cam stickers (part #13) cover all cam locks (part #7). If you would like to add an electric fireplace (\*Not Included), please follow step 11.

 NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

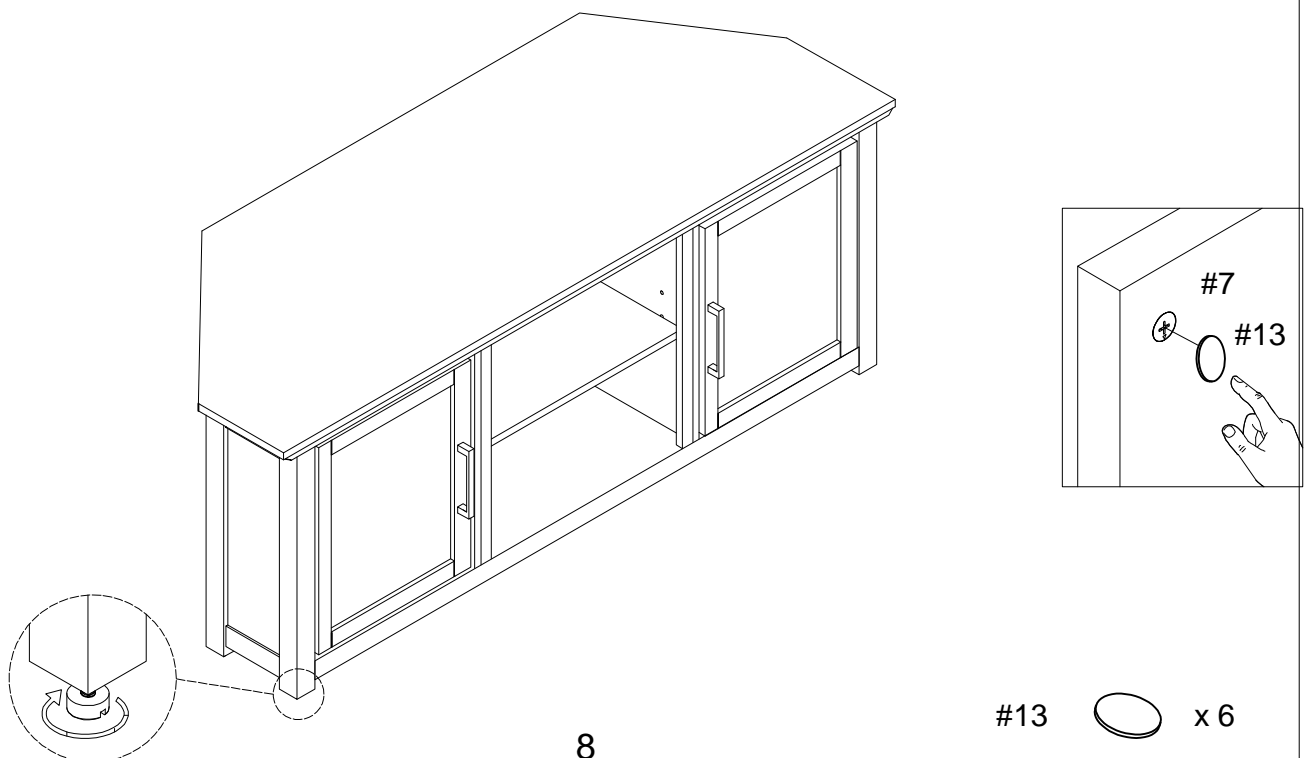

Step 11. Fireplace Assembly: Remove middle adjustable shelf (part I2) and middle pack panel (part K2). Install electric fireplace (\*Not Included) into the unit following the assembly instructions of the electric fireplace.

