 


# **CROSLEY**

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

---

## FURNITURE

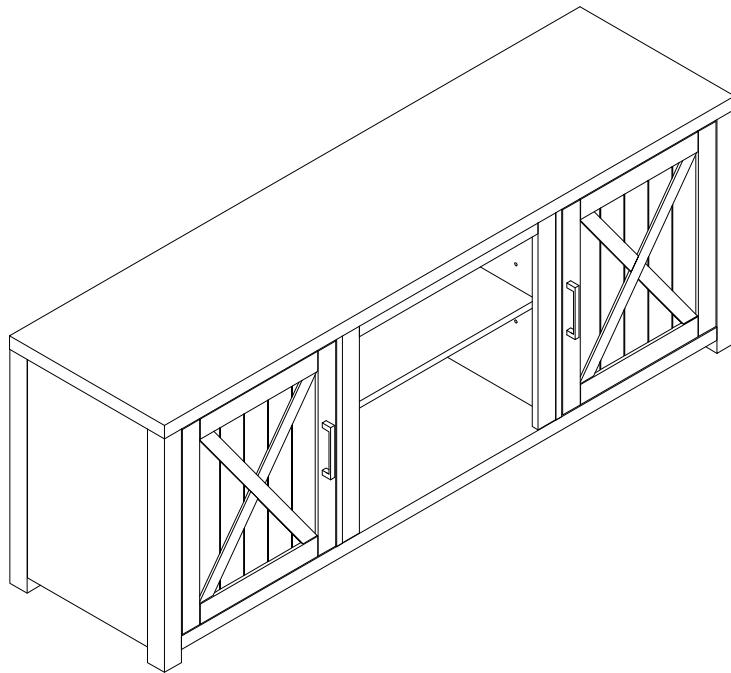 


 
 
 

 
 




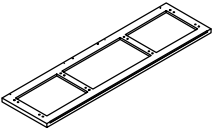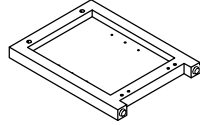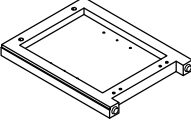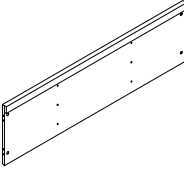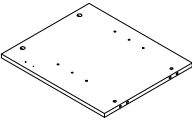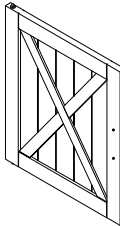

58" TV Stand  
CF101358


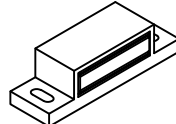
# PARTS LIST

 
<p>A2</p> 	<p>B2</p> 	<p>C2</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Left Partition Panel 1 PC</p>
<p>F2</p> 	<p>G2</p> 	<p>H2</p> 	<p>I2</p> 	<p>J2</p> 
<p>Right Partition Panel 1 PC</p>	<p>Left Door 1 PC</p>	<p>Right Door 1 PC</p>	<p>Middle Adjustable Shelf 1 PC</p>	<p>Side Adjustable Shelf 2 PCS</p>
<p>K2</p> 	<p>L2</p> 	<p>M2</p> 	<p>N2</p> 	<p>O2</p> 
<p>Middle Back Panel 1 PC</p>	<p>Side Back Panel 2 PCS</p>	<p>Vertical Rail 2 PCS</p>	<p>Top Rail 1 PC</p>	<p>Support Leg 2 PCS</p>
<p>P</p> 				
<p>Cover 2 PCS</p>				

## HARDWARE LIST

#1		#2		#3		#4	 7*38mm	#5	 8*30mm
	Handle 2 PCS		Cam Bolt 16 PCS (Extra 1)		Cam Lock 16 PCS (Extra 1)		Tapping Bolt 4 PCS (Extra 1)		Wood Dowel 22 PCS (Extra 1)
#6		#7	 6*3*15mm	#8	 5/32"*20mm	#9	 8*4*32mm	#10	
	Magnet 2 PCS		Short Screw 4 PCS (Extra 1)		Round Head Bolt 4 PCS (Extra 1)		Long Screw 2 PCS (Extra 1)		Shelf Holder 12 PCS (Extra 1)
#11		#12	 8*3*12mm	#13		#14	 M2	#15	 M4
	Binding Post 2 SETS (Extra 1)		Round Head Screw 30 PCS (Extra 1)		Cam Sticker 16 PCS (Extra 1)		Small Allen Wrench 1 PC		Allen Wrench 1 PC

### ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach covers (part P) to middle back panel (part K2) using binding posts (part #11) and small allen wrench (part #14).

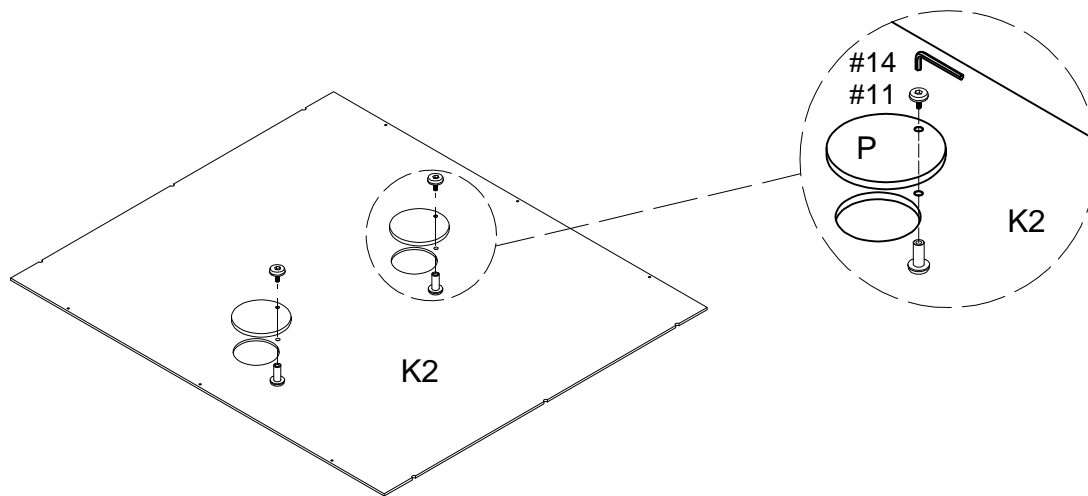

- #11  x 2
- #14  x 1


Step 2. Insert cam bolts (part #2) into pre-drilled holes of panels (parts A2, B2, C2, E2 & F2) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

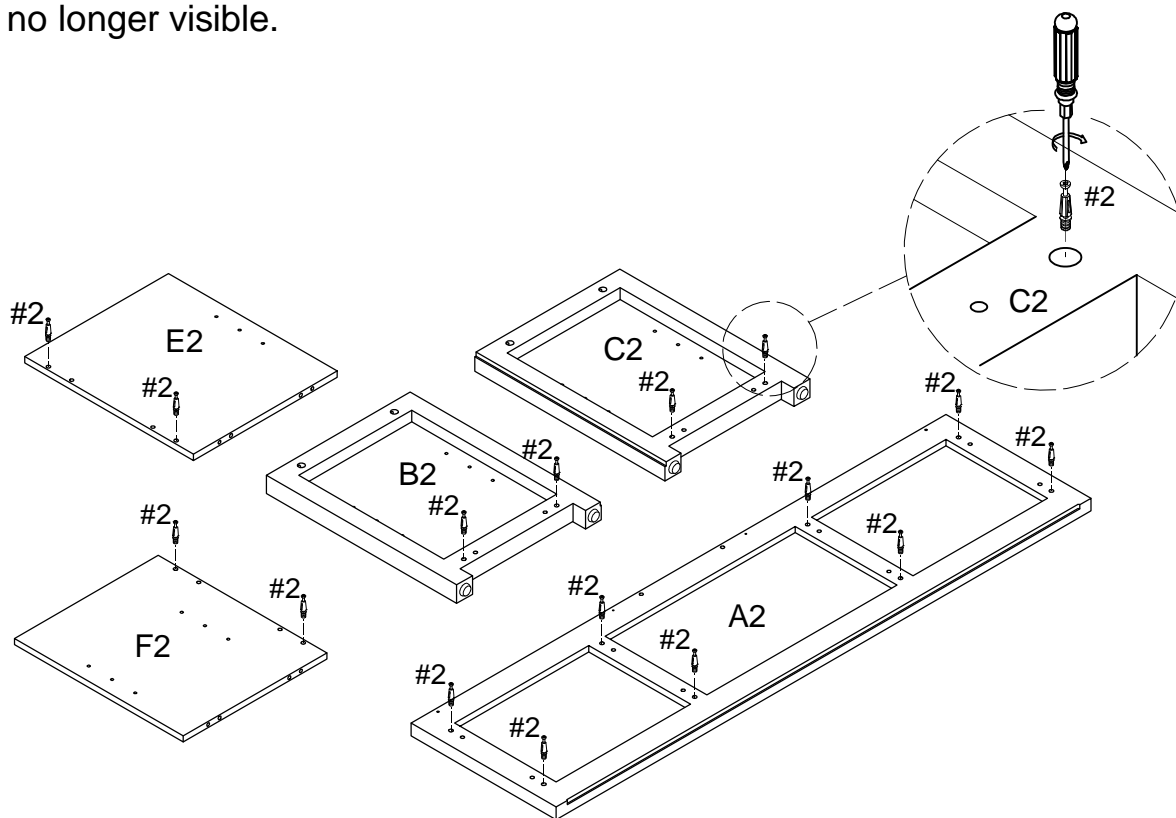


- #2  x 16

Step 3. Attach magnets (part #6) to partition panels (parts E2 & F2) using short screws (part #7) and phillips head screwdriver. Attach handles (part #1) to doors (parts G2 & H2) using round head bolts (part #8) and phillips head screwdriver.


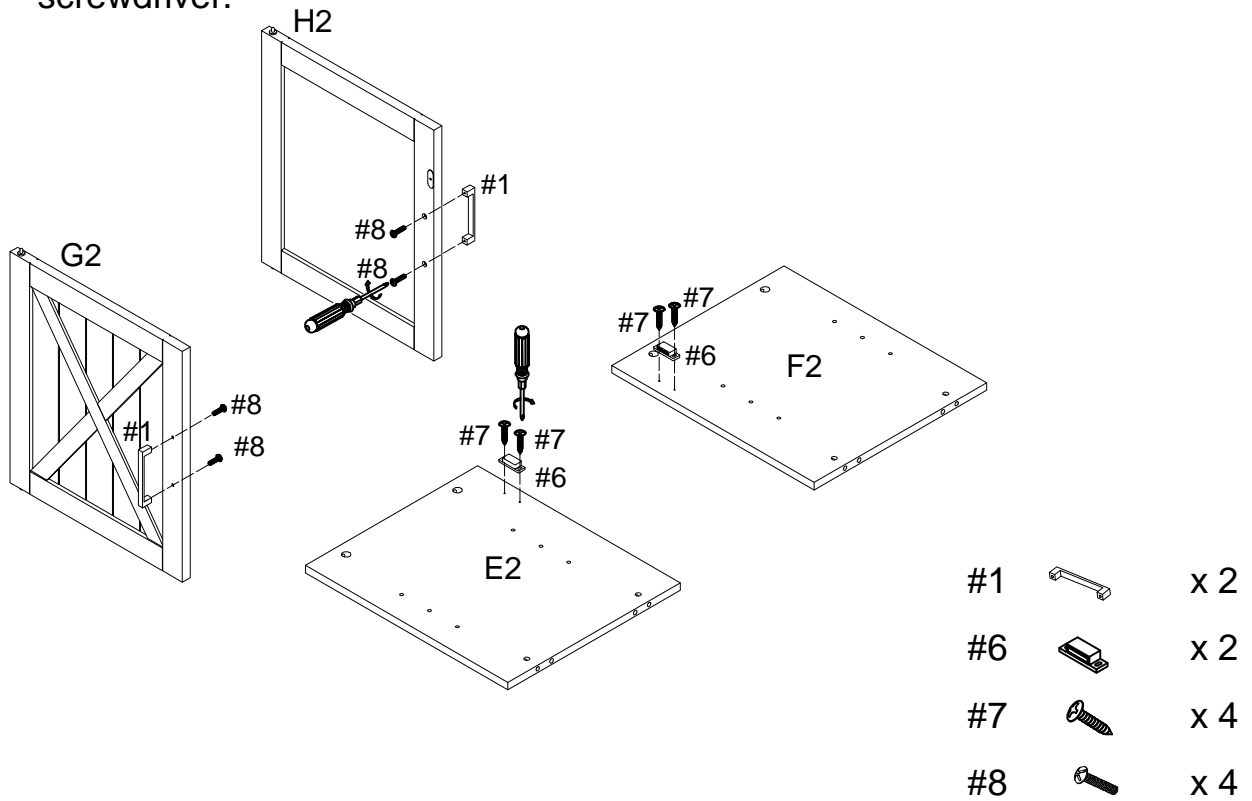




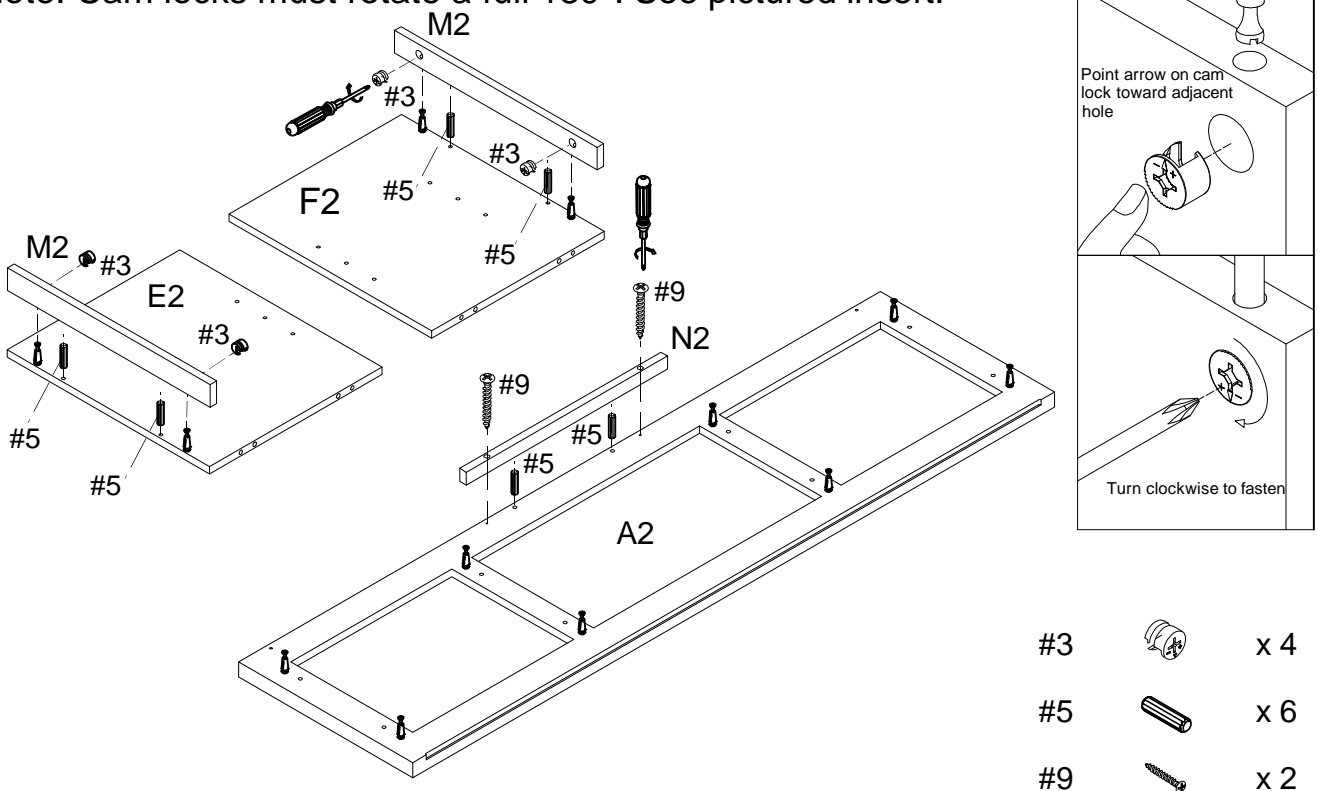

Step 4. Attach vertical rails (part M2) to partition panels (parts E2 & F2) using cam locks (part #3), wood dowels (part #5) and phillips head screwdriver. Attach top rail (part N2) to top panel (part A2) using wood dowels (part #5), long screws (part #9) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

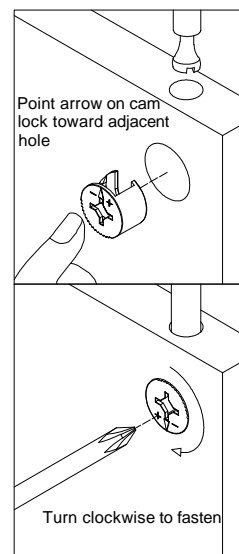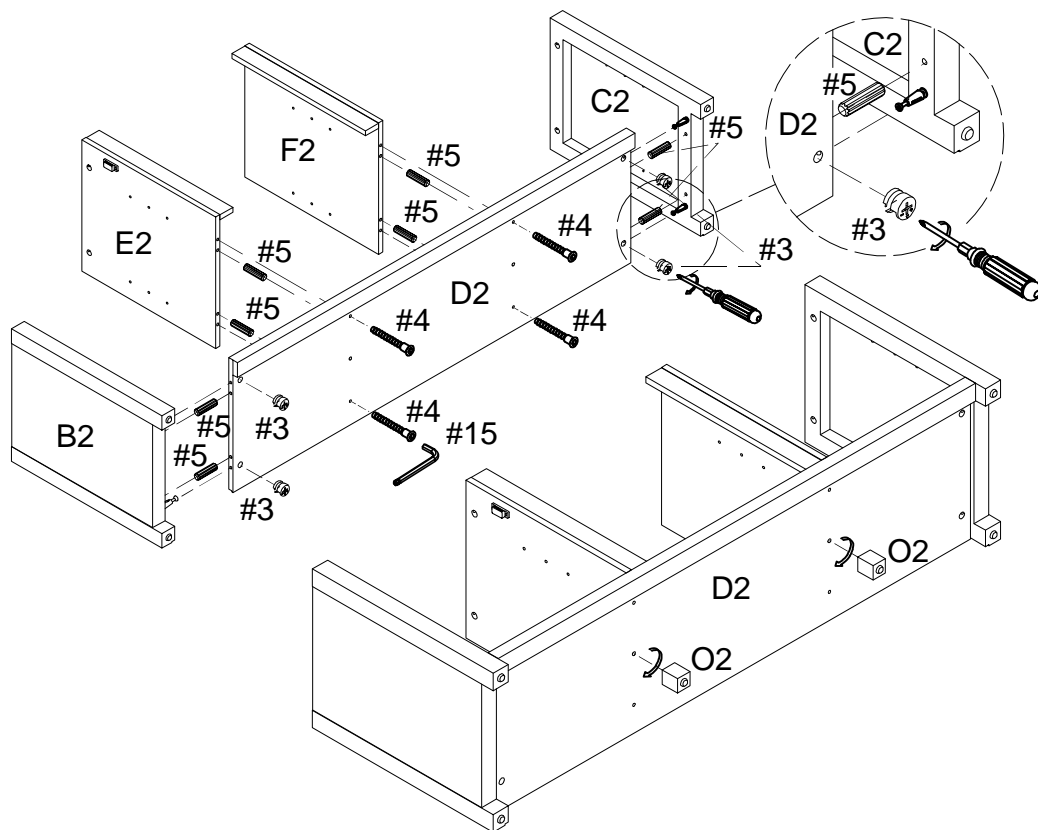



Step 5. Attach partition panels (parts E2 & F2) to bottom panel (part D2) using tapping bolts (part #4), wood dowels (part #5) and allen wrench (part #15). Attach left panel (part B2) and right panel (part C2) using cam locks (part #3), wood dowels (part #5) and phillips head screwdriver. Attach support legs (part O2) to bottom panel (part D2).  
 Note: Cam locks must rotate a full 180°. See pictured insert.





- #3  x 4
- #4  x 4
- #5  x 8
- #15  x 6


Step 6. Carefully turn unit upright. Attach top panel (part A2) to assembled unit (parts B2, C2, E2 & F2) using cam locks (part #3), wood dowels (part #5) and phillips head screwdriver.

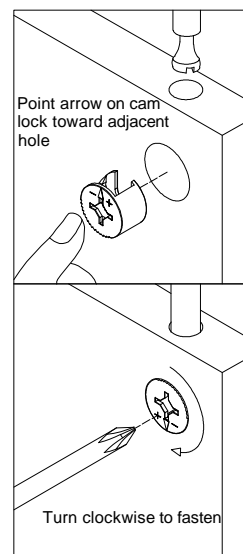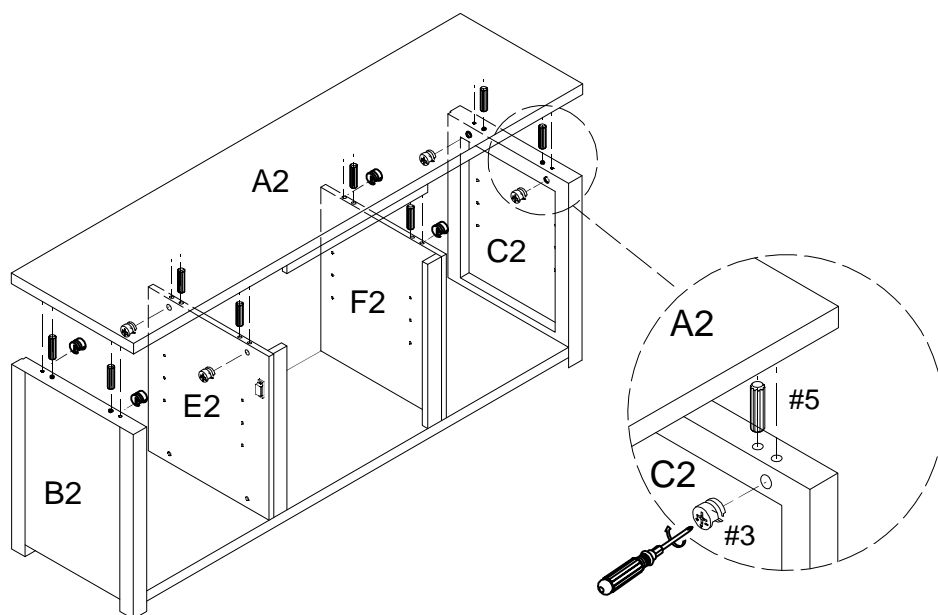Note: Cam locks must rotate a full 180°. See pictured insert.




- #3  x 8
- #5  x 8

Step 7. Attach back panels (parts K2 & L2) to assembled unit (parts A2, B2, C2, D2, E2 & F2) using round head screws (part #12) and phillips head screwdriver.

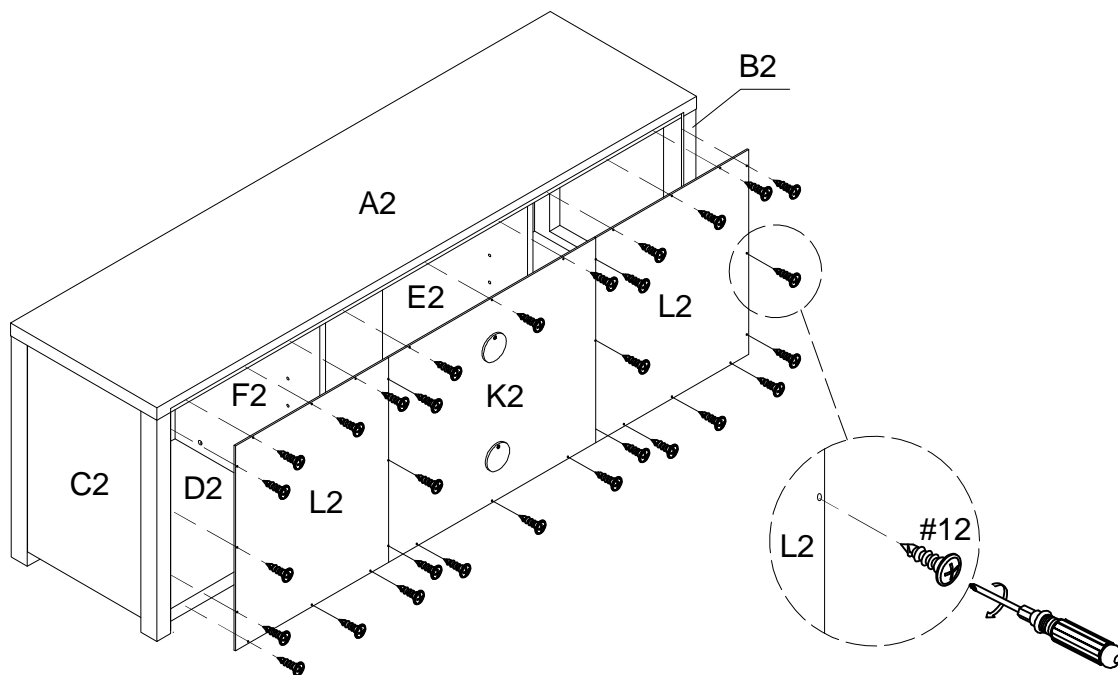

#12  x 30

Step 8. Place shelf holders (part #10) into desired position and then slide adjustable shelves (parts I2 & J2) into place.

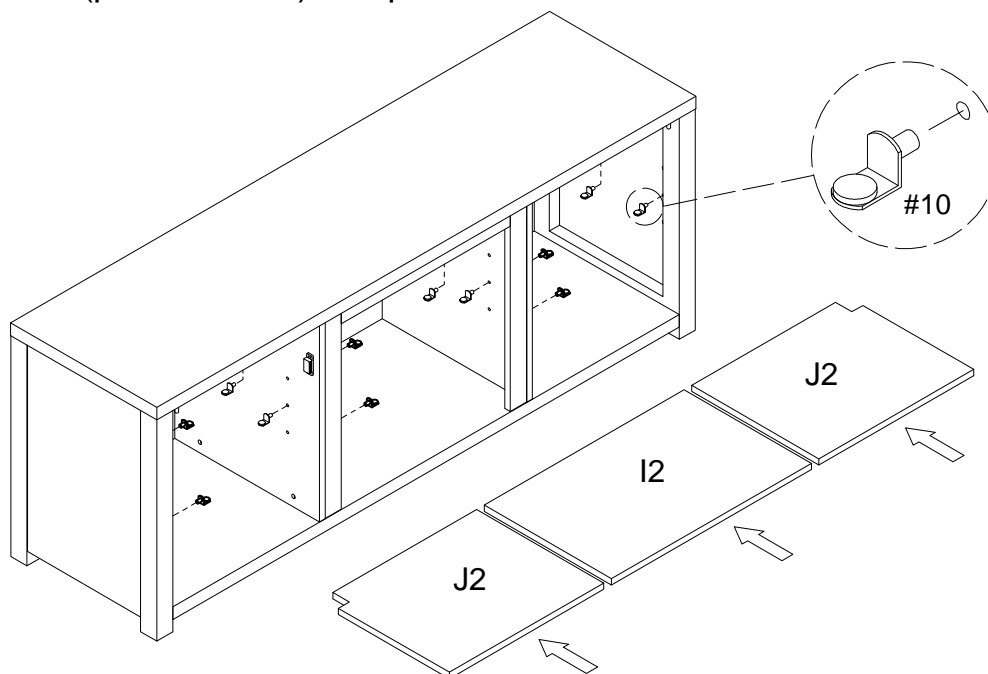


#10  x 12


Step 9. Attach doors (parts G2 & H2) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A2). If you would like to add an electric fireplace (\*Not Included), please follow step 11.

NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

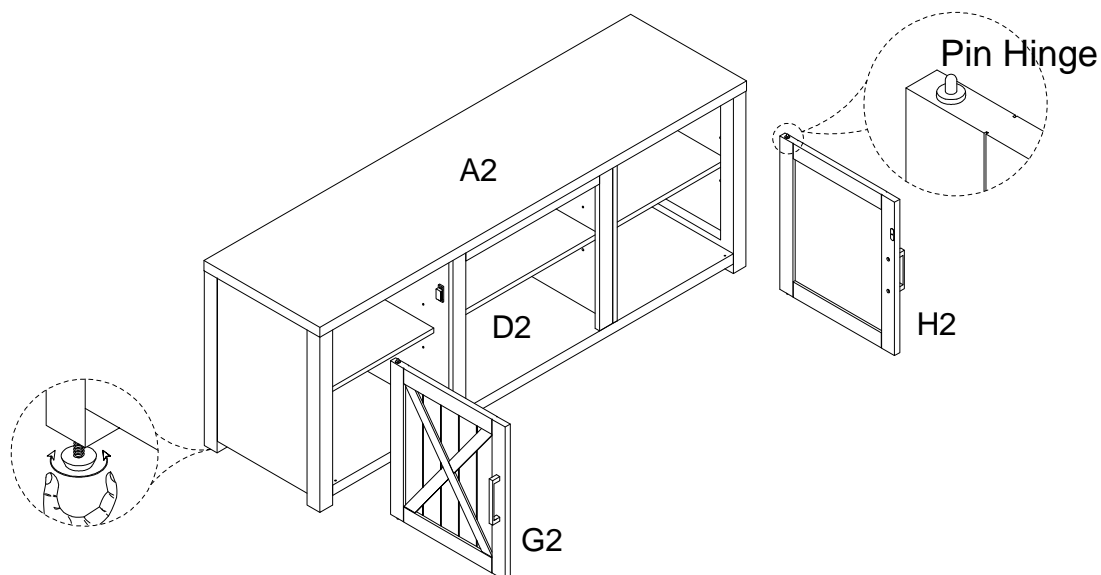

Step 10. Using cam stickers (part #13) cover all cam locks (part #3).

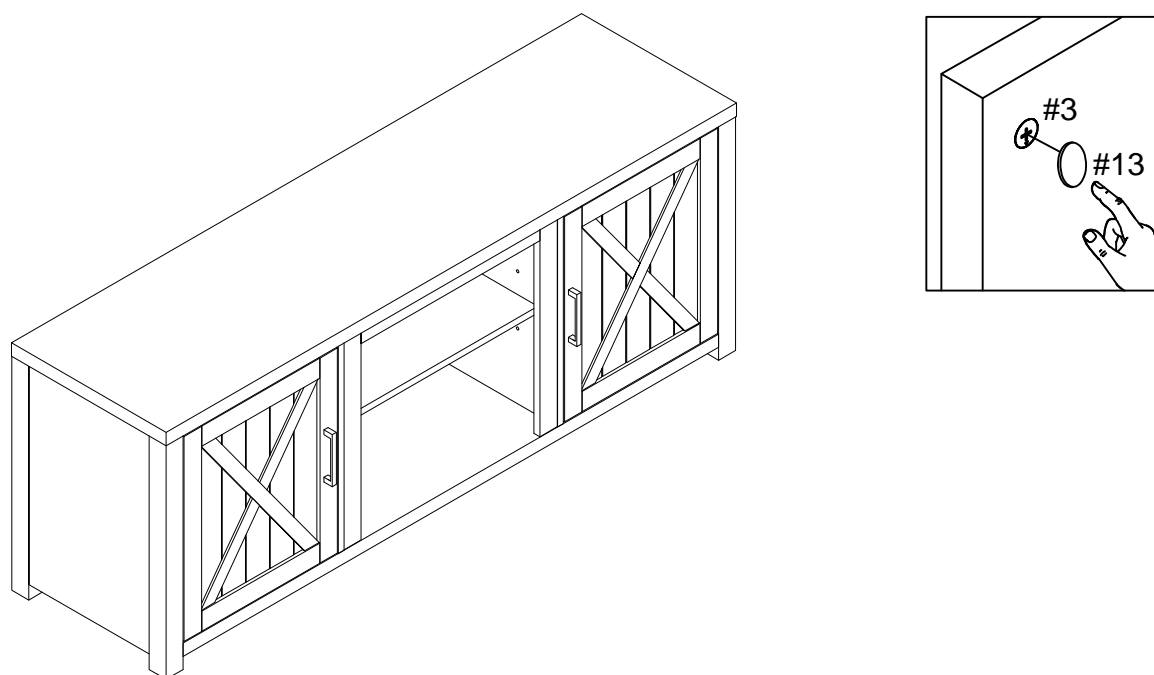

#13  x 16

Step 11. Fireplace Assembly: Remove middle adjustable shelf (part I2) and middle pack panel (part K2). Install electric fireplace (\*Not Included) into the unit following the assembly instructions of the electric fireplace.

