 















CROSLEY

FURNITURE


Media Console CF1103

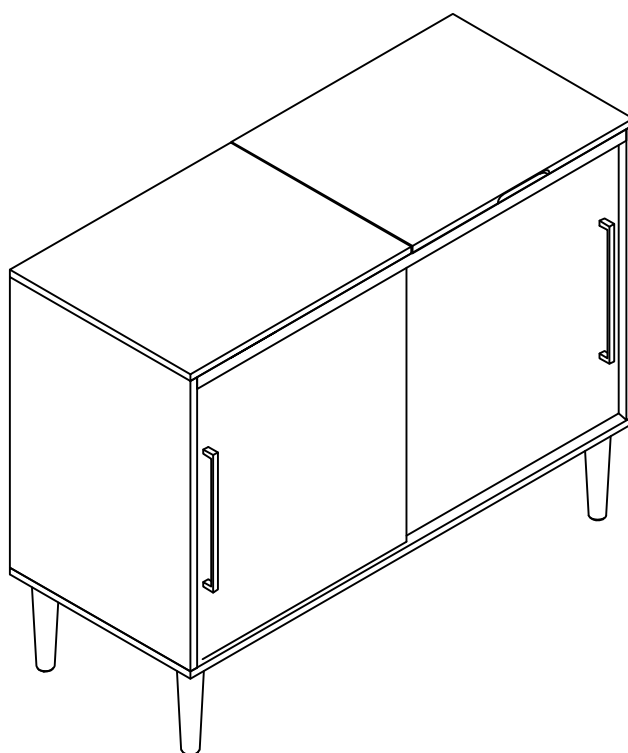

             PARTS LIST

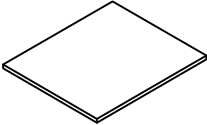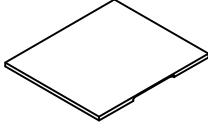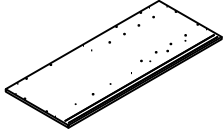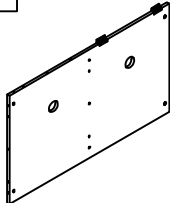
A3	B3	C3	D3	E3
				
Left Top Panel 1 PC	Right Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC
F3	G4	H3	I3	J3
				
Dividing Panel 1 PC	Back Panel 1 PC	Left Door Panel 1 PC	Right Door Panel 1 PC	Fixed Shelf 1 PC
K3	L3	M2	N2	O2
				
Adjustable Shelf 2 PCS	Top Rail 1 PC	Leg 4 PCS	Bottom Rail 1 PC	Metal Wire 4 PCS
P2				
				
Cover 2 PCS				

 HARDWARE LIST

#1  1/4"*13mm	#2 	#3 	#4 	#5  8*30mm
Bolt 8 PCS (Extra 1)	Hex Nut 8 PCS (Extra 1)	Cam Bolt 29 PCS (Extra 1)	Cam Lock 29 PCS (Extra 1)	Wood Dowel 24 PCS (Extra 1)
#6  7*3.5*12mm	#7 	#8  5/32*25mm	#9 	#10  8*4*38mm
Short Screw 8 PCS (Extra 1)	Handle 2 PCS	Long Round Head Bolt 4 PCS (Extra 1)	Shelf Holder 8 PCS (Extra 1)	Screw 4 PCS (Extra 1)
#11  M4	#12 	#13 	#14  5/32*10mm	#15 
Allen Wrench 1 PC	Spring Hinge 1 PC	Wrench 1 PC	Short Round Head Bolt 2 PCS (Extra 1)	Cam Sticker 29 PCS (Extra 1)
#16  Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #3) into pre-drilled holes of panels (parts A3, C3, D3, E3, F3 & G4) using phillips head screwdriver.

 
Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

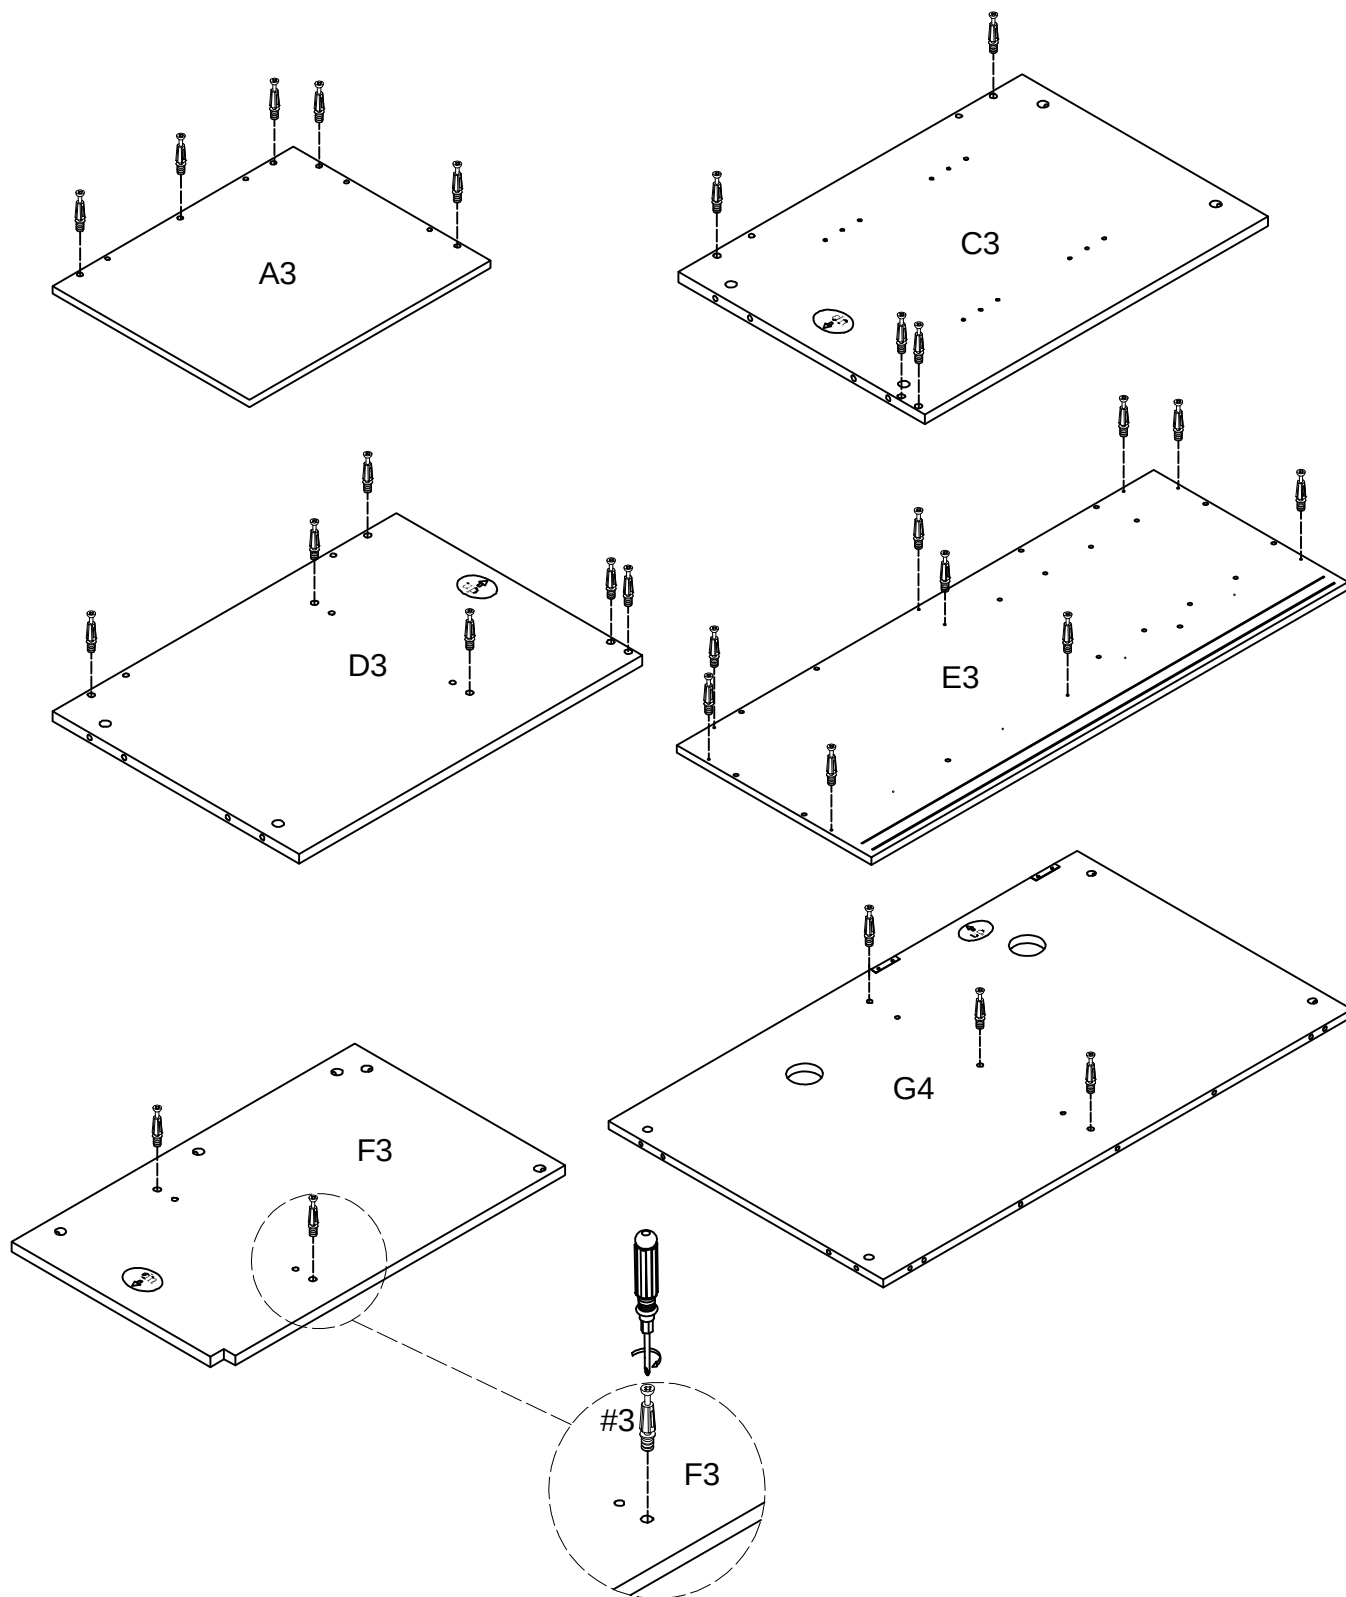

 
Step 2. Attach handles (part #7) to doors (parts H3 & I3) using long round head bolts (part #8) and phillips head screwdriver.

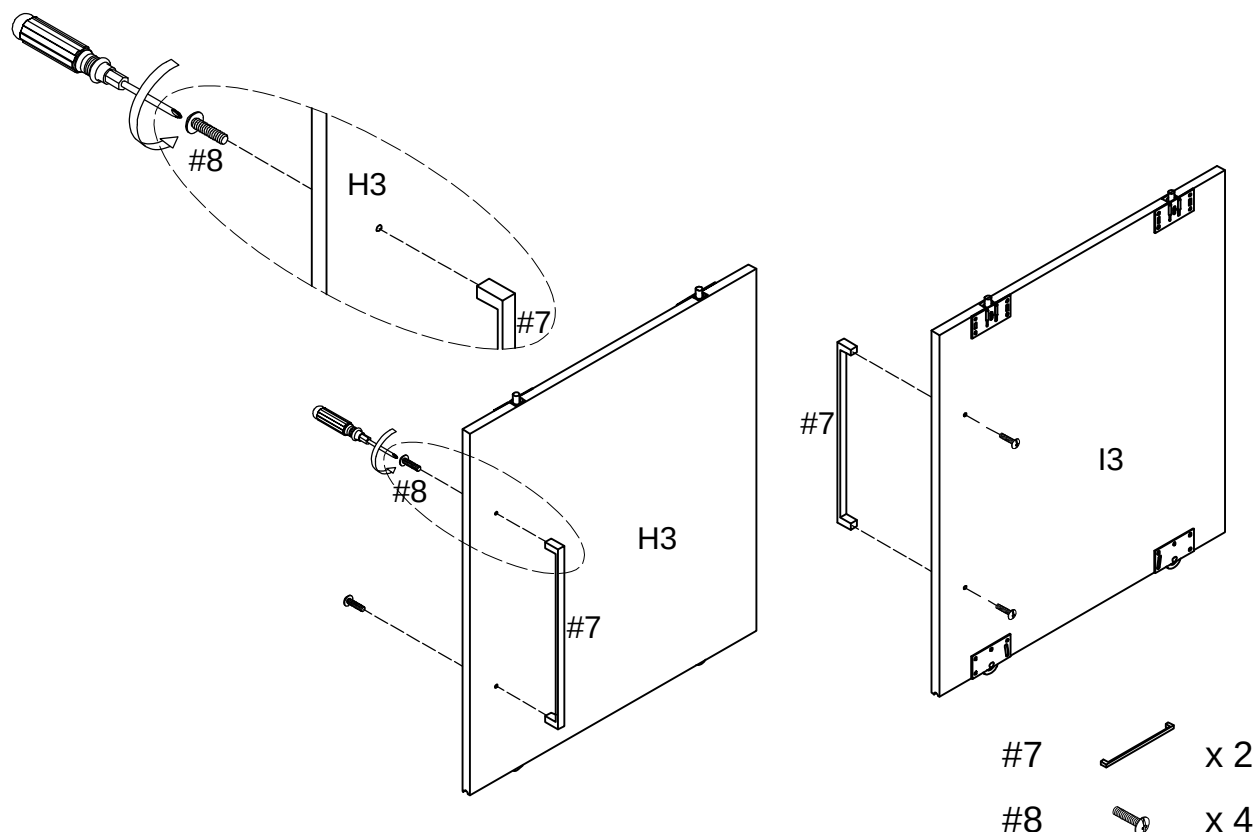

 Step 3. Attach bottom rail (part N2) to bottom panel (part E3) using wood dowels (part #5), screws (part #10) and phillips head screwdriver. Attach legs (part M2) to bottom panel (part E3) using bolts (part #1) and allen wrench (part #11).

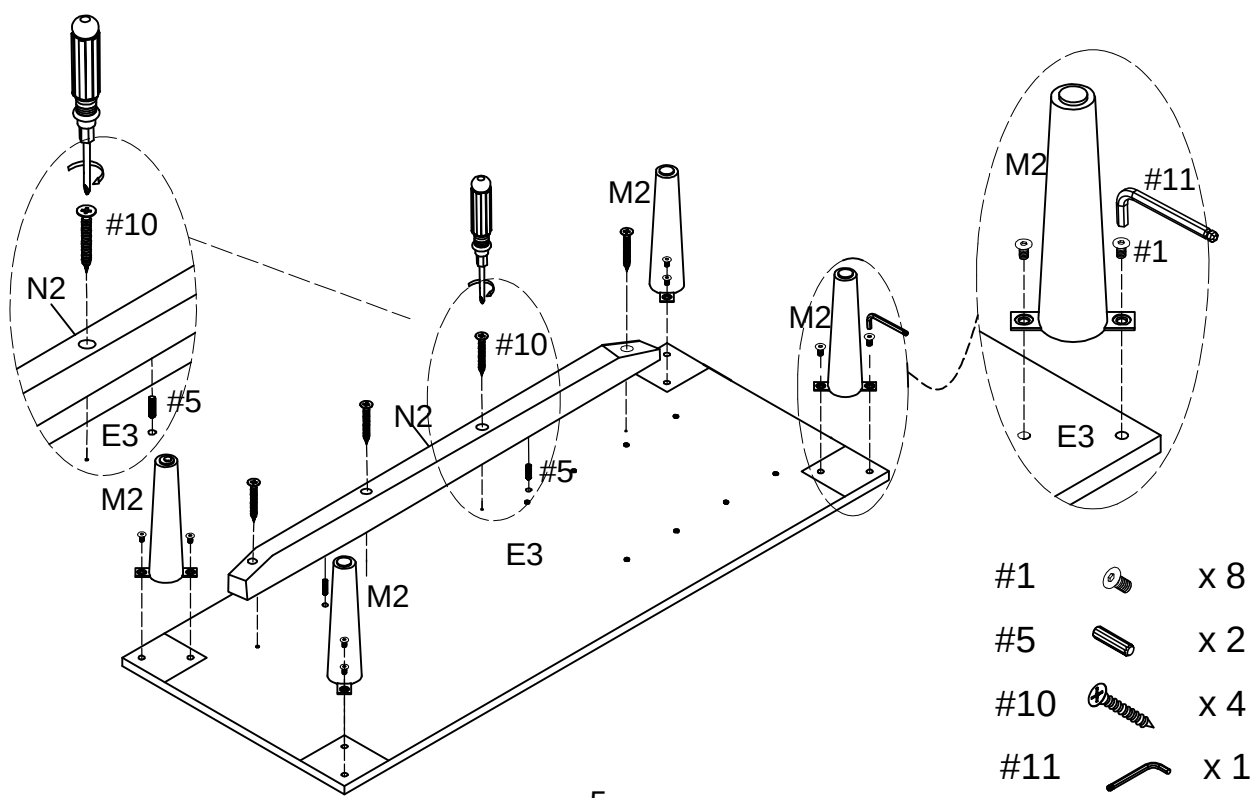

 
Step 4. Attach metal wires (part O2) to bottom panel (part E3) using hex nuts (part #2) and wrench (part #13).

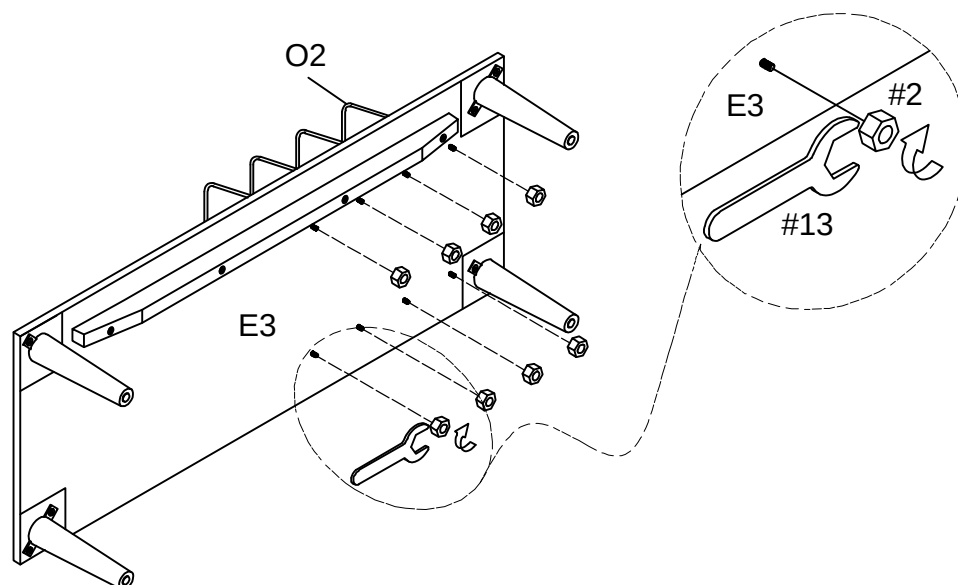

#2  x 8

#13  x 1

 Step 5. Attach dividing panel (part F3) to back panel (part G4) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.

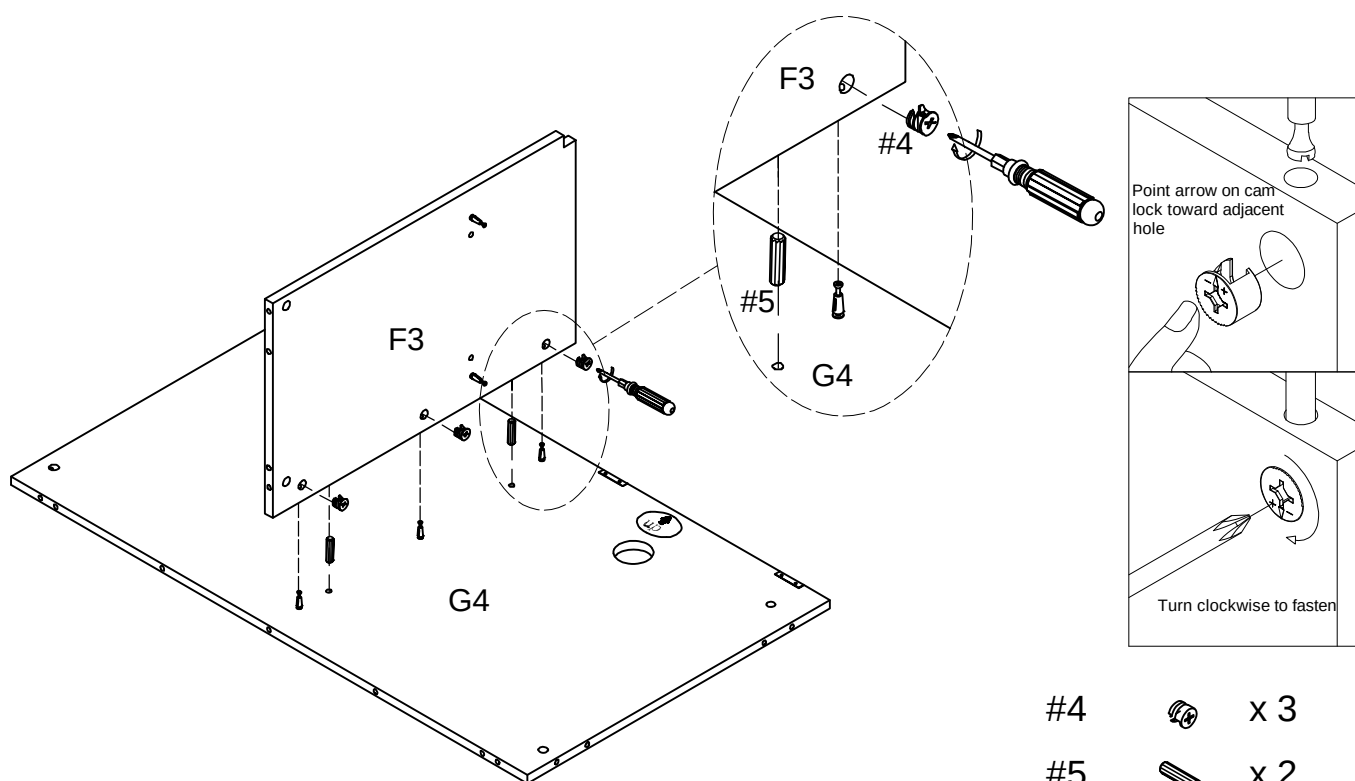


#4  x 3

#5  x 2


Step 6. Attach fixed shelf (part J3) to dividing panel (part F3) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

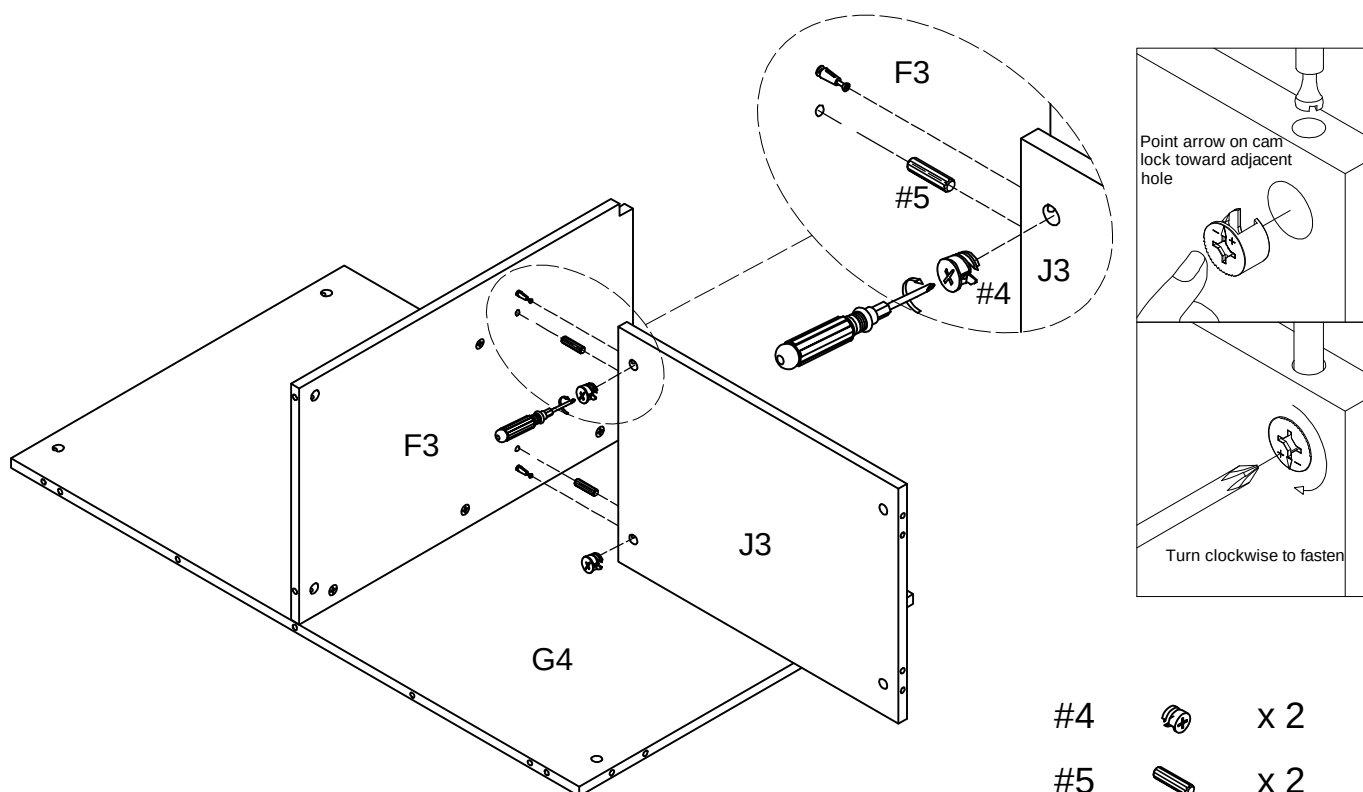



Step 7. Attach right panel (part D3) to assembled unit (parts G4 & J3) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

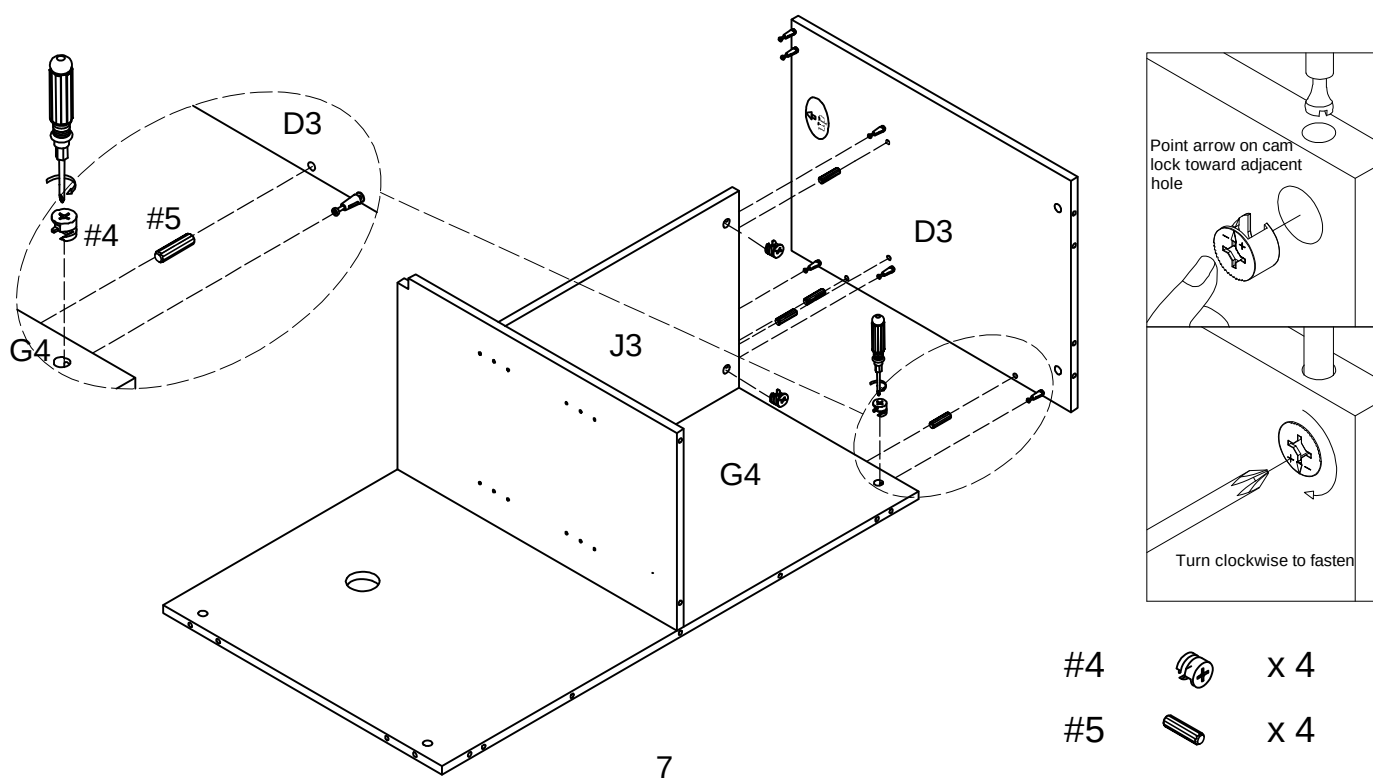

Step 8. Attach top rail (part L3) to right panel (part D3) using cam locks (part #4), and phillips head screwdriver.

 
 
Note: Cam locks must rotate a full 180°. See pictured insert.

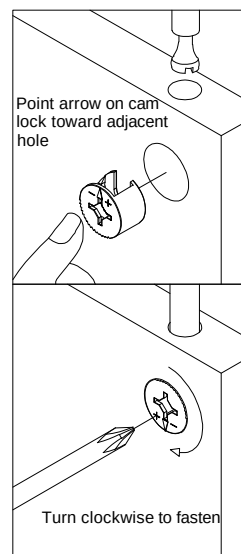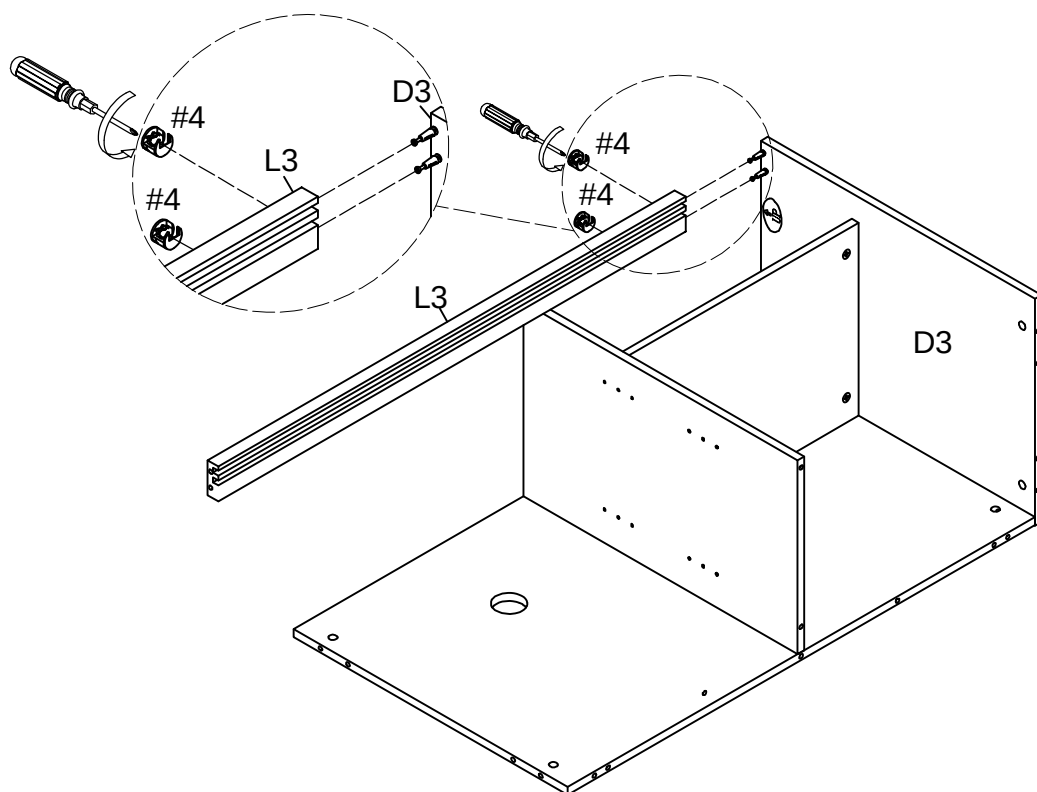

#4  x 2

Step 9. Attach left panel (part C3) to top rail (part L3) and back panel (part G4) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

  Note: Cam locks must rotate a full 180°. See pictured insert.

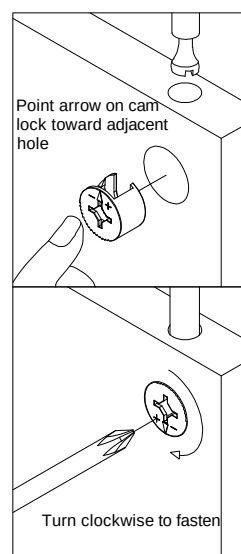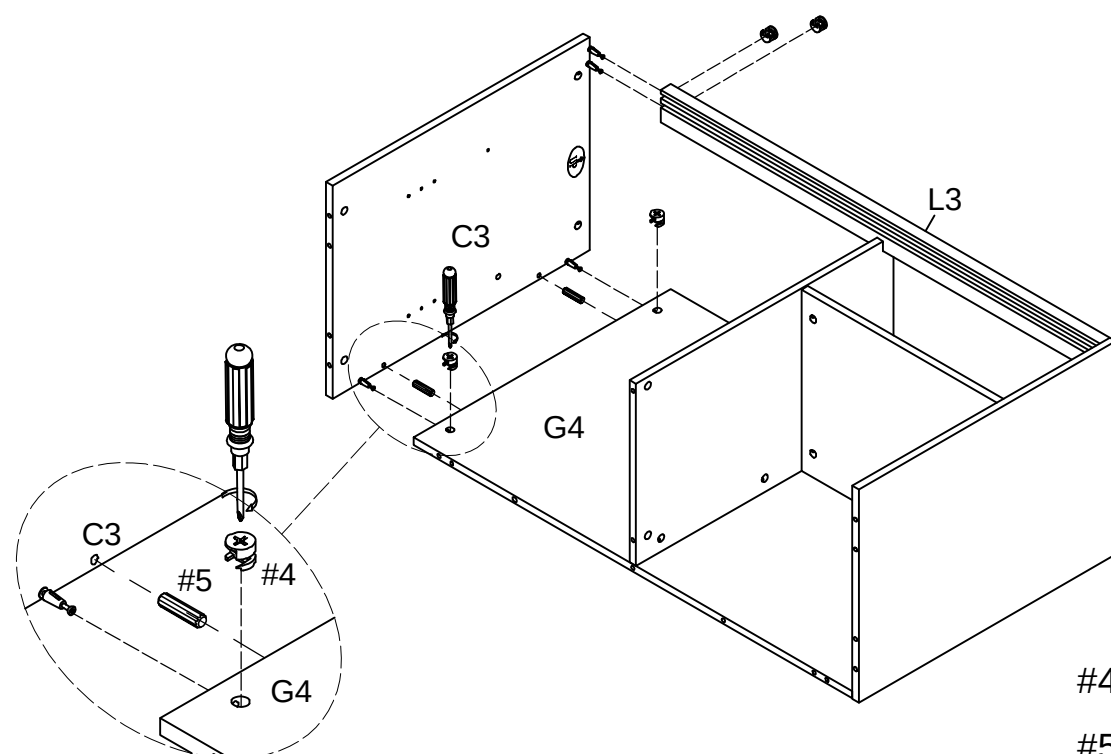


#4  x 4

#5  x 2


Step 10. Attach bottom panel (part E3) to assembled unit (parts C3, D3, F3 & G4) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

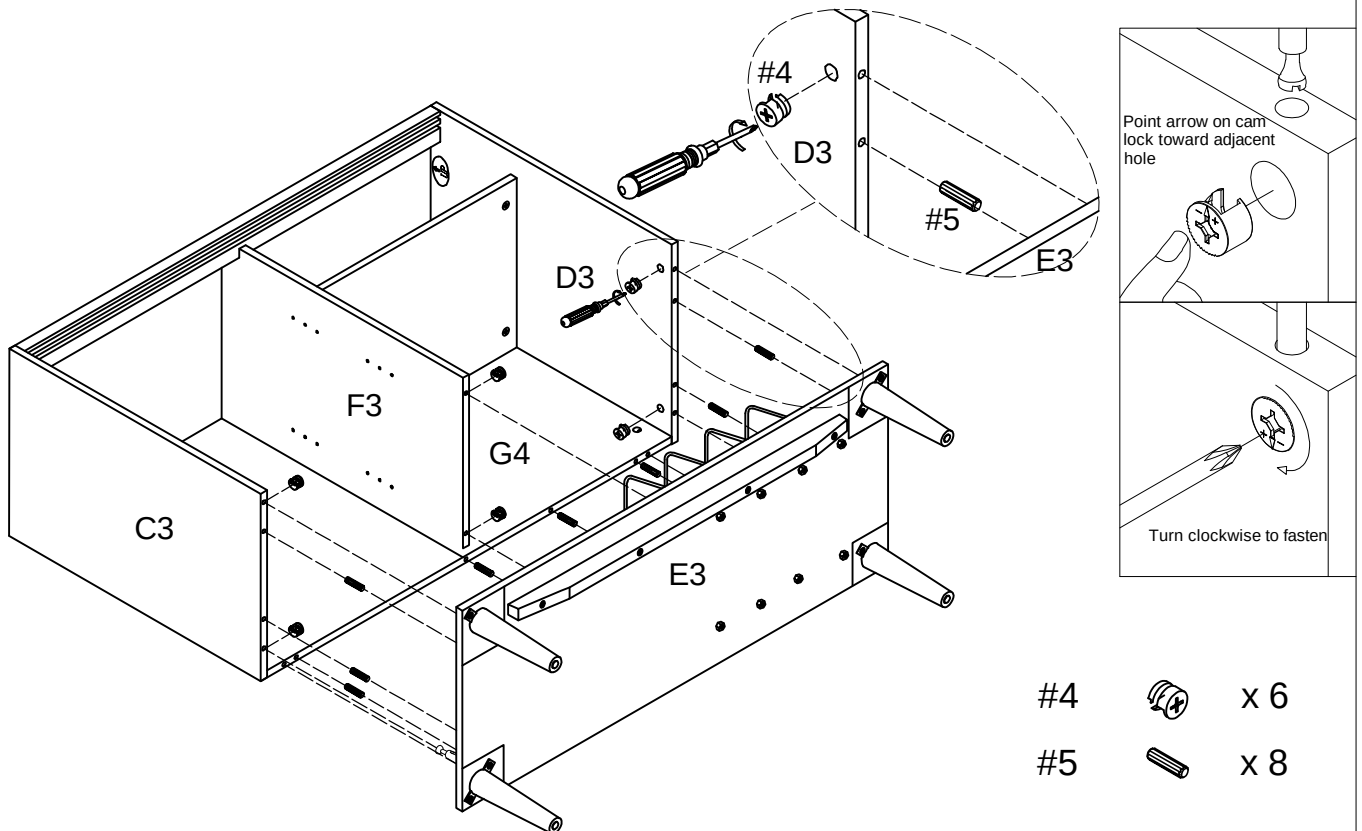


Step 11. Carefully turn unit upright. Secure back panel (part G4) using cam locks (part #4) and phillips head screwdriver. Attach covers (part P2) to back panel (part G4) using short round head bolts (part #14) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

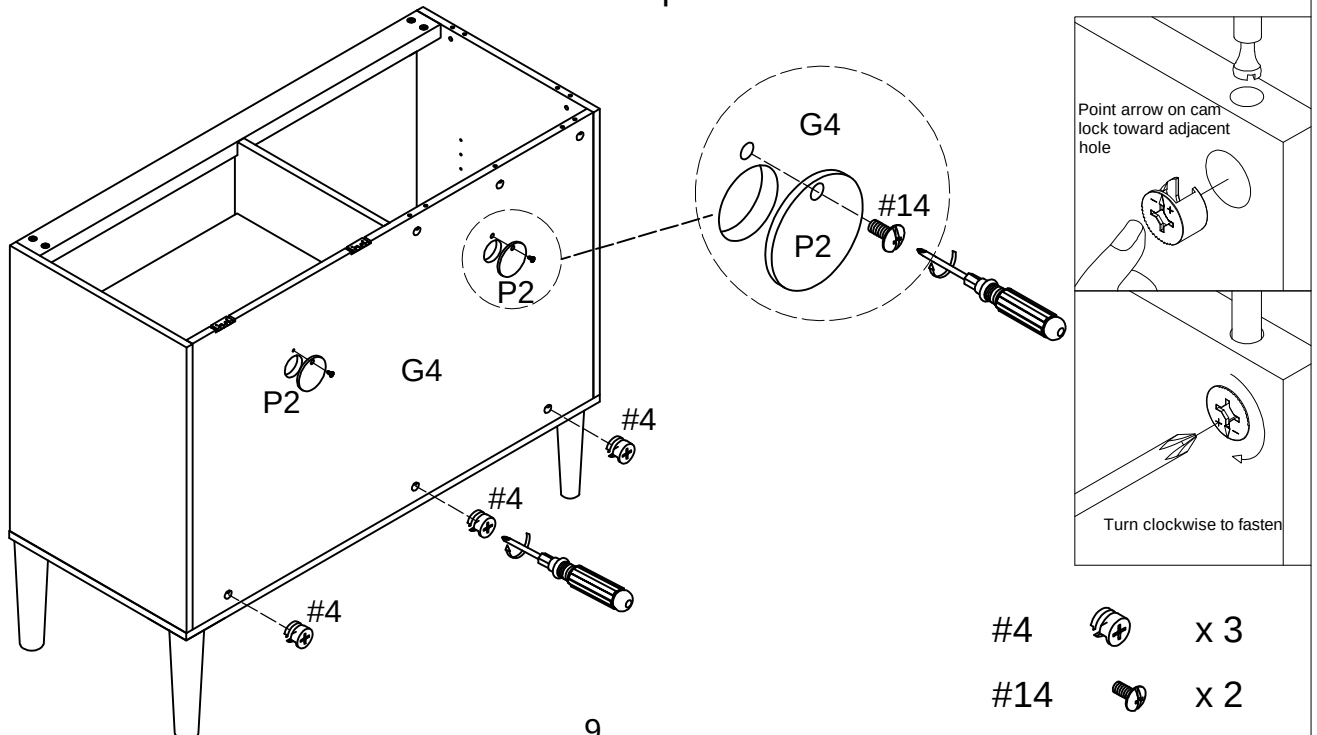


Step 12. Attach left top panel (part A3) to assembled unit (parts C3 & G4) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

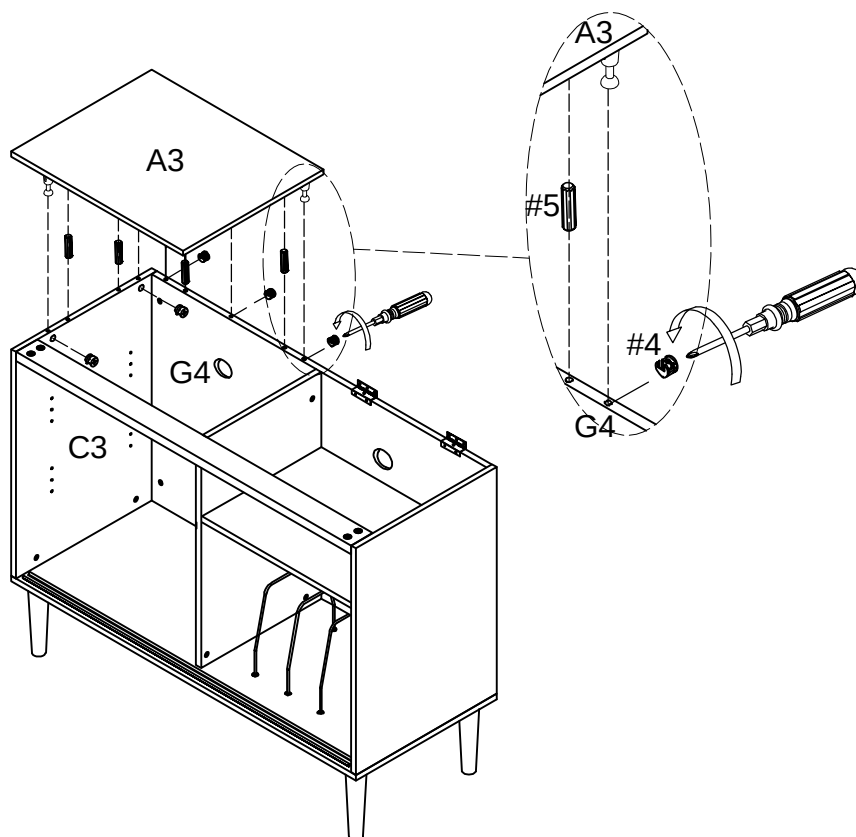


#4		x 5
#5		x 4

 Step 13. Attach right top panel (part B3) to back panel (part G4) using short screws (part #6) and phillips head screwdriver. Then attach spring hinge (part #12) to right top panel (part B3) and dividing panel (part F3) using short screws (part #6) and phillips head screwdriver.

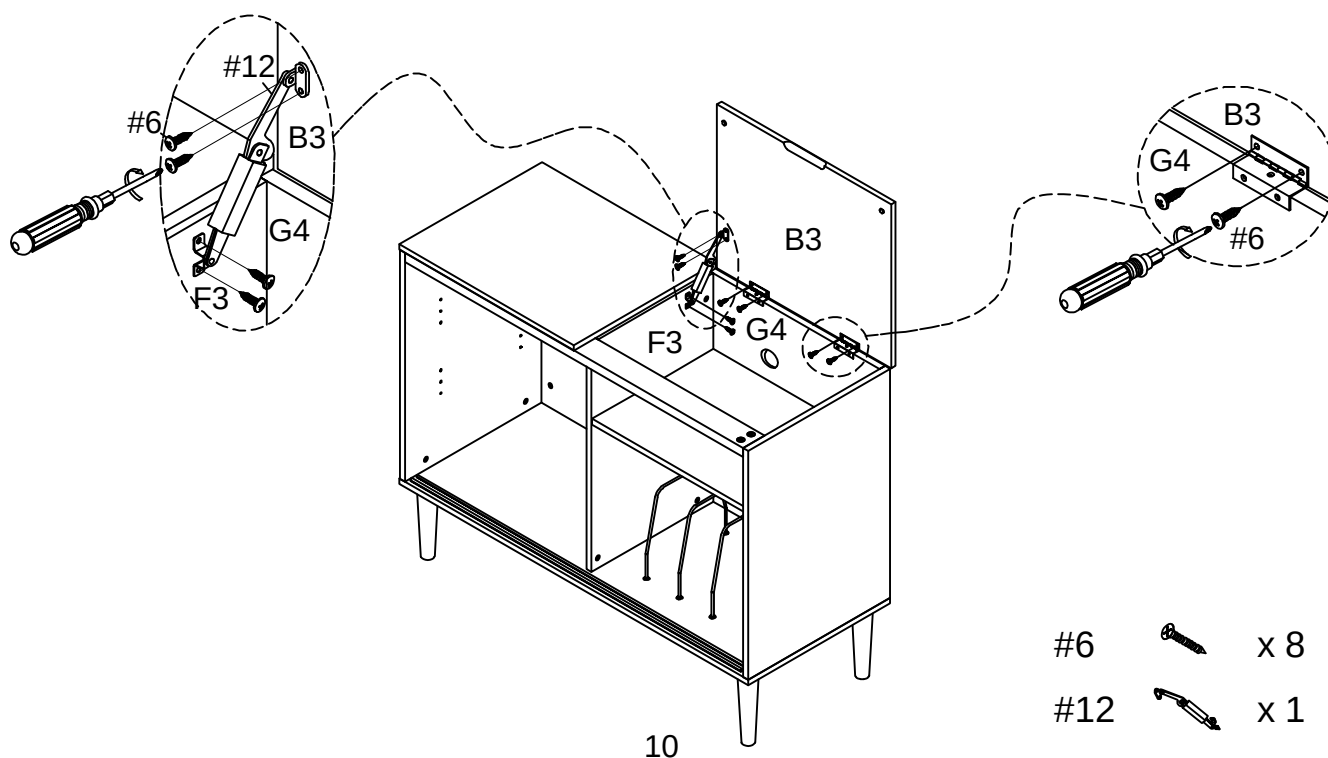


#6		x 8
#12		x 1

 Step 14. Insert shelf holders (part #9) into desired position and slide adjustable shelves (part K3) into place.

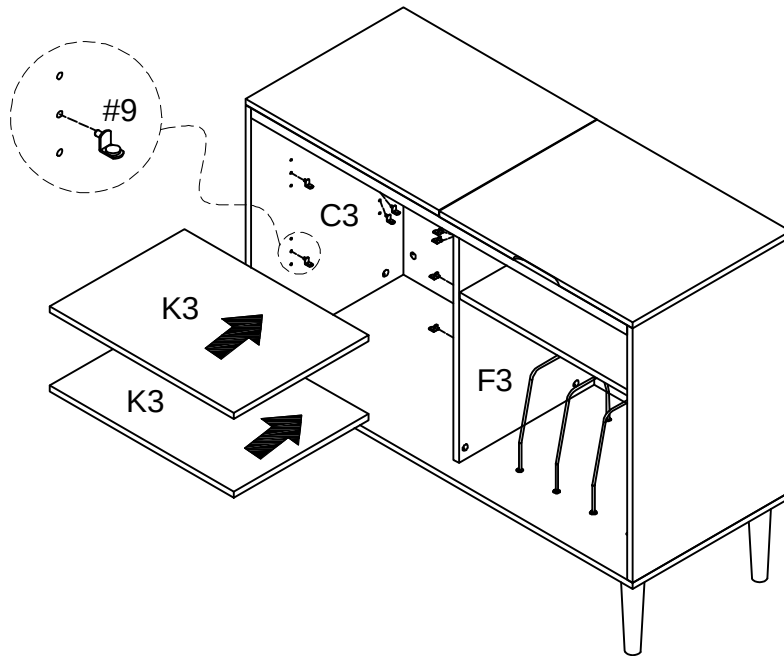

#9  x 8

 
Step 15. Press the upper door pins on right door panel (part I3) up. Install right door panel (part I3) to inner runner of pre-assembled cabinet as shown.

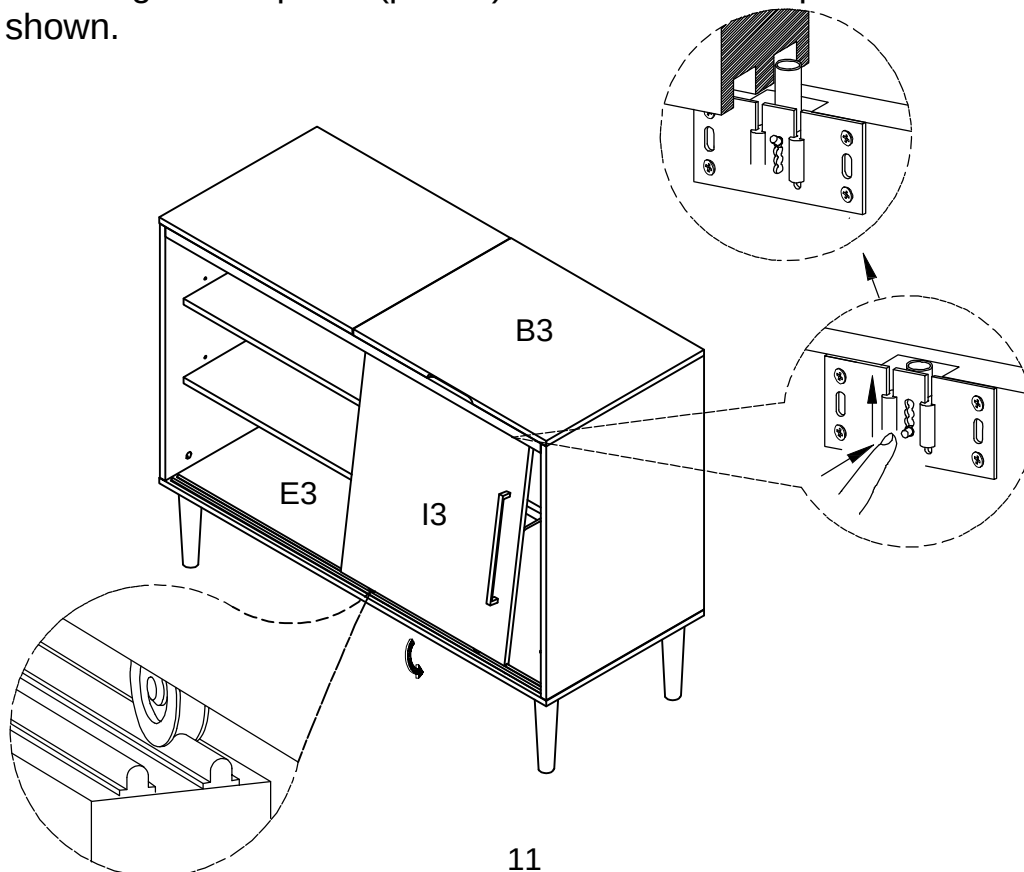

Step 16. Press the upper door pins on left door panel (part H3) up.

Install left door panel (part H3) to outer runner of pre-assembled cabinet as shown.

 Note: If moving, please lift with two people. Do not drag.

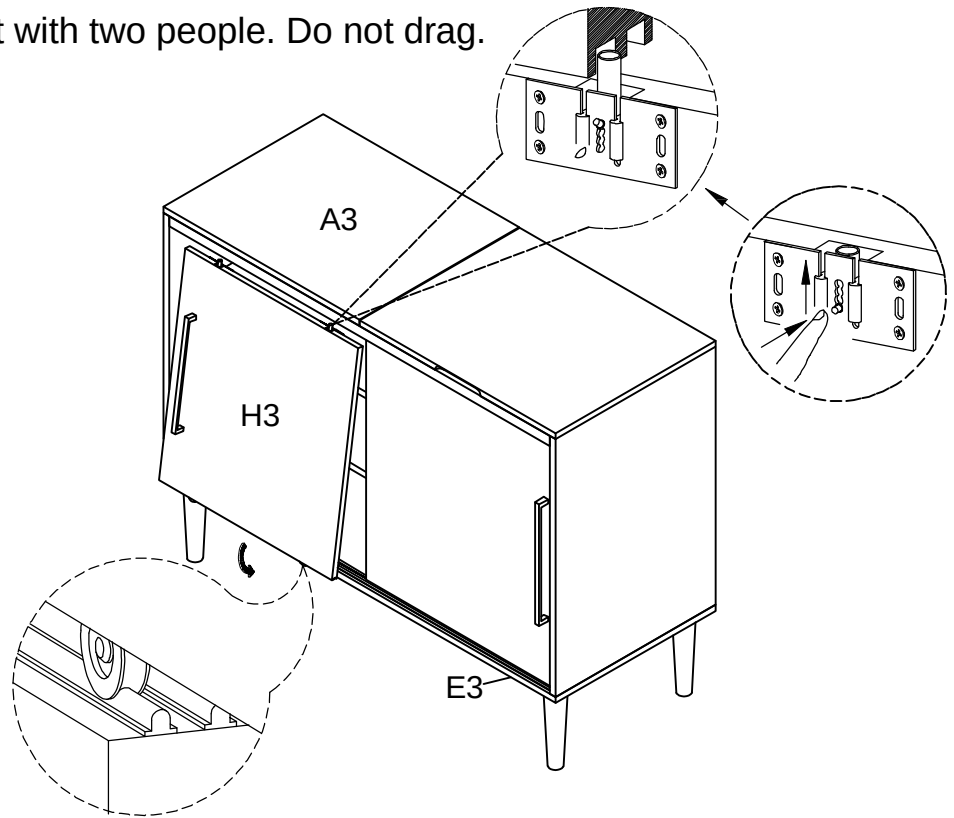


Step 17. Using cam stickers (part #15) cover all cam locks (part #4).


Important: Safety strap kit (part #16) must be installed to prevent tipping damage and/or injury.

Note: It is important to adjust levelers once fully assembled and upright.

Extend adjustable leveler until it's firmly in contact with the floor.

  If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

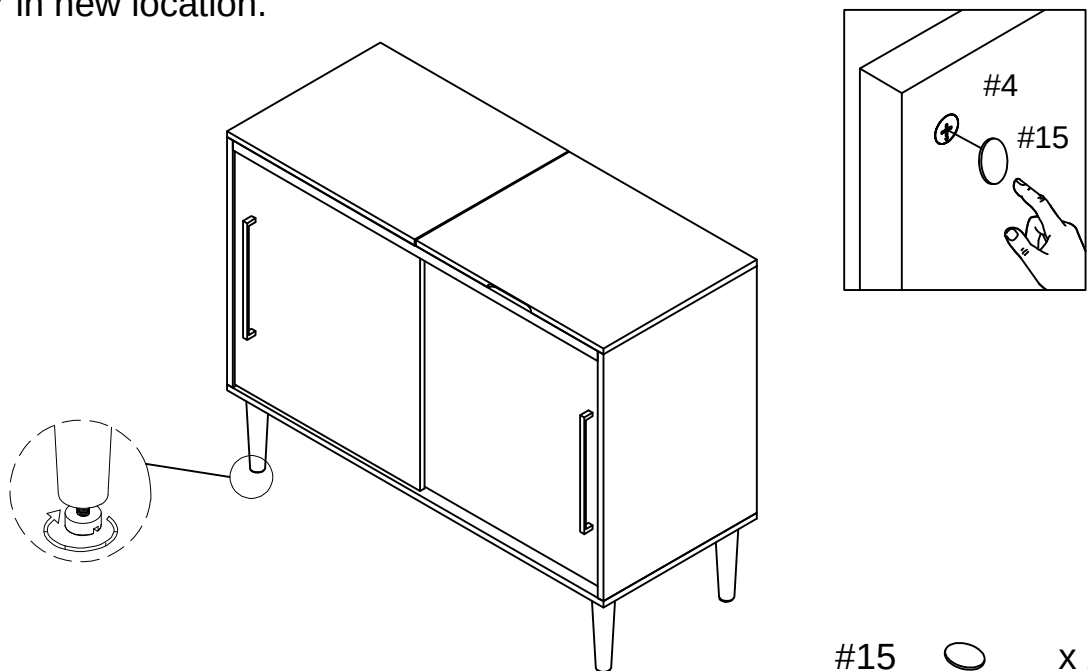

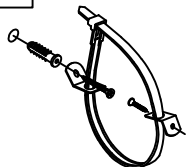
#16	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to back panel (part G4) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part G4) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

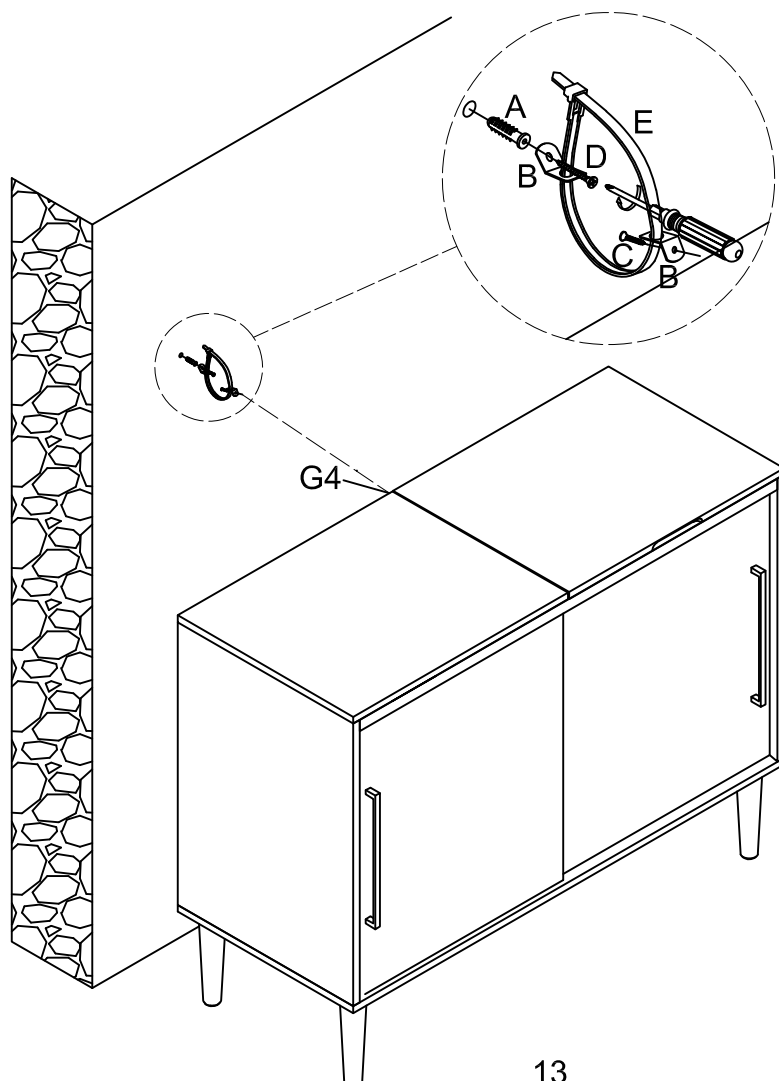

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!