














CROSLEY

FURNITURE






Media Console CF1103

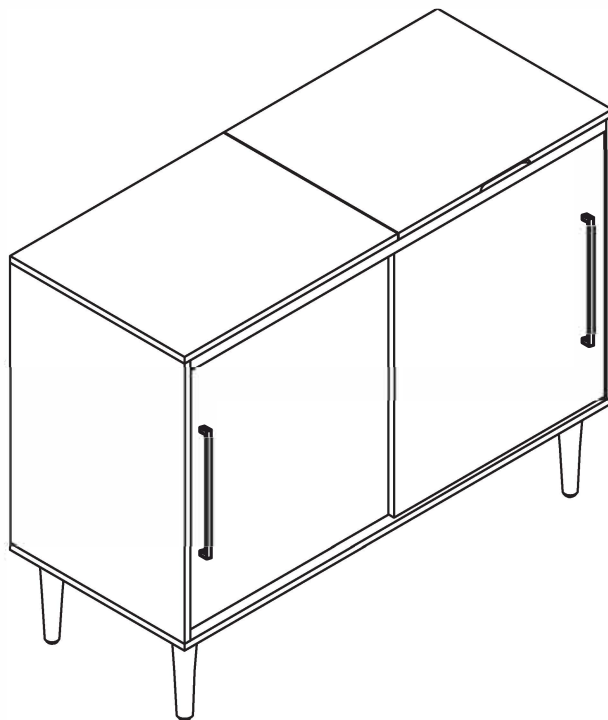

     PART LIST

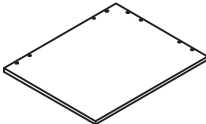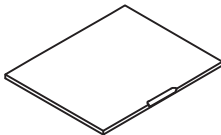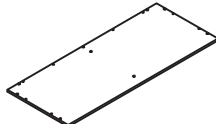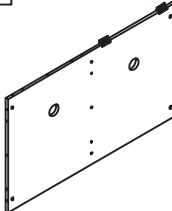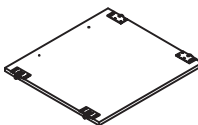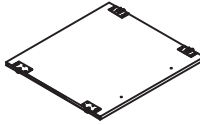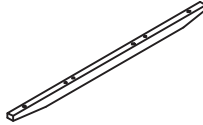
A2		B2		C2		D2		E2	
Left Top Panel 1 PC		Right Top Panel 1 PC		Left Panel 1 PC		Right Panel 1 PC		Bottom Panel 1 PC	
F2		G3		H2		I2		J2	
Dividing Panel 1 PC		Back Panel 1 PC		Left Door Panel 1 PC		Right Door Panel 1 PC		Fixed Shelf 1 PC	
K2		L2		M		N		O	
Adjustable Shelf 2 PCS		Top Rail 1 PC		Leg 4 PCS		Bottom Rail 1 PC		Metal Wire 4 PCS	
P									
Cover 2 PCS									

   HARDWARE LIST
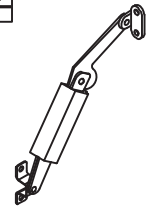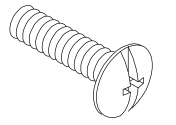
#1  M6*13	#2 	#3  Ø7*35mm	#4  Ø15*12mm	#5  Ø8*30mm
Allen Bolt 8 PCS	Hex Nut 8 PCS	Cam Bolt 31 PCS (Extra 2)	Cam Lock 31 PCS (Extra 2)	Wood Dowel 26 PCS (Extra 2)
#6  D7*Ø3.5*12	#7 	#8  Ø9mm*5/32"*1"	#9  Ø8*5*16mm	#10  D8*Ø4*38
Short Screw 10 PCS (Extra 2)	Handle 2 PCS	Round Head Bolt 4 PCS	Shelf Pin 8 PCS	Screw 4PCS (Extra 1)
#11 	#12 	#13 	#14 	#15  5/32"*12mm
Allen Wrench 1 PC	Spring Hinge 1 PC	Open End Wrench 1 PC	Safety Strap Kit 1 SET	Round Head Bolt 2 PCS (Extra 1)

ADDITIONAL TOOLS (Not Provided)

 
Note:It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Step 1. Insert cam bolts (part #3) into pre-drilled holes of left top panel (part A2), left panel (part C2), right panel (part D2), dividing panel (part F2) and back panel (part G3) using phillips head screwdriver.

NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

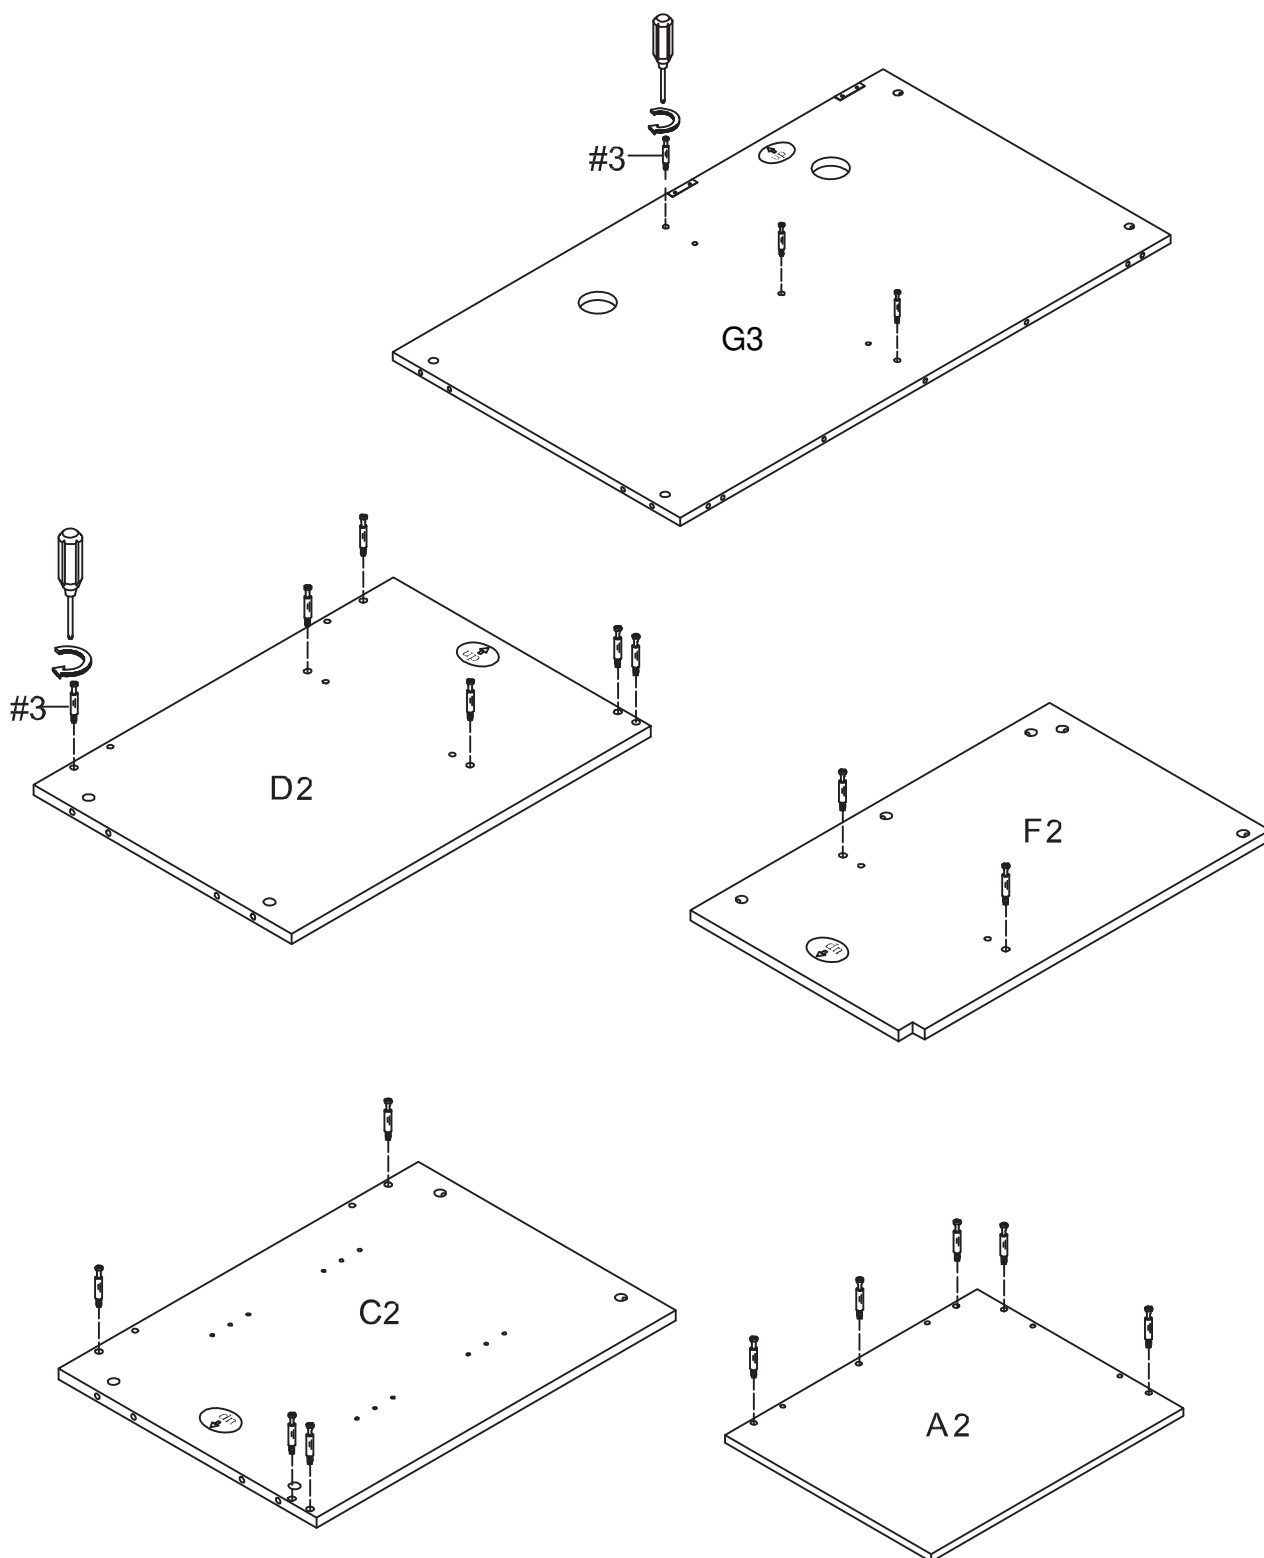


#3  x 20

Step 2. Attach handles (part #7) to left door panel (part H2) and right door panel (part I2) using round head bolts (part #8) and phillips head screwdriver.

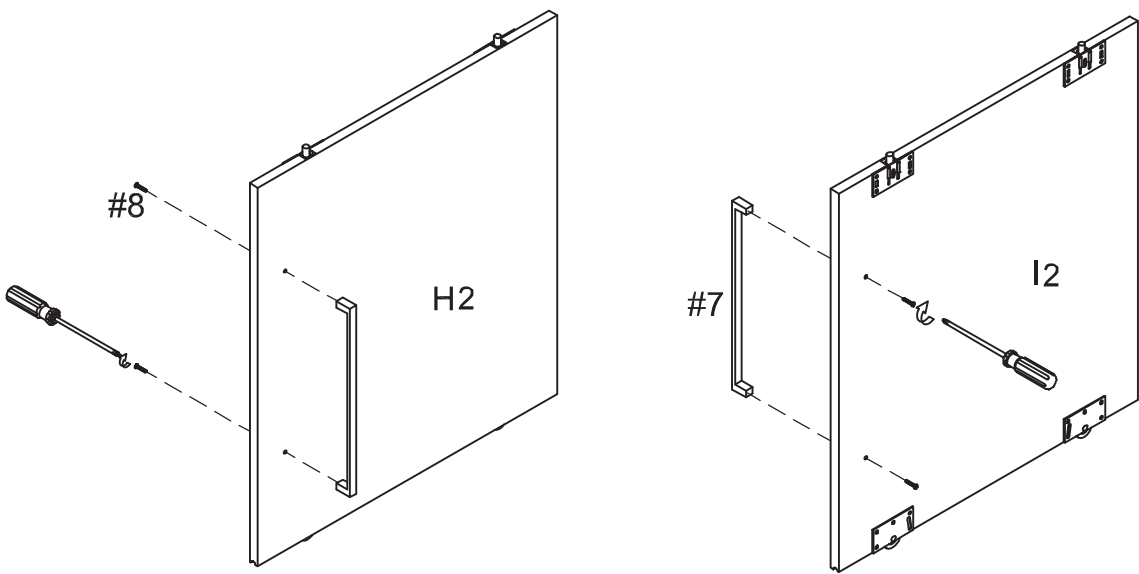


- #7  x2
- #8  x4

Step 3. Attach bottom rail (part N) to bottom panel (part E2) using wood dowels (part #5), screws (part #10) and phillips head screwdriver. Attach legs (part M) to bottom panel (part E2) using allen bolts (part #1) and allen wrench (part #11).


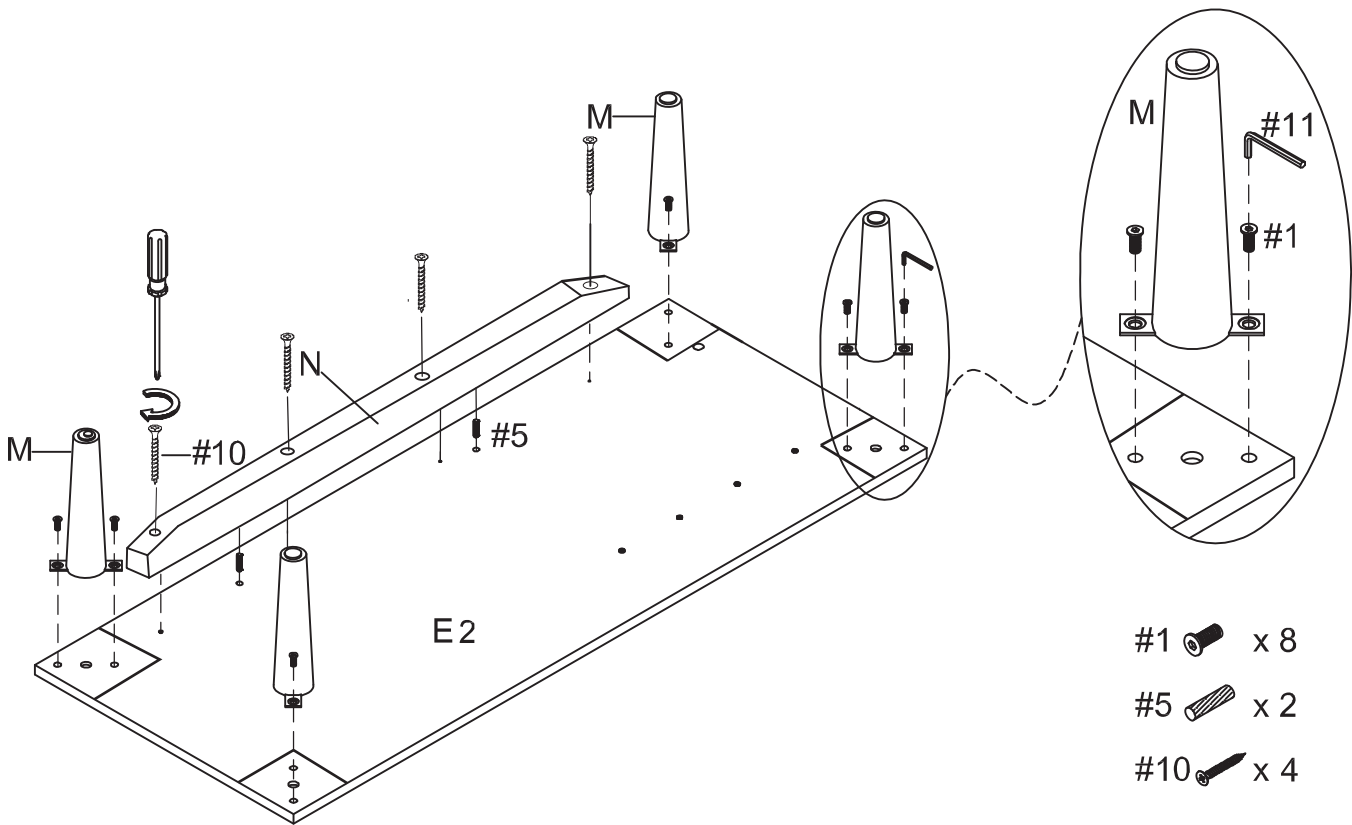


- #1  x 8
- #5  x 2
- #10  x 4

Step 4. Attach metal wires (part O) to bottom panel (part E2) using hex nut (part #2) and open end wrench (part #13). Insert cam bolts (part #3) into pre-drilled holes of bottom panel (part E2) using phillips head screwdriver as shown.
 NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.


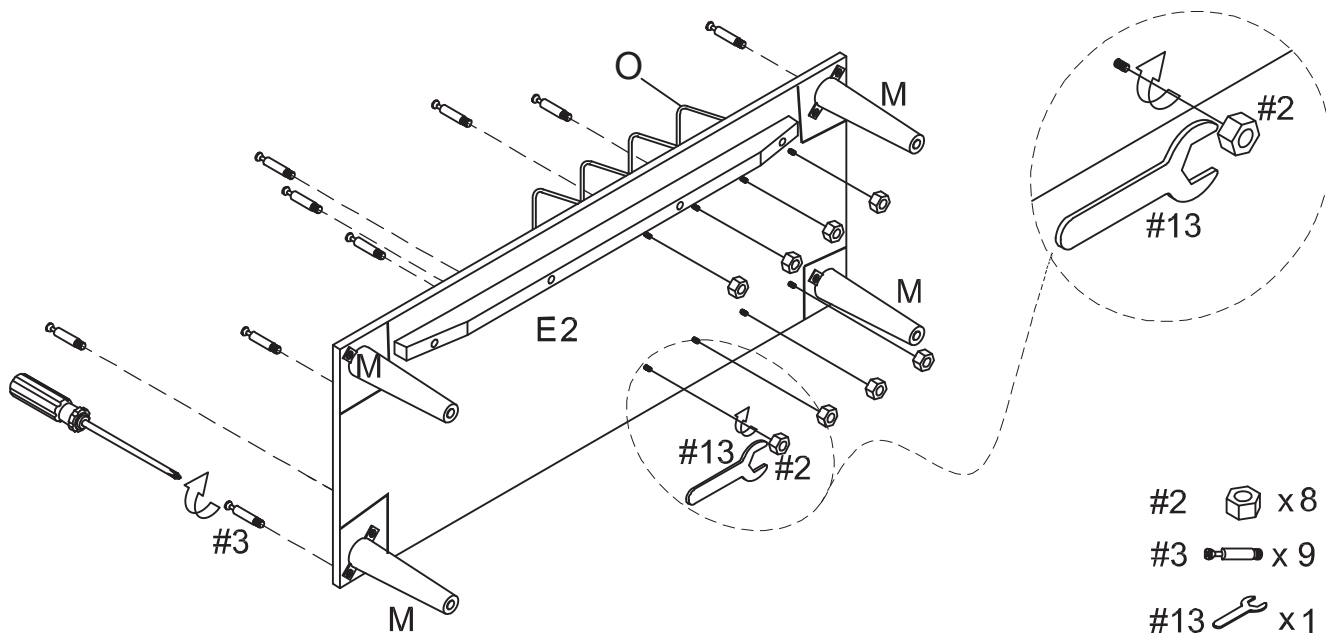


Step 5. Attach dividing panel (part F2) to back panel (part G3) using wood dowels (part #5), cam locks (part #4) and phillips head screwdriver.
 NOTE: Cam locks must rotate full 180°. See pictured insert.

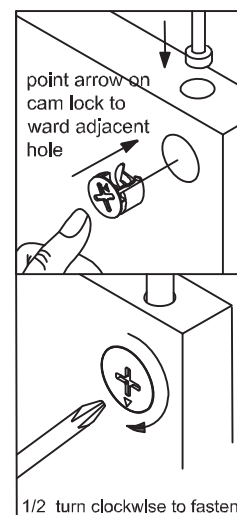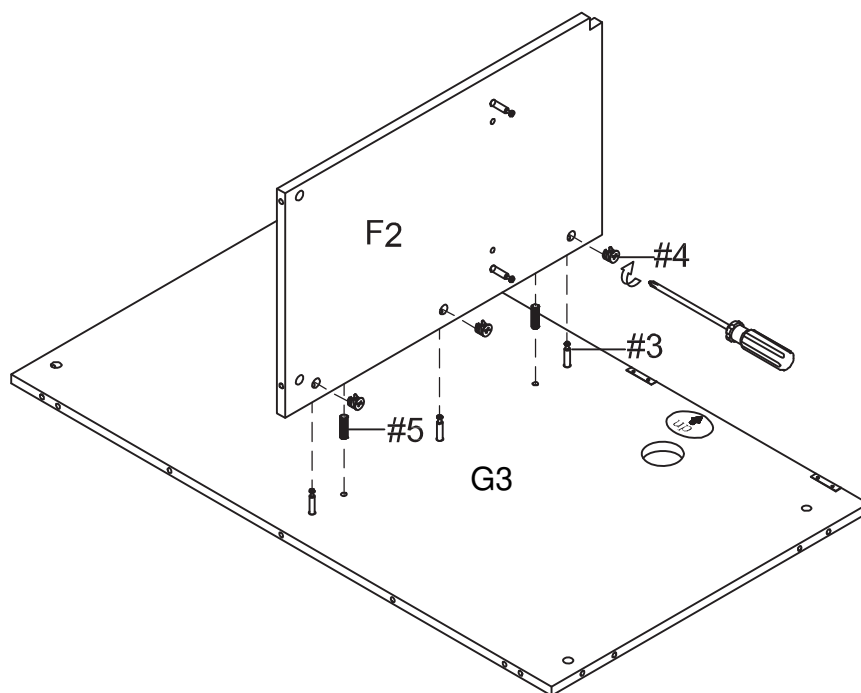


#4  x 3
 #5  x 2

Step 6. Attach fixed shelf (part J2) to dividing panel (part F2) using wood dowels (part #5), cam locks (part #4) and phillips head screwdriver as shown.
NOTE: Cam locks must rotate full 180°. See pictured insert.

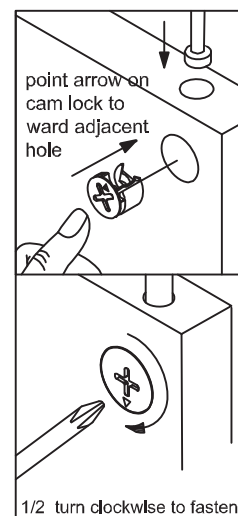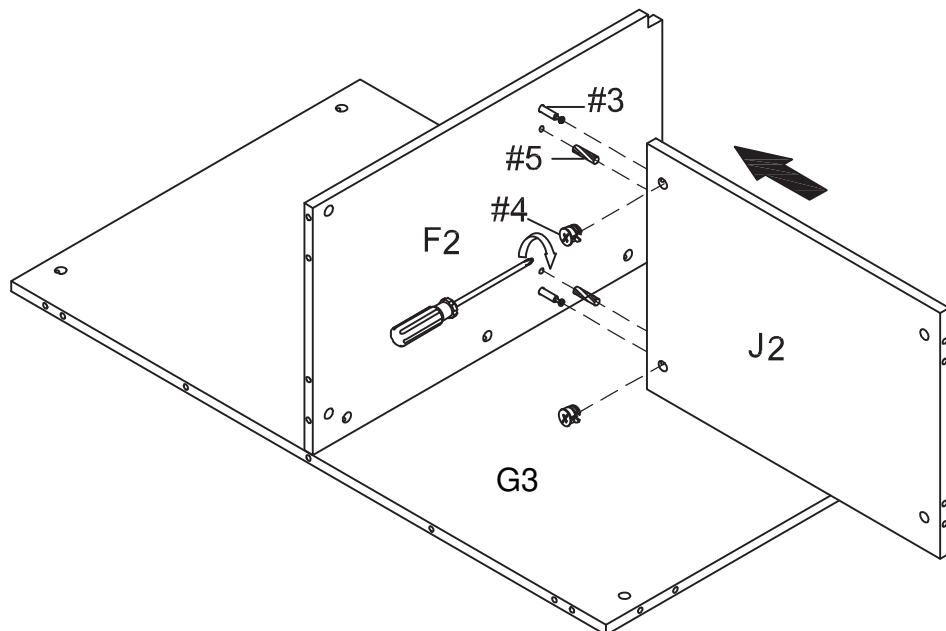

#4  x 2
#5  x 2



Step 7. Attach right panel (part D2) to back panel (part G3) and fixed shelf (part J2) using wood dowels (part #5), cam locks (part #4) and phillips head screwdriver.
NOTE: Cam locks must rotate full 180°. See pictured insert.

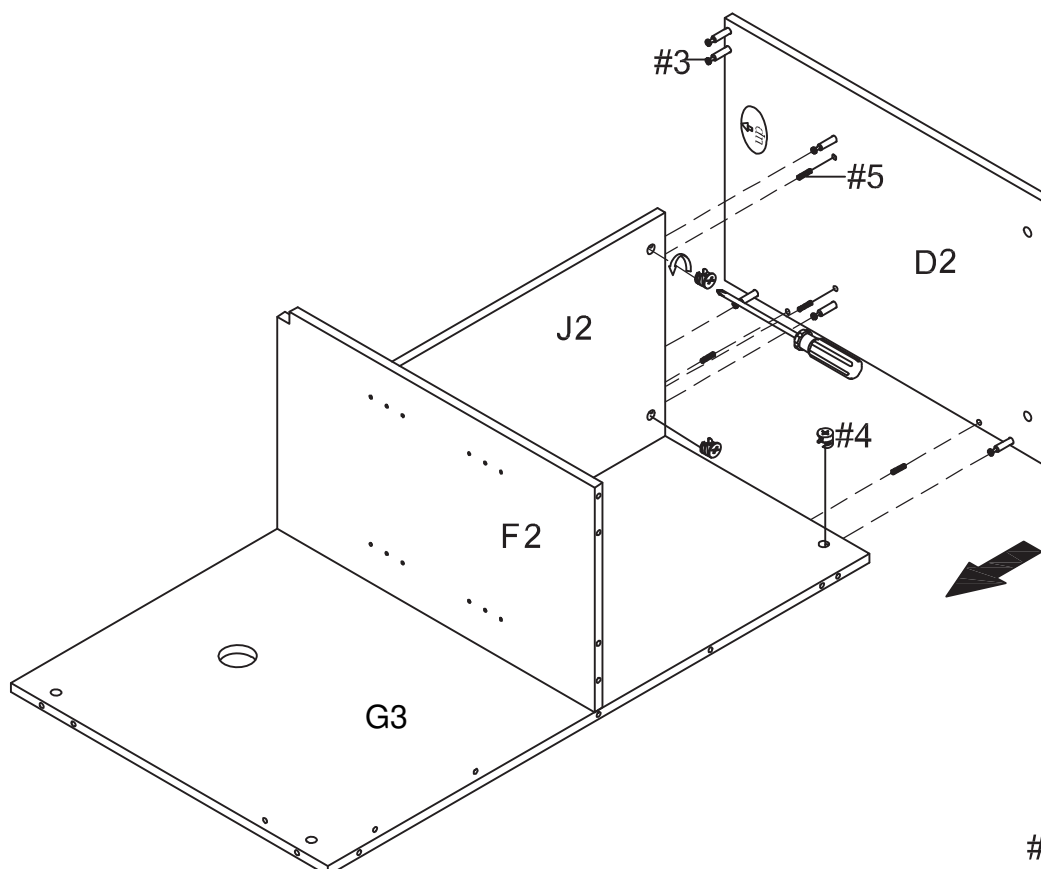

#4  x 4
#5  x 4

Step 8. Attach top rail (part L2) to right panel (part D2) using cam locks (part #4) and phillips head screwdriver.


NOTE: Cam locks must rotate full 180°. See pictured insert.

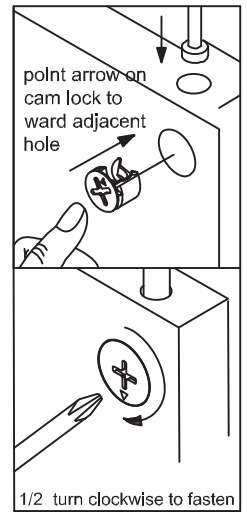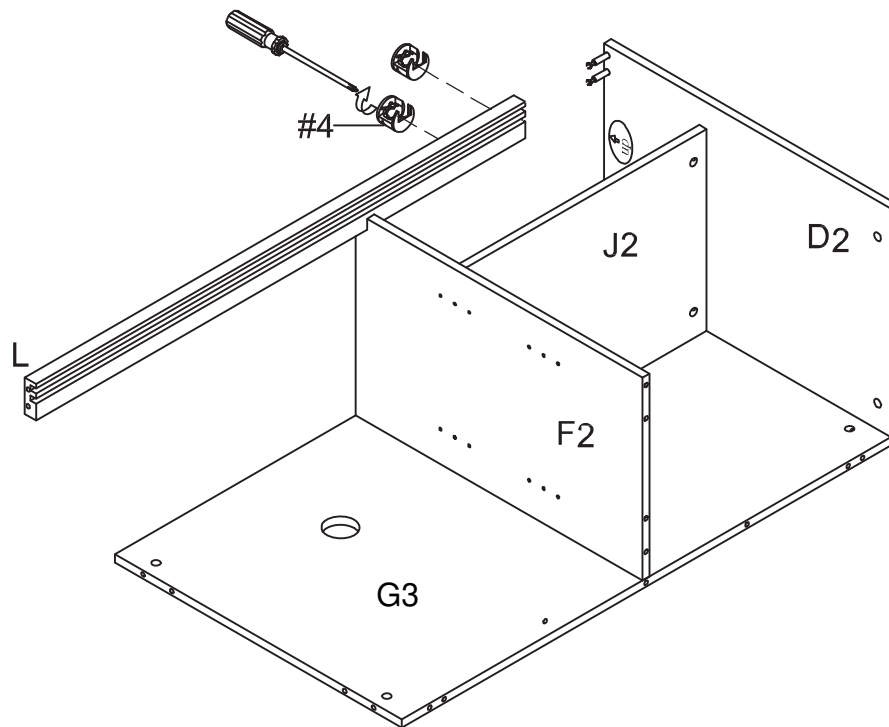

#4  x 2

Step 9. Attach left panel (part C2) to top rail (part L2) and back panel (part G3) using wood dowels (part #5), cam locks (part #4) and phillips head screwdriver.


NOTE: Cam locks must rotate full 180°. See pictured insert.

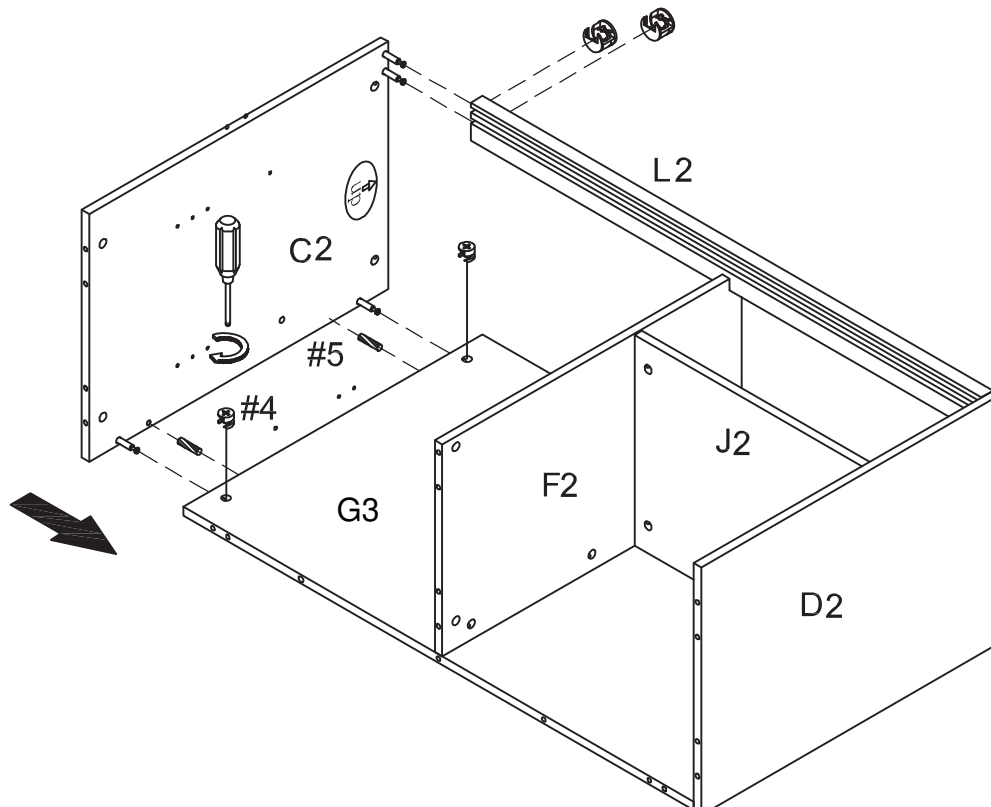


#4  x 4

#5  x 2



Step 10. Attach bottom panel (part E2) to assembled unit (parts C2, D2, F2 & G3) using wood dowels (part #5), cam locks (part #4) and phillips head screwdriver.
NOTE: Cam locks must rotate full 180°. See pictured insert.

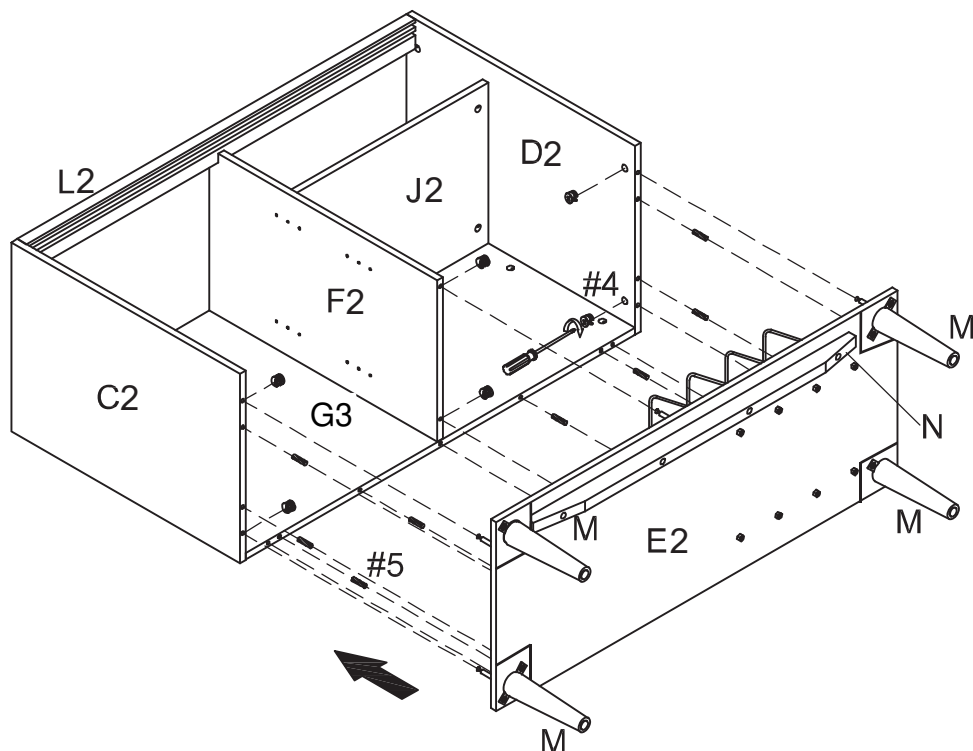

Step 11. With two people, carefully lift and turn unit upright.
Insert cam locks (part #14) into pre-drilled holes on the bottom of the back panel (part G3) and lock using phillips head screwdriver.
Attach covers (part P) to back panel (part G3) using round head bolts (part #15) and phillips head screwdriver.
NOTE: Cam locks must rotate full 180°. See pictured insert.

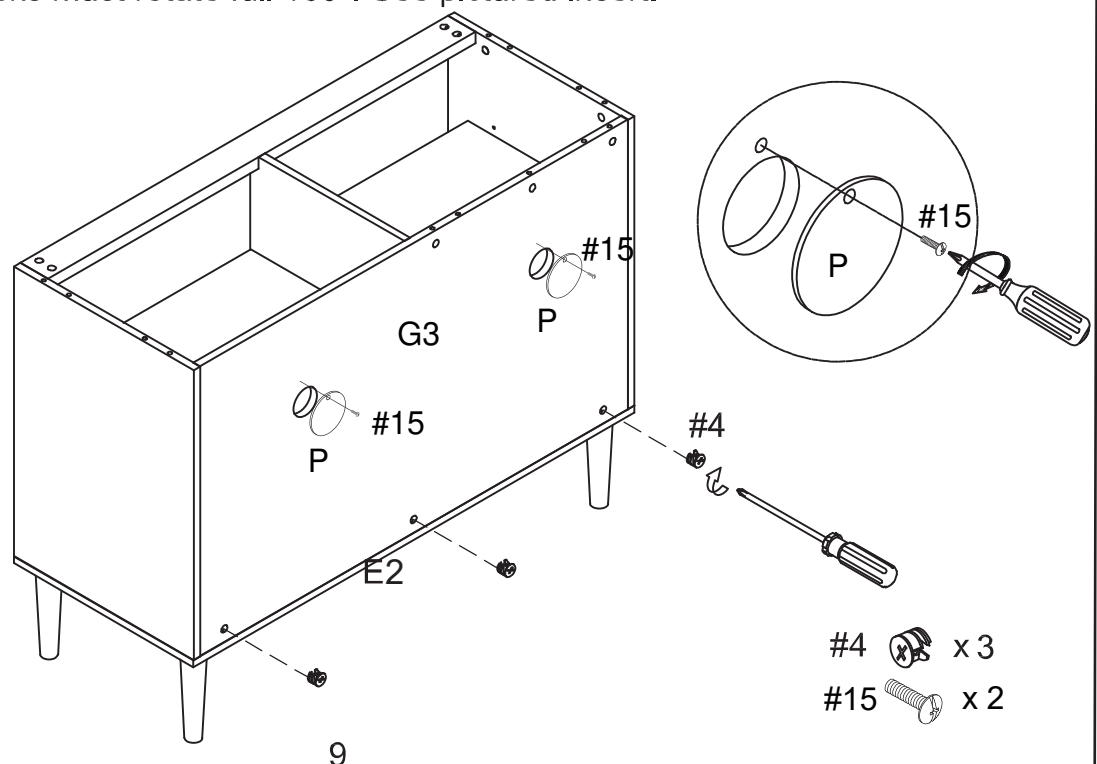


Step 12. Attach left top panel (part A2) to left panel (part C2) and back panel (part G3) using wood dowels (part #5), cam locks (part #4) and phillips head screwdriver.
NOTE: Cam locks must rotate full 180°. See pictured insert.

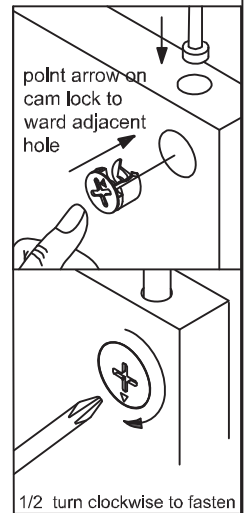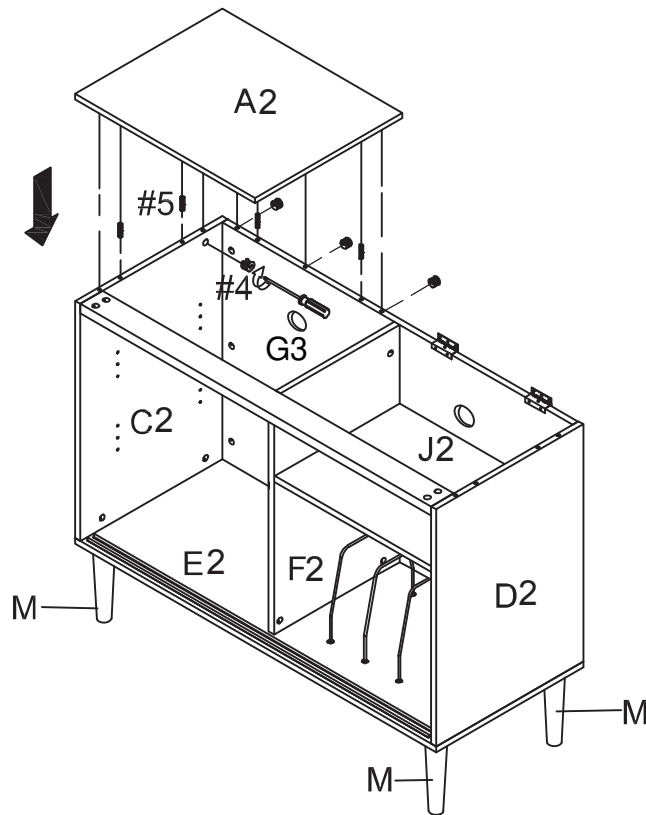


#4  x 5
#5  x 4

Step 13. Attach right top panel (part B2) to back panel (part G3) using short screws (part #6) and phillips head screwdriver. Then attach right top panel (part B2) to dividing panel (part F2) using spring hinge (part #12), short screws (part #6) and phillips head screwdriver.

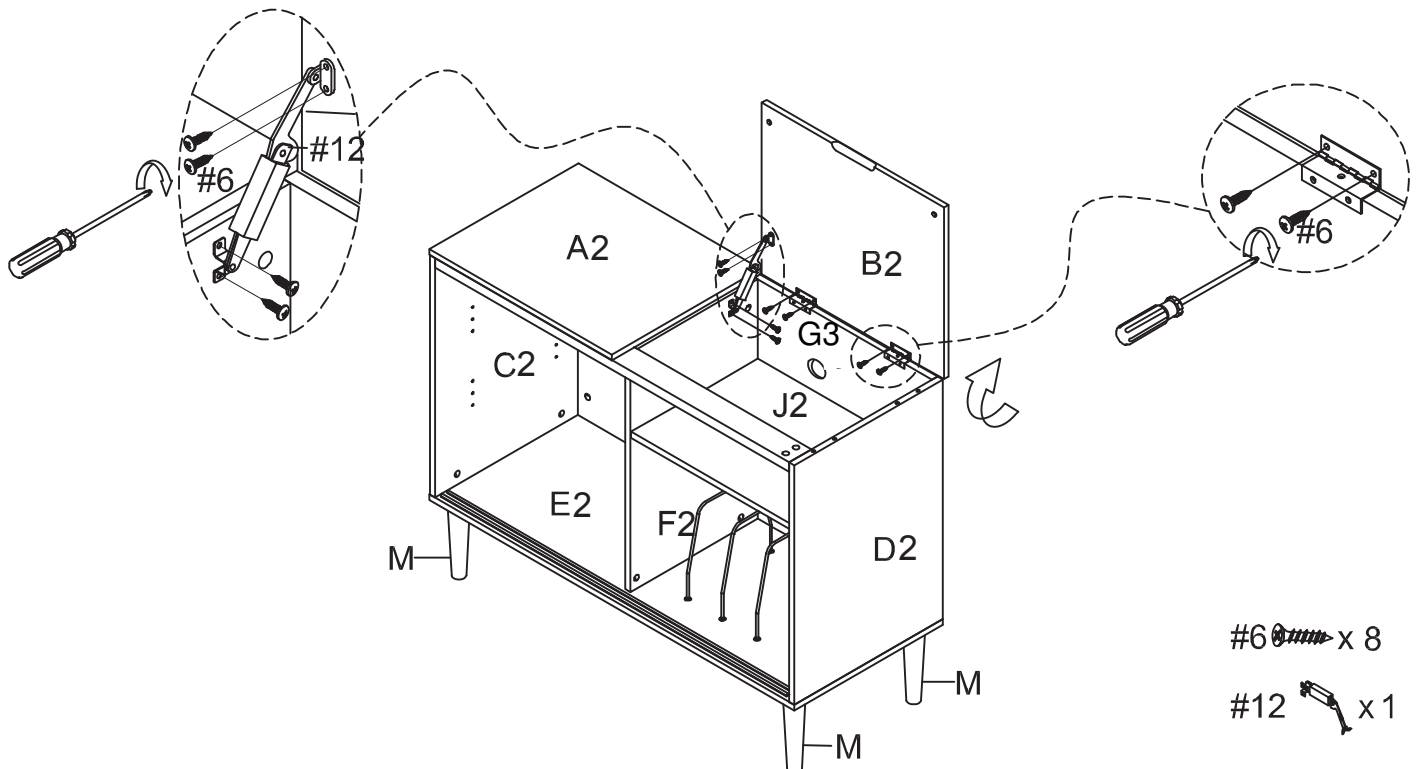


#6  x 8
#12  x 1


Step 14. Insert shelf pins (part #9) into desired position and slide adjustable shelves (part K2) into place.


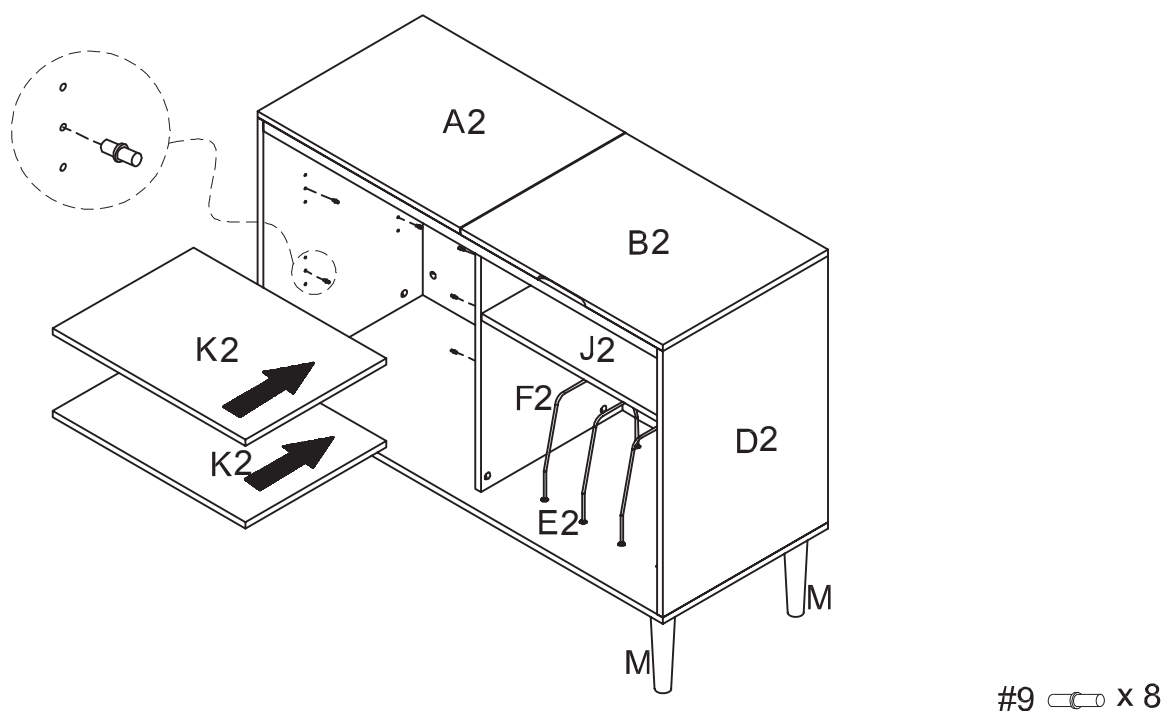


Step 15. Press the upper door pins on right door panel (part I2) up.
Install right door panel (part I2) to inner runner of pre-assembled cabinet as shown.

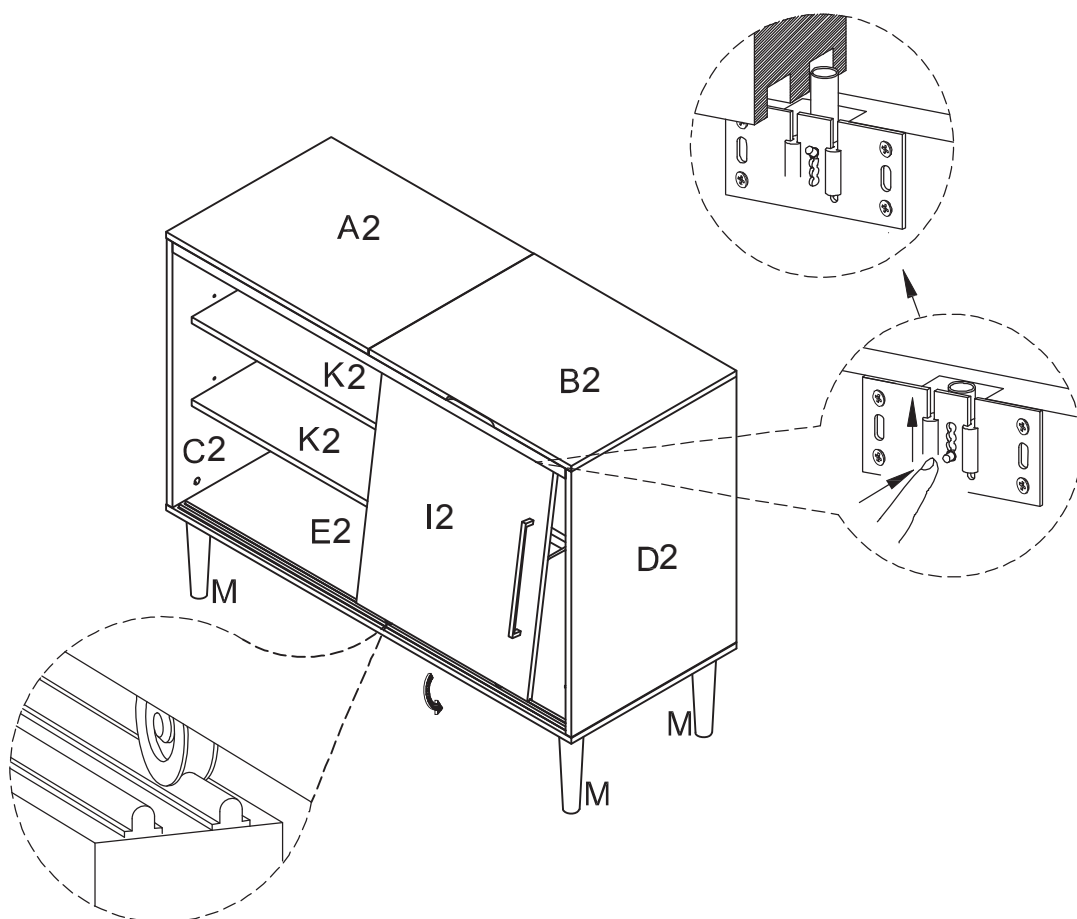

Step 16. Press the upper door pins on left door panel (part H2) up.
Install left door panel (part H2) to outer runner of pre-assembled cabinet as shown.
NOTE: If moving, please lift with two people. Do not drag.

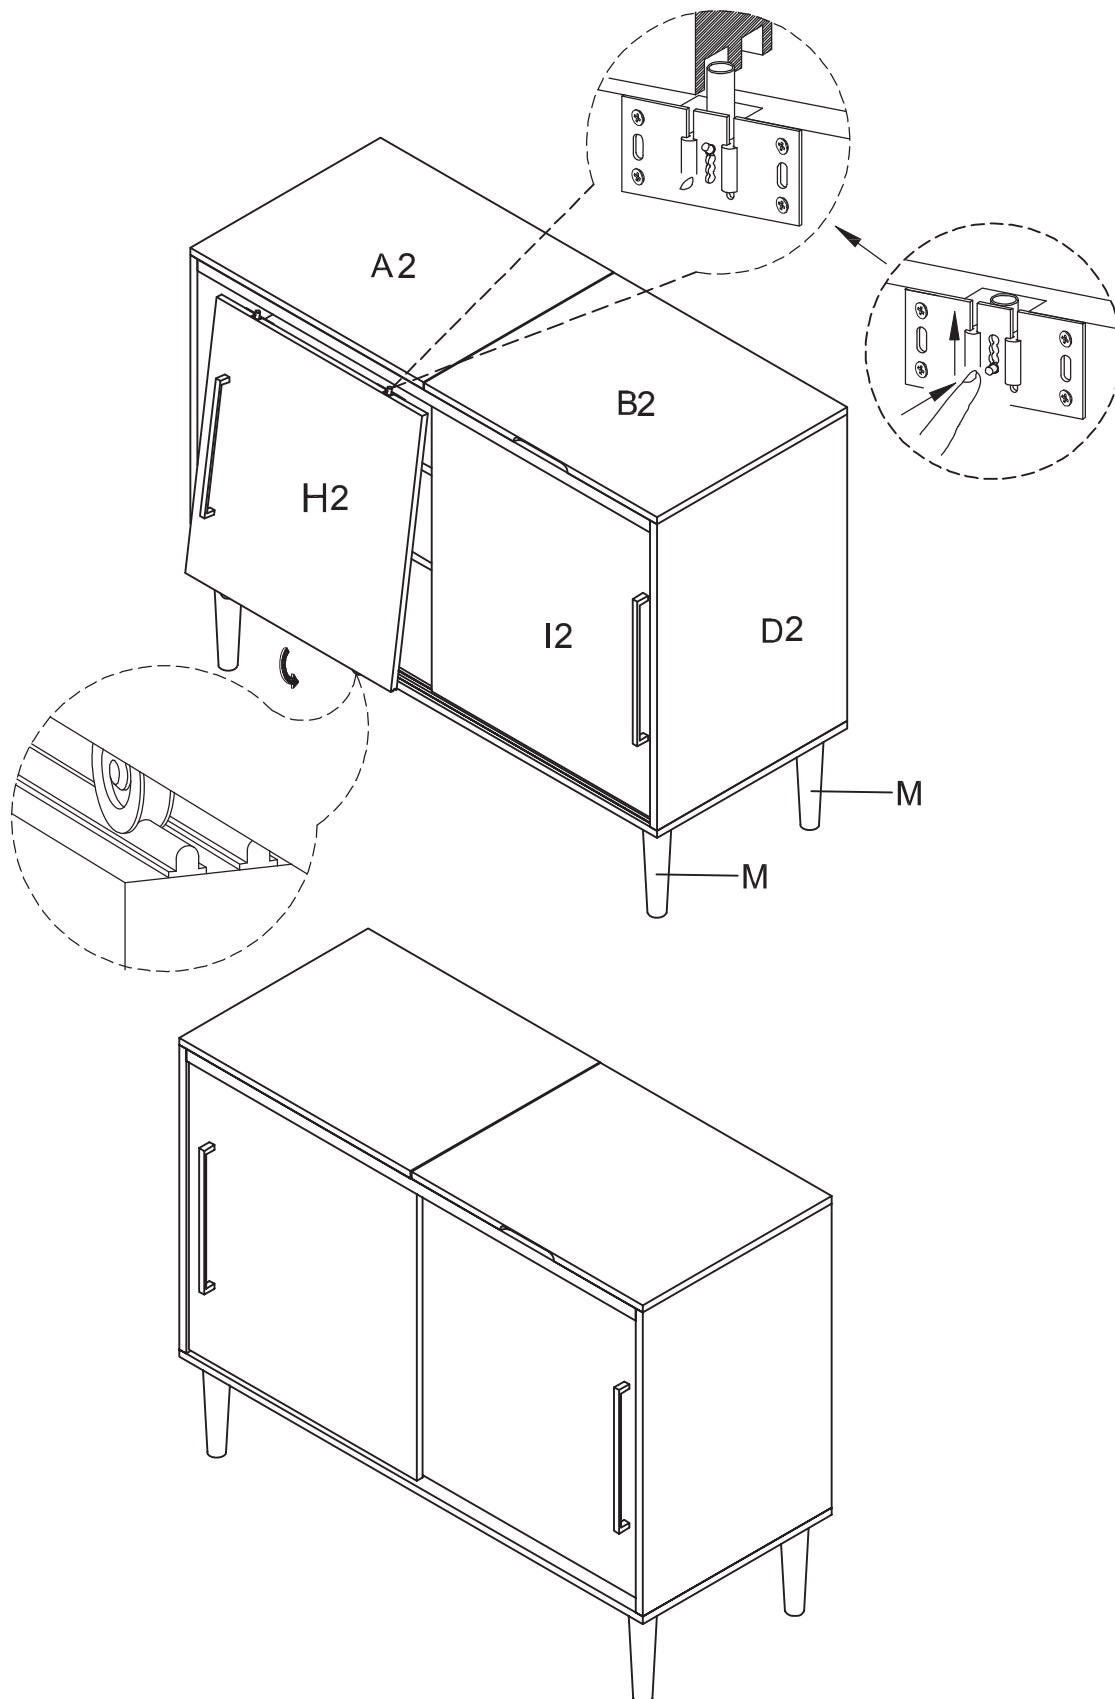
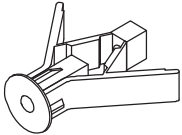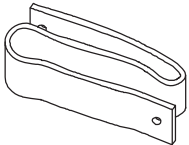
#15	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY STRAP WALL ASSEMBLY INSTRUCTIONS


Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.

1) Insert short screw (C) through washer (B) and safety wall strap (E) and screw it into the top center of back panel (G3).


2) Drill a 11/32" hole where you want to secure your unit. The hole should be at the same height as the hole in the top center of back panel (part G3). Tap wall anchor (A) into the hole.

3) Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A).

Note: This item is not intended for clothing storage use.

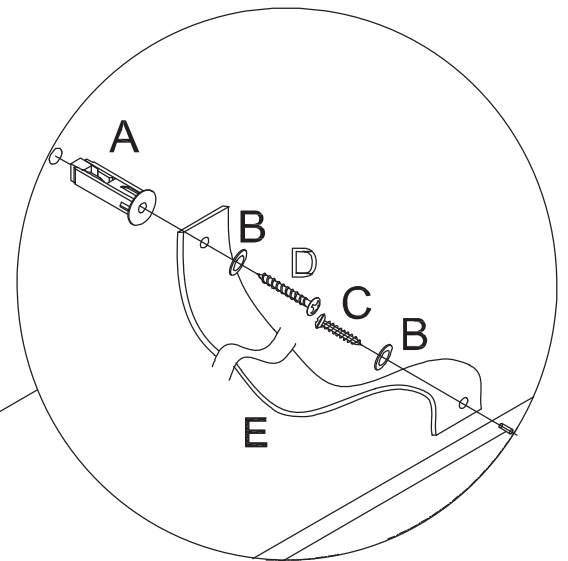

Wall

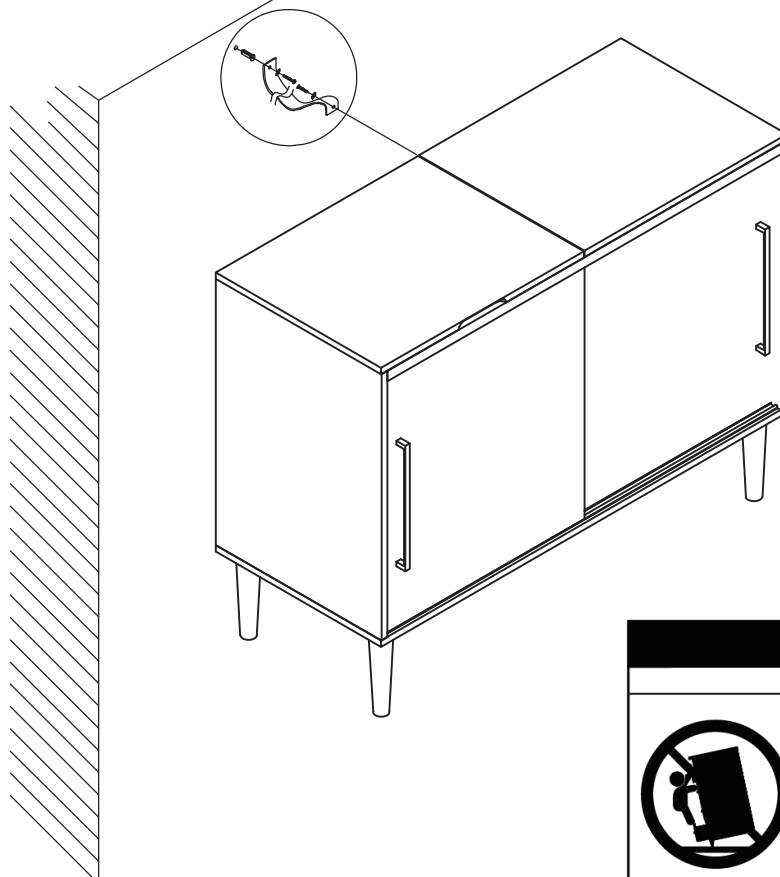

⚠ WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

• ALWAYS install tipover restraint provided.
• For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.

• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.

• NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

