










CROSLEY

FURNITURE





Record Player Stand CF1104

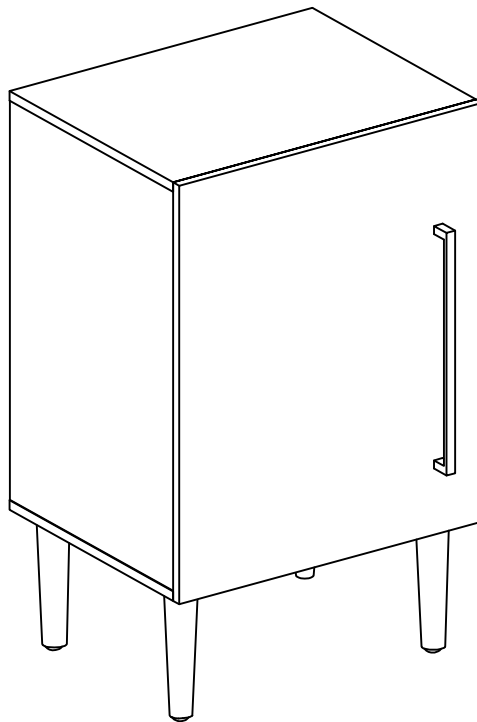

    PARTS LIST

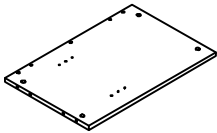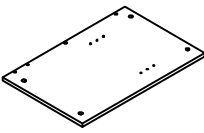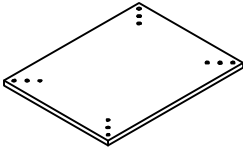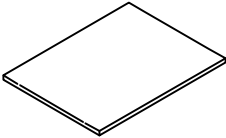
A3 	B3 	C3 	D3 	E3 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Door Panel 1 PC
F3 	G3 	H2 	I2 	
Back Panel 1 PC	Adjustable Shelf 1 PC	Leg 4 PCS	Metal Wire 4 PCS	

   HARDWARE LIST
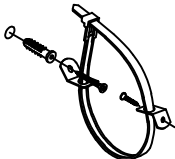
#1  1/4"*13mm Bolt 8 PCS (Extra 1)	#2  Ø35mm Door Hinge 2 PCS	#3  Cam Bolt 18 PCS (Extra 1)	#4  Cam Lock 18 PCS (Extra 1)	#5  8*30mm Wood Dowel 16 PCS (Extra 1)
#6  7*3.5*15mm Flat Head Screw 12 PCS (Extra 1)	#7  Handle 1 PC	#8  5/32*25mm Round Head Bolt 2 PCS (Extra 1)	#9  Shelf Holder 4 PCS (Extra 1)	#10  Magnet 1 PC
#11  6*3*15mm Round Head Screw 2 PCS (Extra 1)	#12  Hex Nut 8 PCS (Extra 1)	#13  M4 Allen Wrench 1 PC	#14  Wrench 1 PC	#15  Cam Sticker 18 PCS (Extra 1)
#16  Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please adjust hinges as needed for proper door alignment.

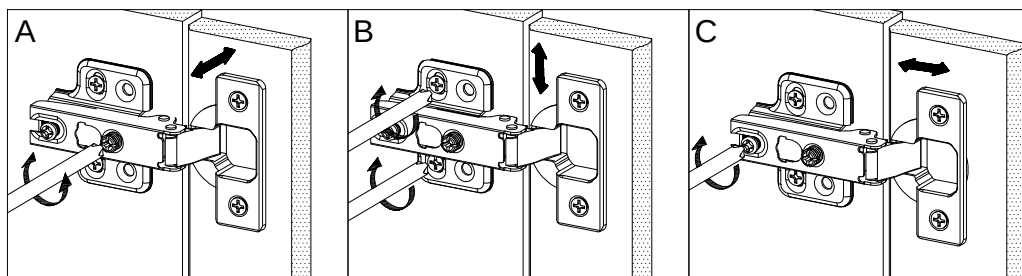


Step 1. Attach door hinges (part #2) to door panel (part E3) using flat head screws (part #6) and phillips head screwdriver.

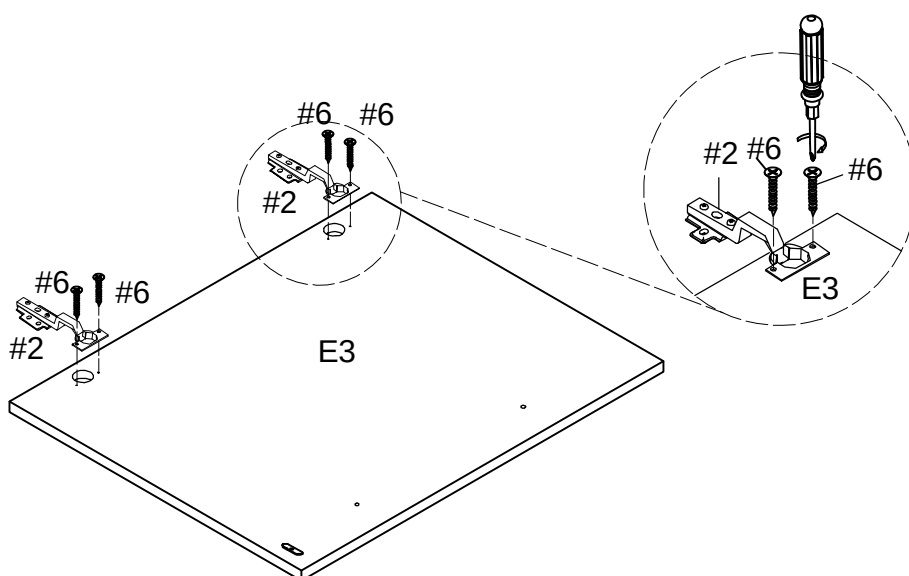

#2		x 2
#6		x 4


Step 2. Attach magnet (part #10) to top panel (part A3) using round head screws (part #11) and phillips head screwdriver. Insert cam bolts (part #3) into pre-drilled holes of panels (parts A3, B3, C3 & D3) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

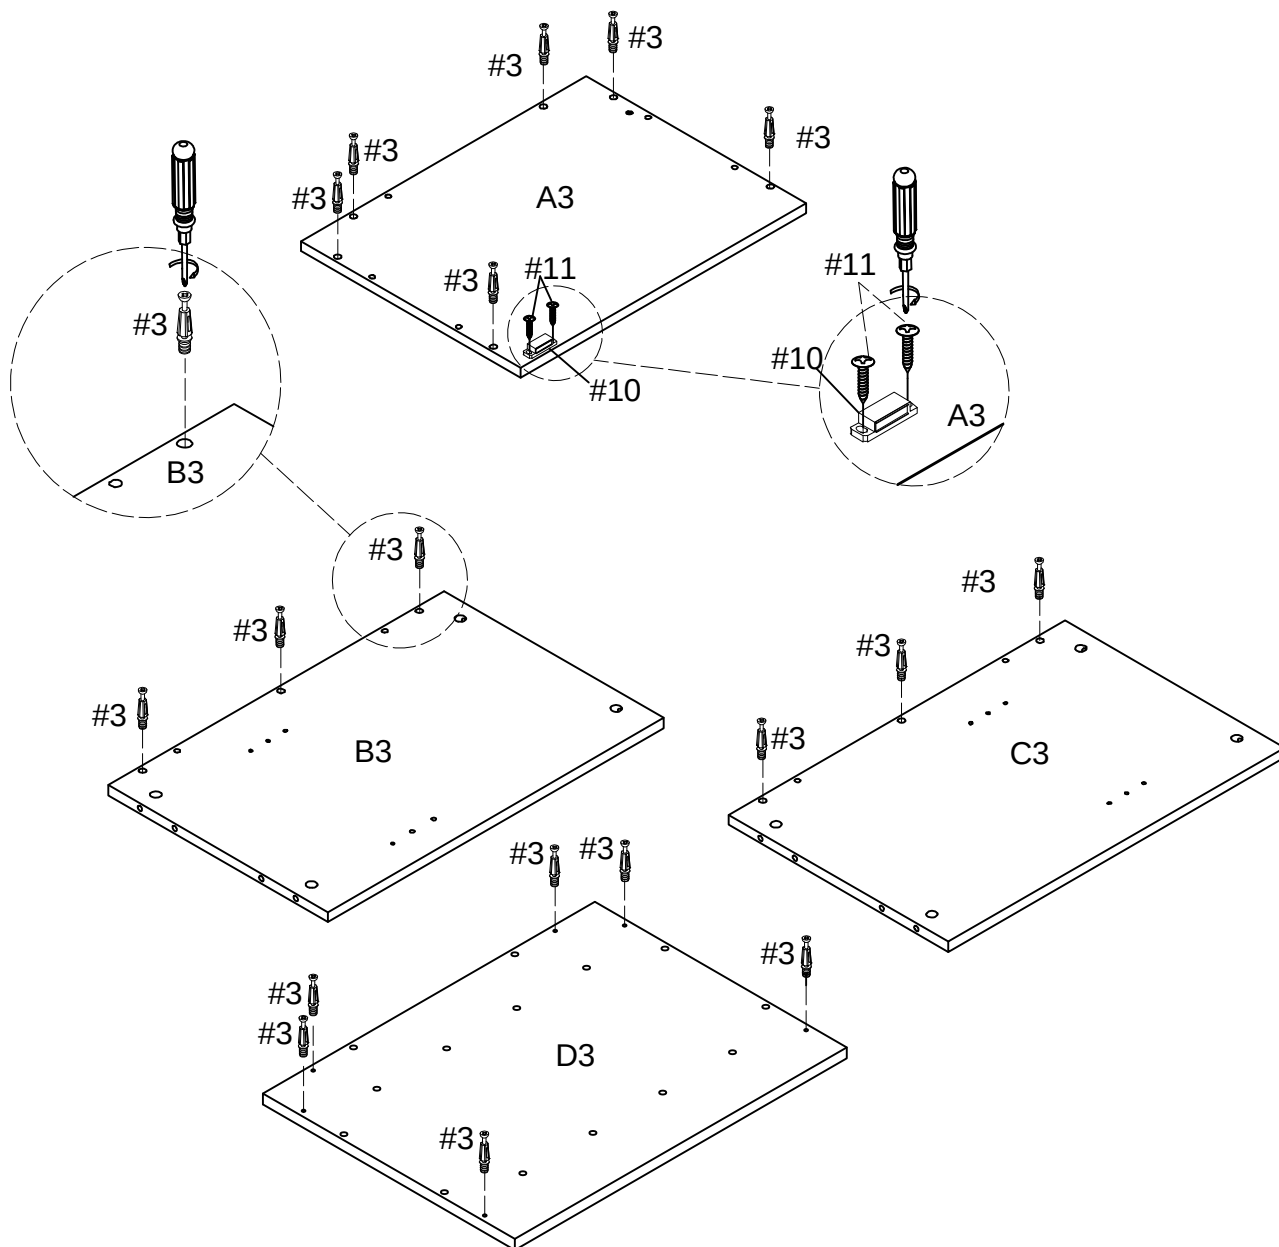

#3		x 18
#10		x 1
#11		x 2


Step 3. Attach legs (part H2) to bottom panel (part D3) using bolts (part #1) and allen wrench (part #13).

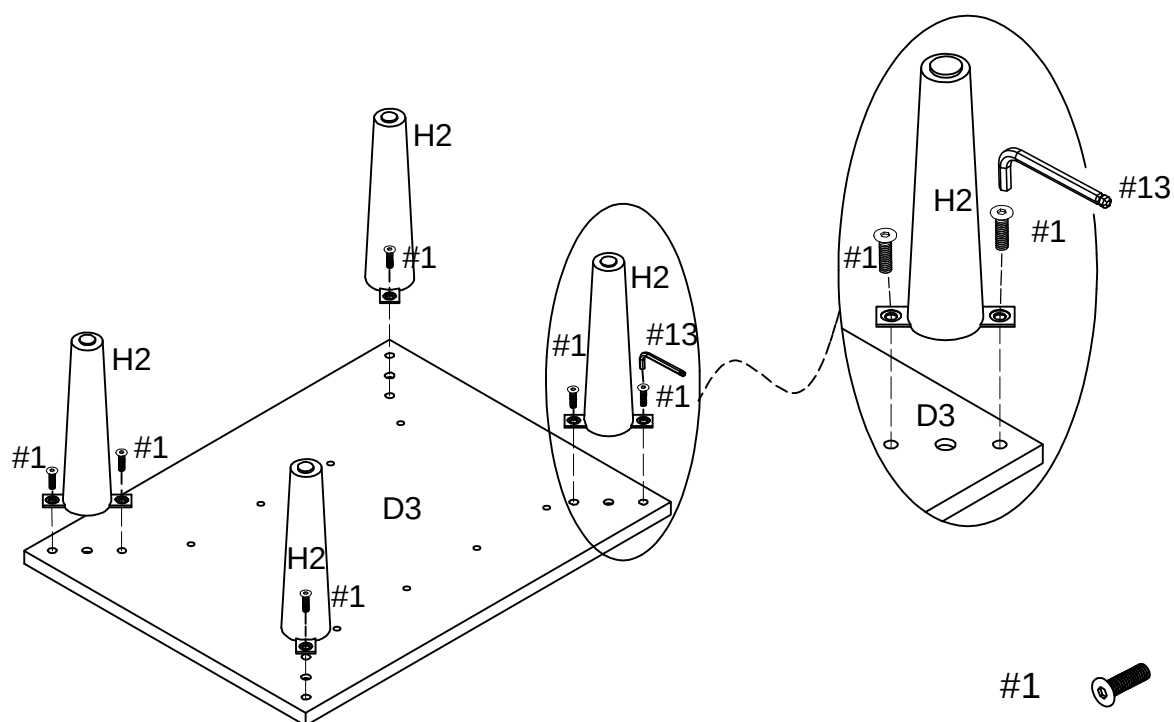

#1  x 8

#13  x 1

Step 4. Attach metal wires (part I2) to bottom panel (part D3) using hex nuts (part #12) and wrench (part #14).

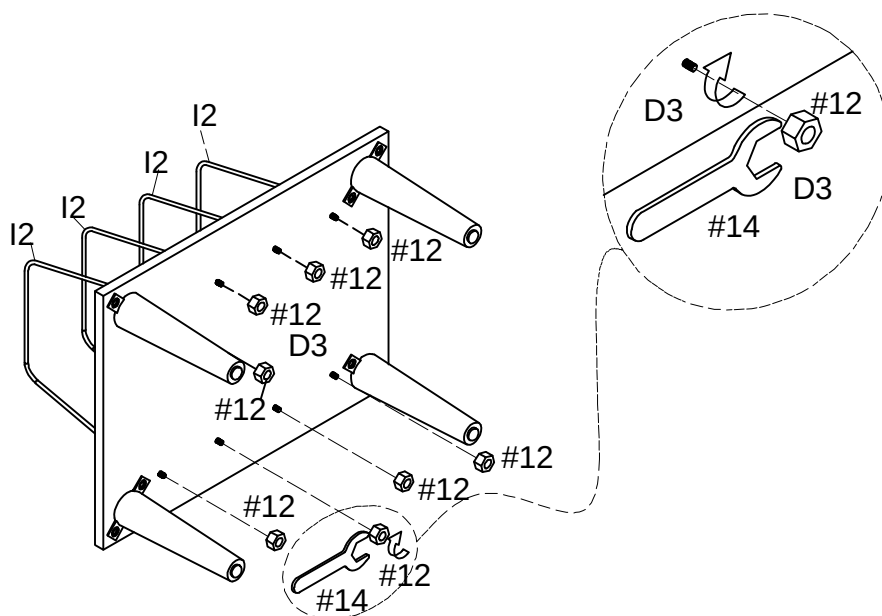


#12  x 8

#14  x 1


Step 5. Attach back panel (part F3) to panels (parts B3 & C3) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.


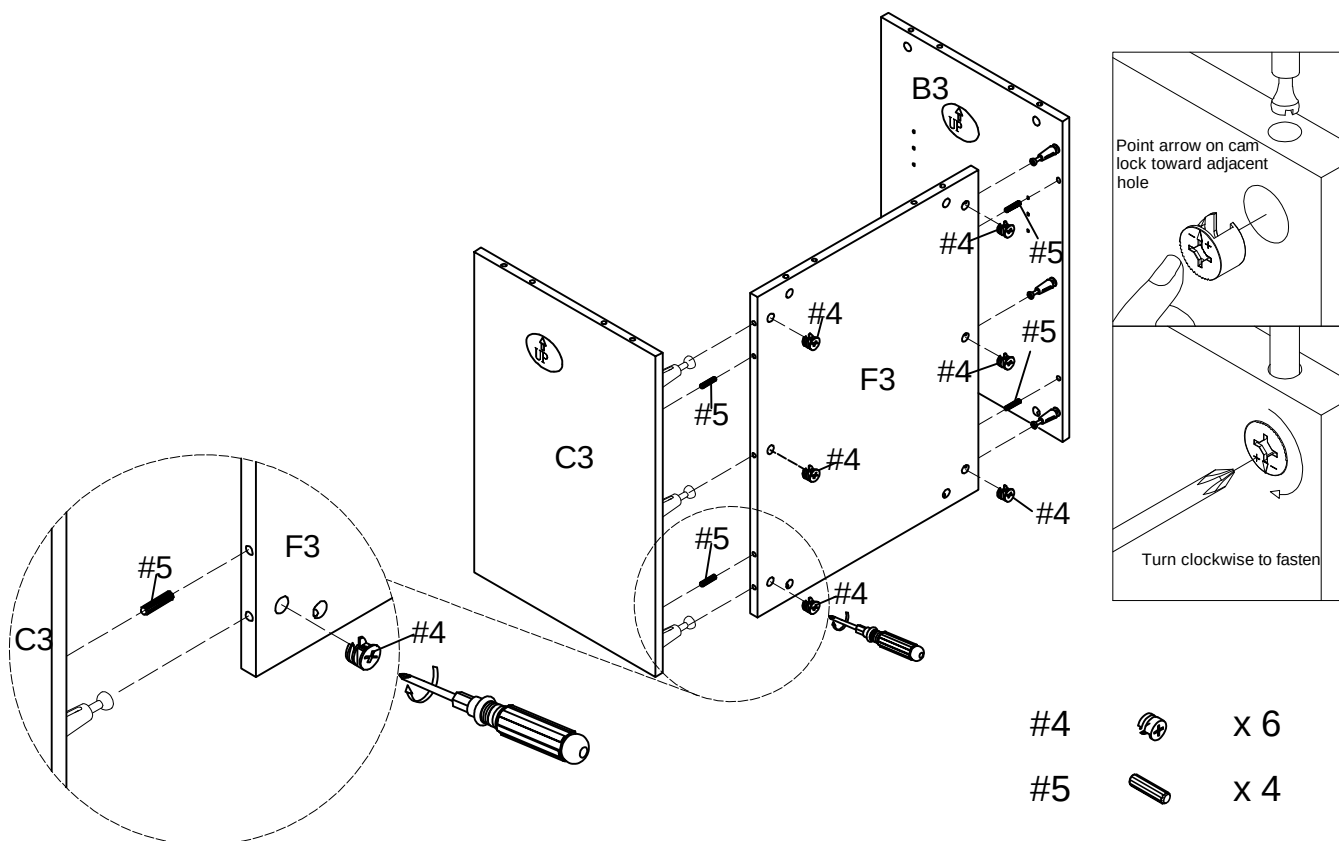


Step 6. Attach bottom panel (part D3) to assembled unit (parts B3, C3 & F3) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.


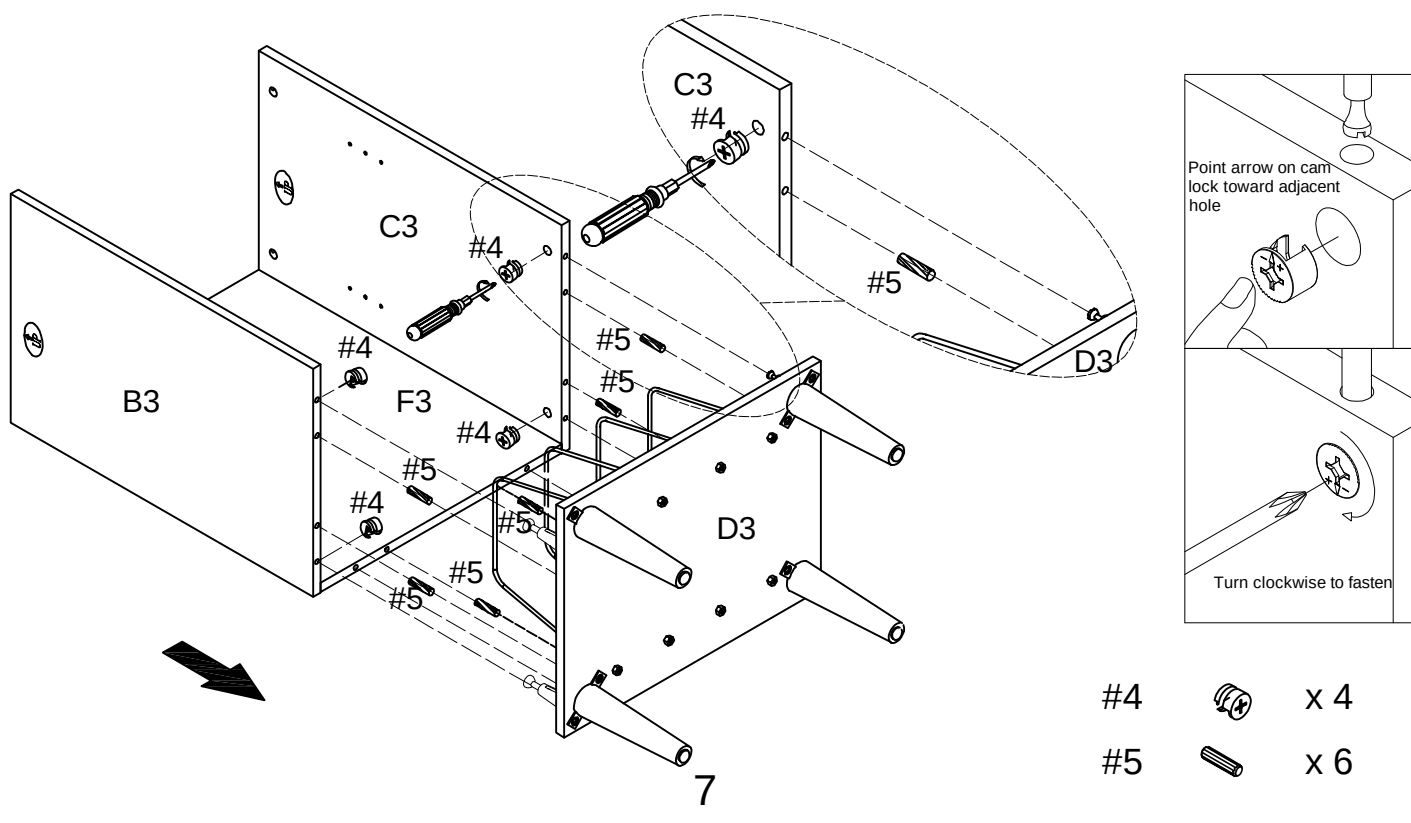


Step 7. Carefully turn unit upright. Insert cam locks (part #4) into the pre-drilled holes on the bottom of back panel (part F3) and lock using phillips head screwdriver. Note: Cam locks must rotate a full 180°. See pictured insert.

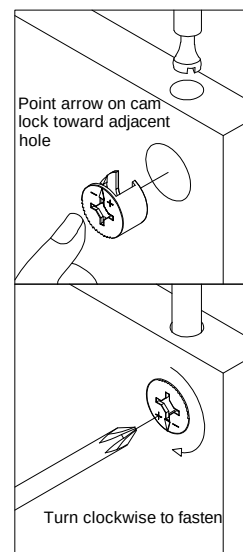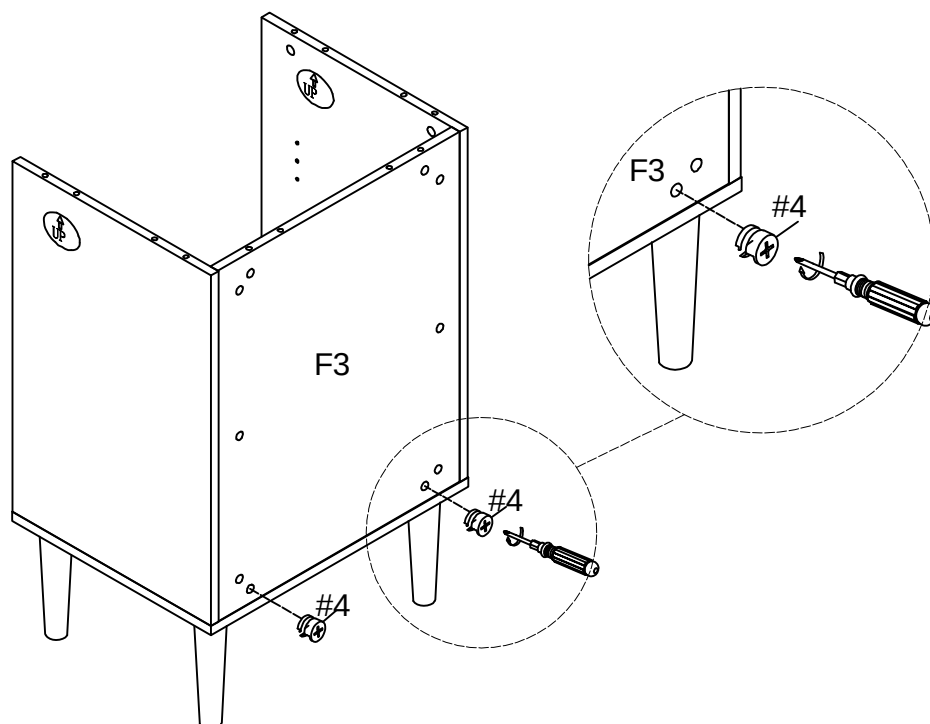

#4  x 2


Step 8. Attach top panel (part A3) to assembled unit (parts B3, C3 & F3) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver. Note: Cam locks must rotate a full 180°. See pictured insert.

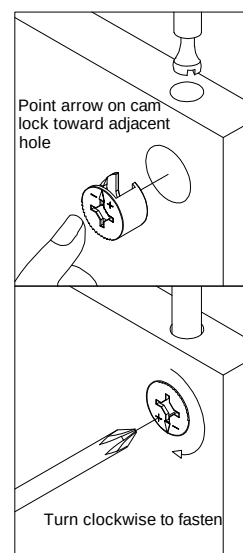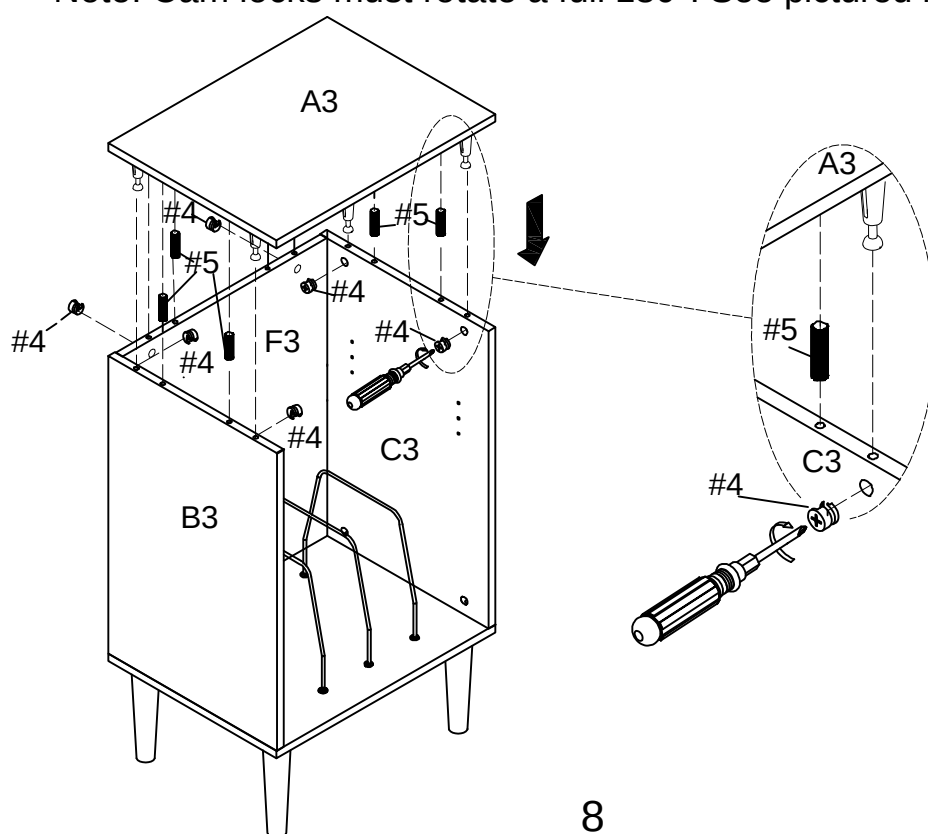

#4  x 6


#5  x 6

Step 9. Insert shelf holders (part #9) into desired position and slide adjustable shelf (part G3) into place.

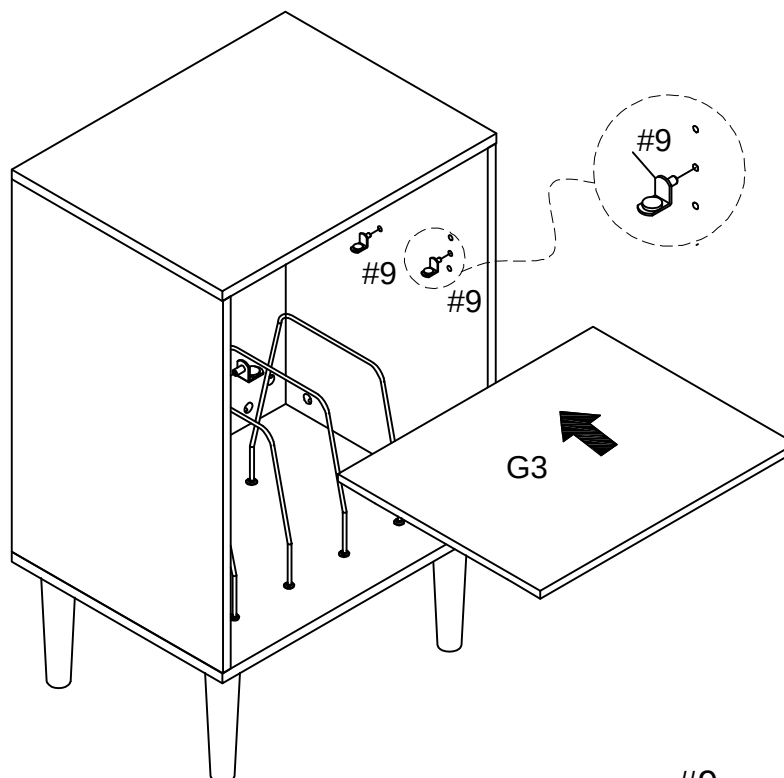

#9  x 4

Step 10. Attach door panel (part E3) to left panel (part B3) using flat head screws (part #6) and phillips head screwdriver. Then attach handle (part #7) to door panel (part E3) using round head bolts (part #8) and phillips head screwdriver.

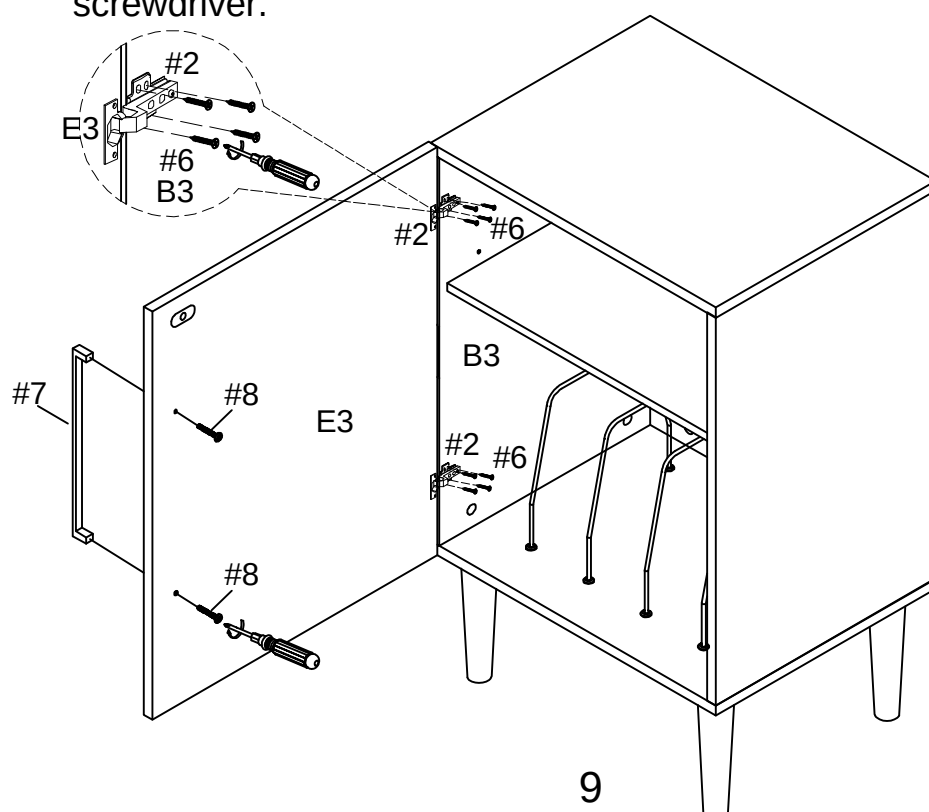

#6  x 8
 #7  x 1
 #8  x 2


Step 11. Using cam stickers (part #15) cover all cam locks (part #4).


Important: Safety strap kit (part #16) must be installed to prevent tipping damage and/or injury.

NOTE: It is important to adjust levelers once fully assembled and upright.

Extend adjustable leveler until it's firmly in contact with the floor.

If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

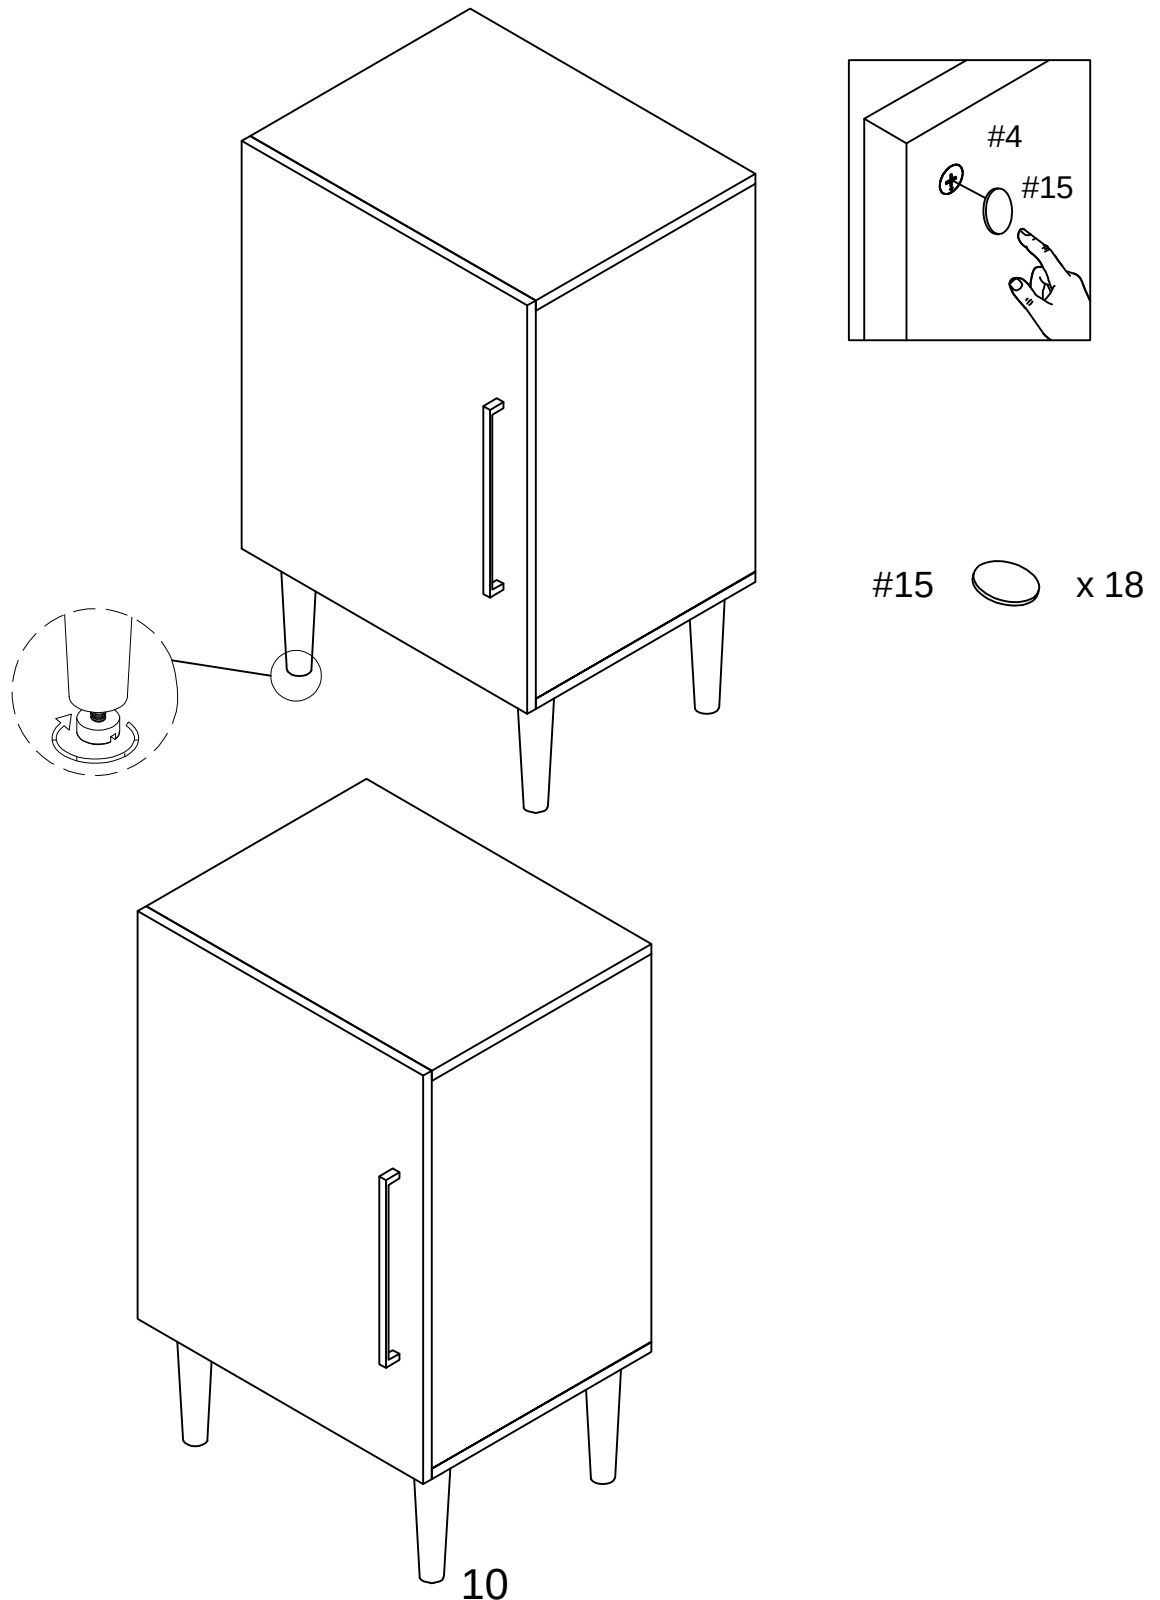

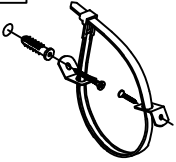
#16	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A3) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A3) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

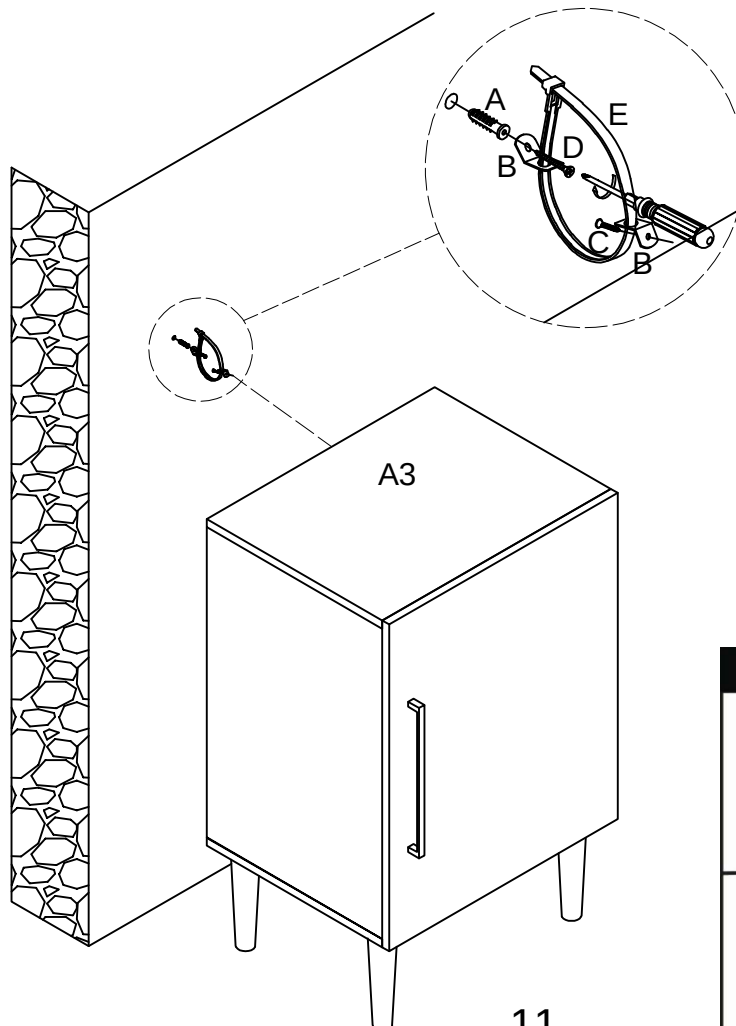

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint Provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>