 
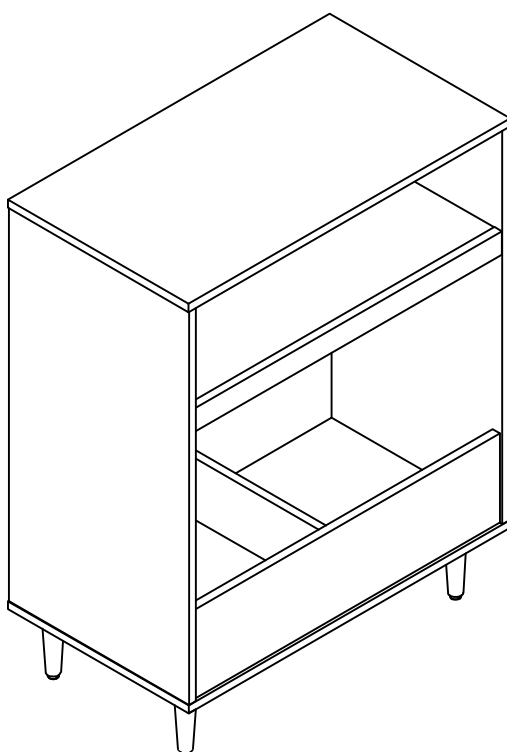 
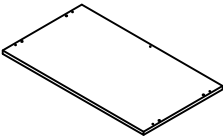 
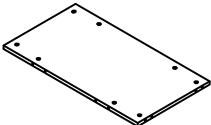 
 
 
 
 
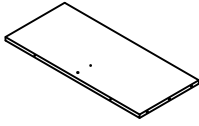 
 


CROSLEY
FURNITURE






Record Player Stand
CF1125



PARTS LIST


A2  Top Panel 1 PC	B2  Fixed Shelf 1 PC	C2  Left Panel 1 PC	D2  Right Panel 1 PC	E2  Bottom Panel 1 PC
F2  Lower Front Panel 1 PC	G2  Lower Back Panel 1 PC	H2  Center Rail 2 PCS	I2  Back Rail 1 PC	J2  Lower Partition Panel 1 PC
K2  Leg 4 PCS				

     HARDWARE LIST
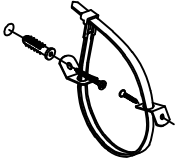
#1  1/4"*45mm	#2  1/4"*10mm	#3  1/4"*13mm	#4  7*38mm	#5  Cam Bolt 25 PCS (Extra 1)
Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Screw 8 PCS (Extra 1)	
#6  Cam Lock 25 PCS (Extra 1)	#7  8*30mm	#8  M4 Allen Wrench 1 PC	#9  Cam Sticker 25 PCS (Extra 1)	#10  Safety Strap Kit 1 SET
	Wood Dowel 28 PCS (Extra 1)			

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Step 1. Attach legs (part K2) to bottom panel (part E2) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #8).

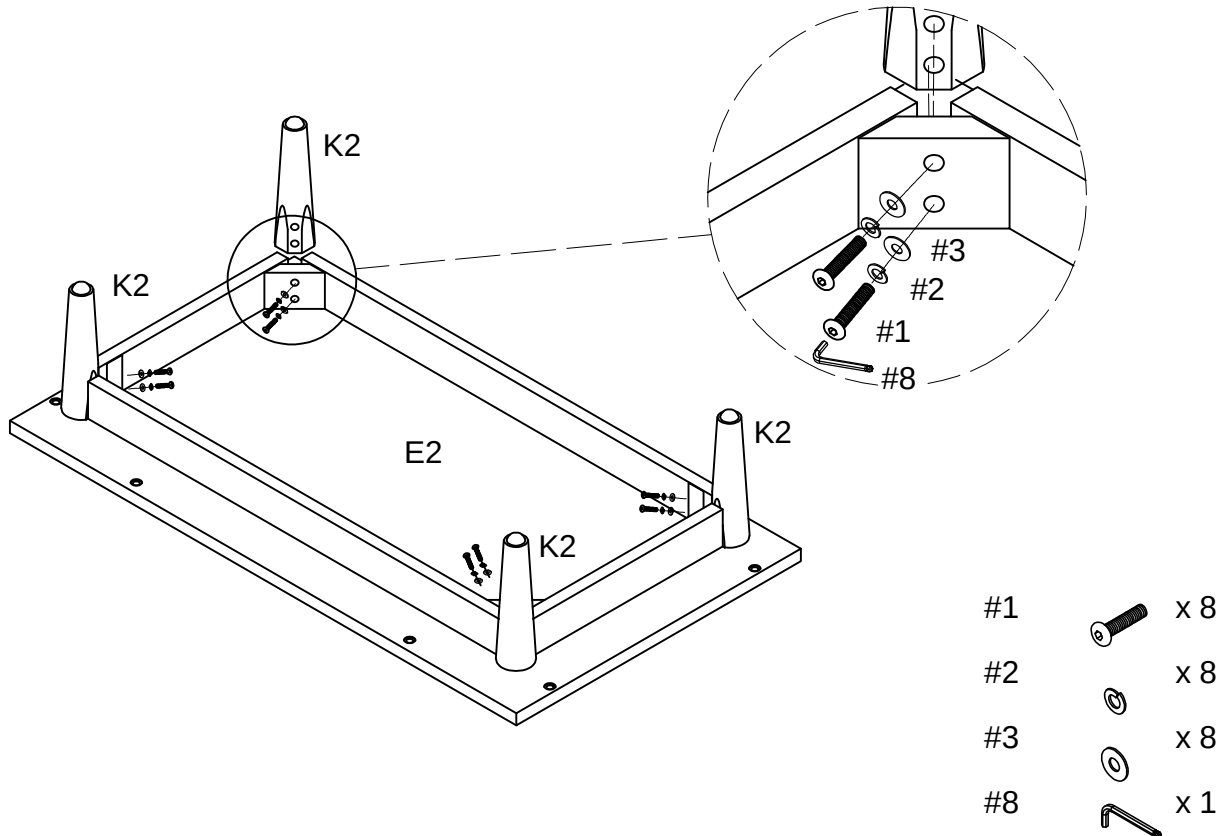


Step 2. Screw cam bolts (part #5) into center rails (part H2) using phillips head screwdriver.

 Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

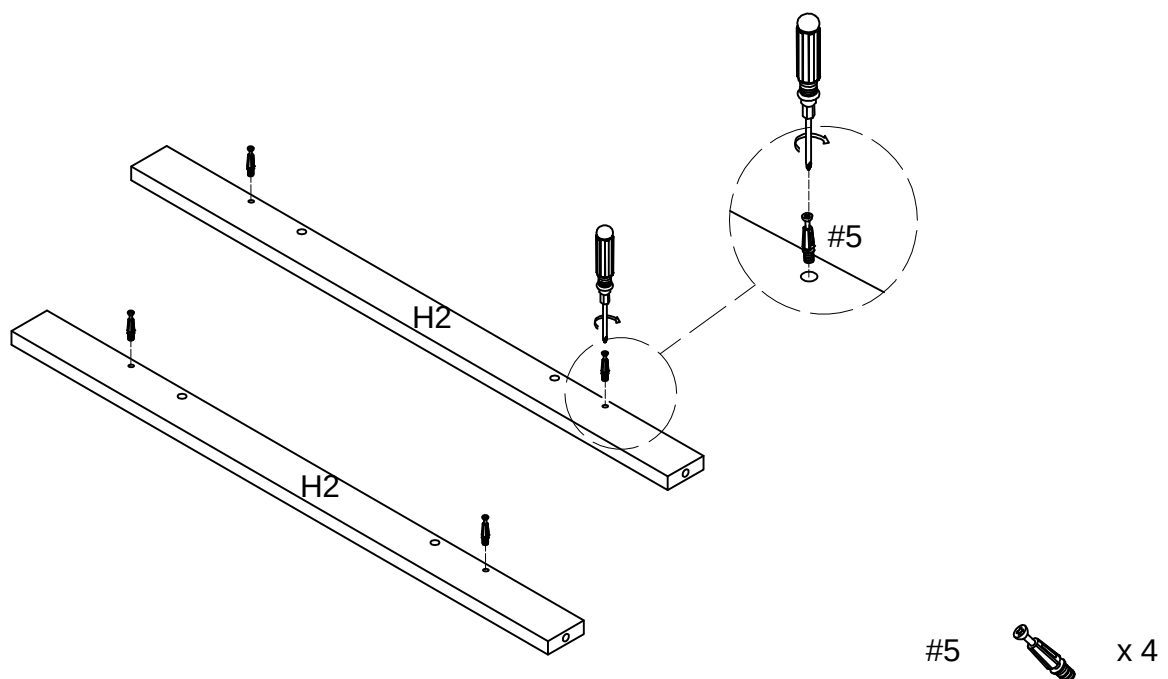

Step 3. Screw cam bolts (part #5) into panels (parts C2 & D2) using phillips head screwdriver.

 
Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

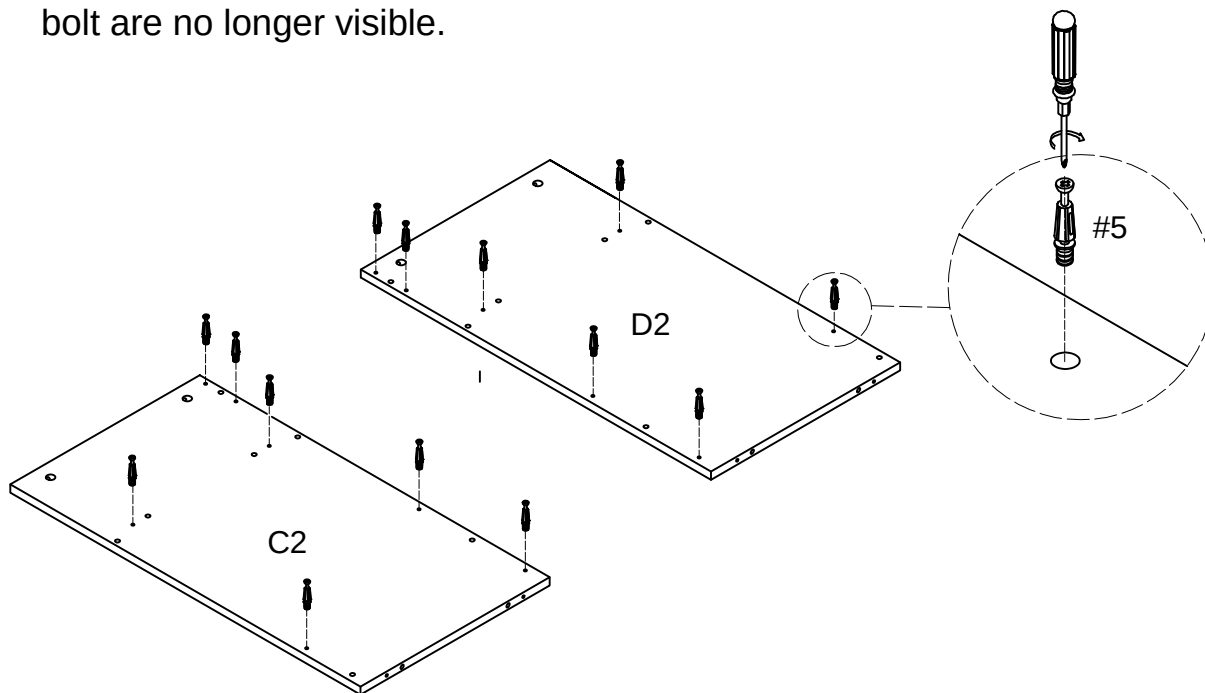

#5  x 14

Step 4. Screw cam bolts (part #5) into panels (parts F2 & G2) using phillips head screwdriver.

 
Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

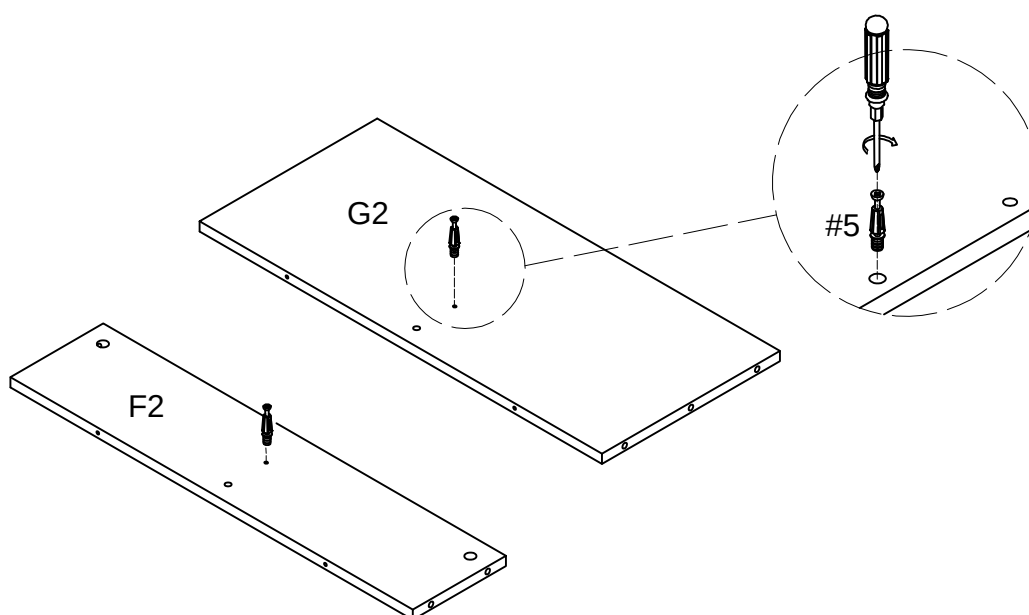

#5  x 2

Step 5. Screw cam bolts (part #5) into top panel (part A2) using phillips head screwdriver.


 
Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

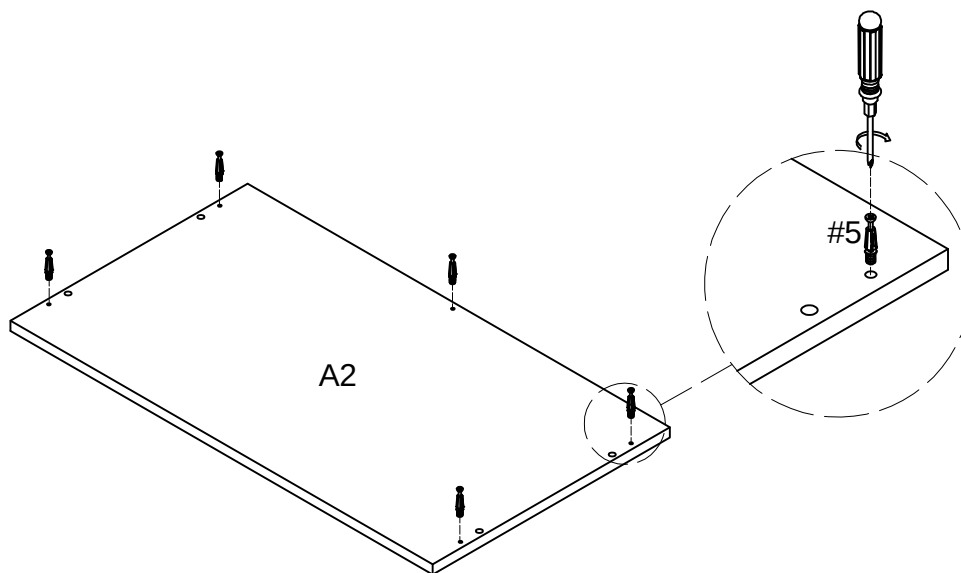

#5  x 5

Step 6. Attach center rails (part H2) to fixed shelf (part B2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

  Note: Cam locks must rotate a full 180°. See pictured insert.

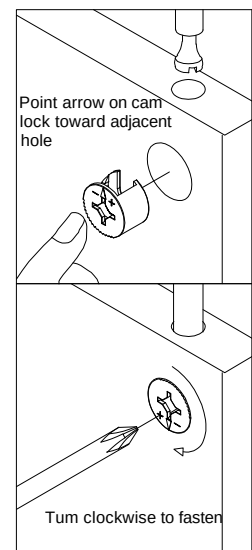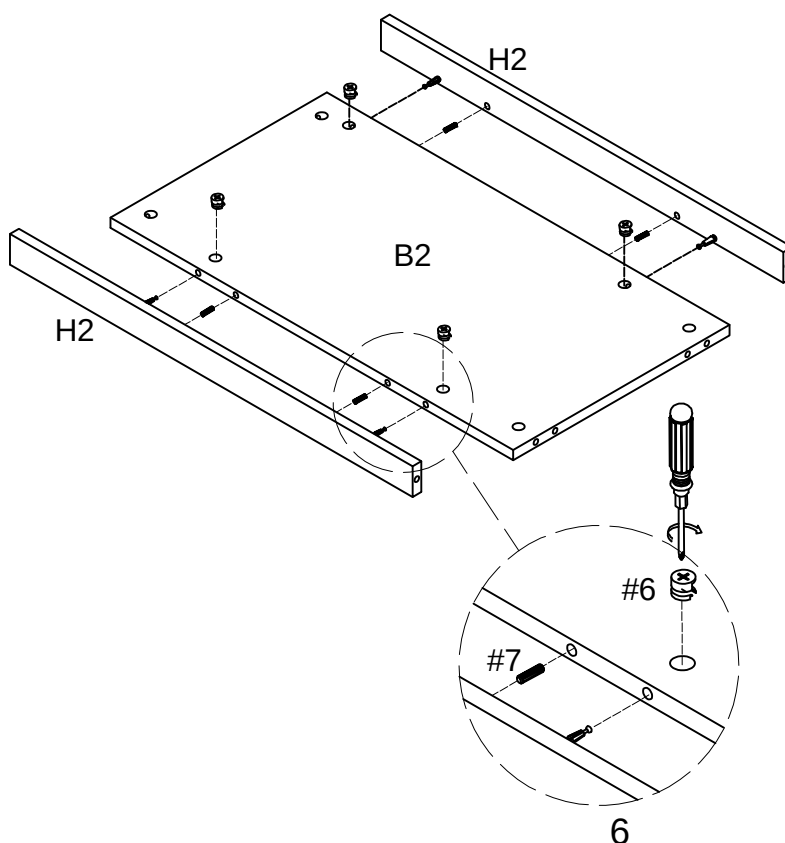


#6  x 4

#7  x 4


Step 7. Attach assembled unit (parts B2 & H2) and back rail (part I2) to right panel (part D2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

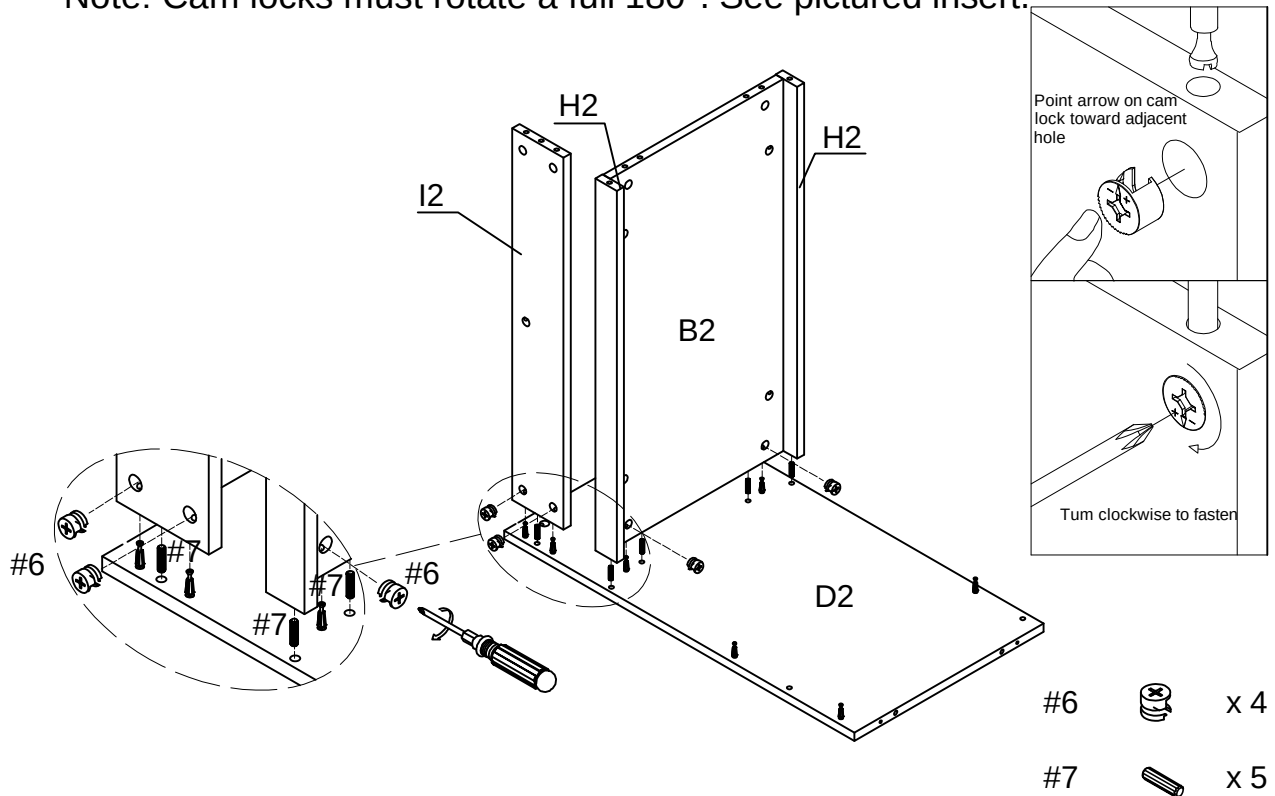


Step 8. Attach panels (parts F2 & G2) to lower partition panel (part J2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

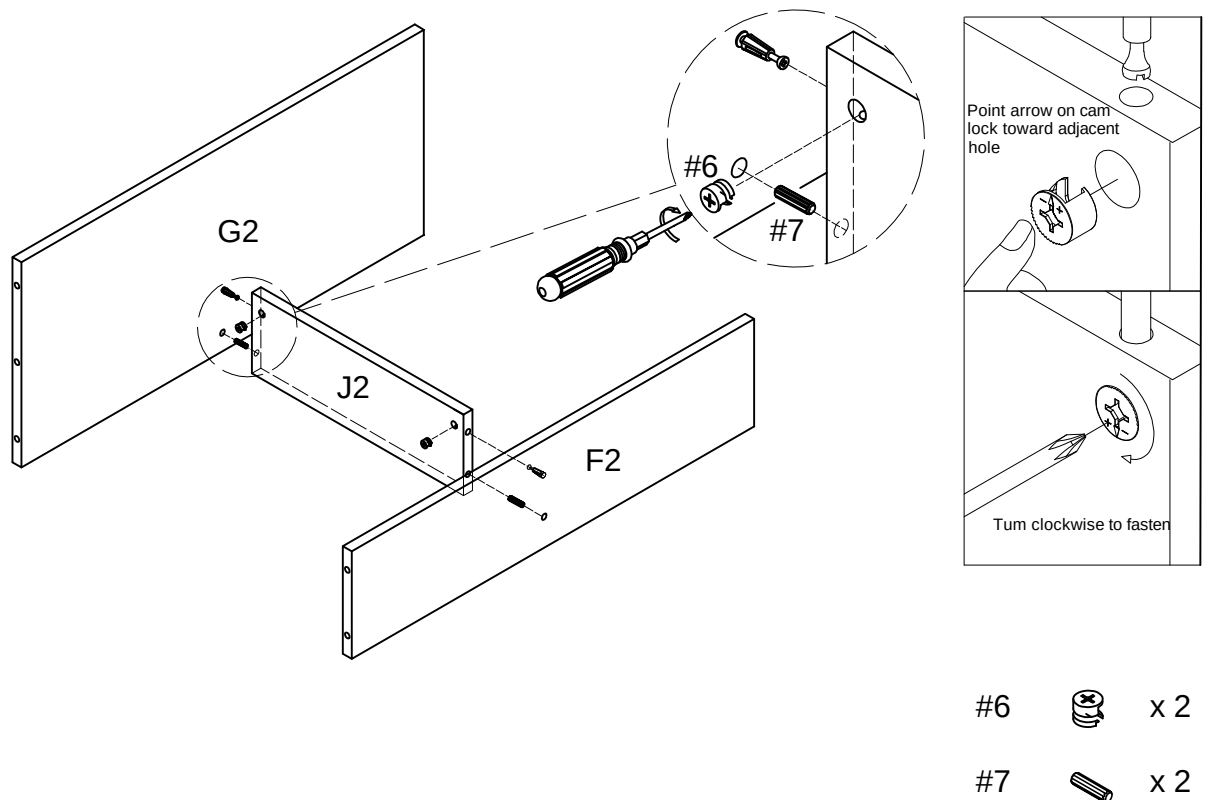


Step 9. Attach assembled unit (parts F2, G2 & J2) to right panel (part D2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

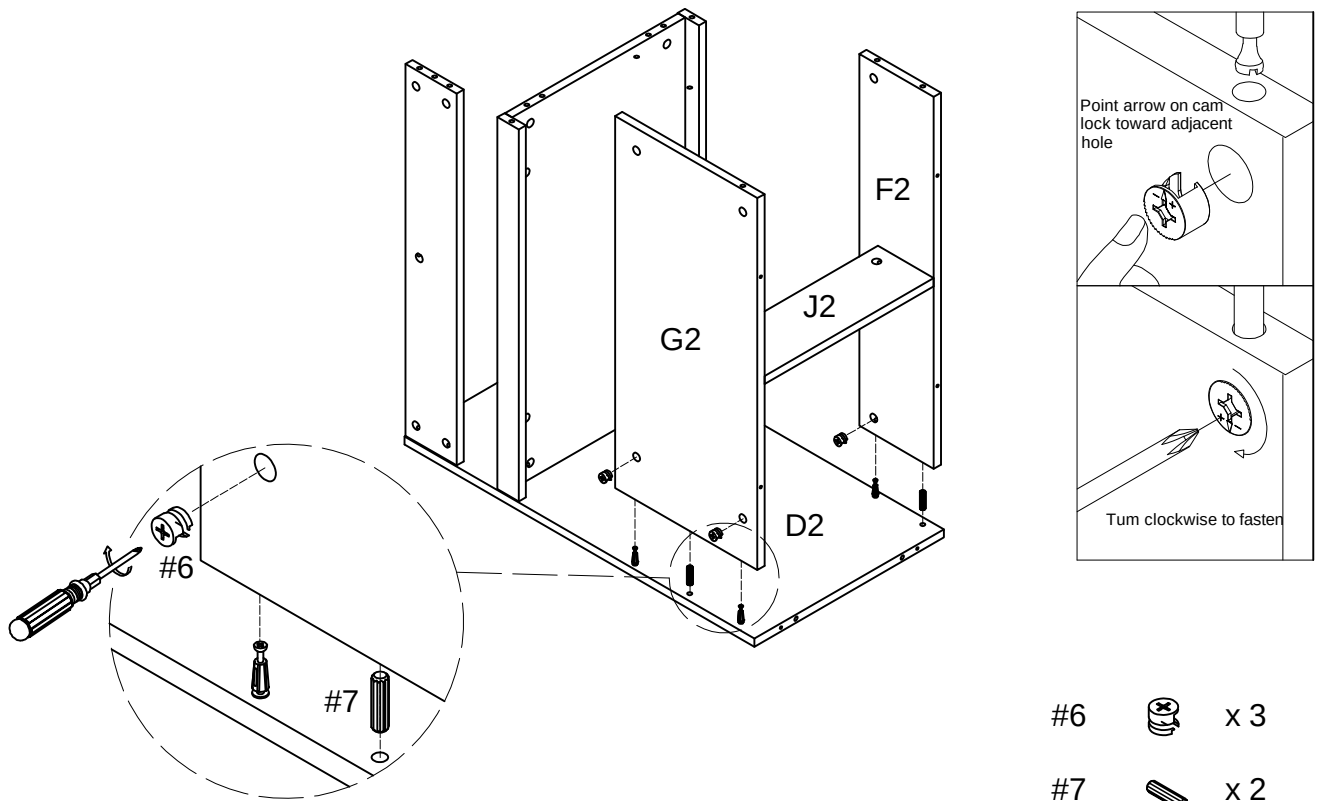


Step 10. Attach left panel (part C2) to assembled unit (parts B2, F2, G2, H2 & I2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

 Note: Cam locks must rotate a full 180°. See pictured insert.

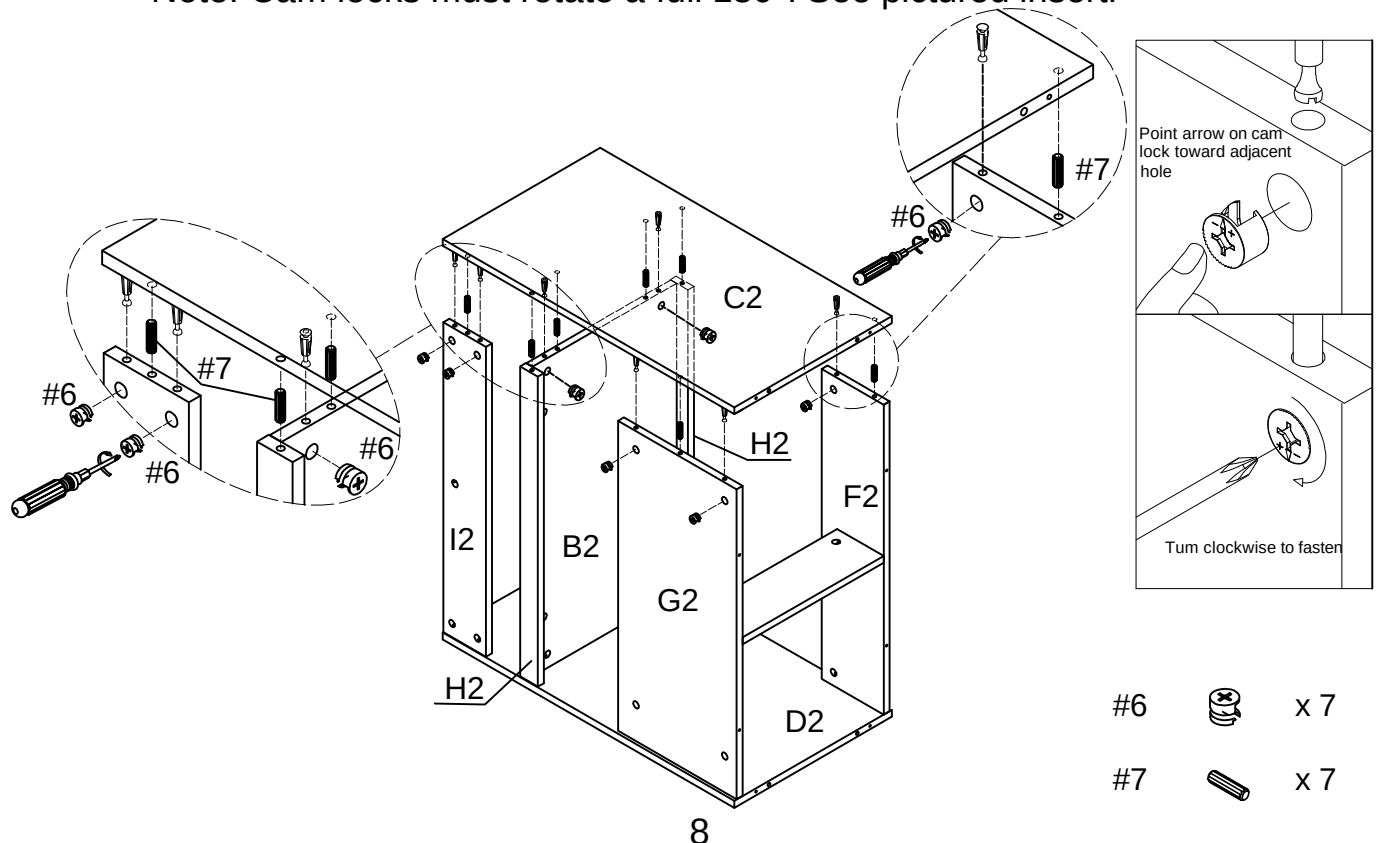


 Step 11. Attach bottom panel (part E2) to assembled unit (parts C2, D2, F2 & G2) using screws (part #4), wood dowels (part #7) and allen wrench (part #8).

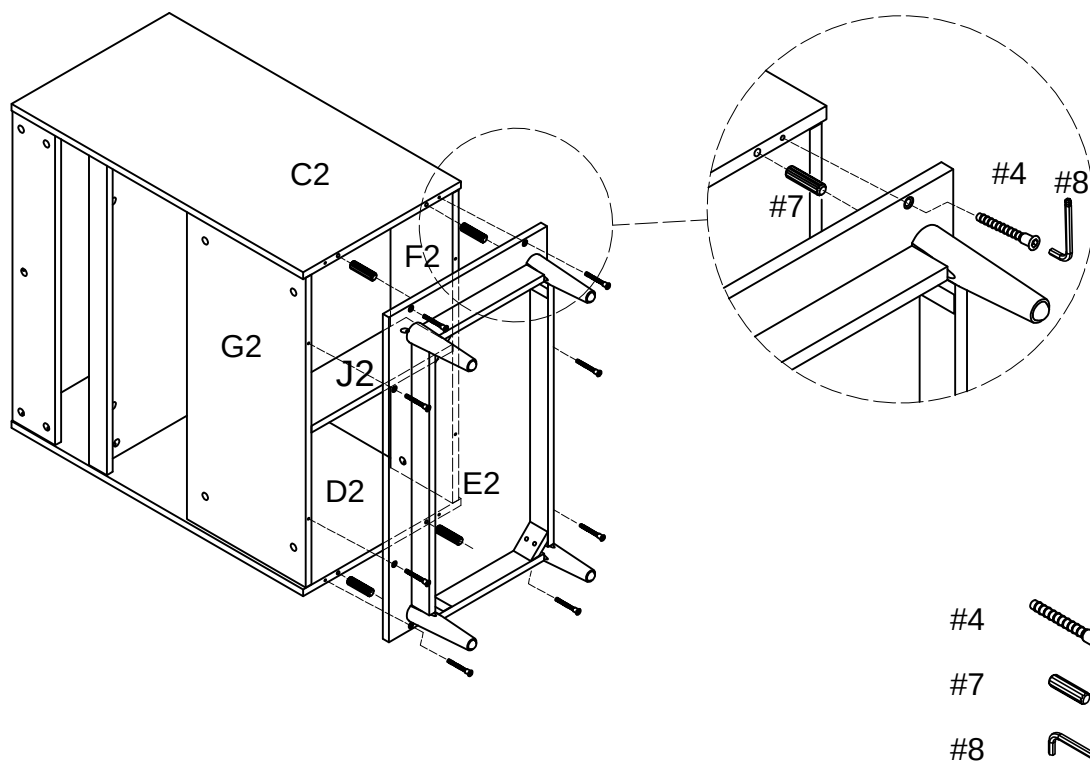

Step 12. Carefully turn unit upright. Attach top panel (part A2) to assembled unit (part C2, D2 & I2) using wood dowels (part #7), cam locks (part #6) and phillips head screwdriver.


 
Note: Cam locks must rotate a full 180°. See pictured insert.

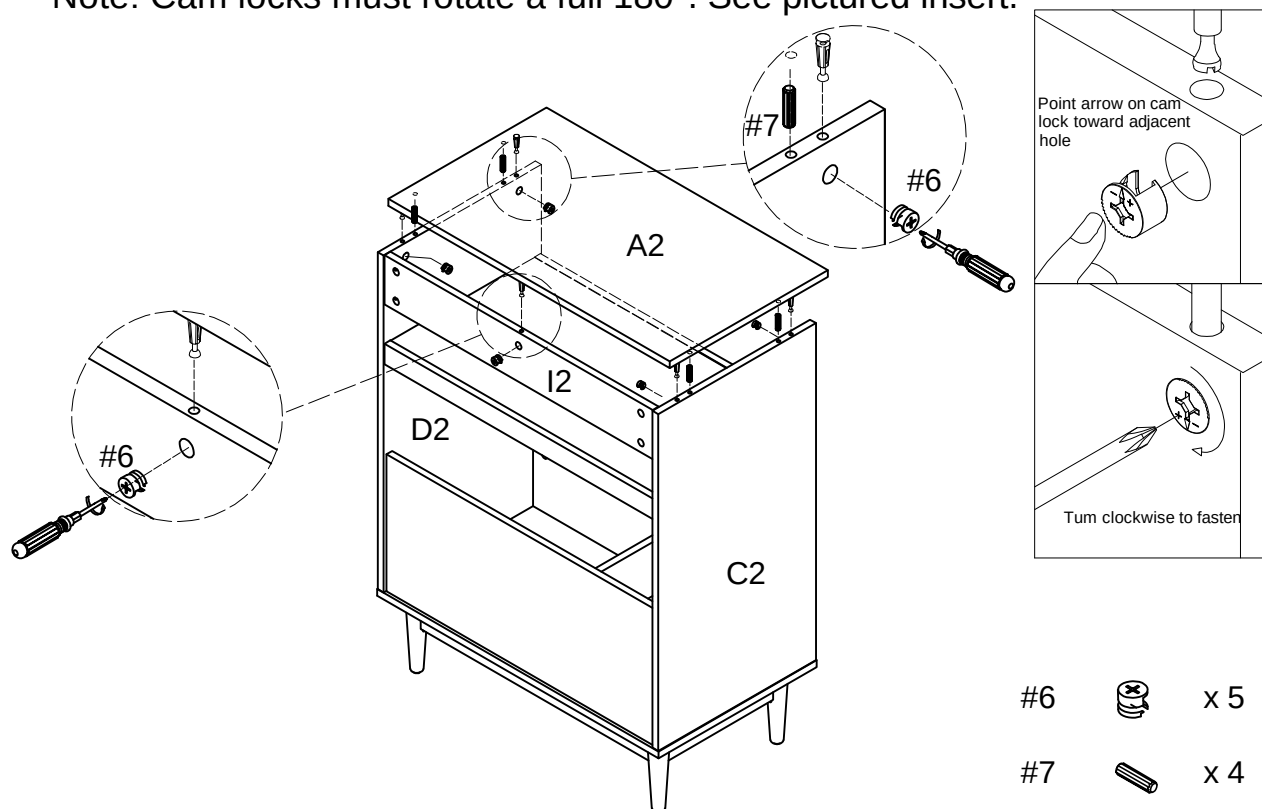


Step 13. Using cam stickers (part #9) cover all cam locks (part #6).


NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

  Important: Safety strap kit (part #10) must be installed to prevent tipping damage and/or injury.

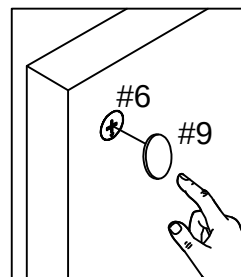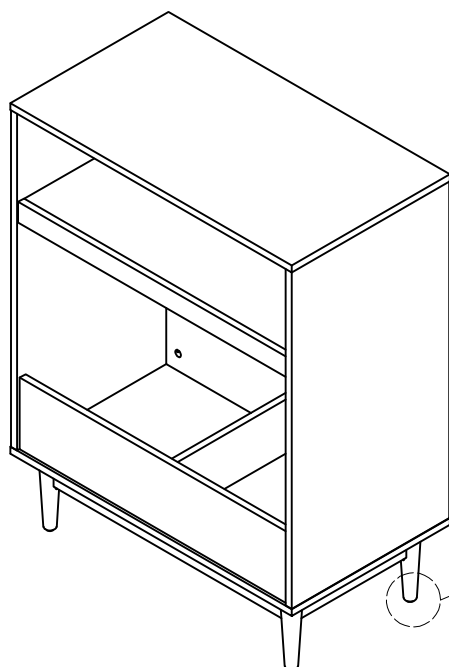

#9  x 25

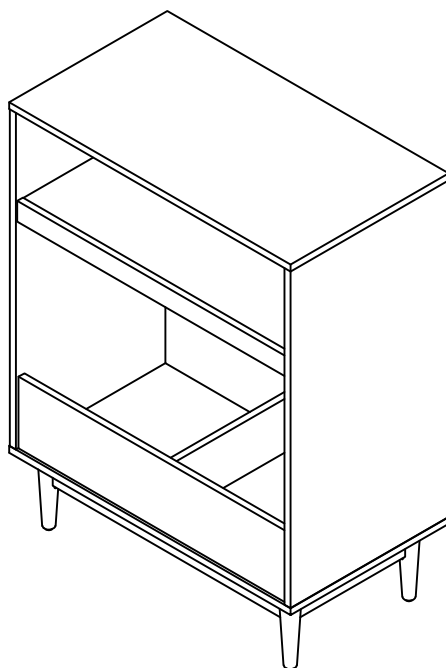 

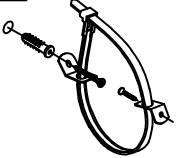 
#10	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

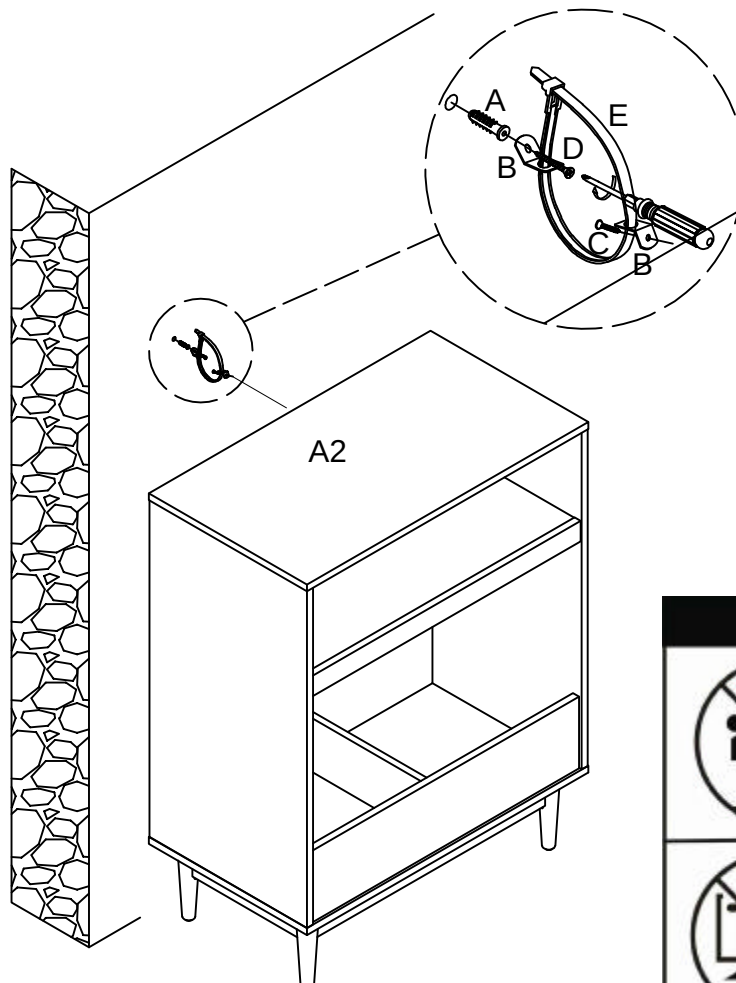

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label. Do not remove!