 












CROSLEY

FURNITURE



Rolling Record Player Stand
with Vinyl Storage
CF1134

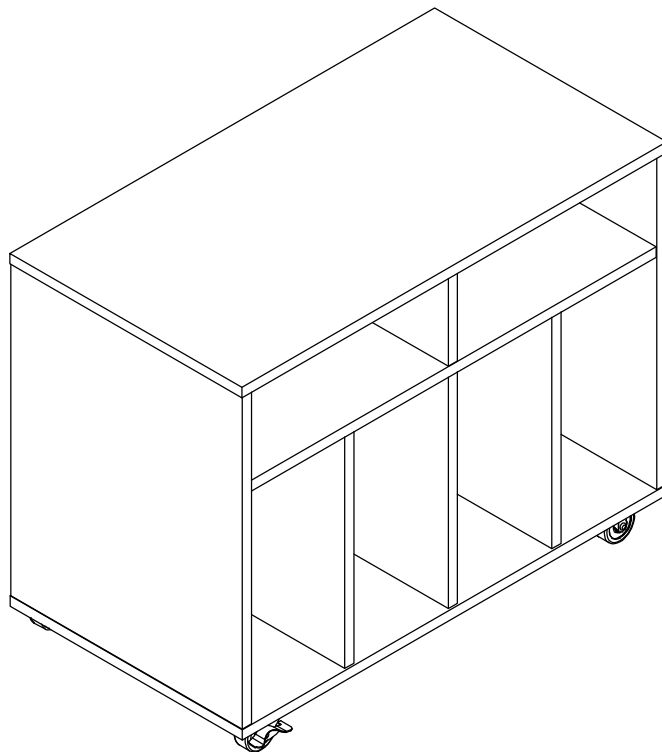

          PART LIST

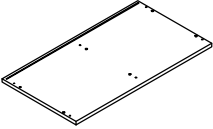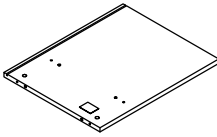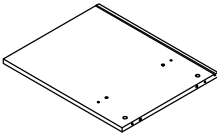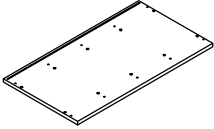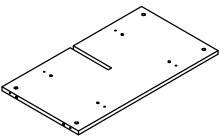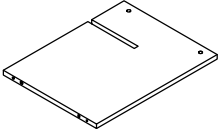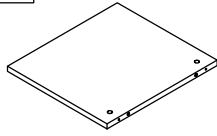
A2	B2	C2	D2	E2
				
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf Panel 1 PC
F2	G2	H2	I2	J
				
Center Partition Panel 1 PC	Side Partition Panel 2 PCS	Left Back Panel 1 PC	Right Back Panel 1 PC	Cover 1 PC
K	L			
				
Locking Caster 2 PCS	Caster 2 PCS			

  HARDWARE LIST

#1		#2		#3		#4	 8*30mm	#5	 7*38mm
	Cam Bolt 14 PCS (Extra 1)		Cam Lock 14 PCS (Extra 1)		Cam Sticker 14 PCS (Extra 1)		Wood Dowel 24 PCS (Extra 1)		Tapping Screw 10 PCS (Extra 1)
#6		#7	 6*3*16mm	#8	 10*4.5*12mm	#9	 8*3*15mm	#10	
	Back Bracket 8 PCS (Extra 1)		Long Screw 8 PCS (Extra 1)		Short Screw 16 PCS (Extra 1)		Medium Screw 2 PCS (Extra 1)		Binding Post 1 PC (Extra 1)
#11	 M2 Small Allen Wrench 1 PC	#12	 M4 Allen Wrench 1 PC						

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Screw cam bolts (part #1) into panels (parts A2 & E2) using phillips head screwdriver.

 Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

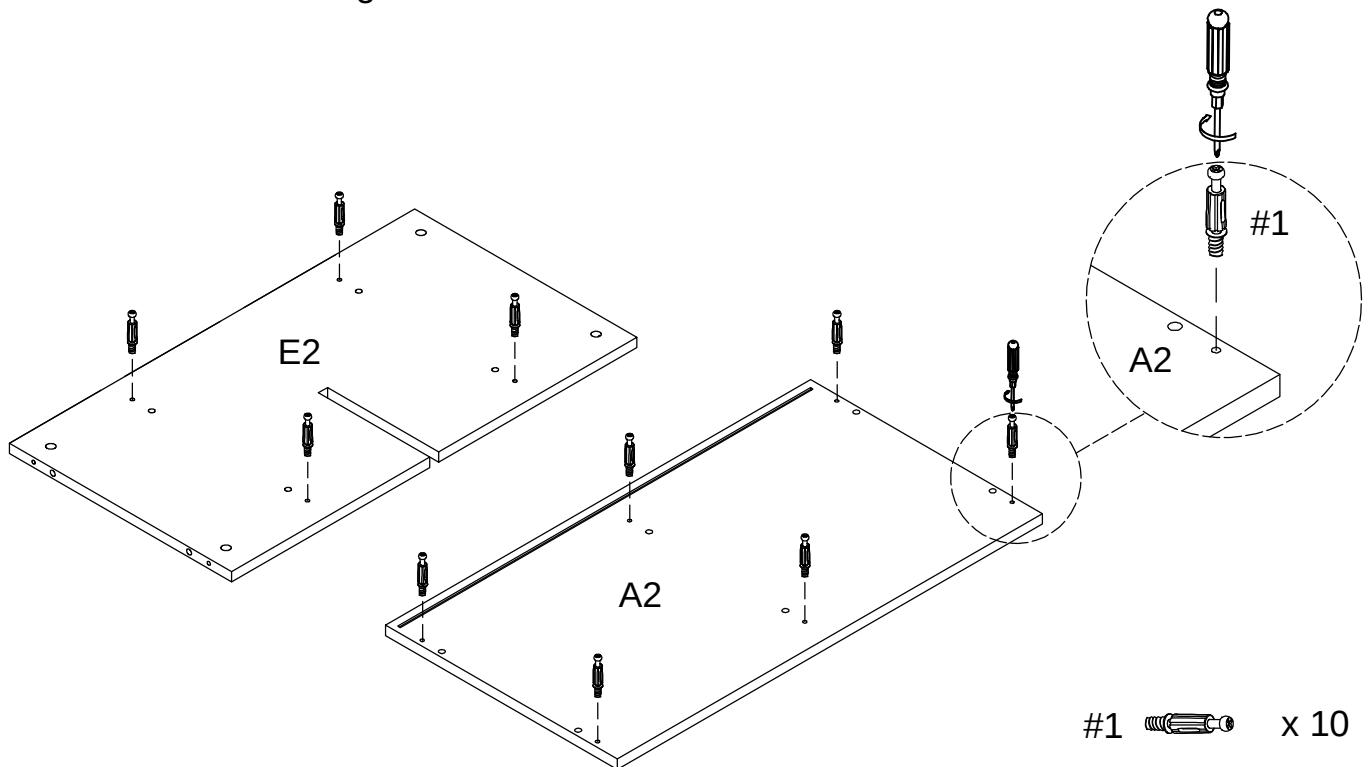


Step 2. Screw cam bolts (part #1) into panels (parts B2 & C2) using phillips head screwdriver.

 Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

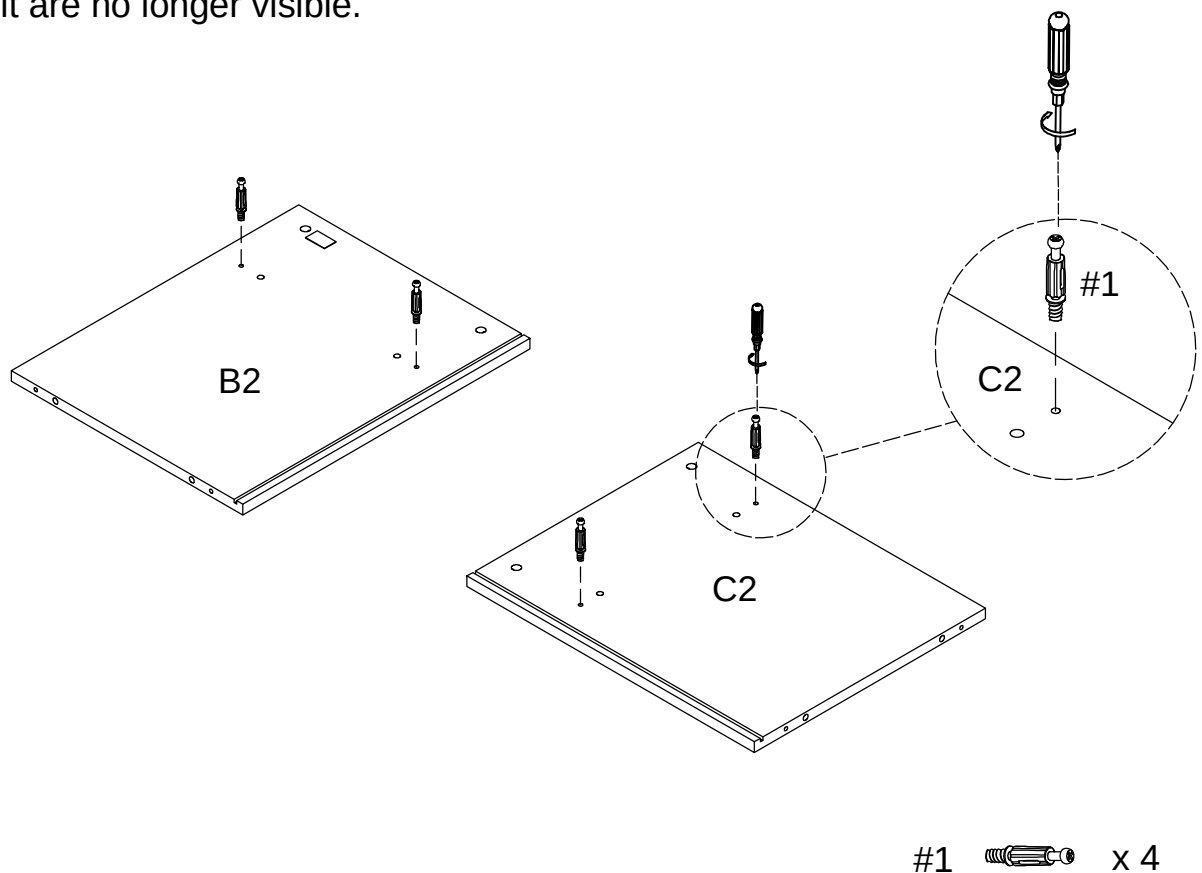


 
Step 3. Attach cover (part J) to right back panel (part I2) using binding post (part #10) and small allen wrench (part #11).

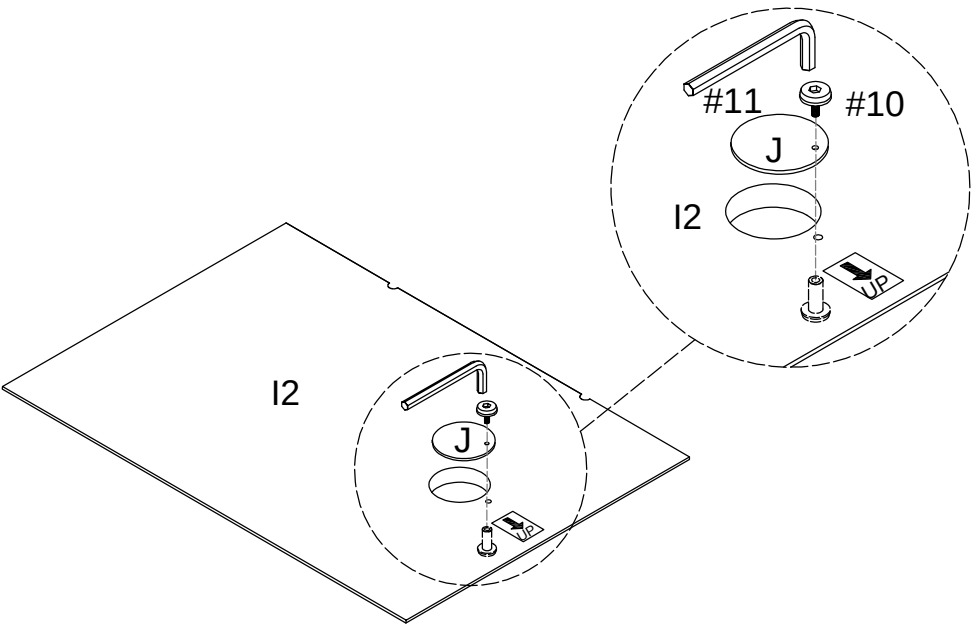

- #10  x 1
- #11  x 1


Step 4. Attach side partition panels (part G2) to fixed shelf panel (part E2) using cam locks (part #2), wood dowels (part #4) and phillips head screwdriver.

  Note: Cam locks must rotate a full 180°. See pictured insert.

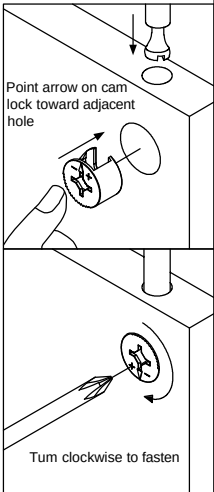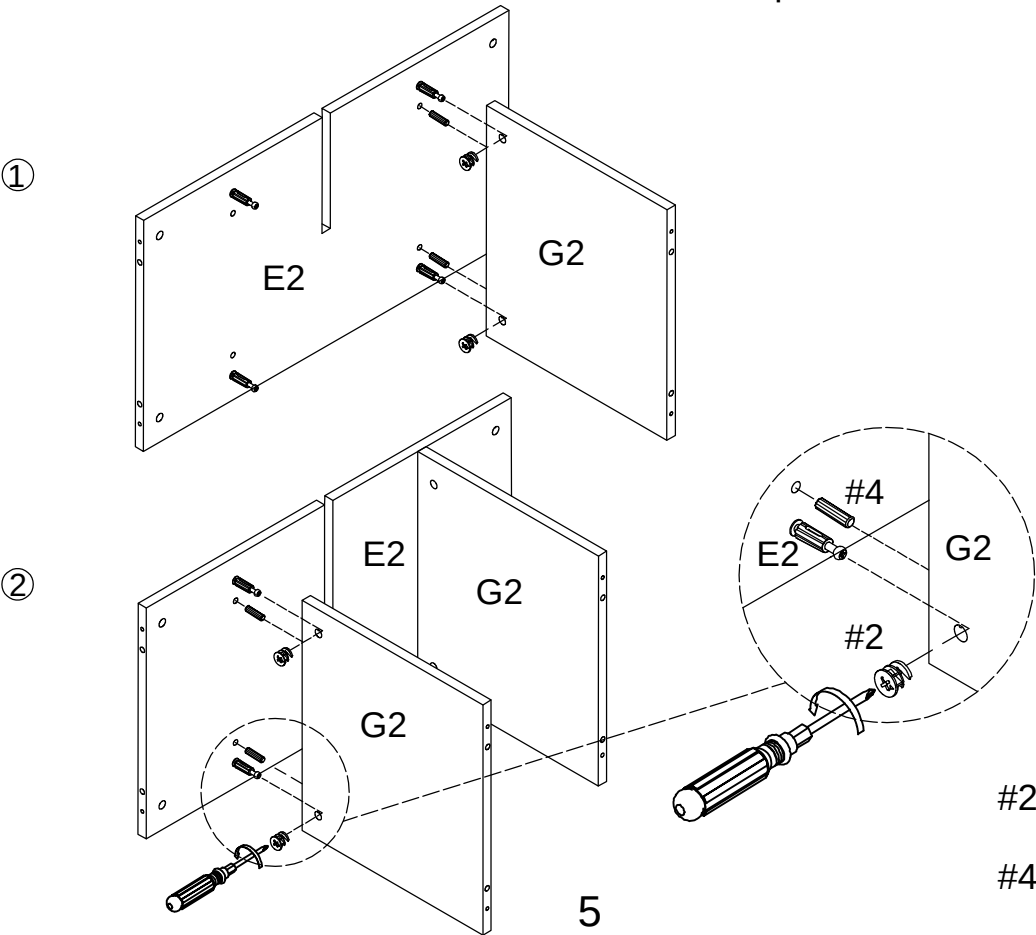


- #2  x 4
- #4  x 4

 
Step 5. Insert center partition panel (part F2) to fixed shelf panel (part E2).

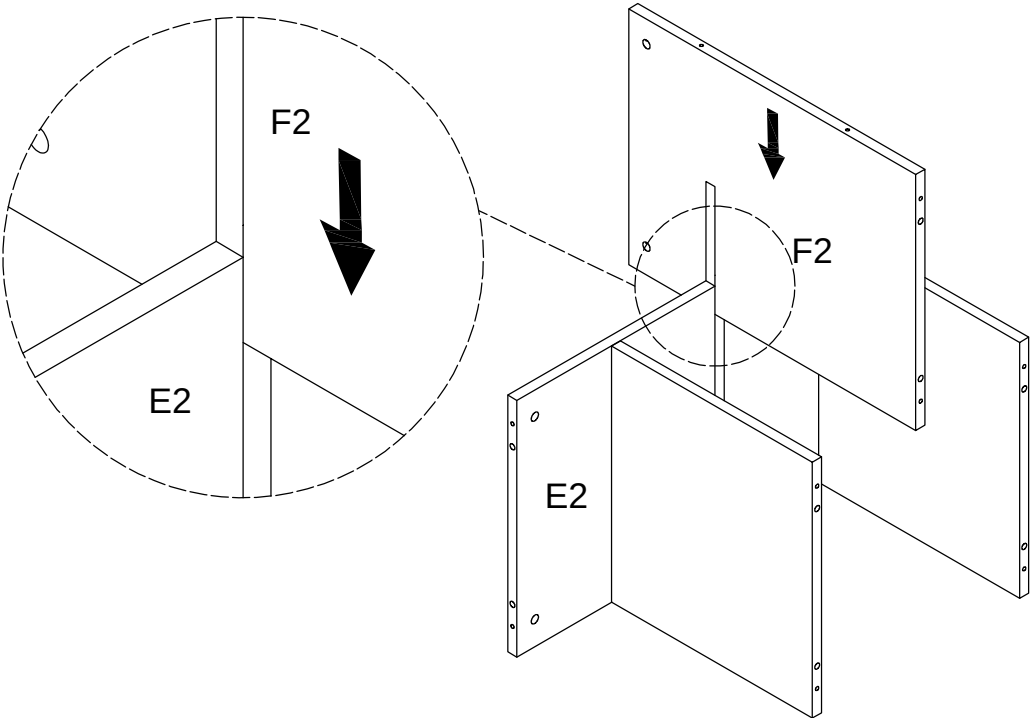

 
Step 6. Attach left panel (part B2) to fixed shelf panel (part E2) using cam locks (part #2), wood dowels (part #4) and phillips head screwdriver.
Note: Cam locks must rotate a full 180°. See pictured insert.

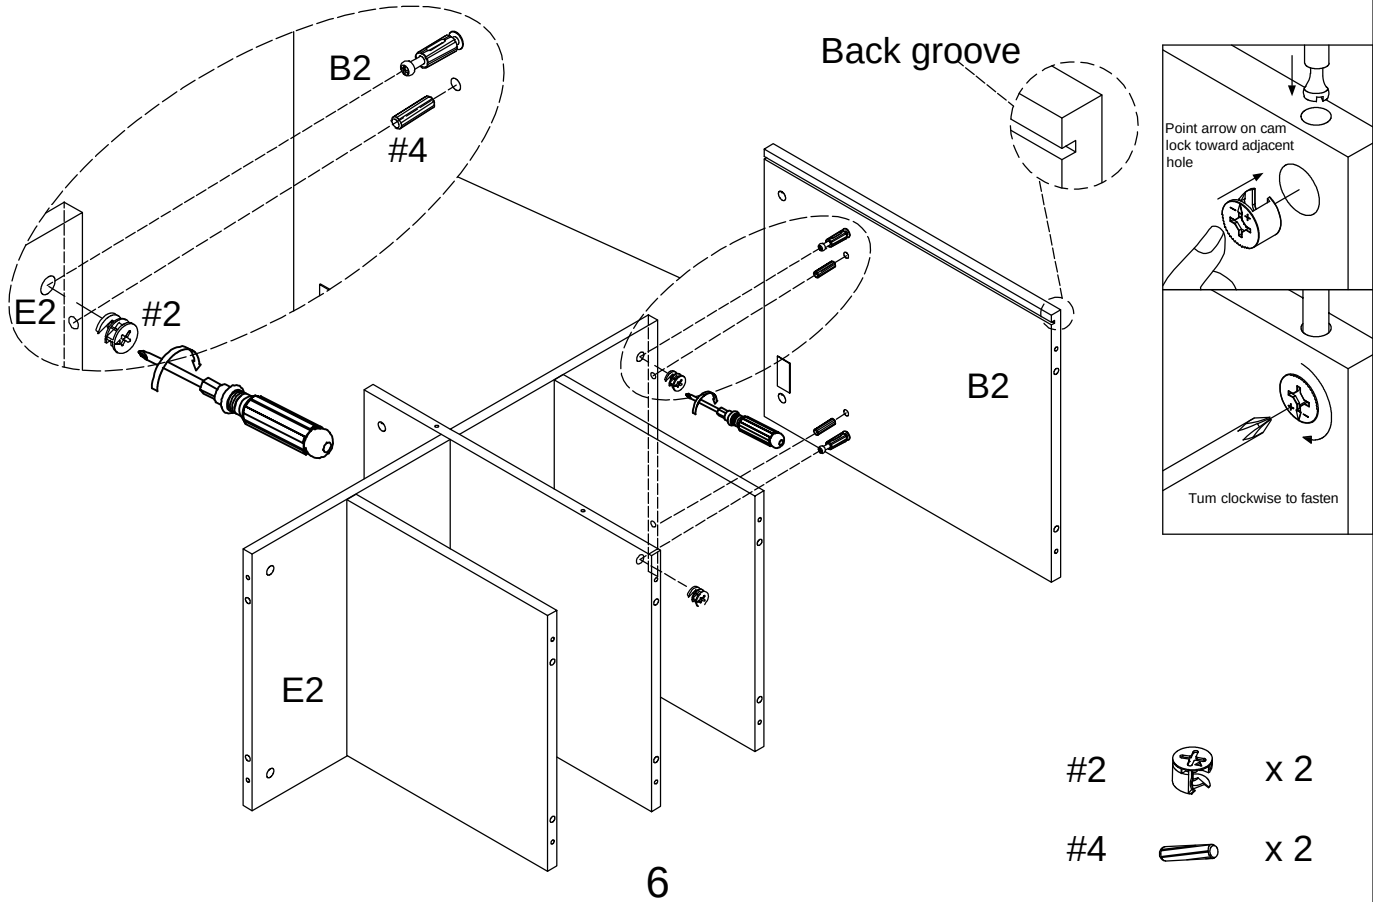

 
Step 7. Attach right panel (part C2) to fixed shelf panel (part E2) using cam locks (part #2), wood dowels (part #4) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

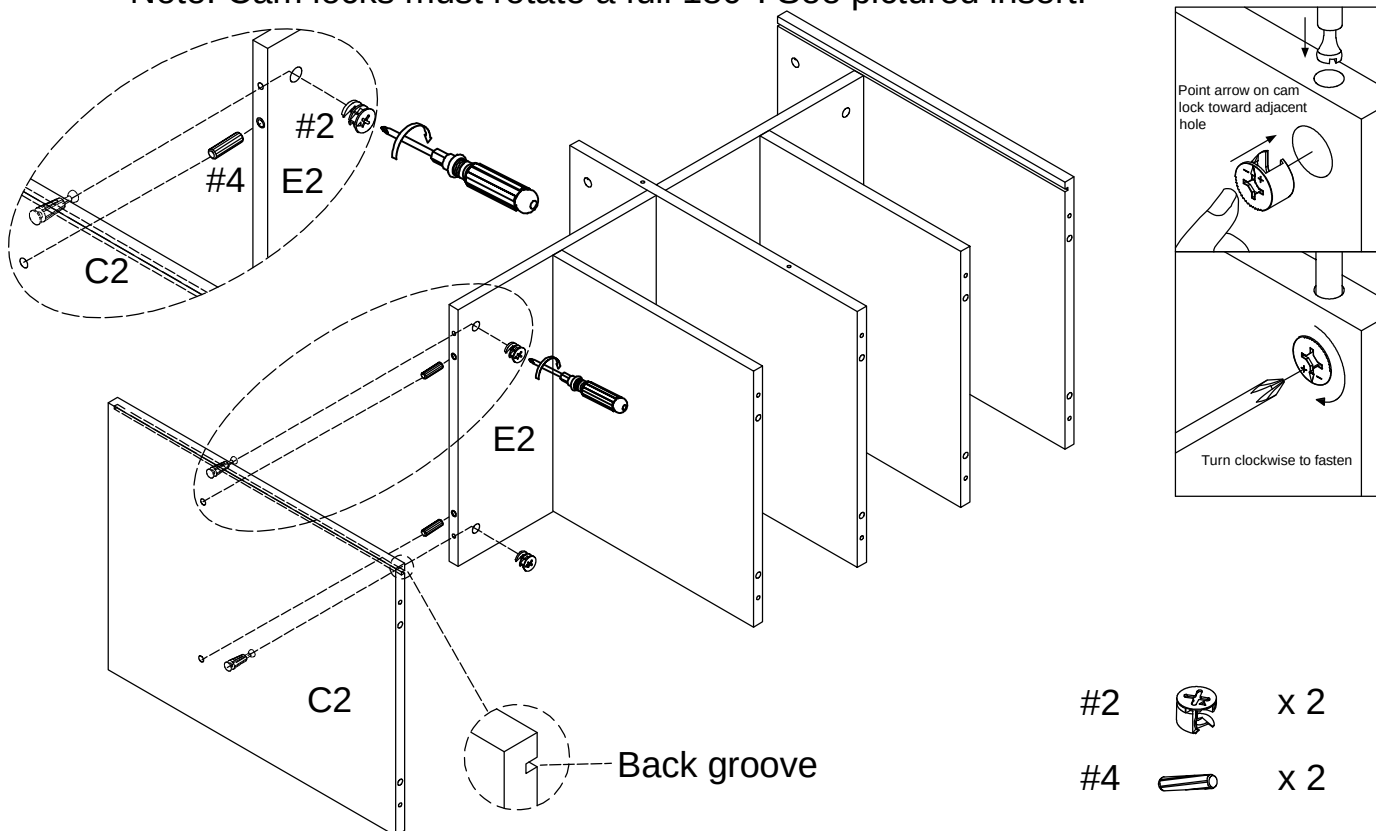

 
Step 8. Attach top panel (part A2) to assembled unit (parts B2, C2 & F2) using cam locks (part #2), wood dowels (part #4) and phillips head screwdriver.
 Note: Cam locks must rotate a full 180°. See pictured insert.

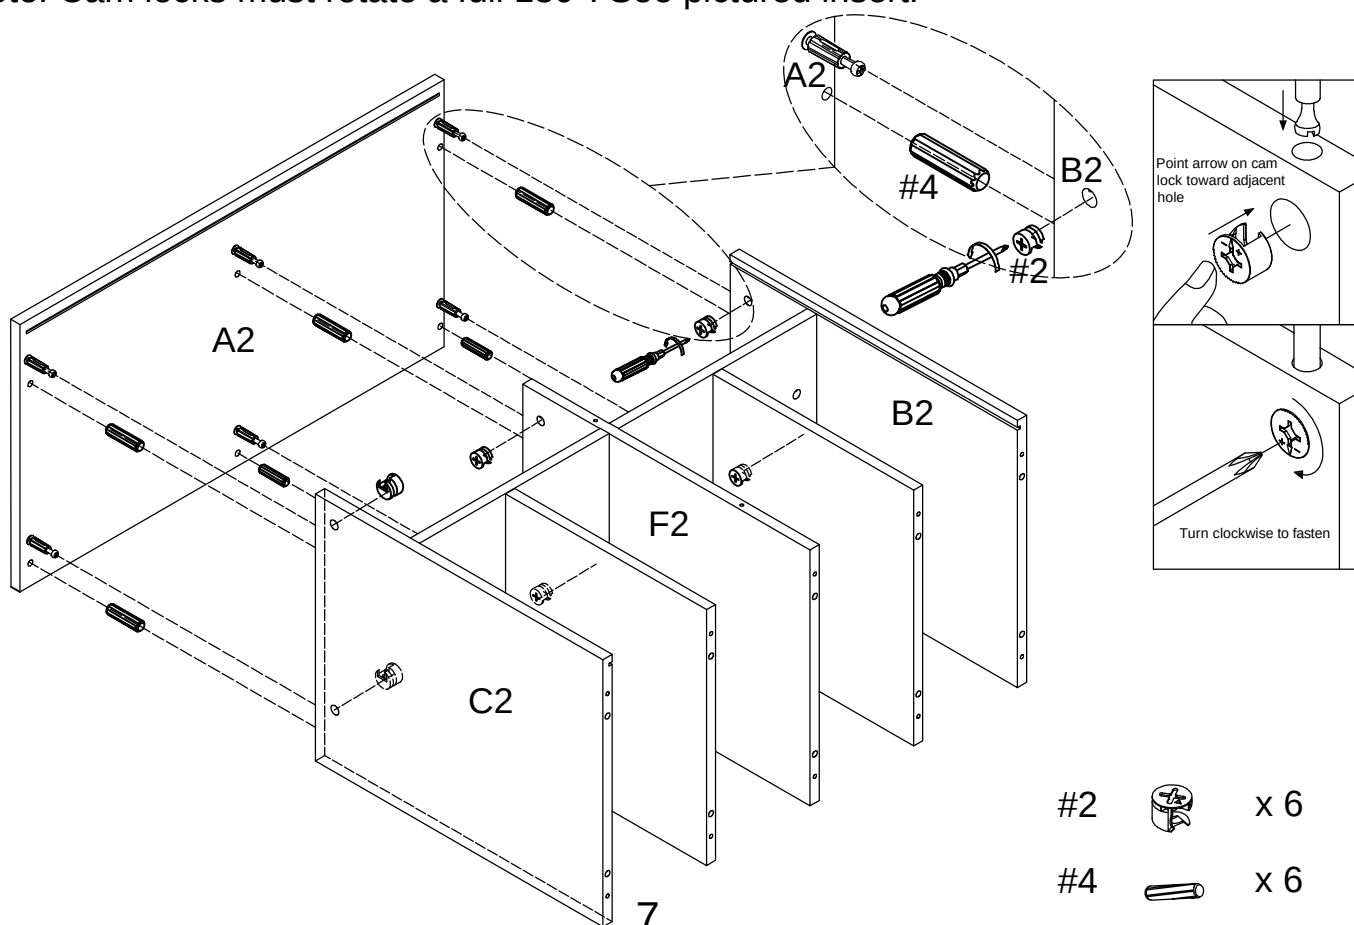

 Step 9. Carefully turn assembled unit upright. Insert back panels (parts H2 & I2) into grooves of assembled unit (parts A2, B2 & C2).

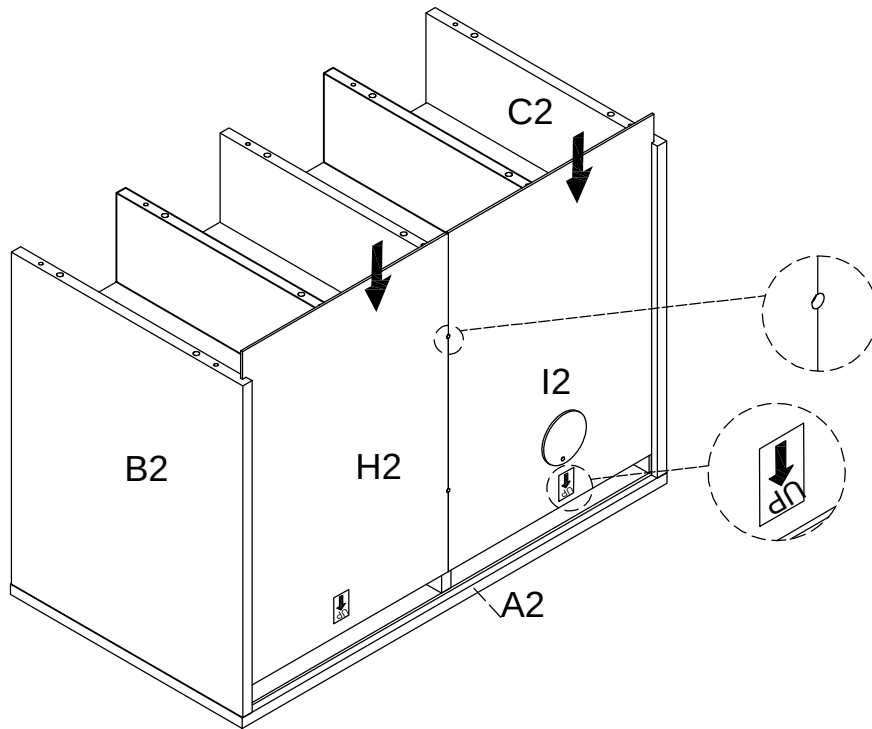


 Step 10. Attach bottom panel (part D2) to assembled unit (parts B2, C2, F2 & G2) using wood dowels (part #4), tapping screws (part #5) and allen wrench (part #12).

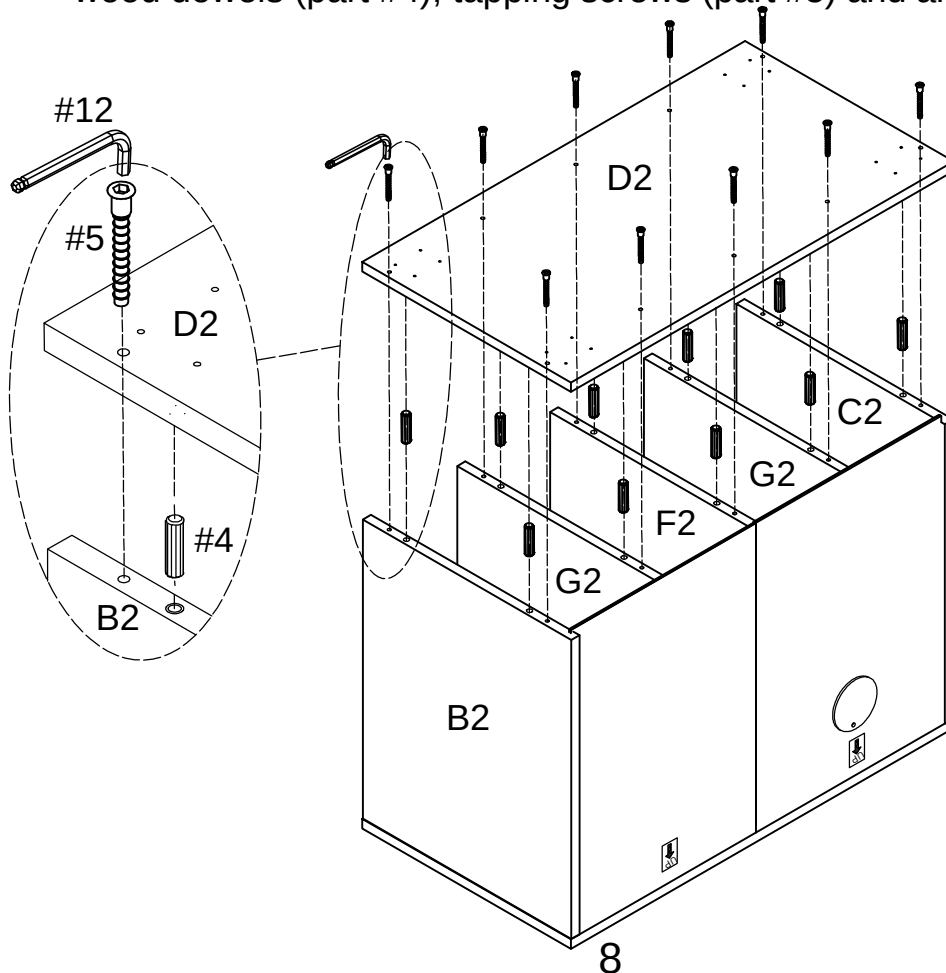


- | | | |
|-----|---|------|
| #4 |  | x 10 |
| #5 |  | x 10 |
| #12 |  | x 1 |


 
Step 11. Attach locking casters (part K) and casters (part L) to bottom panel (part D2) using short screws (part #8) and phillips head screwdriver.

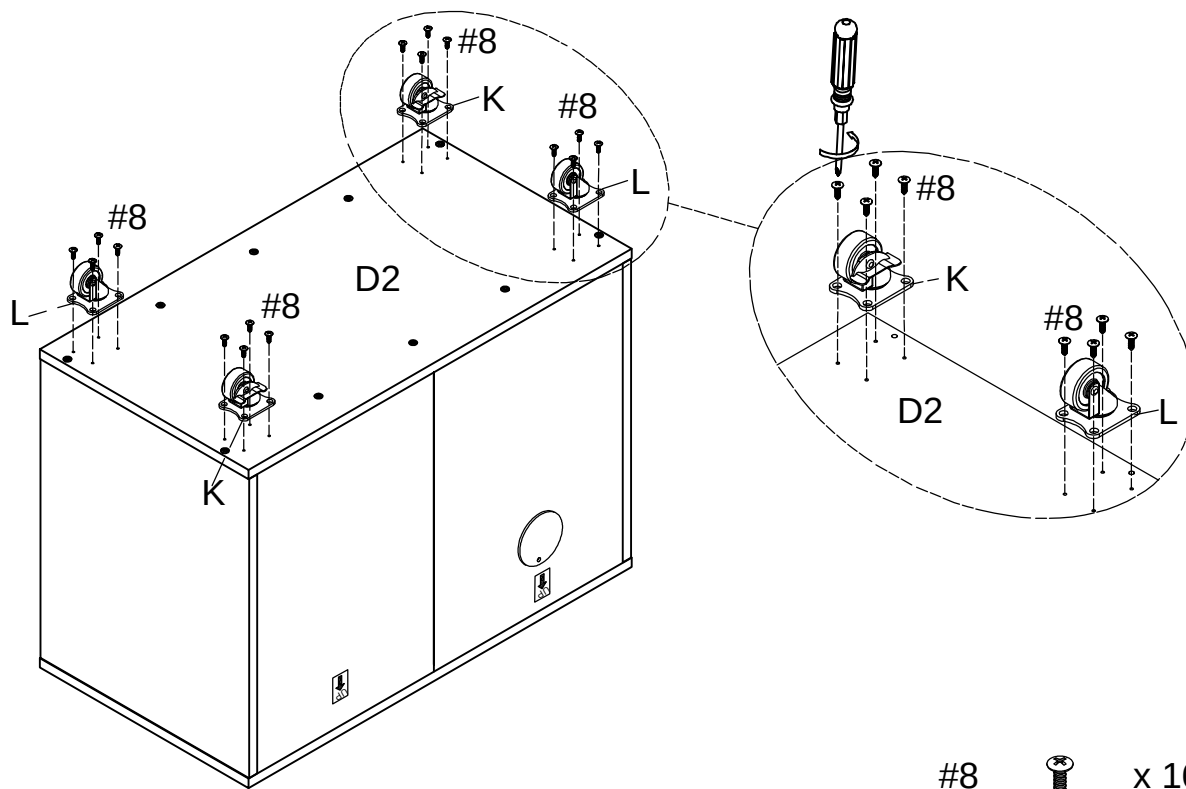

 Step 12. Carefully turn unit upright. Secure back brackets (part #6) at the corner of back panels (parts H2 & I2) using long screws (part #7) and phillips head screwdriver. Secure back panels (parts H2 & I2) using medium screws (part #9) and phillips head screwdriver.

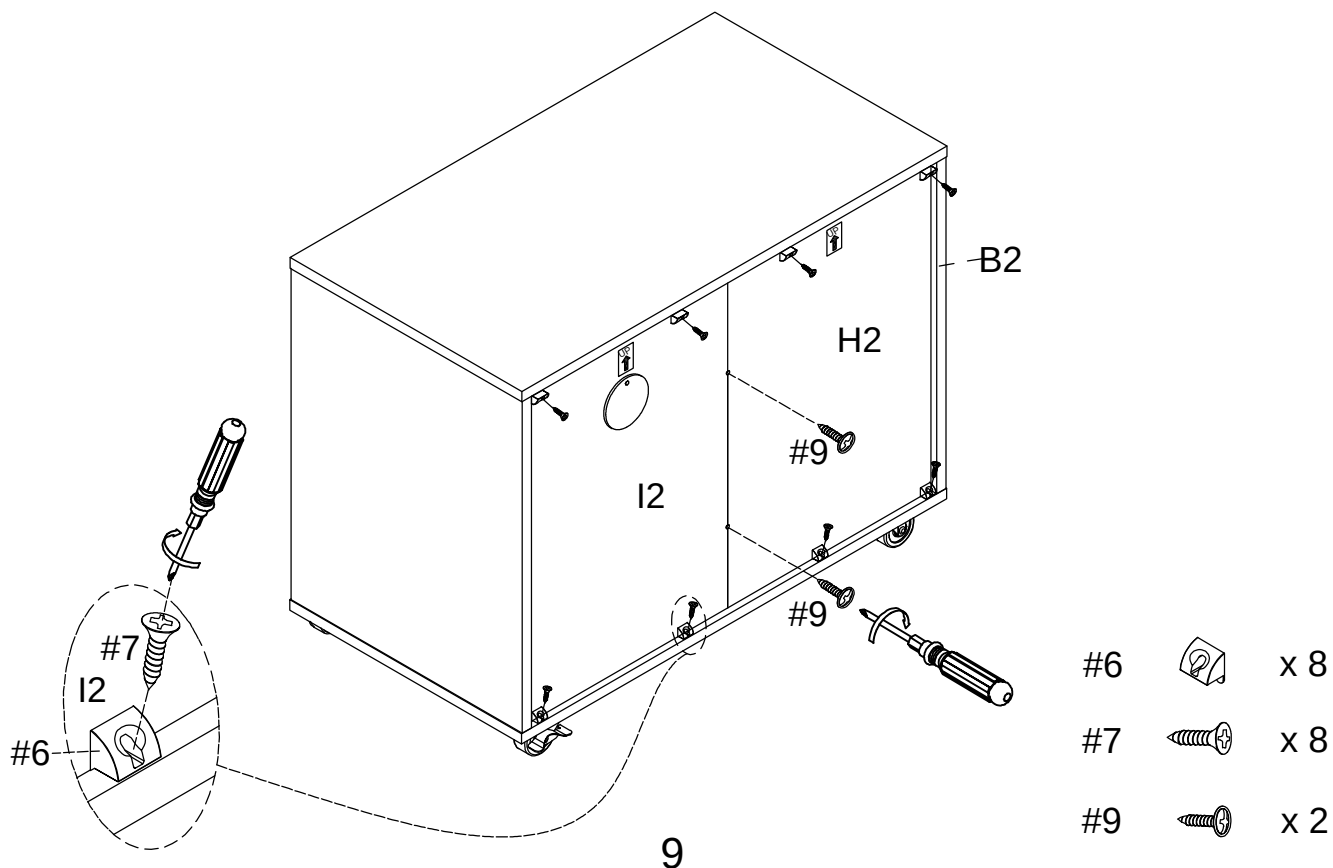

  Step 13. Using cam stickers (part #3) cover all cam locks (part #2).

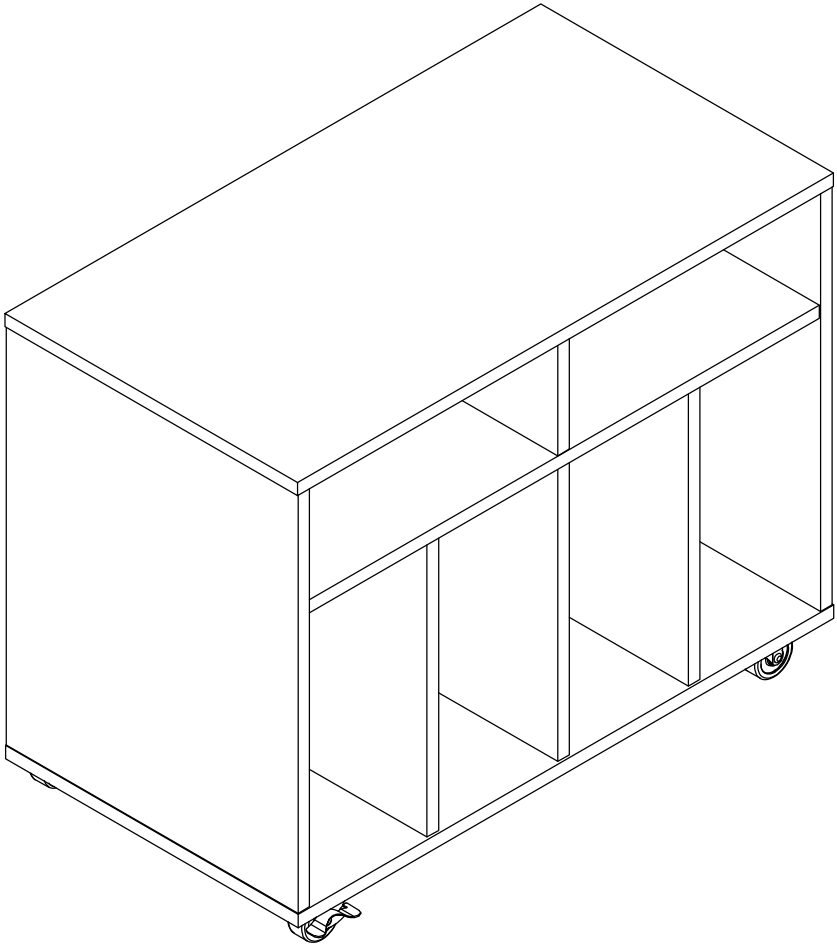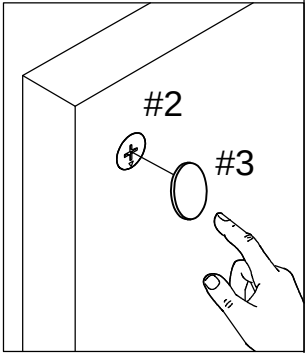

#3  x 14