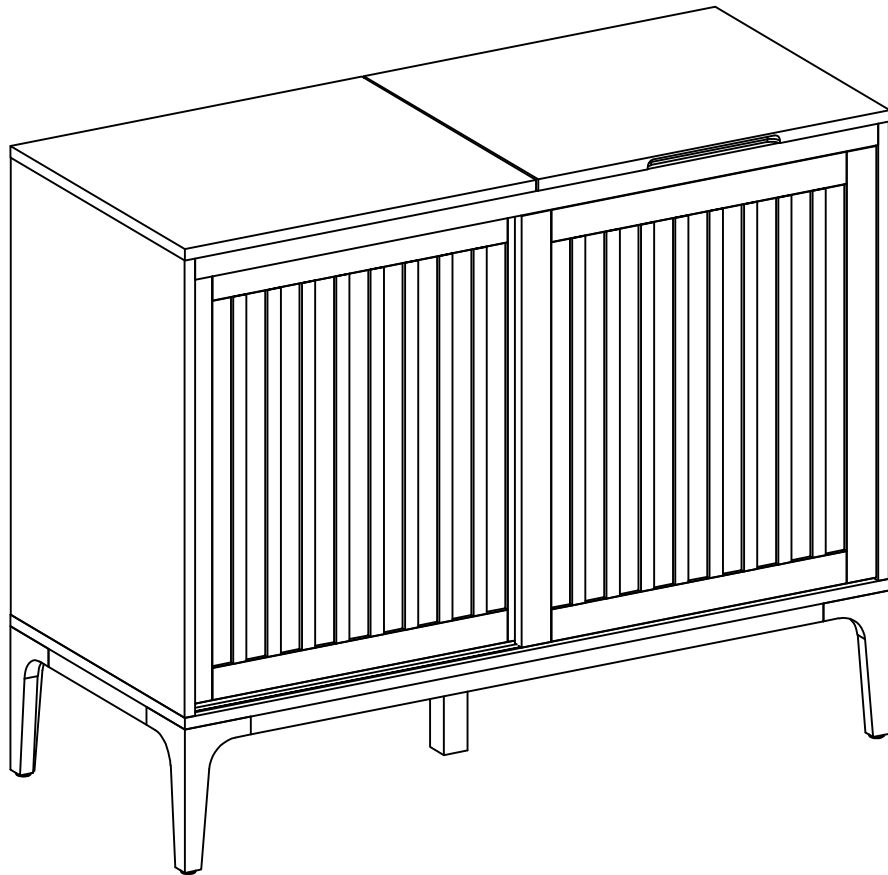
















CROSLEY
FURNITURE

Media Console








CF1140



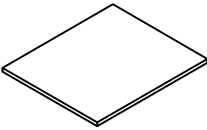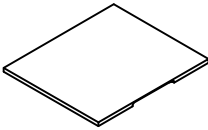     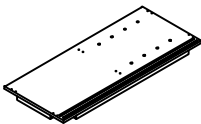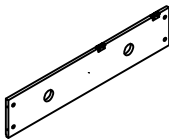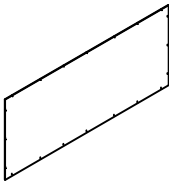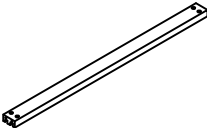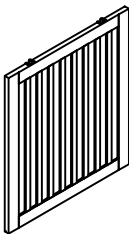 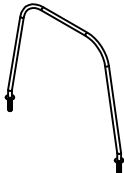PART LIST

A 	B 	C 	D2 	E 
Left Top Panel 1 PC	Right Top Panel 1 PC	Left Panel 1 PC	Dividing Panel 1 PC	Right Panel 1 PC
F2 	G2 	H3 	I3 	J2 
Adjustable Shelf 2 PCS	Fixed Shelf 1 PC	Bottom Panel 1 PC	Back Rail 1 PC	Back Panel 1 PC
K 	L2 	M 	N 	O2 
Top Rail 1 PC	Door 2 PCS	Leg 4 PCS	Support Leg 1 PC	Metal Wire 4 PCS
P  Cover 2 PCS				

      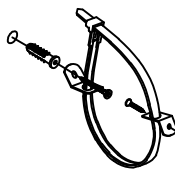HARDWARE LIST

#1  Ø1/4"*25mm Short Bolt 12 PCS (Extra 1)	#2  Ø1/4"*51mm Long Bolt 6 PCS (Extra 1)	#3  Ø1/4"*11mm Spring Washer 18 PCS (Extra 1)	#4  Ø1/4"*13mm Flat Washer 18 PCS (Extra 1)	#5  Barrel Nut 6 PCS (Extra 1)
#6  Hex Nut 8 PCS (Extra 1)	#7  Ø8*30mm Wood Dowel 20 PCS (Extra 1)	#8  6*3*12mm Short Screw 8 PCS (Extra 1)	#9  Spring Hinge 1 PC	#10  8*3*15mm Round Head Screw 20 PCS (Extra 1)
#11  4mm*90 Allen Wrench 1 PC	#12  Wrench 1 PC	#13  Shelf Holder 8 PCS (Extra 1)	#14  8*4*25 Long Screw 1 PC	#15  Cam Bolt 8 PCS (Extra 1)
#16  Cam Lock 8 PCS (Extra 1)	#17  5/32"*15mm Round Head Bolt 2 PCS (Extra 1)	#18  Safety Strap Kit 1 SET		

ADDITIONAL TOOLS (Not Provided)

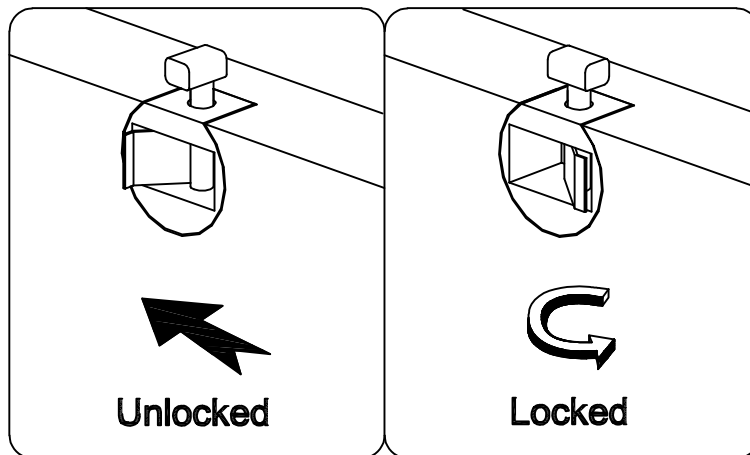
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Please do not use tools to assemble this unit unless specifically indicated.



Reference the images above any time the instructions state "lock the hardware"

Note: Be sure to check all hardware is locked when completed.

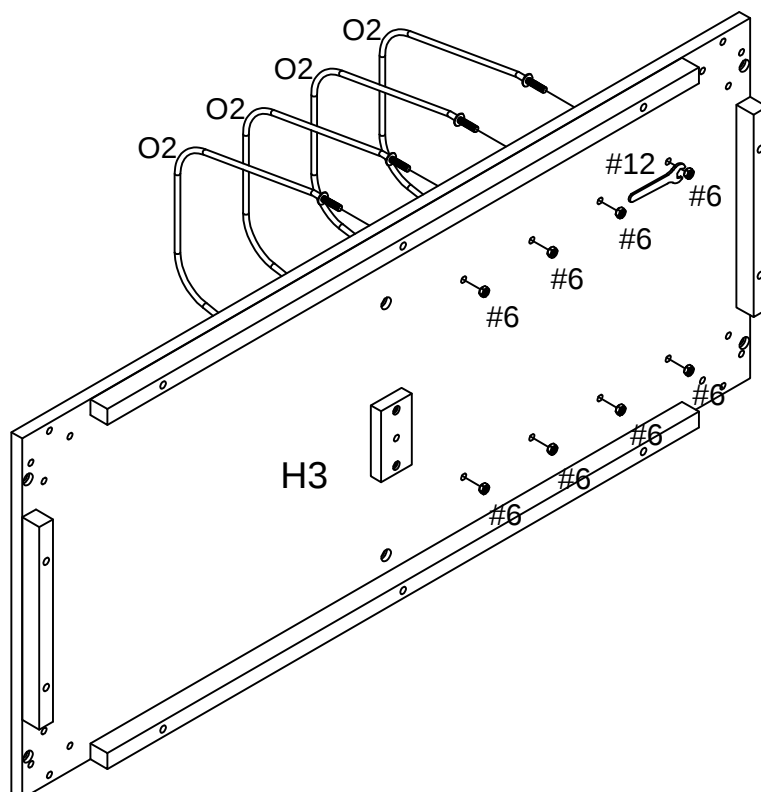
Step 1. Attach metal wires (part O2) to bottom panel (part H3) using hex nuts (part #6) and wrench (part #12).



#6  x 8
#12  x 1


Step 2. Insert cam bolts (part #15) into left panel (part C) and right panel (part E) using phillips head screwdriver.

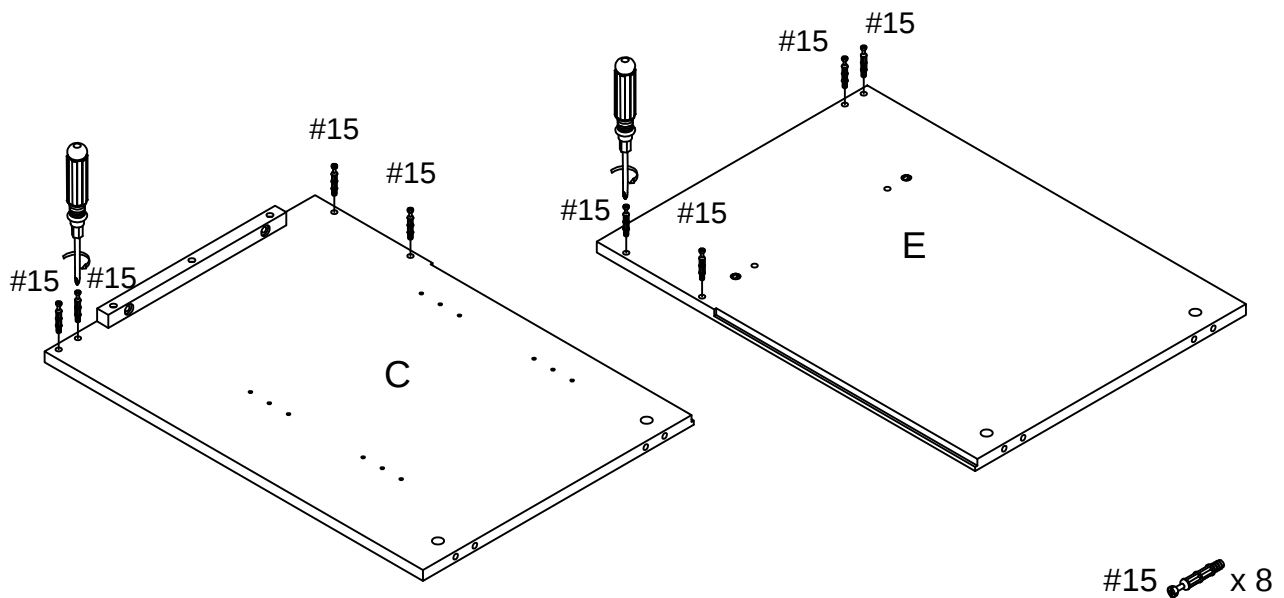NOTE: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




Step 3. Attach back rail (part I3) to right panel (part E) using cam locks (part #16) and phillips head screwdriver.

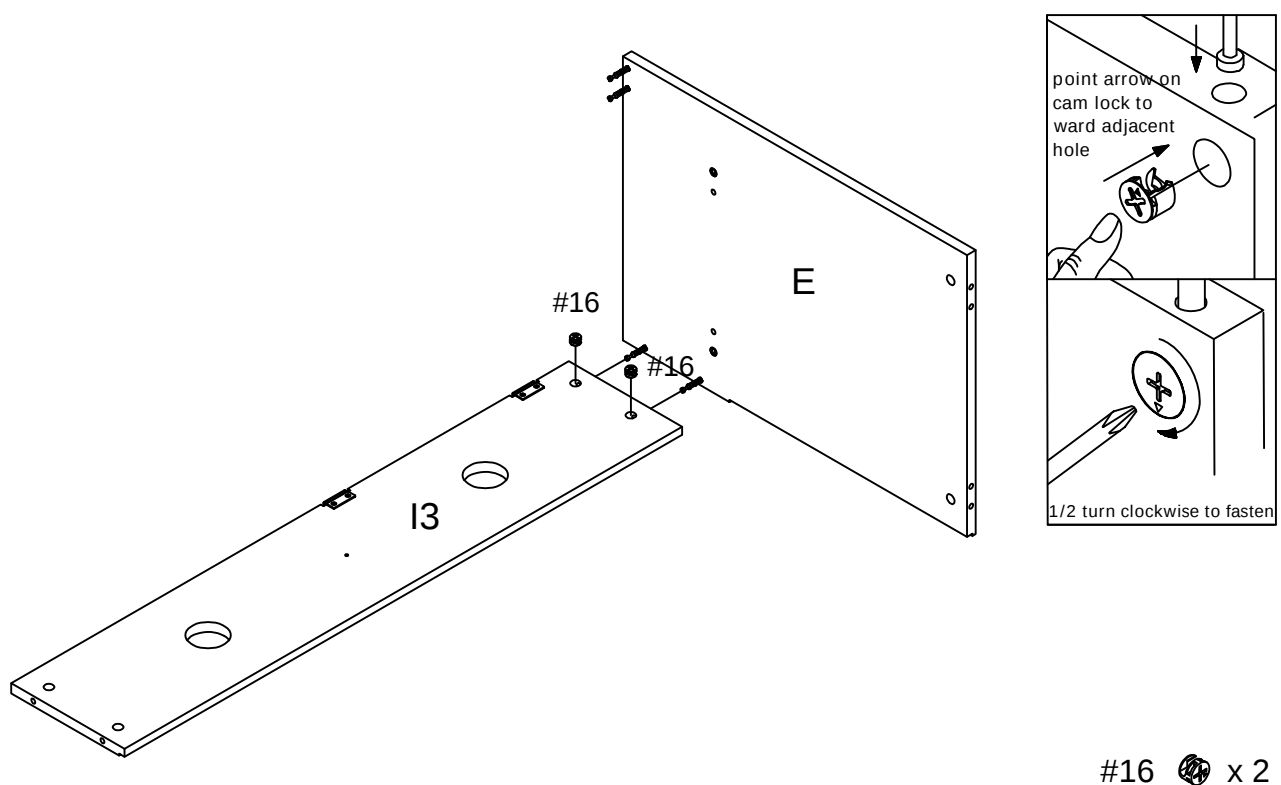NOTE: Cam locks must rotate full 180°. See pictured insert.




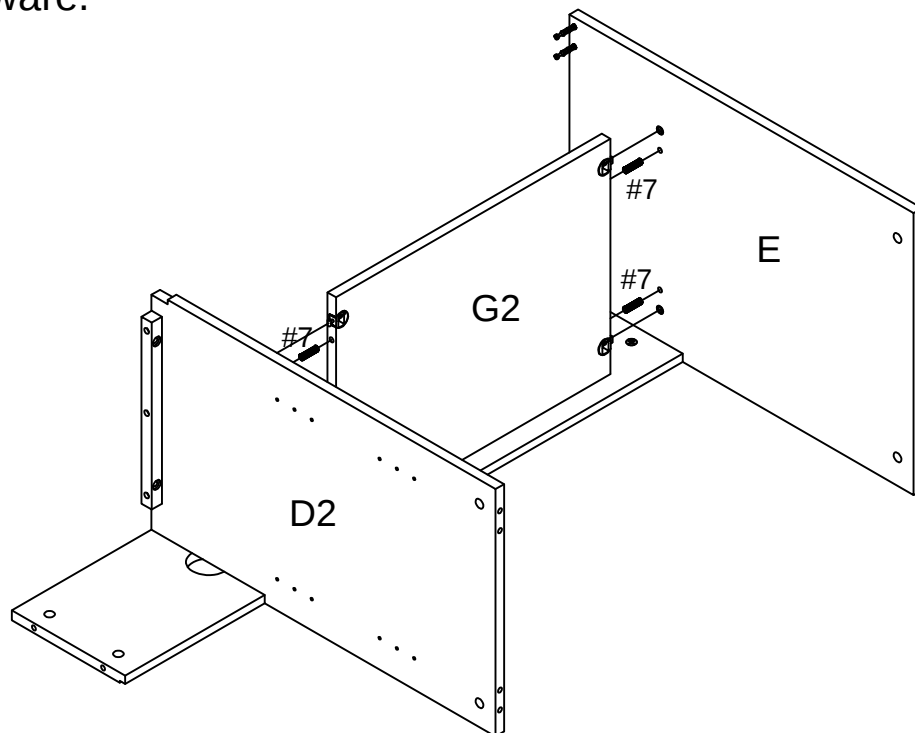
Step 4. Attach fixed shelf (part G2) to dividing panel (part D2) and right panel (part E) using wood dowels (part #7) and lock the hardware.



#7  x 4


Step 5. Attach top rail (part K) to right panel (part E) and left panel (part C) to assembled unit (parts I3 & K) using cam locks (part #16) and phillips head screwdriver.

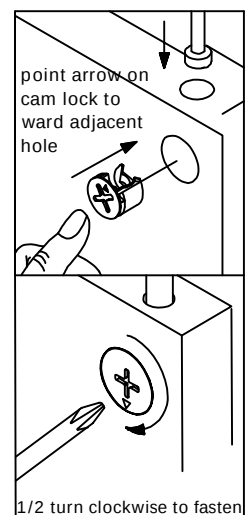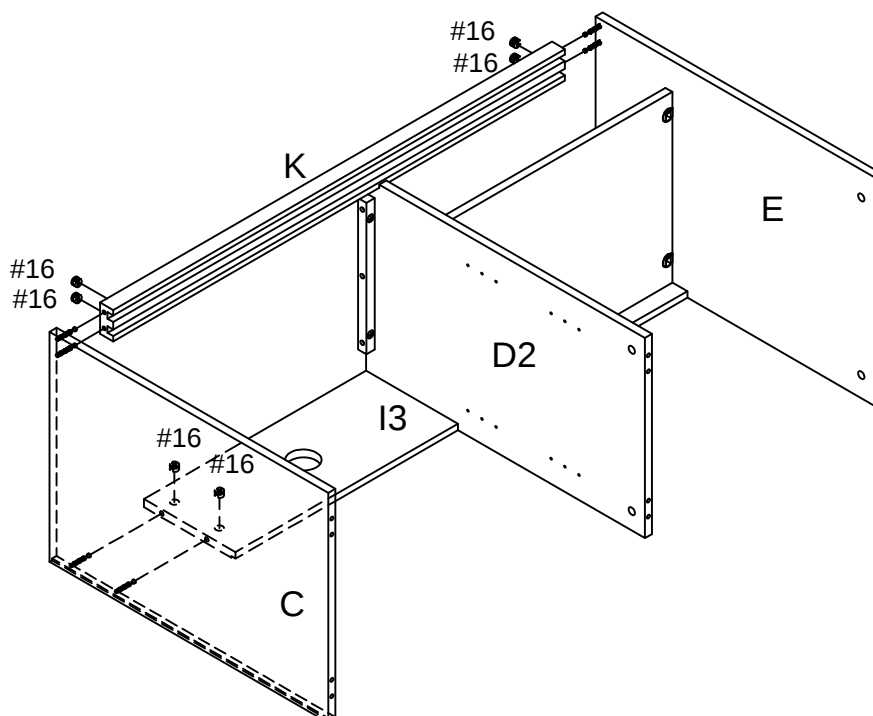NOTE: Cam locks must rotate full 180°. See pictured insert.




#16  x 6

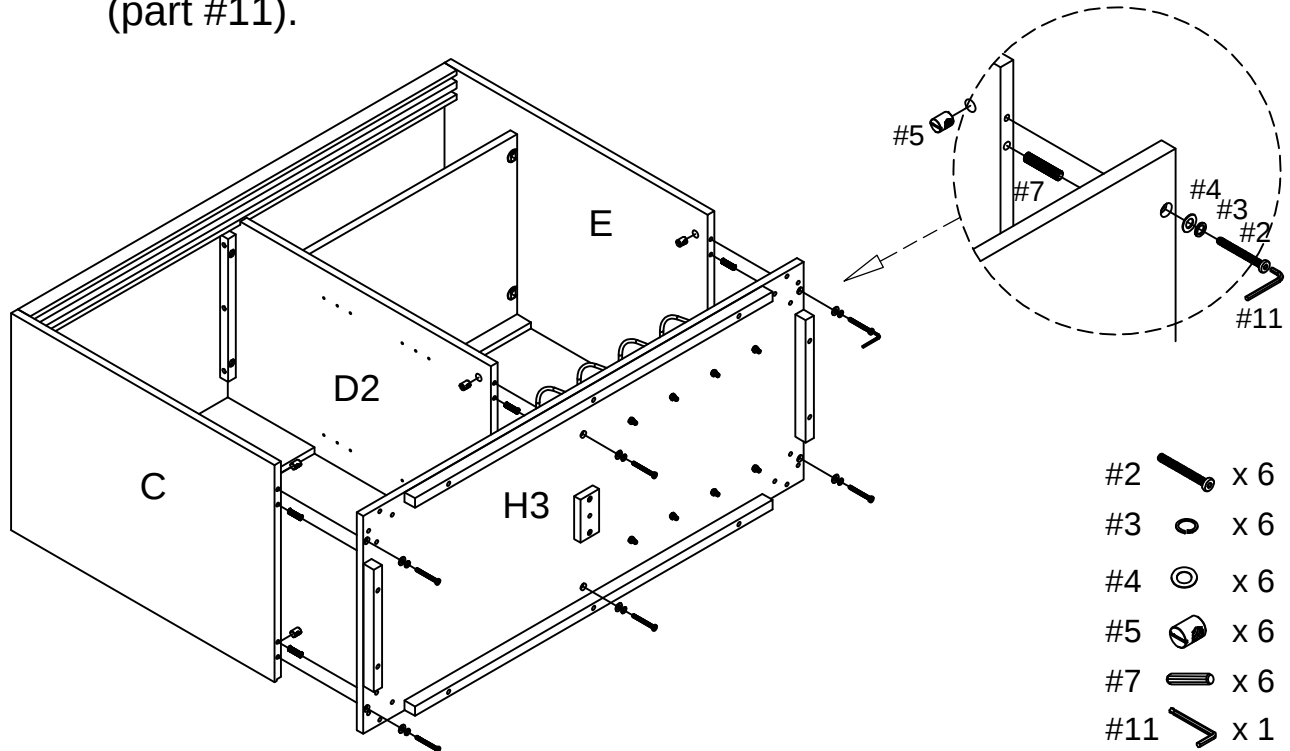
Step 6. Attach bottom panel (part H3) to panels (parts C, D2 & E) using wood dowels (part #7), long bolts (part #2), barrel nuts (part #5), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).



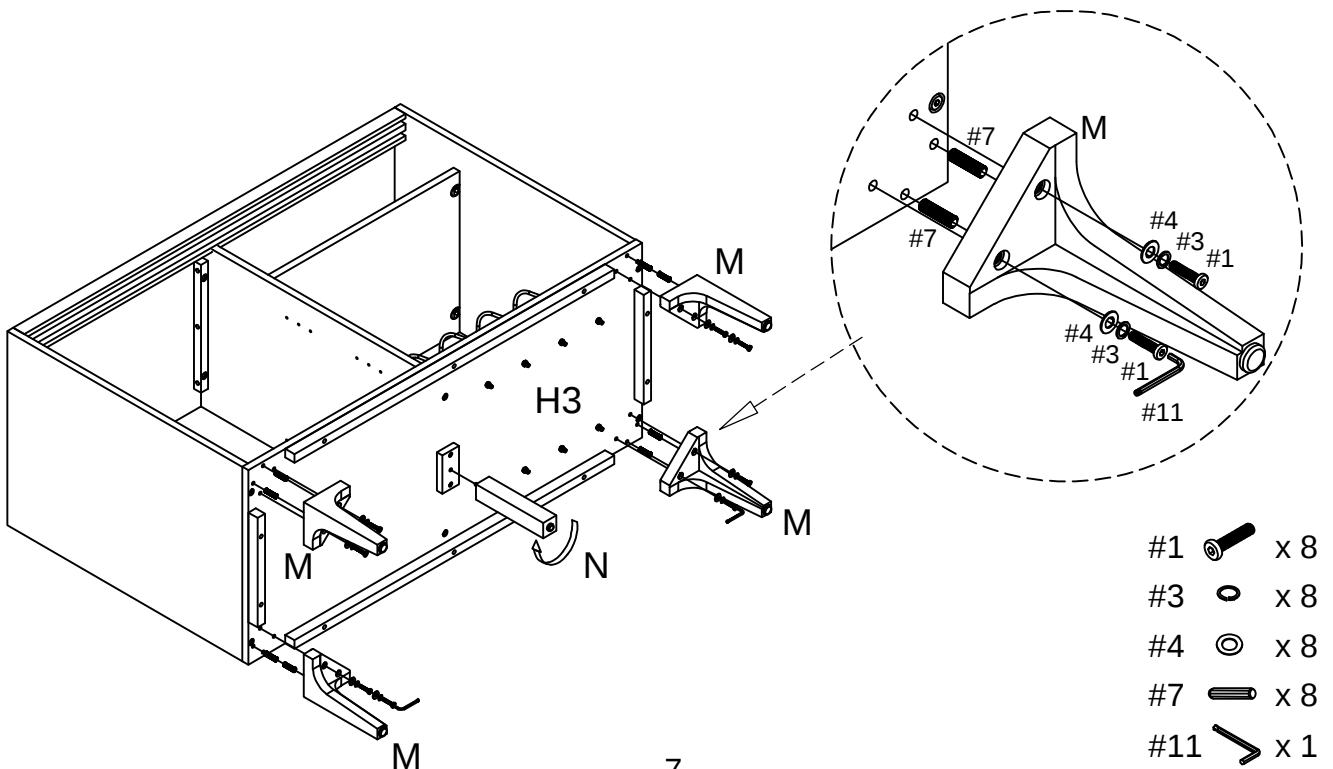Step 7. Attach legs (part M) to bottom panel (part H3) using wood dowels (part #7), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).
Attach support leg (part N) to bottom panel (part H3).



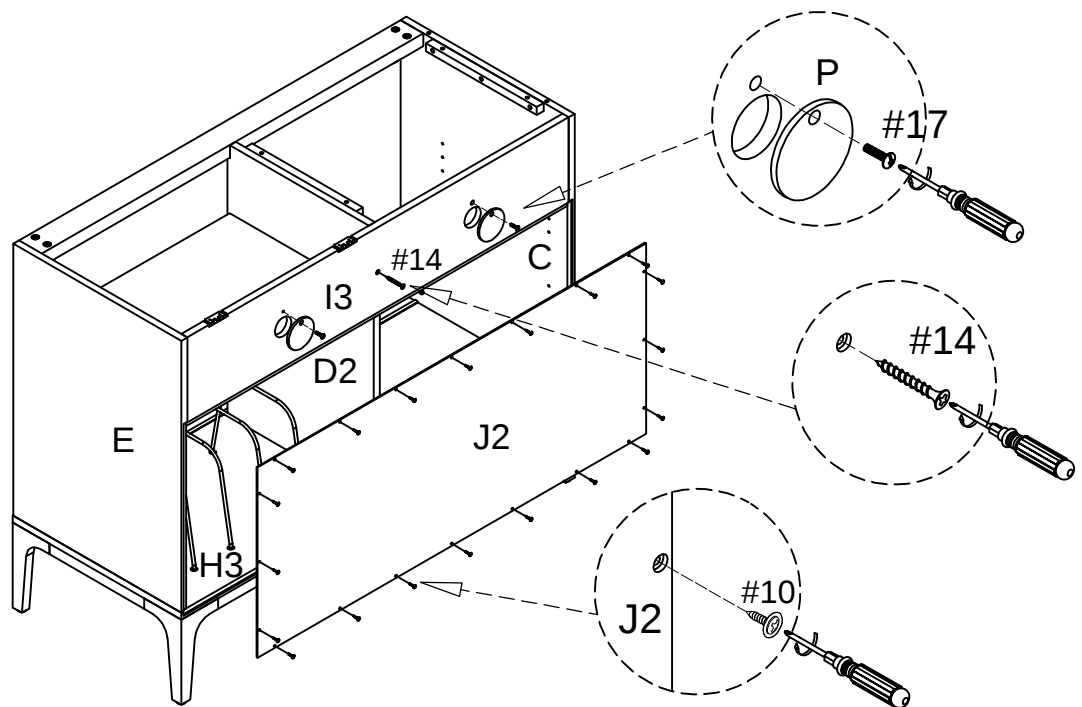Step 8. Carefully turn unit upright. Attach back panel (part J2) to assembled unit (parts C, E, H3 & I3) using round head screws (part #10) and phillips head screwdriver.
 Fix back rail (part I3) to dividing panel (part D2) using long screw (part #14) and phillips head screwdriver.
 Attach covers (part P) to fix back rail (part I3) using round head screws (part #17) and phillips head screwdriver.




#10  x 20

#14  x 1


#17  x 2

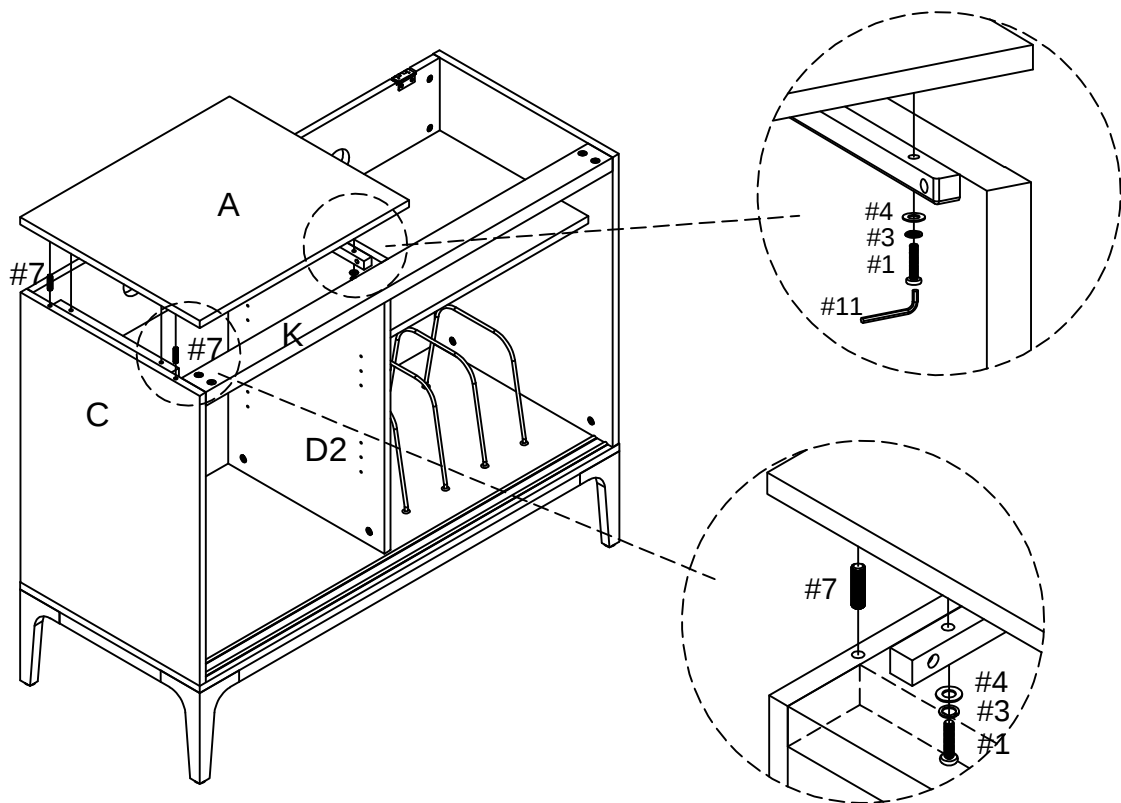Step 9. Attach left top panel (part A) to assembled unit (parts C, D2 & K) using wood dowels (part #7), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).




- #1  x 4
- #3  x 4
- #4  x 4
- #7  x 2
- #11  x 1

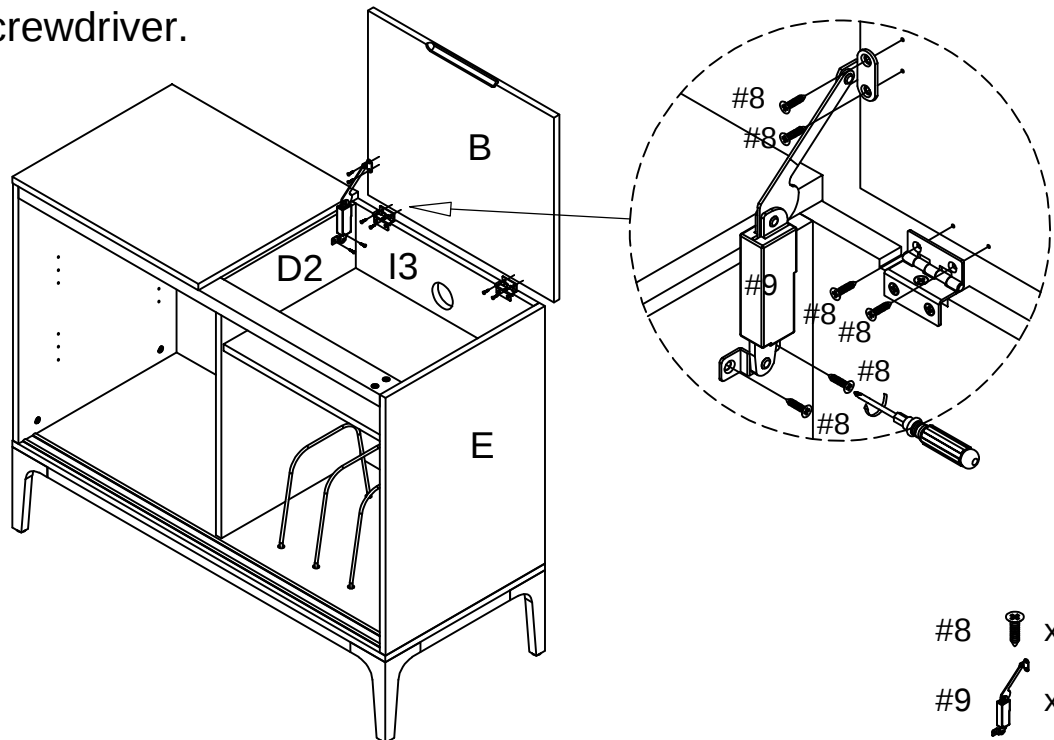Step 10. Attach right top panel (part B) to back rail (part I3) using short screws (part #8) and phillips head screwdriver. Then attach right top panel (part B) to dividing panel (part D2) using spring hinge (part #9), short screws (part #8) and phillips head screwdriver.




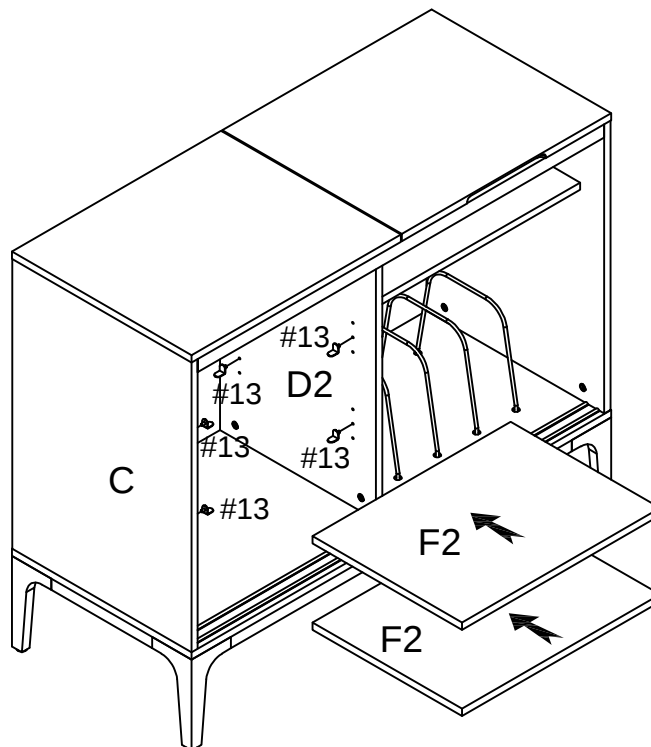Step 11. Insert shelf holders (part #13) into desired position and slide adjustable shelves (part F2) into place.



#13 x 8

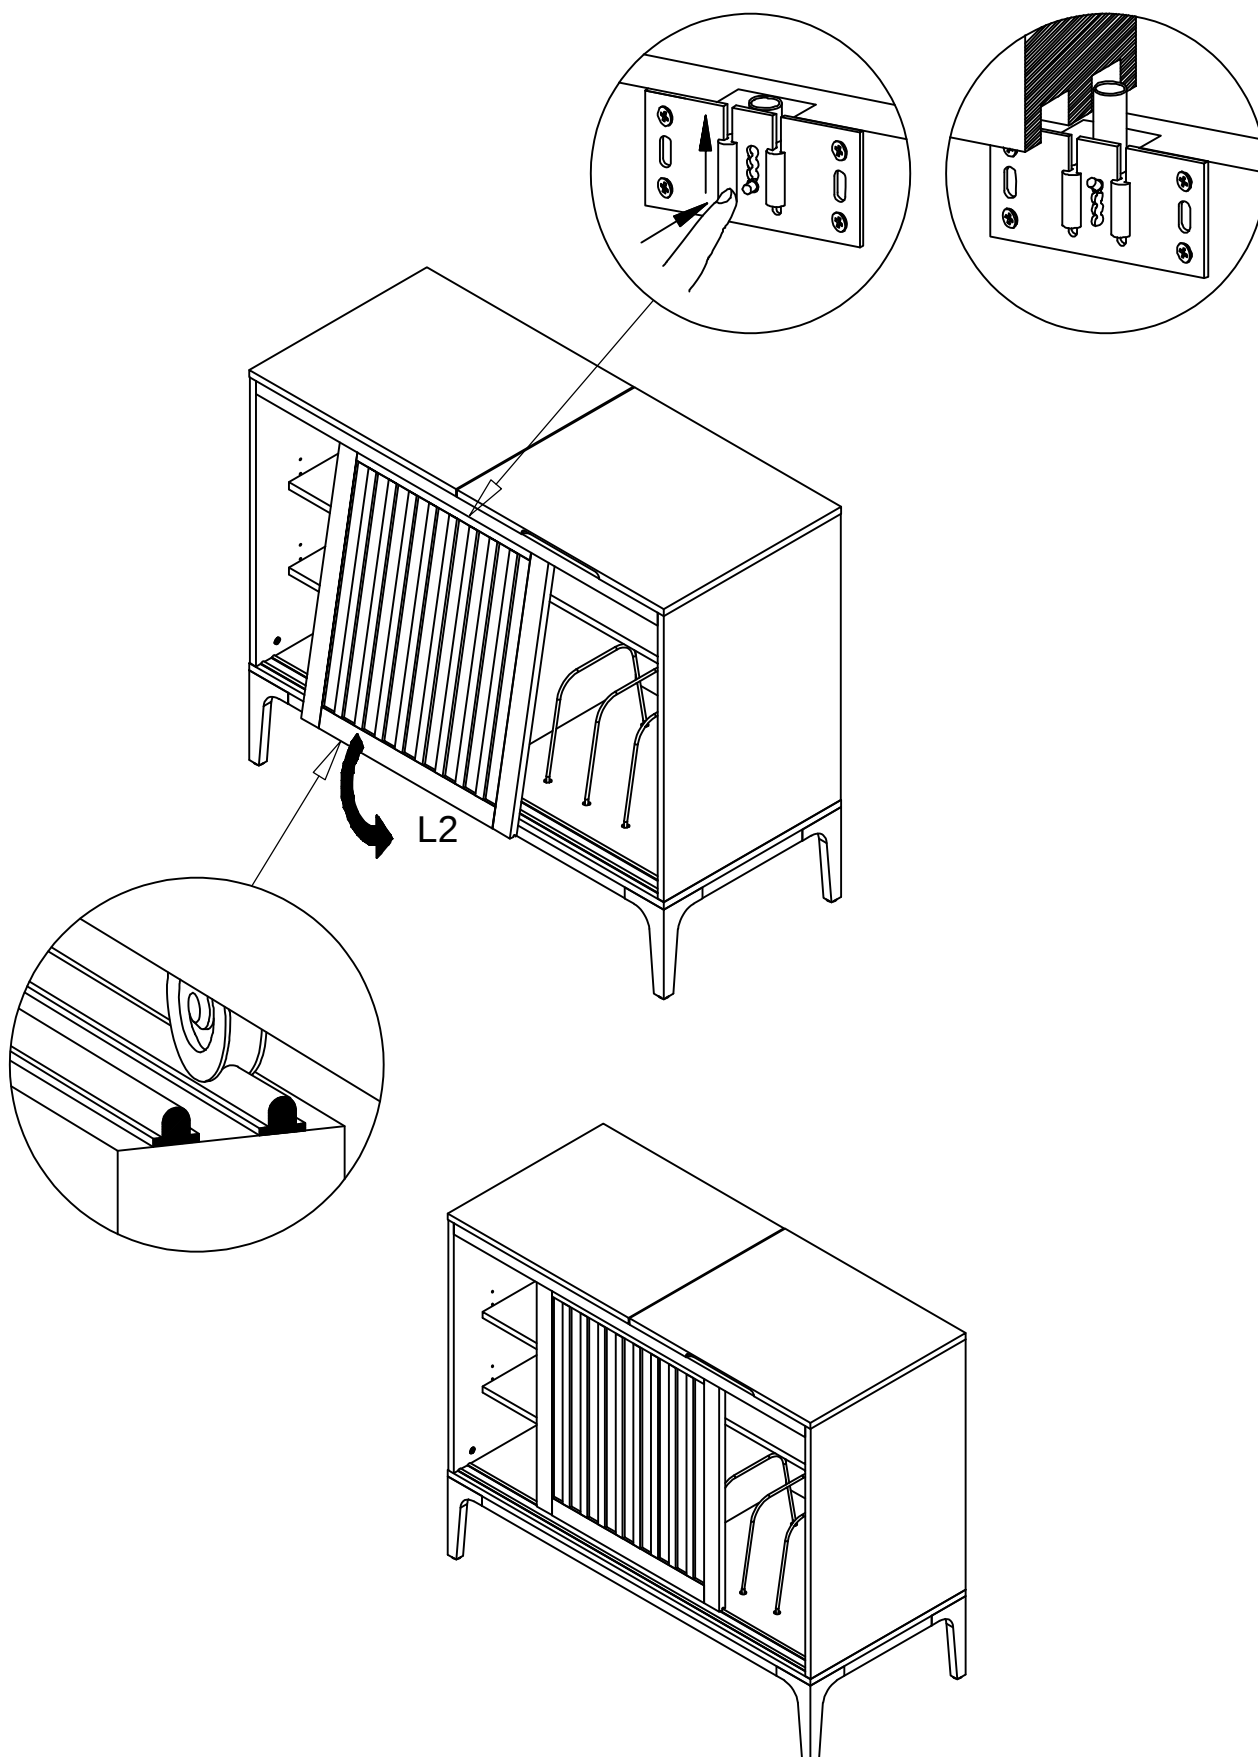
Step 12. Press the door pins up, then install door (part L2) to inner runners of pre-assembled unit as shown.




Step 13. Press the door pins up, then install door (part L2) to outer runners of pre-assembled unit as shown.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

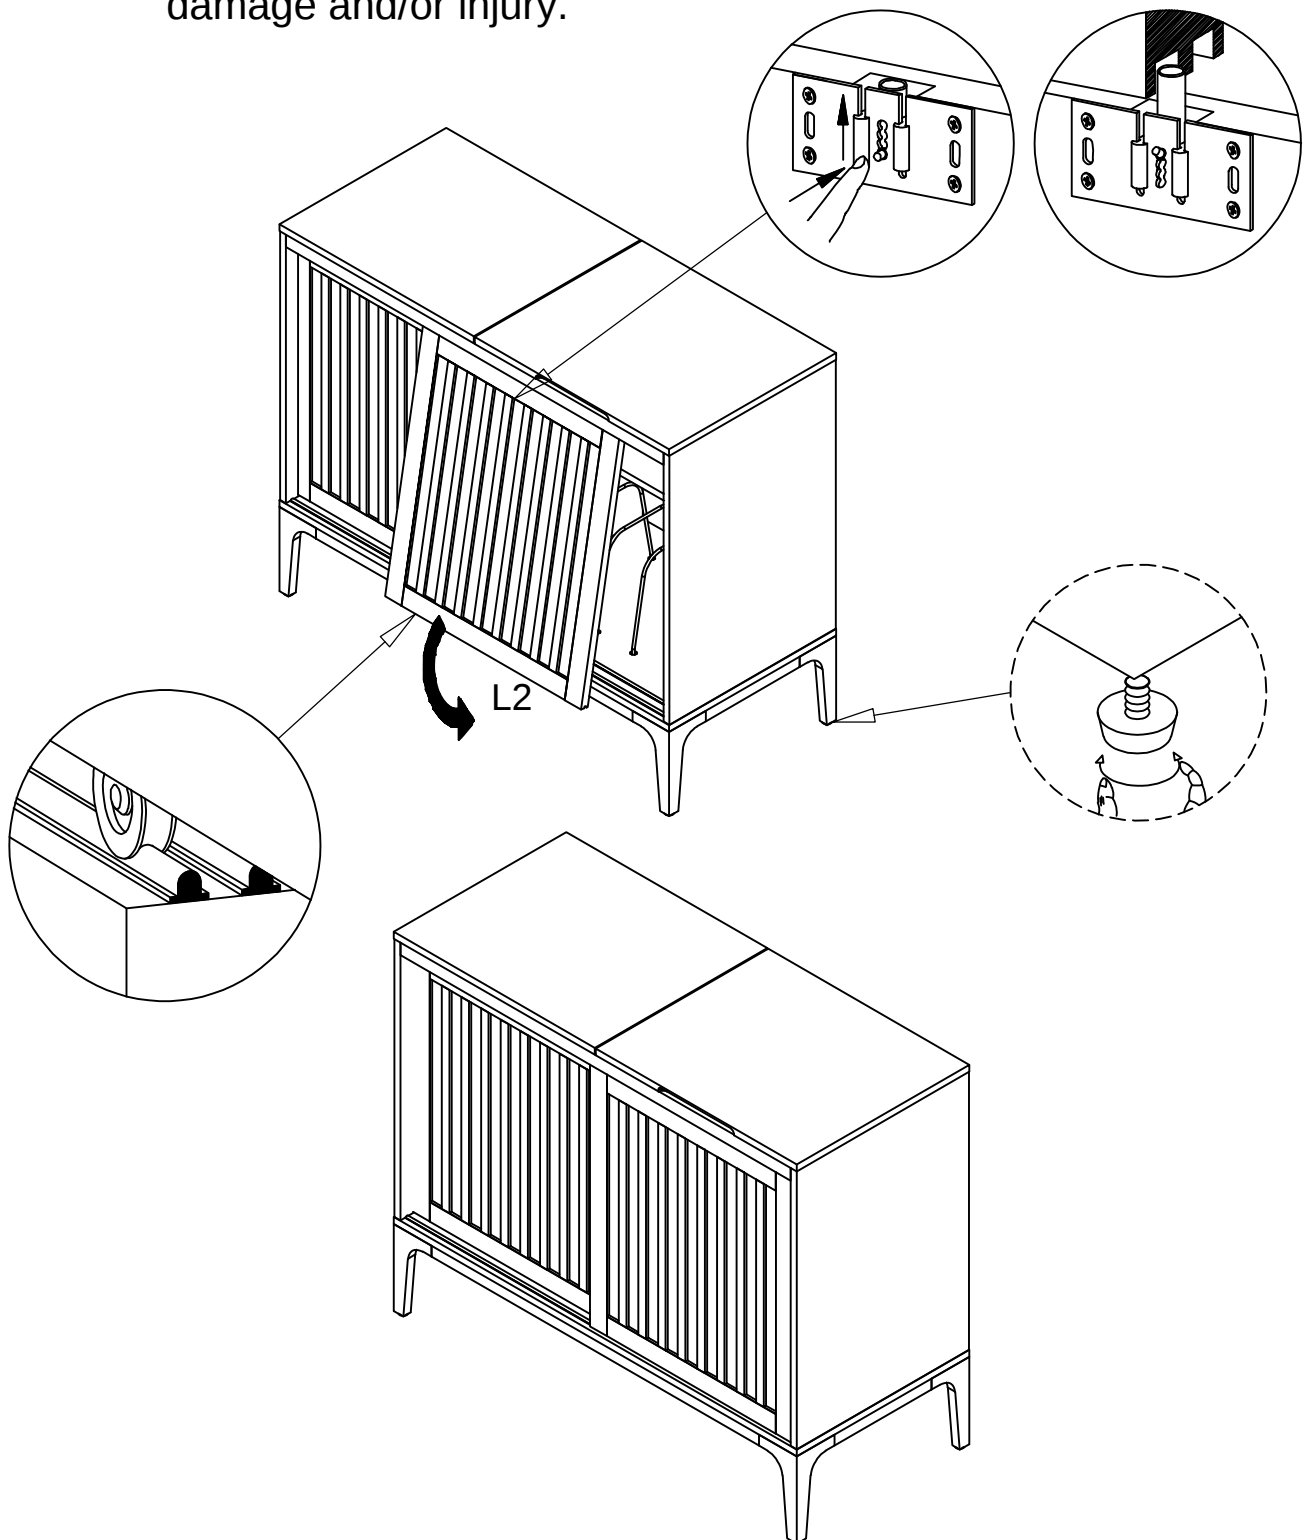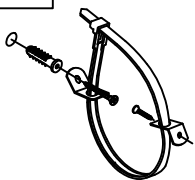Important: Safety strap kit (part #18) must be installed to prevent tipping, damage and/or injury.




#18	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	8*3*15mm Short Screw 1 PC	8*4*35mm Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to left top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in left top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

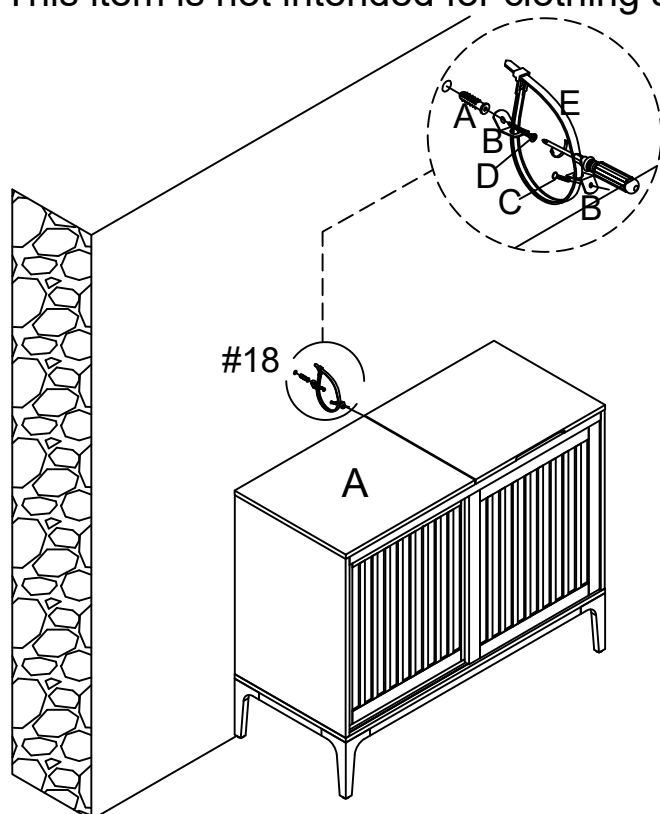Note: This item is not intended for clothing storage use.



⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!