 
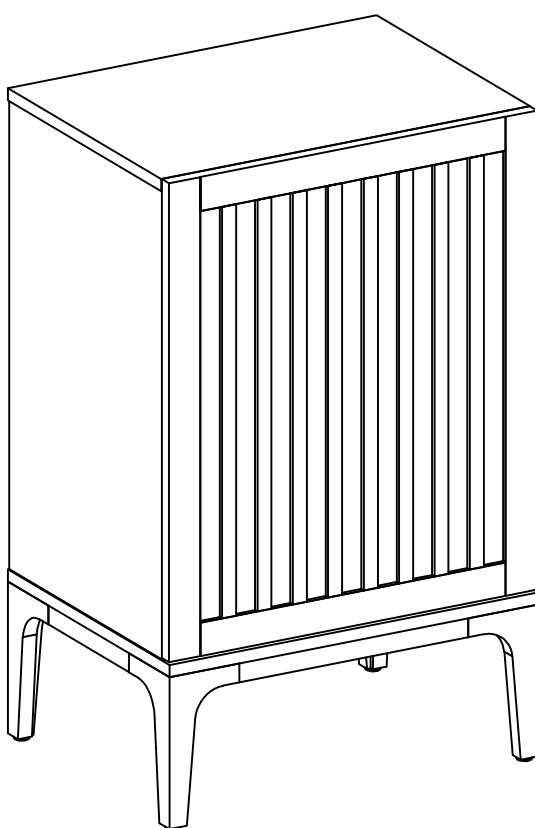 
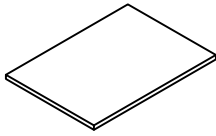 
 
 
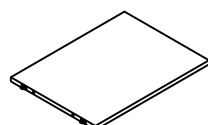 
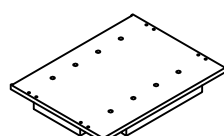 
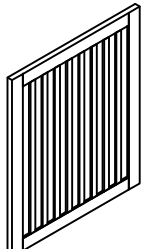 
 


CROSLEY
FURNITURE







Record Player Stand
CF1141

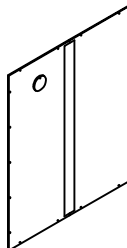

PART LIST


A		B		C		D2		E3	
Top Panel		Left Panel		Right Panel		Fixed Shelf		Bottom Panel	
1 PC		1 PC		1 PC		1 PC		1 PC	
F		G		H3		I2		J	
Door		Leg		Back Panel		Metal Wire		Cover	
1 PC		4 PCS		1 PC		4 PCS		1 PC	

      HARDWARE LIST
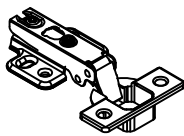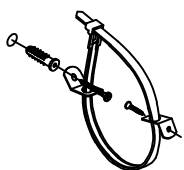
#1  Ø1/4"*25mm Short Bolt 12 PCS (Extra 1)	#2  Ø1/4"*51mm Long Bolt 4 PCS (Extra 1)	#3  Ø1/4"*11mm Spring Washer 16 PCS (Extra 1)	#4  Ø1/4"*13mm Flat Washer 16 PCS (Extra 1)	#5  Barrel Nut 4 PCS (Extra 1)
#6  Hex Nut 8 PCS (Extra 1)	#7  Ø8*30mm Wood Dowel 20 PCS (Extra 1)	#8  7*3.5*12mm Short Screw 12 PCS (Extra 1)	#9  Door Hinge 2 PCS	#10  8*3*15mm Round Head Screw 18 PCS (Extra 1)
#11  4mm*90 Allen Wrench 1 PC	#12  Wrench 1 PC	#13  Binding Post 1 SET (Extra 1)	#14  M2 Small Allen Wrench 1 PC	#15  Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Please do not use tools to assemble this unit unless specifically indicated.

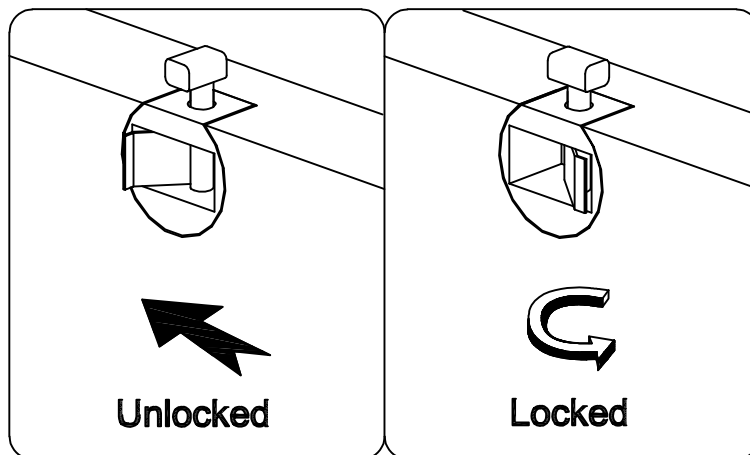


Reference the images above any time the instructions state "lock the hardware"

Note: Be sure to check all hardware is locked when completed.

 Please adjust hinges as needed for proper door alignment.

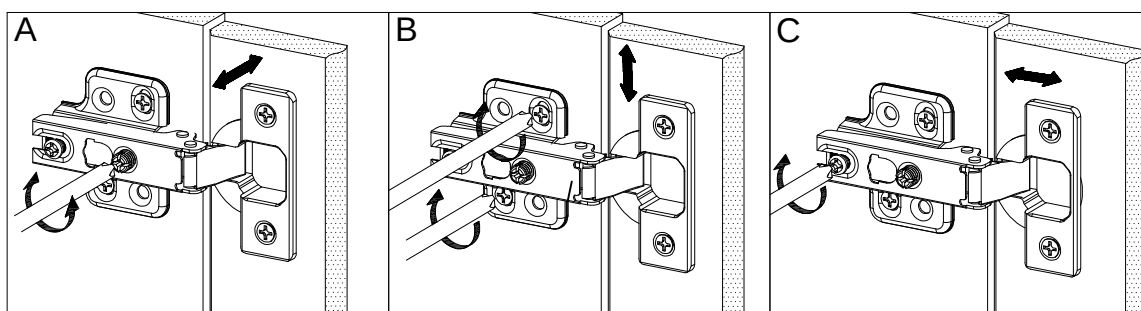

 
Step 1. Attach metal wires (part I2) to bottom panel (part E3) using hex nuts (part #6) and wrench (part #12).

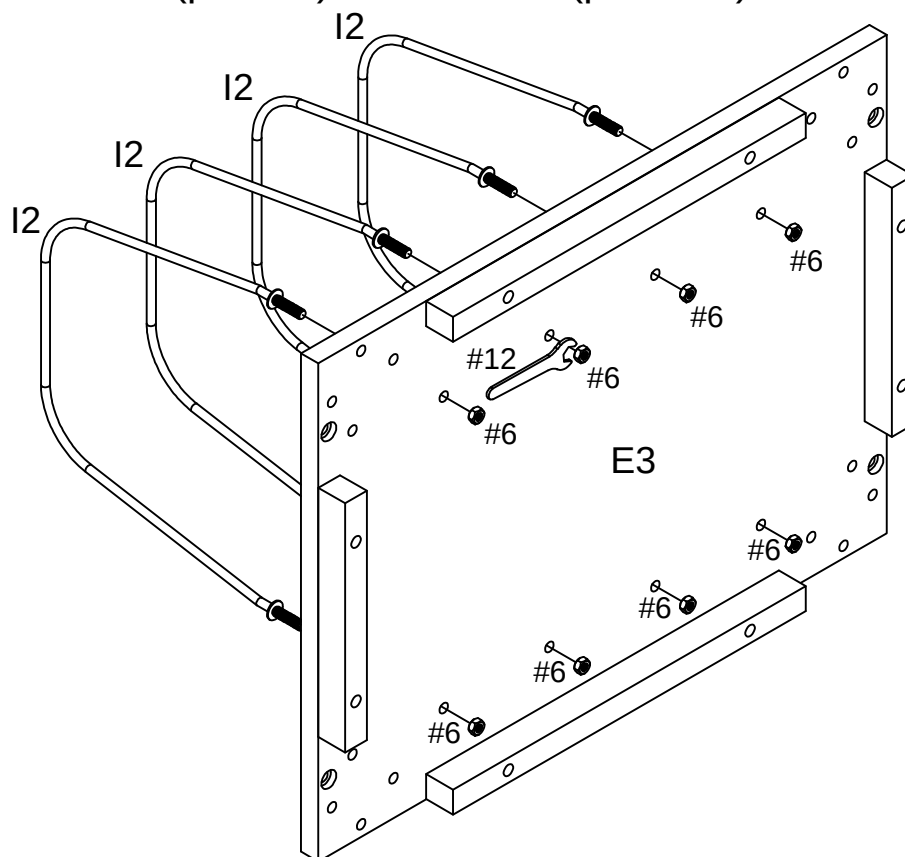

#6  x 8

#12  x 1

 
Step 2. Attach covers (part J) to back panel (part H3) using binding posts (part #13) and small allen wrench (part #14).

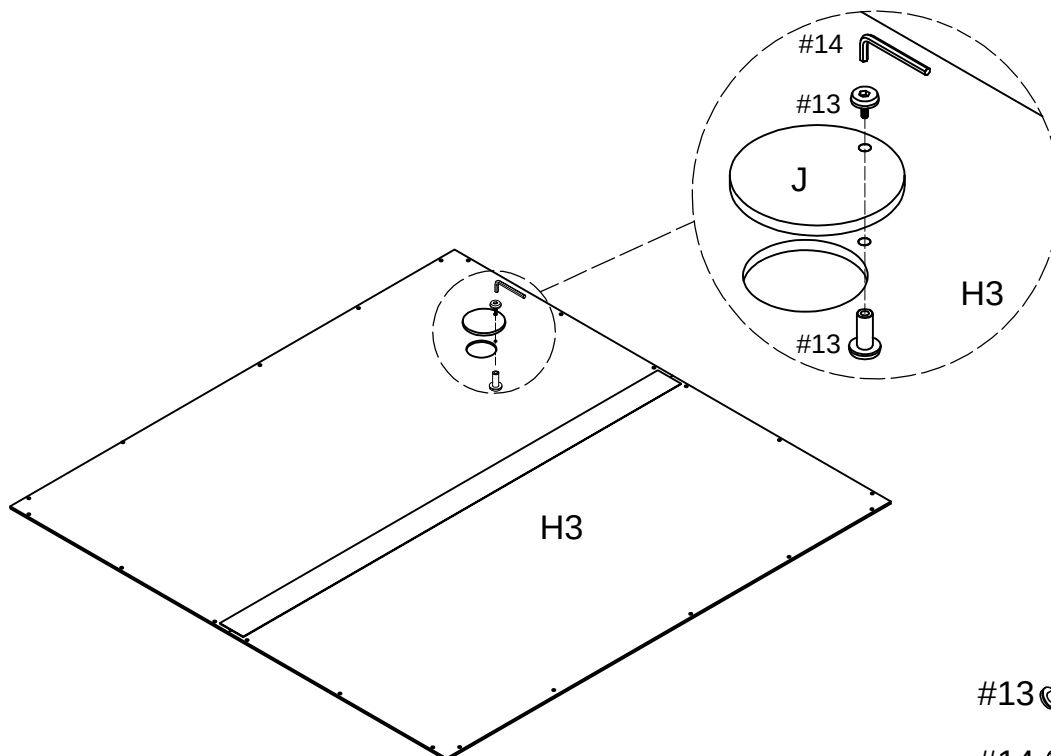


#13  x 1

#14  x 1

 Step 3. Attach door hinges (part #9) to door (part F) using short screws (part #8) and phillips head screwdriver.

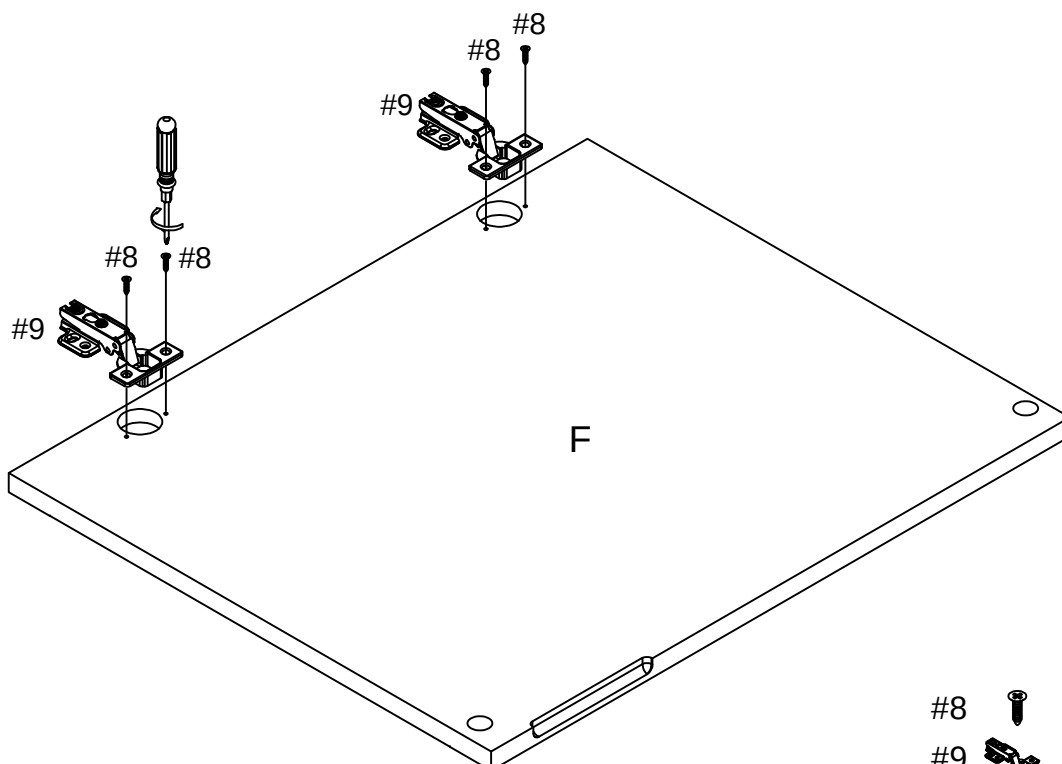


 Step 4. Attach fixed shelf (part D2) to panels (parts B & C) using wood dowels (part #7) and locked the hardware.

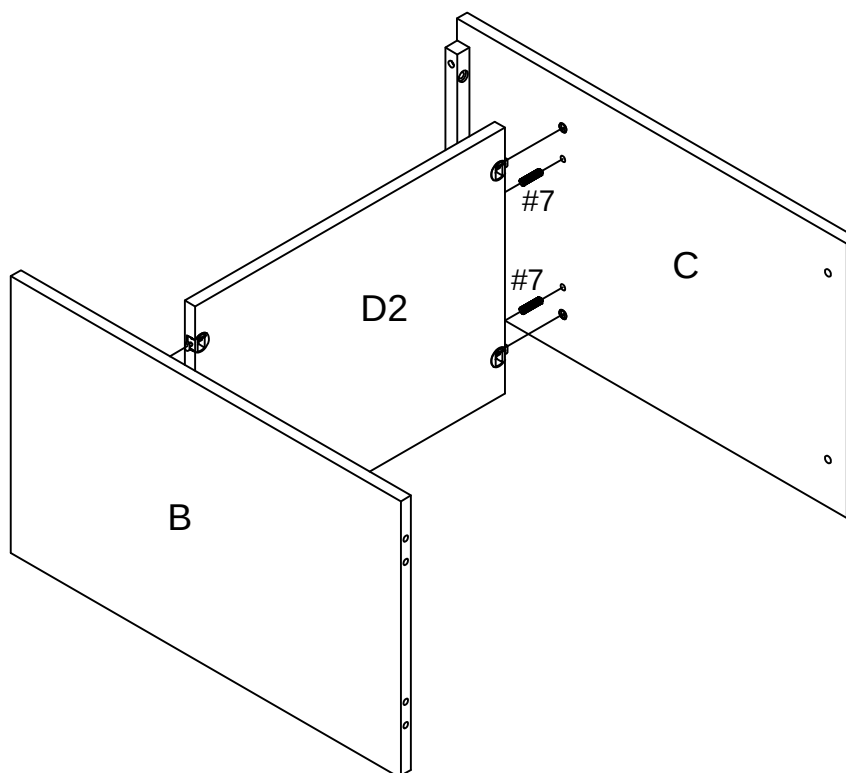


#7  x 4

 
Step 5. Attach bottom panel (part E3) to left panel (part B) and right panel (part C) using wood dowels (part #7), long bolts (part #2), barrel nuts (part #5), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).

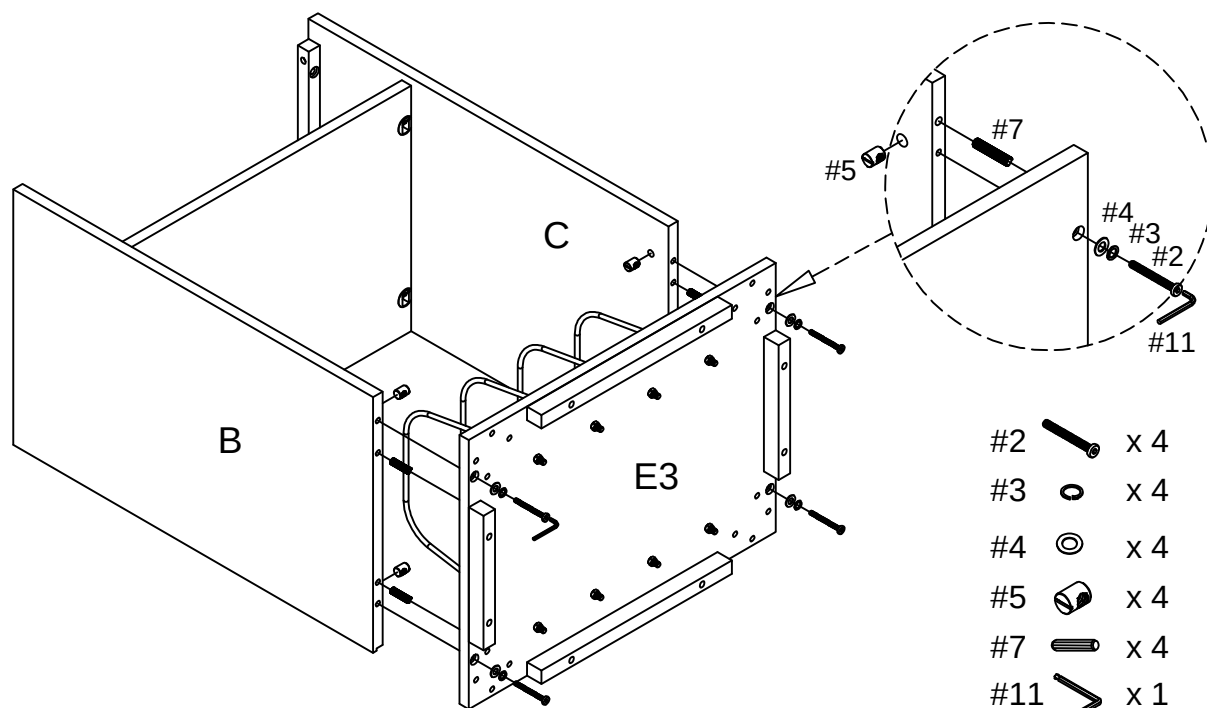

 
Step 6. Attach legs (part G) to bottom panel (part E3) using wood dowels (part #7), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).

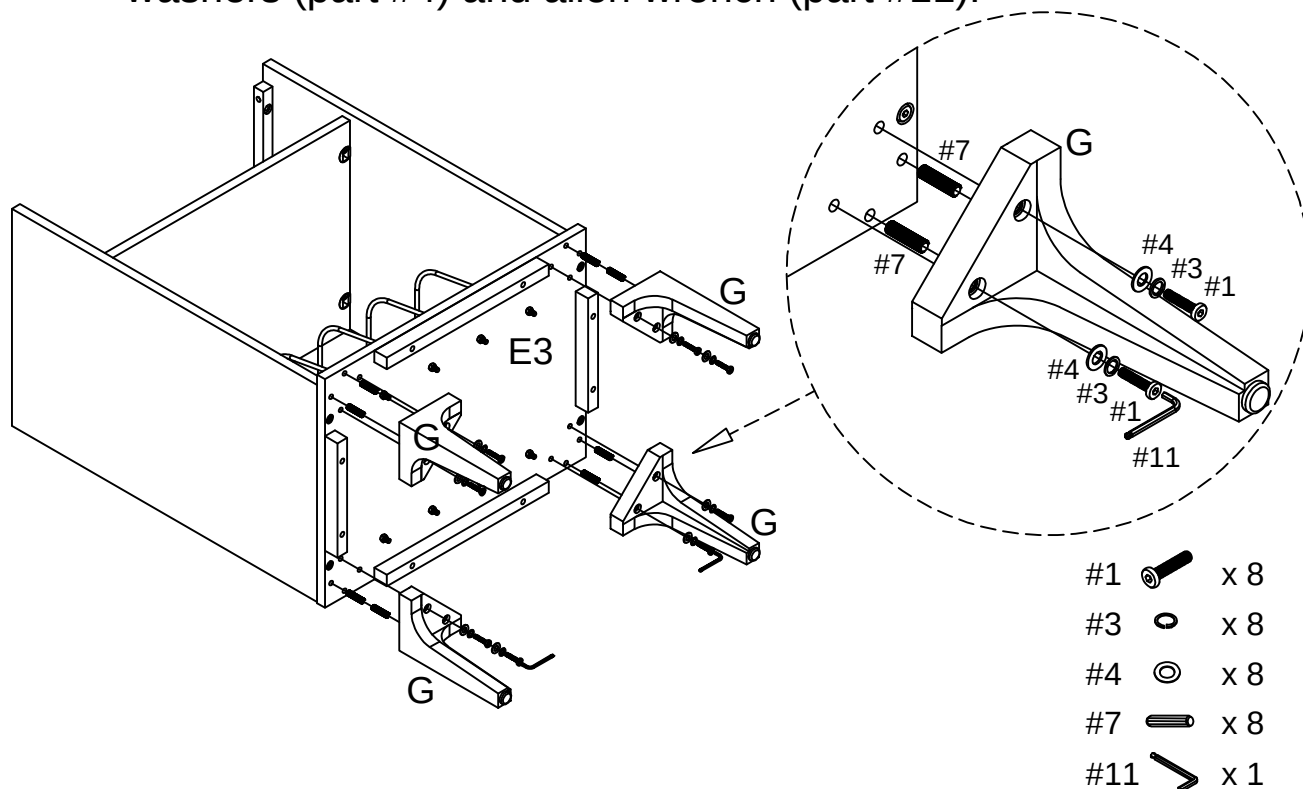

 Step 7. Attach top panel (part A) to left panel (part B) and right panel (part C) using wood dowels (part #7), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #11).

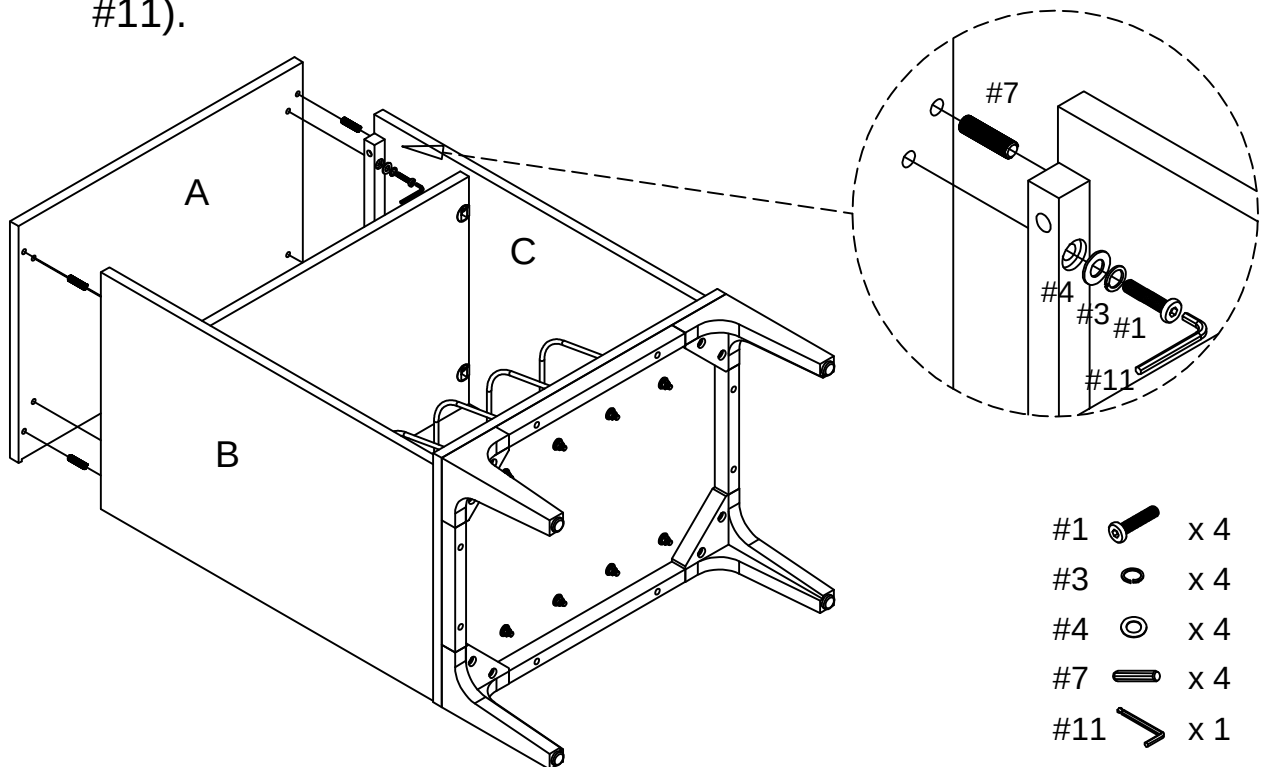

 
Step 8. Carefully turn unit upright. Attach back panel (part H3) to assembled unit (parts A, B, C & E3) using round head screws (part #10) and phillips head screwdriver.

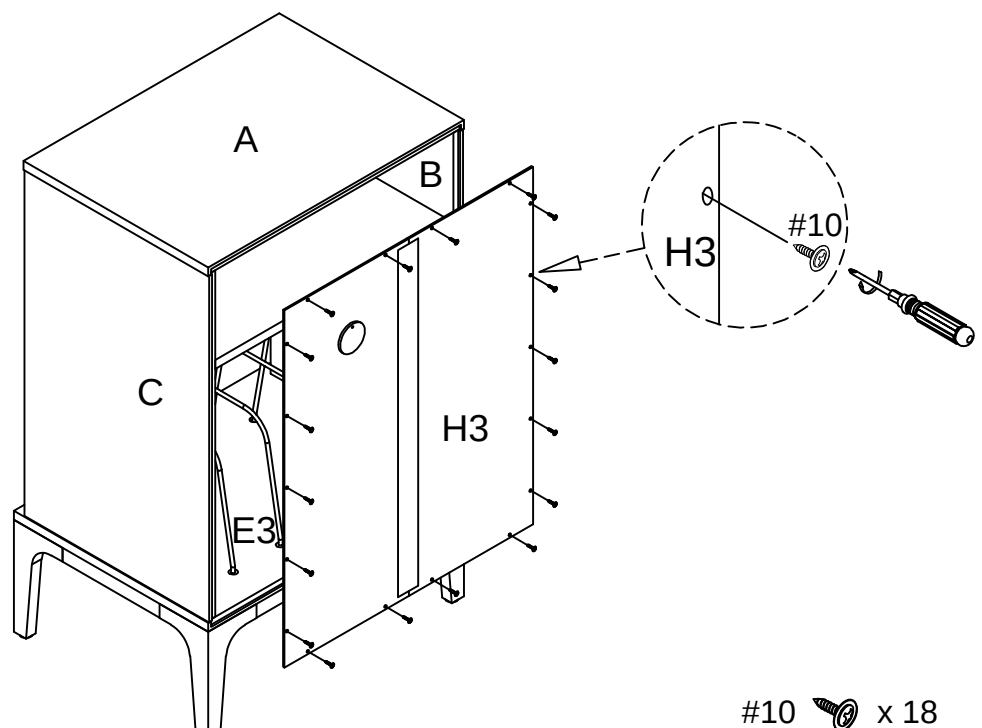


Step 9. Attach door (part F) to left panel (part B) using short screws (part #8) and phillips head screwdriver.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

  Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.

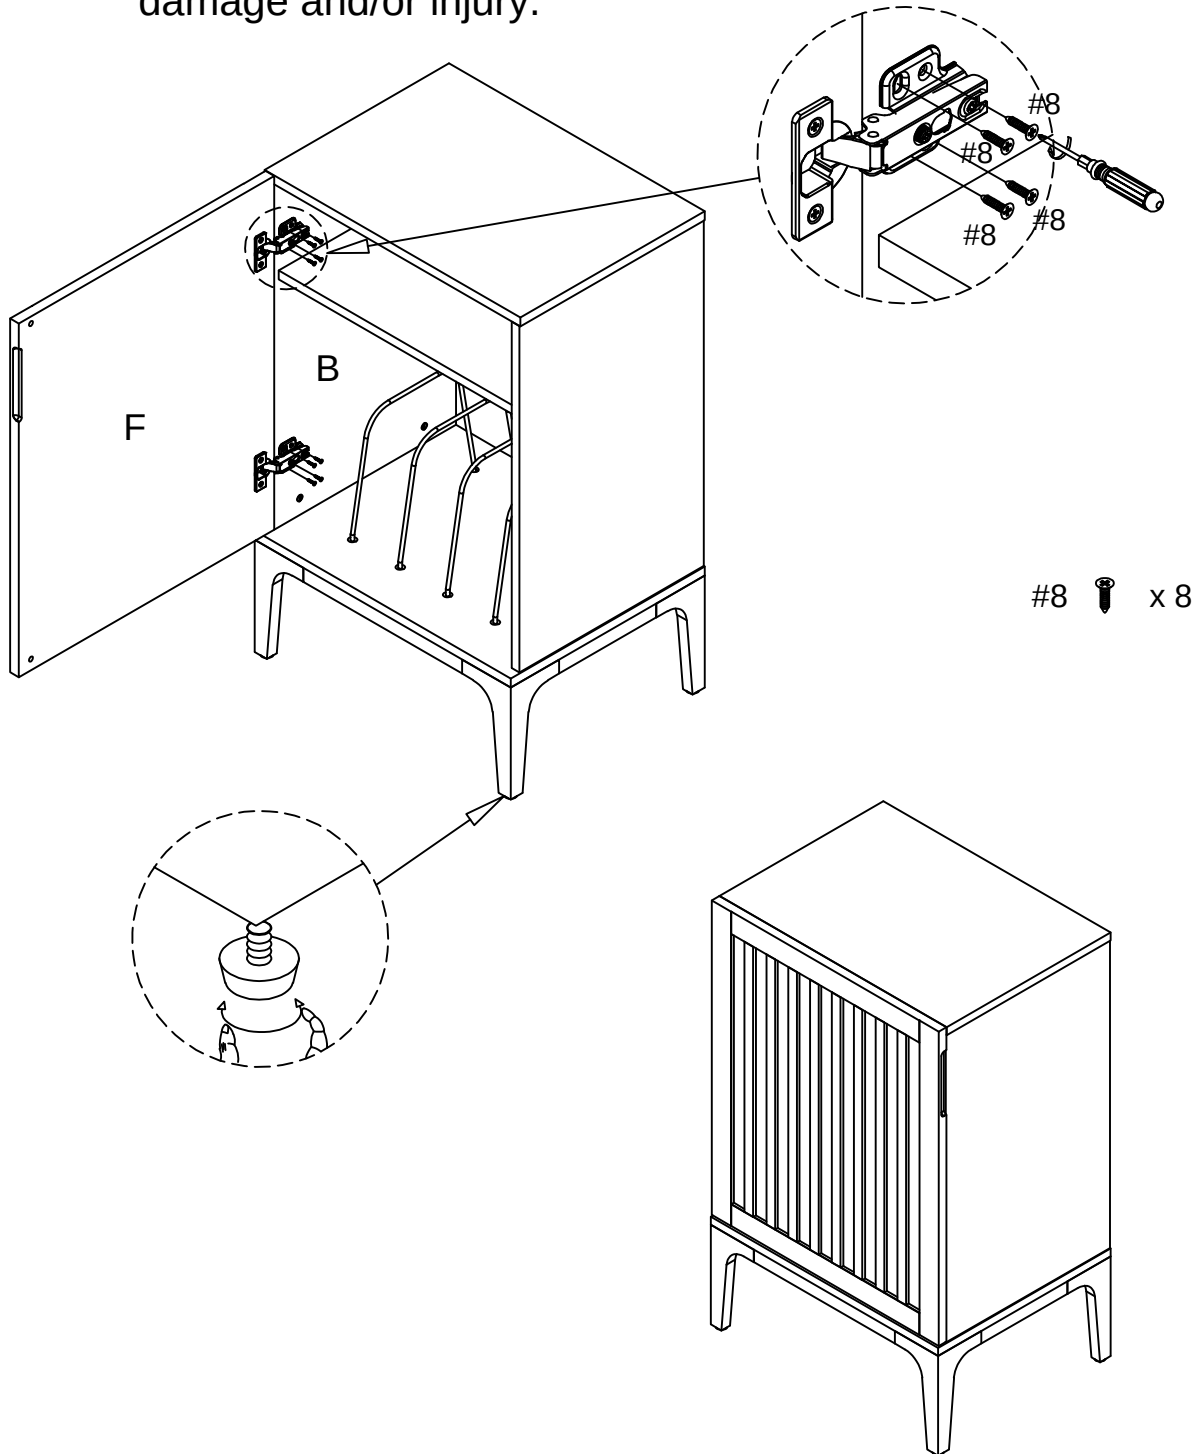

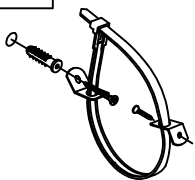
#15	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

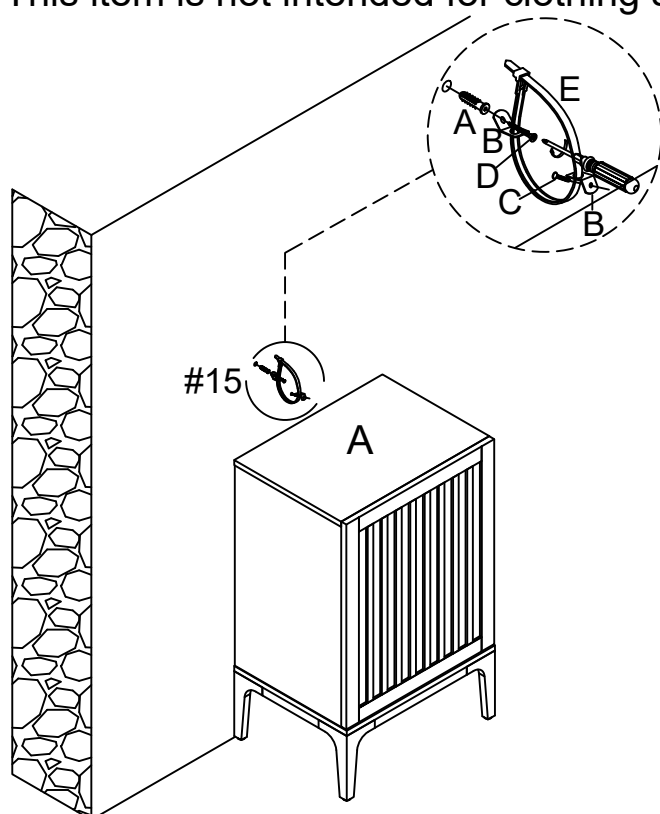

⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. <i>This is a permanent label. Do not remove!</i>
	