 









CROSLEY

FURNITURE

Record Player Stand CF1145

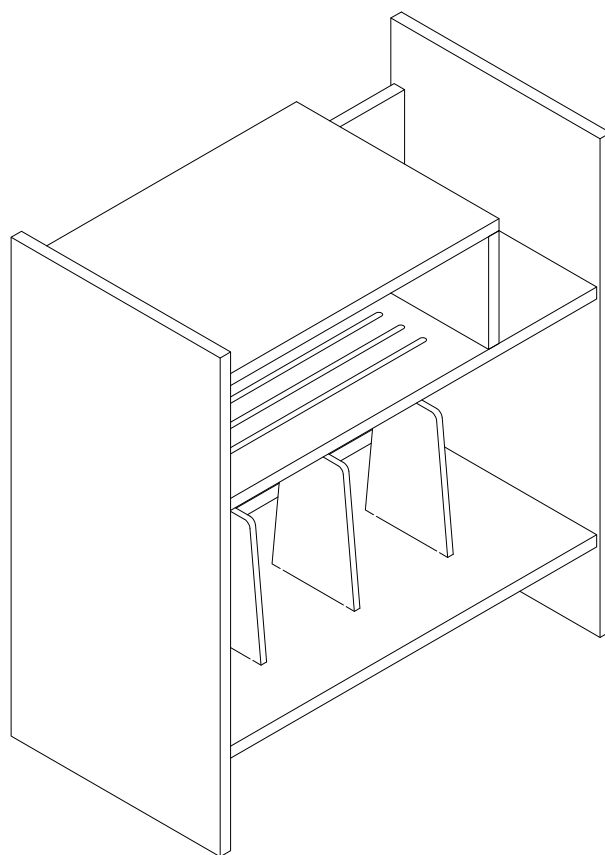

       PART LIST

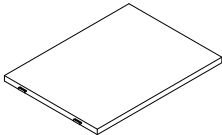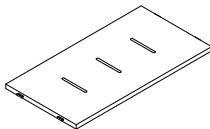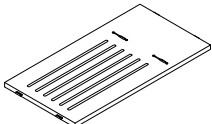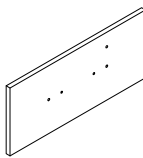
A2	B2	C2	D2	E2
				
Top Panel	Left Panel	Right Panel	Bottom Panel	Shelf
1 PC	1 PC	1 PC	1 PC	1 PC
F2	G2	H2	I2	
				
Middle Panel	Back Panel	Lower Bar	Dividing Panel	
1 PC	1 PC	1 PC	3 PCS	

HARDWARE LIST

#1	#2	#3	#4
			
φ 1/4"x1-1/4"	φ 8x30mm		
Bolt	Wood Dowel	Allen Wrench	Safety Strap Kit
5 PCS (Extra 1)	4 PCS (Extra 1)	1 PC	1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Please do not use tools to assemble this unit unless specifically indicated.

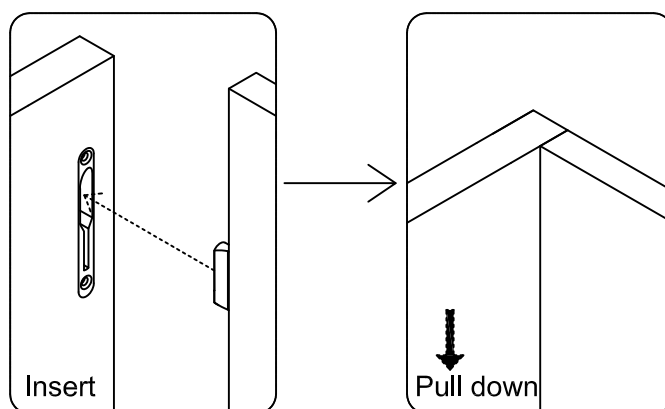


Reference the images above any time the instructions state "insert hardware and pull down to lock".

 Step 1. Insert back panel (part G2) into right panel (part C2) pull down to lock.

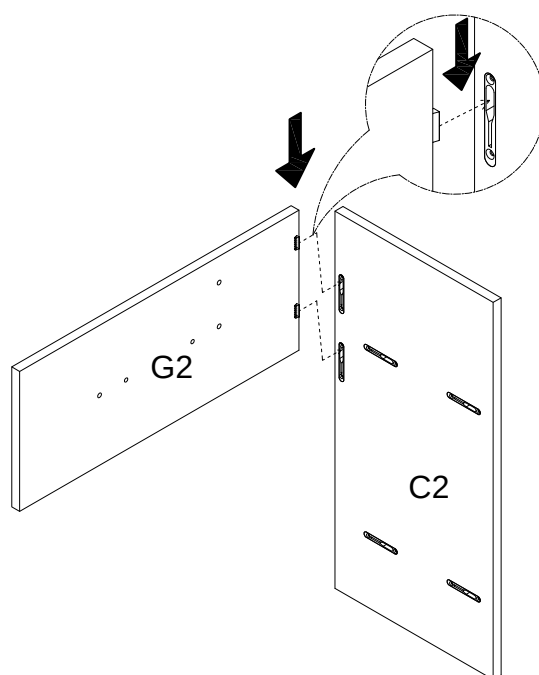


 Step 2. Attach shelf (part E2) to assembled unit (parts C2 & G2) using wood dowels (part #2) and pull down to lock.

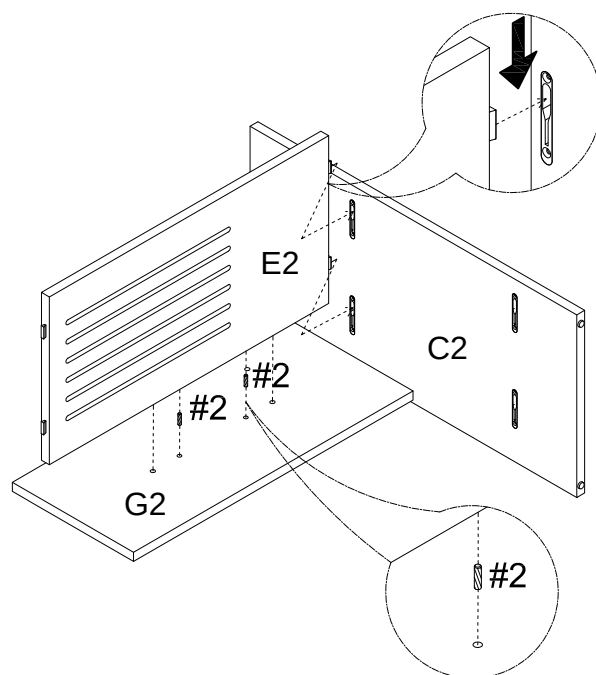


#2  x 2

 
Step 3. Insert bottom panel (part D2) into right panel (part C2) pull down to lock.

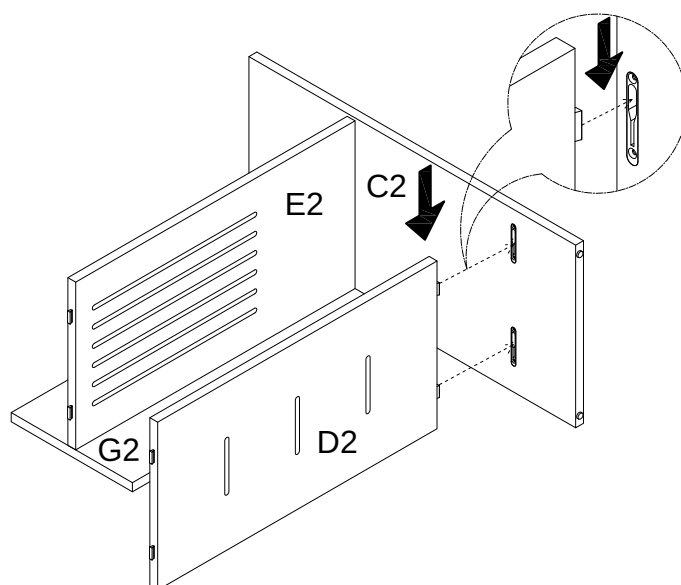

 
Step 4. Attach left panel (part B2) to assembled unit (parts D2 & E2) pull down to lock.

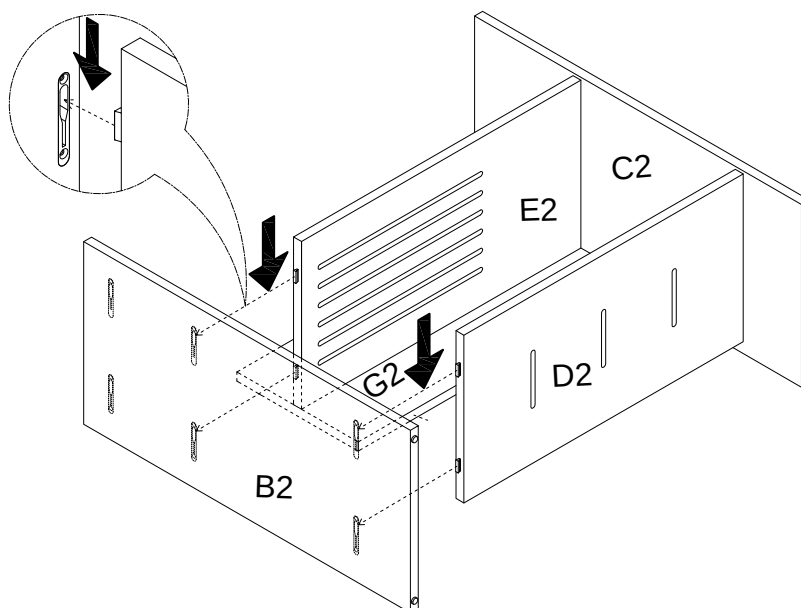

 
Step 5. Insert middle panel (part F2) into top panel (part A2) pull down to lock

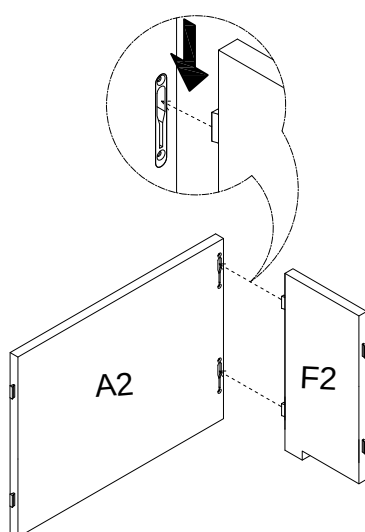

 Step 6. Insert assembled unit (parts A2 & F2) into assembled unit (parts B2 & E2) pull down to lock.

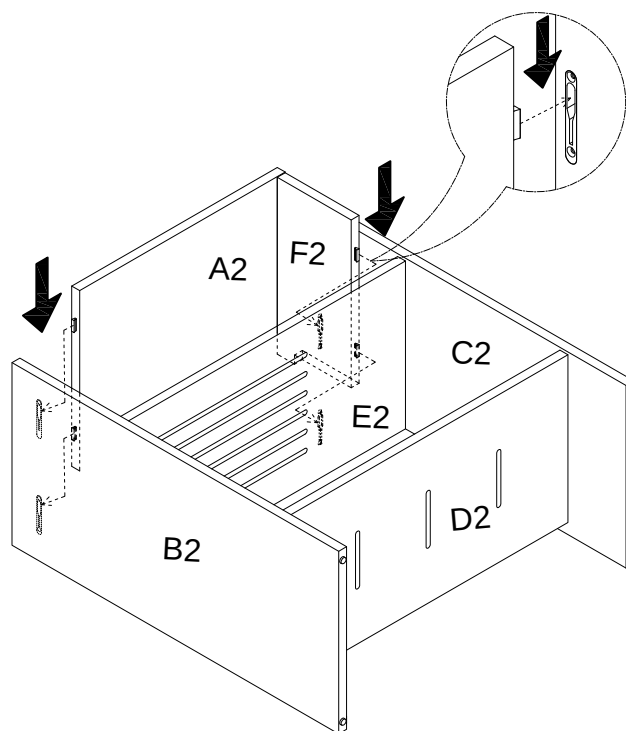


 Step 7. Carefully turn unit upright. Attach lower bar (part H2) to bottom panel (part D2) using wood dowels (part #2), bolts (part #1) and allen wrench (part #3). Insert bolts (part #1) into back panel (part G2) using allen wrench (part #3).

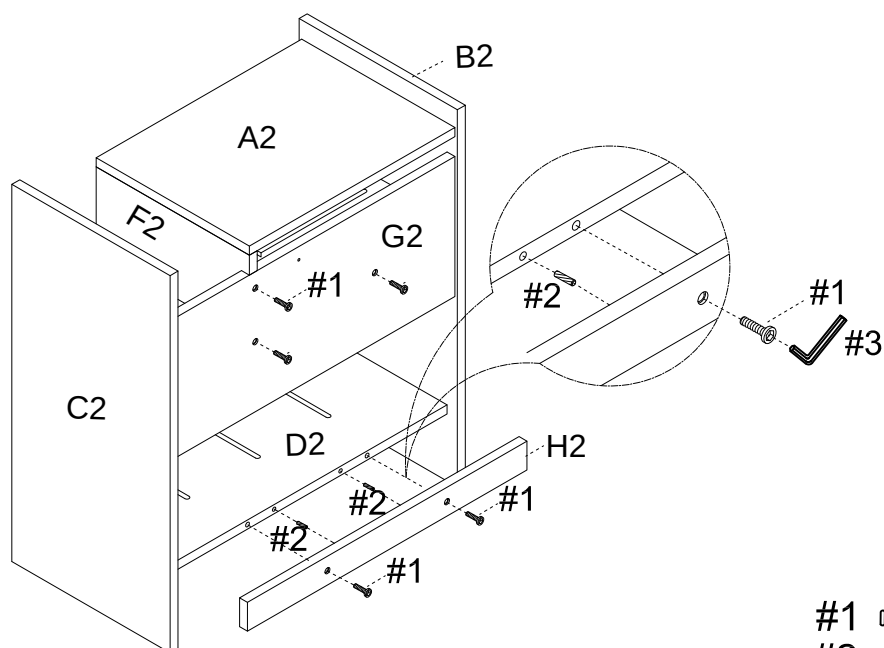


#1  X 5
 #2  X 2
 #3  X 1

 Step 8. Insert dividing panels (part I2) into the grooves of bottom panel (part D2).

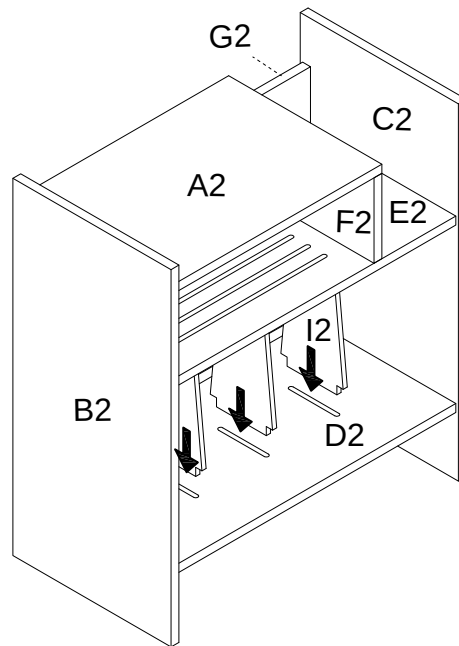

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

 Important: Safety strap kit (part #4) must be installed to prevent tipping, damage and/or injury.

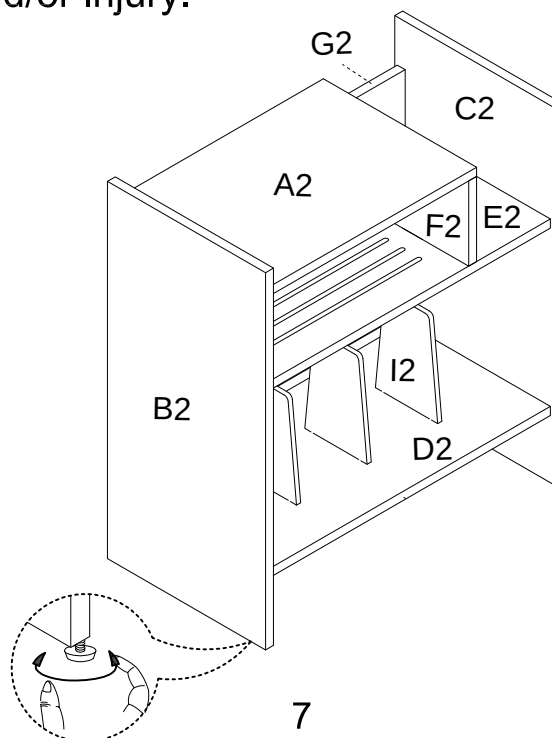

#4	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	5/8"x ϕ 3xD8 Short Screw 1 PC	1-1/2"x ϕ 4xD8 Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to back panel (part G2) using philips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part G2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using philips head screwdriver.

Note: This item is not intended for clothing storage use.

