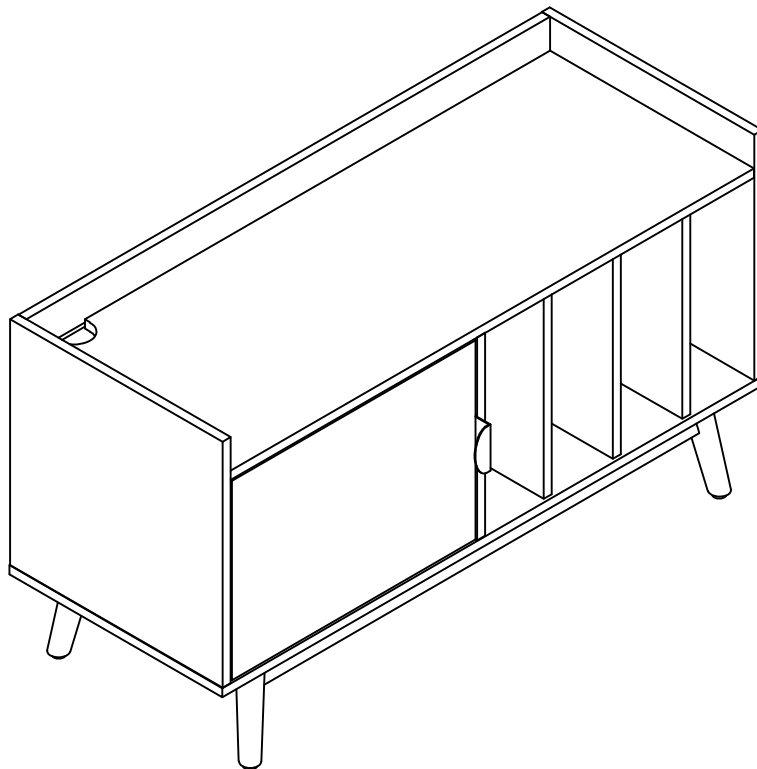 














CROSLEY

FURNITURE





Record Player Stand With Vinyl Storage CF1205



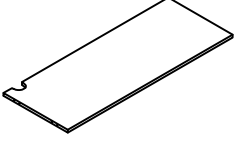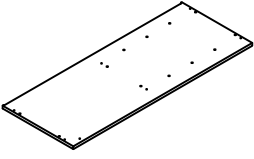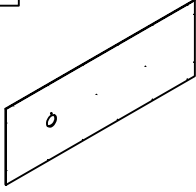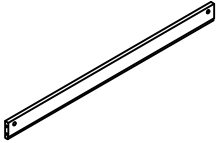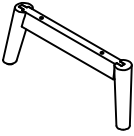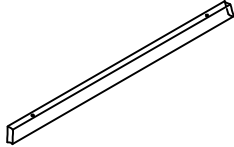            PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Middle Partition Panel 1 PC	Right Partition Panel 3 PCS
F 	G 	H 	I 	J 
Bottom Panel 1 PC	Door 1 PC	Back Panel 1 PC	Back Upper Rail 1 PC	Side Frame 2 PCS
K 	L 			
Rail 2 PCS	Cover 1 PC			

    HARDWARE LIST

#1	#2	#3	#4	#5
				
Handle 1 PC	Magnet 1 PC	Cam Bolt 10 PCS (Extra 1)	Cam Lock 10 PCS (Extra 1)	8*30mm Wood Dowel 30 PCS (Extra 1)
#6	#7	#8	#9	#10
				
7*38mm Tapping Bolt 6 PCS (Extra 1)	1/4"*45mm Bolt 8 PCS (Extra 1)	6*3*12mm Flat Head Screw 3 PCS (Extra 1)	6*3*15mm Round Head Screw 2 PCS (Extra 1)	8*3*12mm Screw 18 PCS (Extra 1)
#11	#12	#13	#14	
				
Cam Sticker 10 PCS (Extra 1)	Binding Post 1 SET (Extra 1)	M2 Small Allen Wrench 1 PC	M4 Allen Wrench 1 PC	

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #3) into pre-drilled holes of panels (parts A, B, C & I) using phillips head screwdriver. Attach magnet (part #2) to top panel (part A) using round head screws (part #9) and phillips head screwdriver.

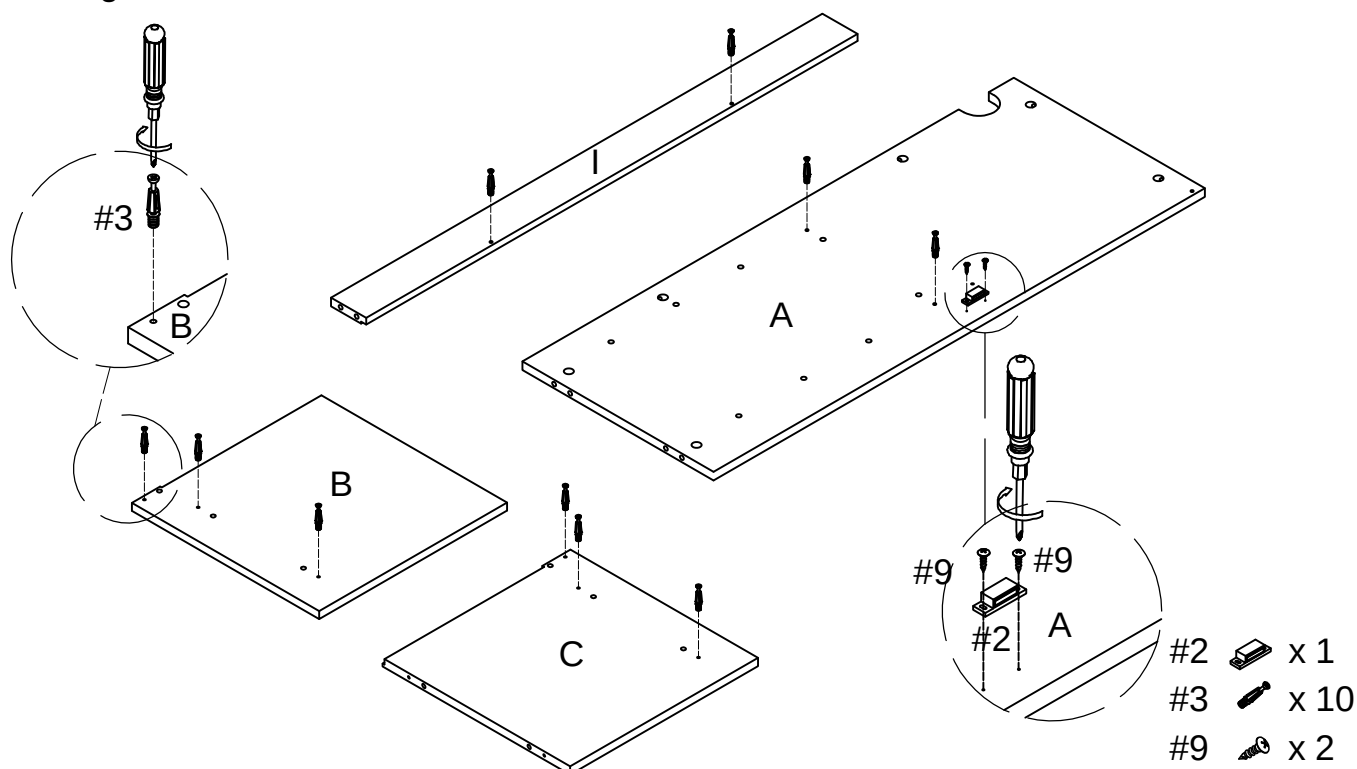 
Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.



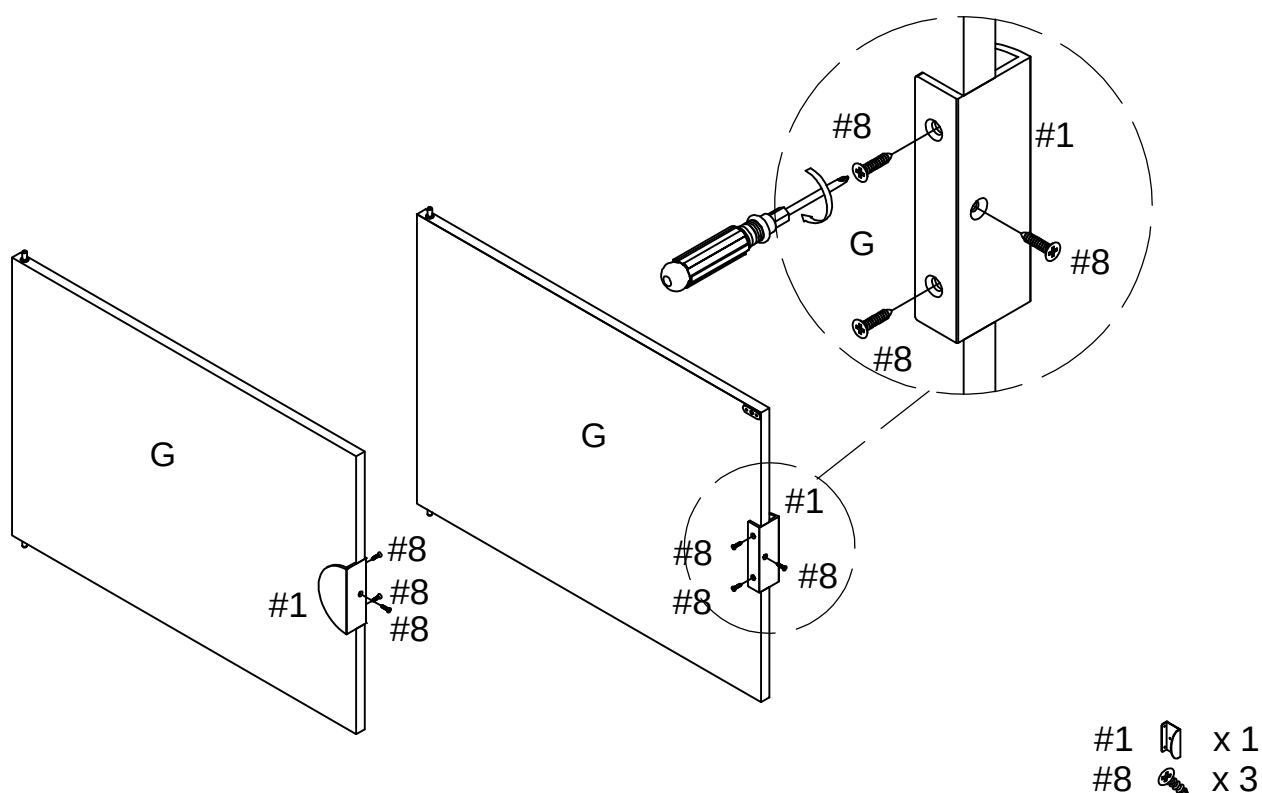 Step 2. Attach handle (part #1) to door (part G) using flat head screws (part #8) and phillips head screwdriver.




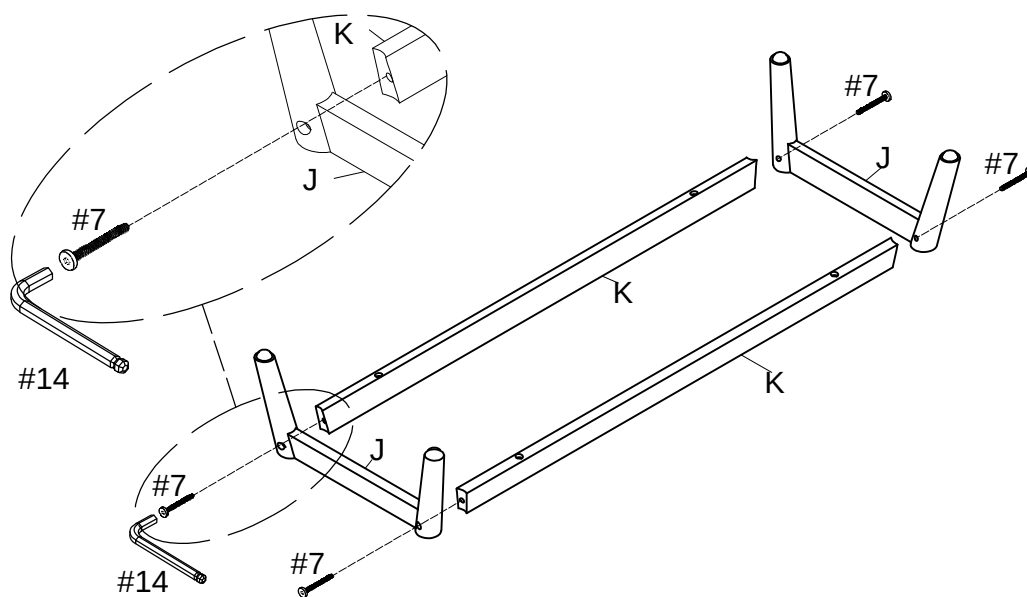 Step 3. Attach rails (part K) to side frames (part J) using bolts (part #7) and allen wrench (part #14).



#7  x 4
#14  x 1

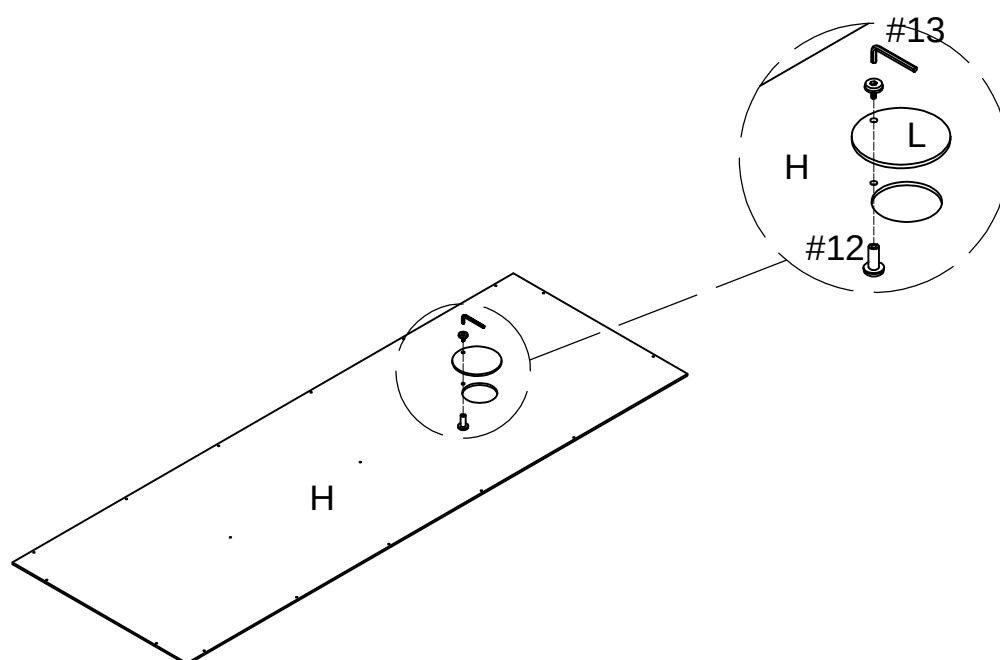 
Step 4. Attach cover (part L) to back panel (part H) using binding post (part #12) and small allen wrench (part #13).



#12  x 1
#13  x 1

Step 5. Attach back upper rail (part I) to top panel (part A) using cam locks (part #4) and phi head screwdriver.

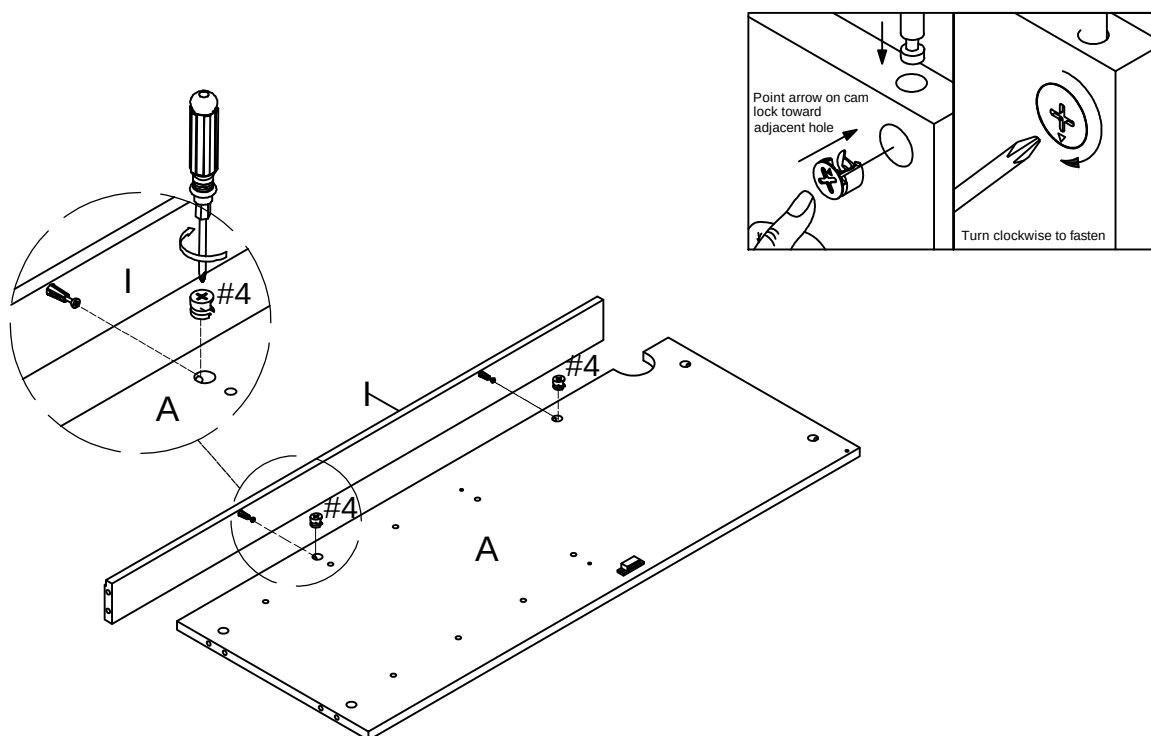 
Note: Cam locks must rotate a full 180°. See pictured insert.



#4  x 2

Step 6. Attach panels (parts B & C) to assembled unit (parts A & I) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

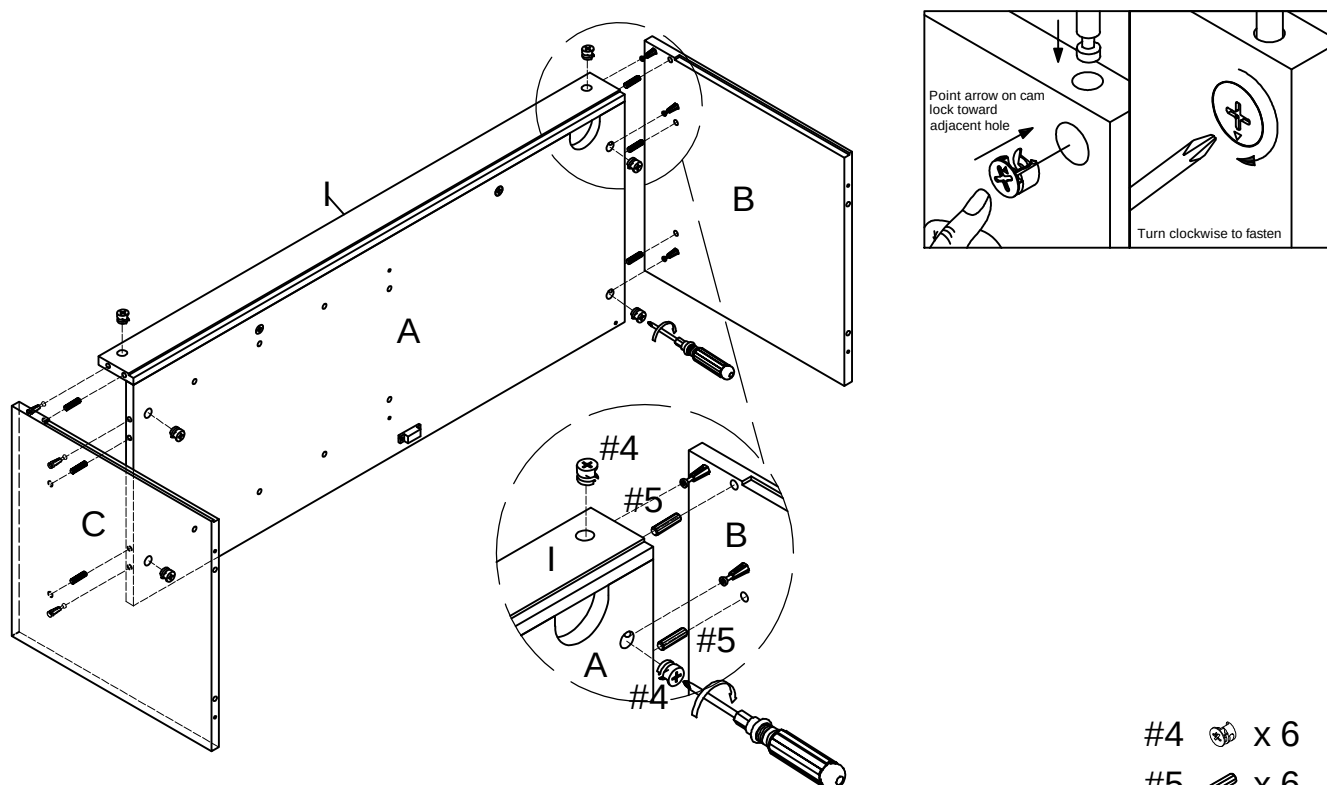 Note: Cam locks must rotate a full 180°. See pictured insert.




#4  x 6


#5  x 6

Step 7. Attach panels (parts D & E) to top panel (part A) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

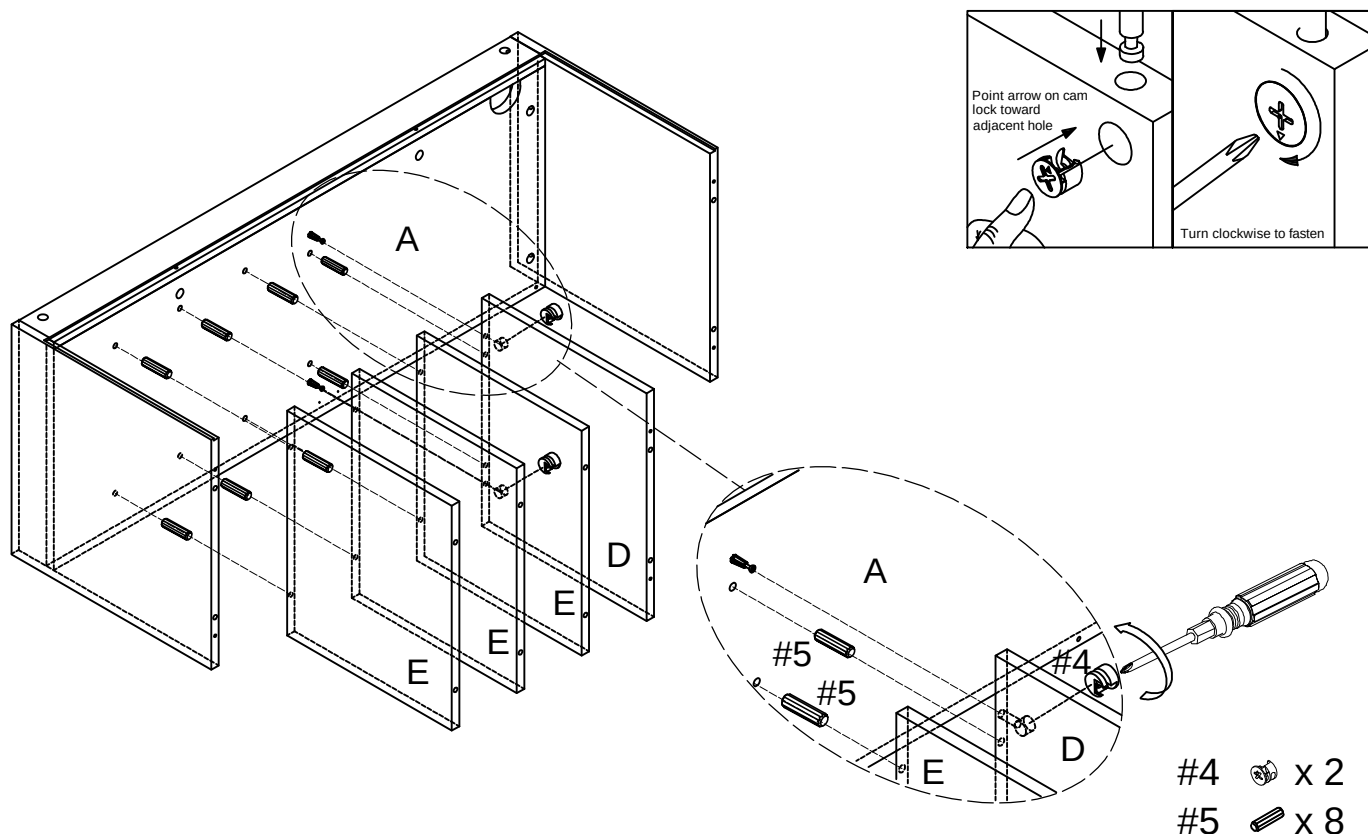 
Note: Cam locks must rotate a full 180°. See pictured insert.



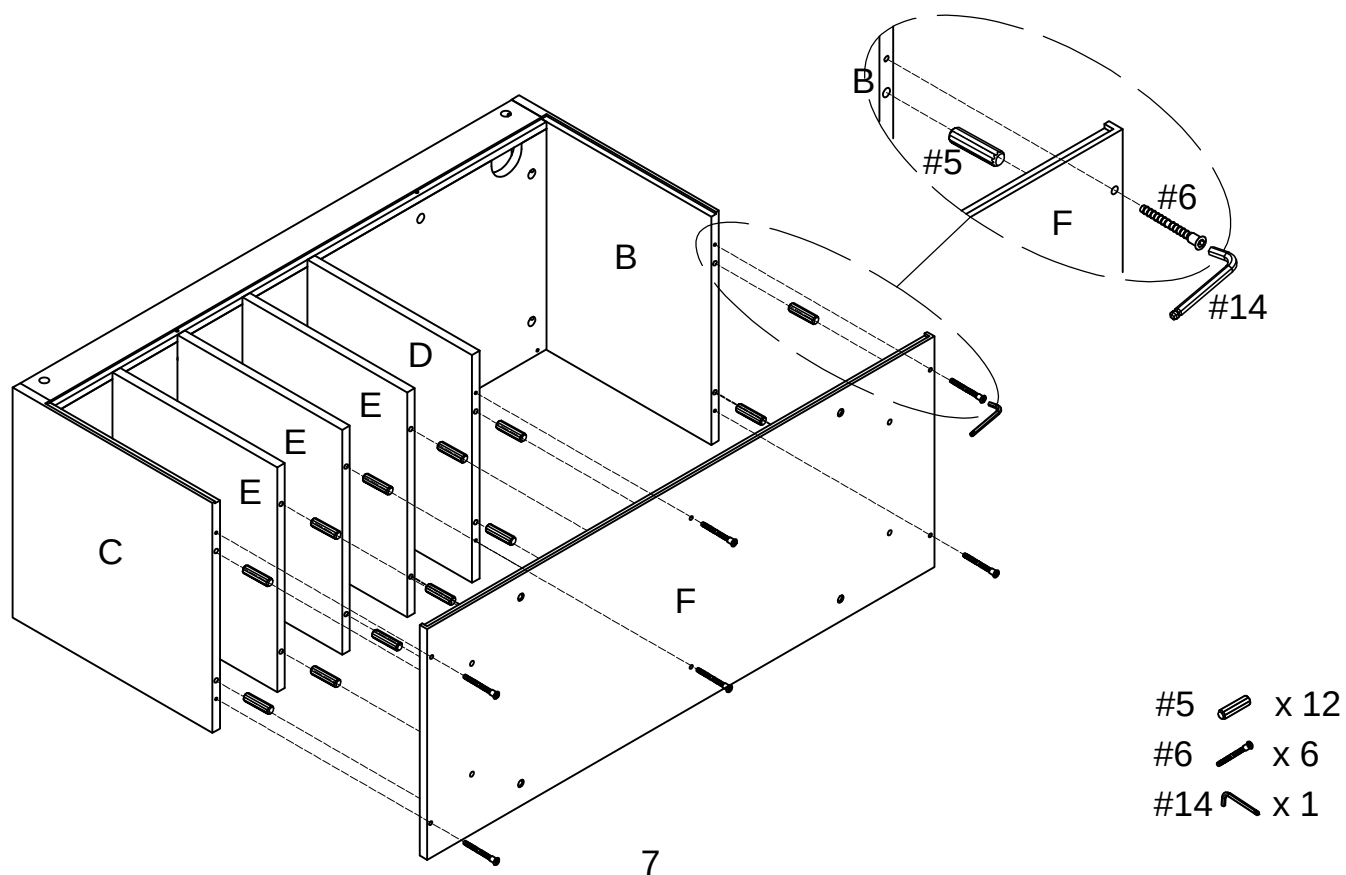 Step 8. Attach bottom panel (part F) to assembled unit (parts B, C, D & E) using wood dowels (part #5), tapping bolts (part #6) and allen wrench (part #14).




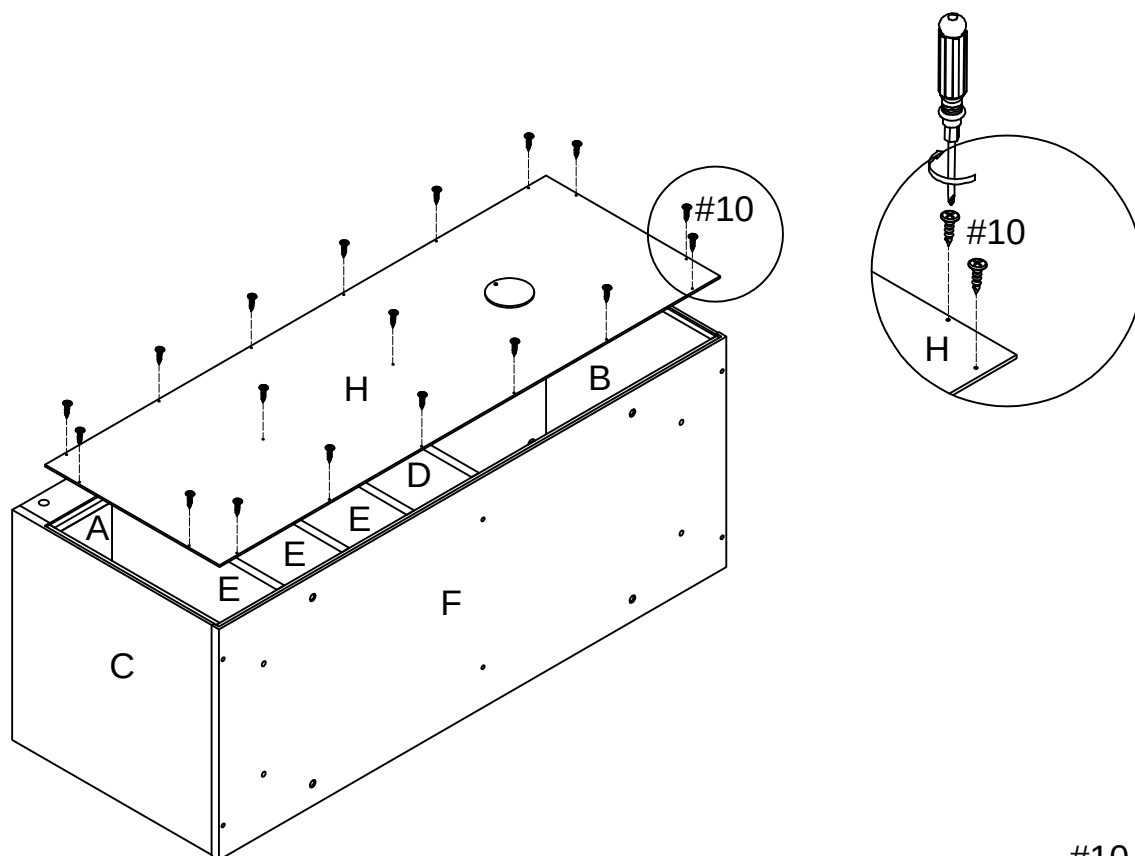 Step 9. Attach back panel (part H) to assembled unit (parts A, B, C, D, E & F) using screws (part #10) and phillips head screwdriver.




#10  x 18

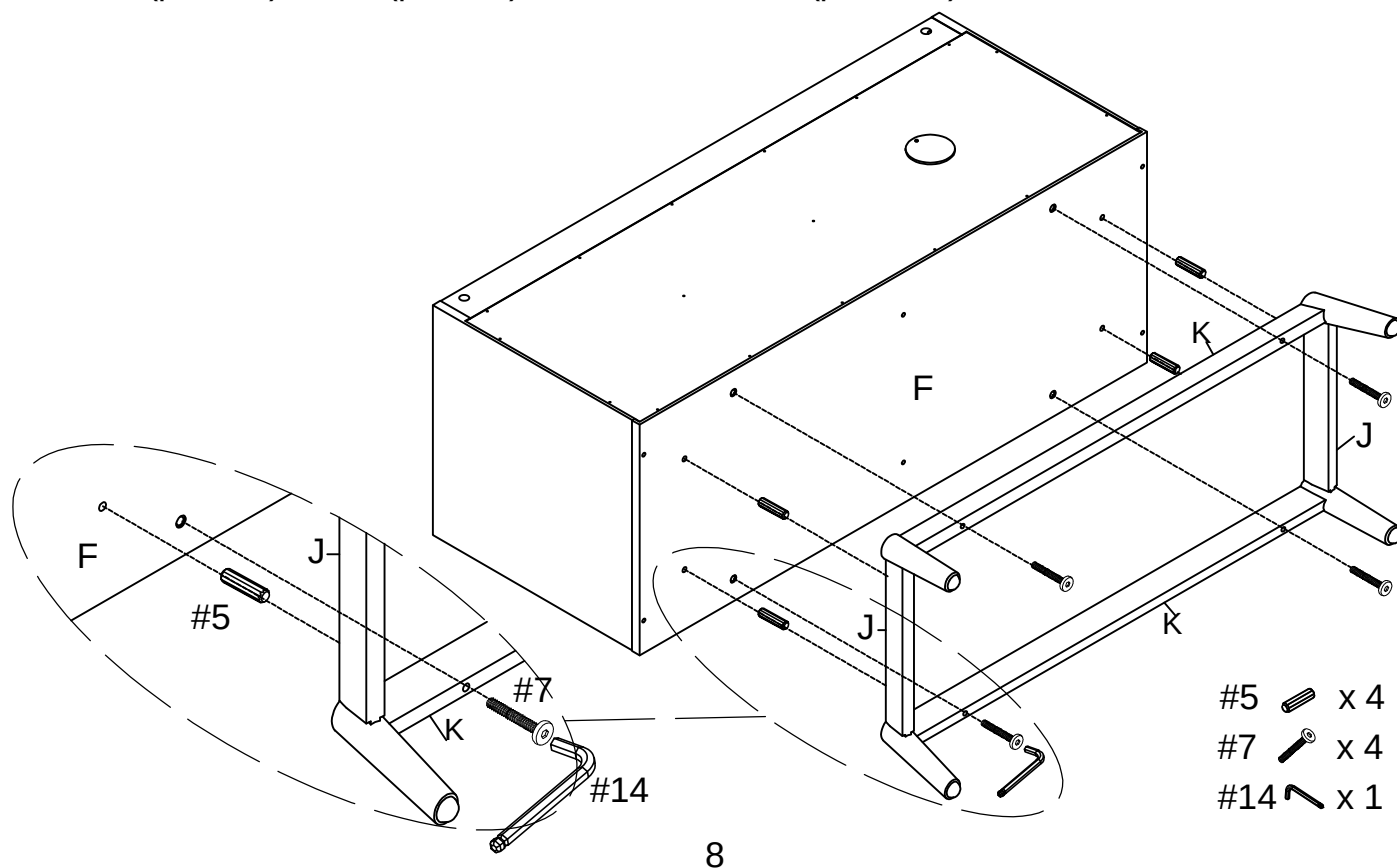 Step 10. Attach assembled unit (parts J & K) to bottom panel (part F) using wood dowels (part #5), bolts (part #7) and allen wrench (part #14).





#5  x 4
 #7  x 4
 #14  x 1

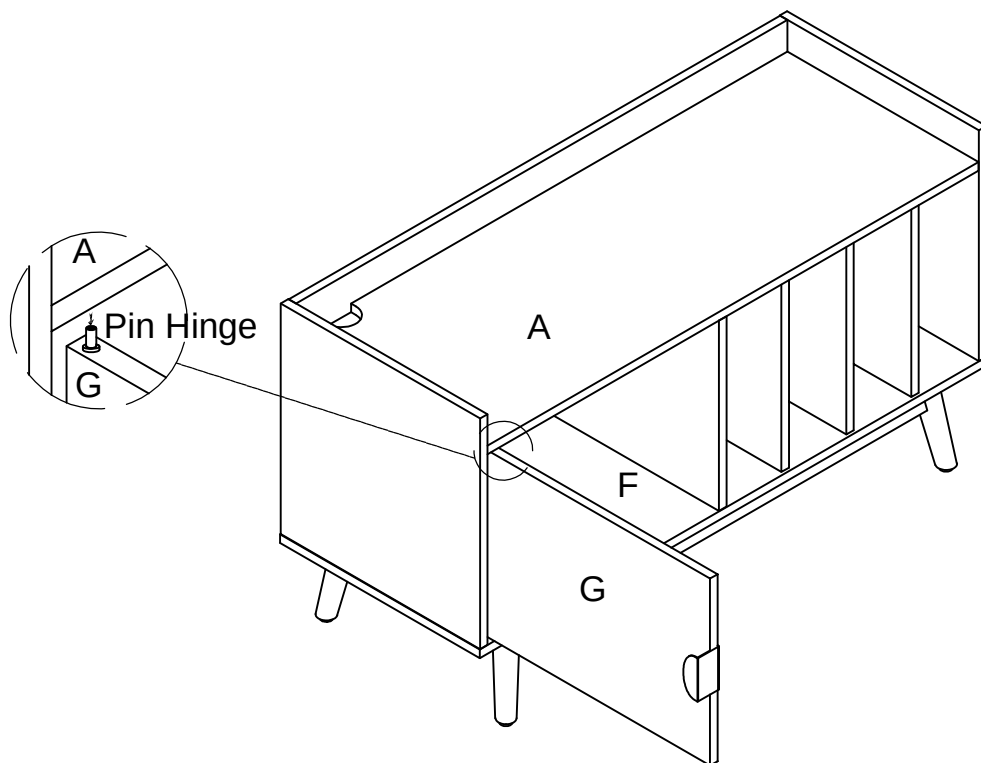 Step 11. Carefully turn unit upright. Attach door (part G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part F). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).



Step 12. Using cam stickers (part #11) cover all cam locks (part #4).

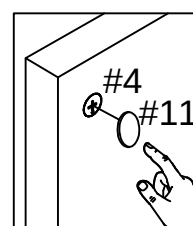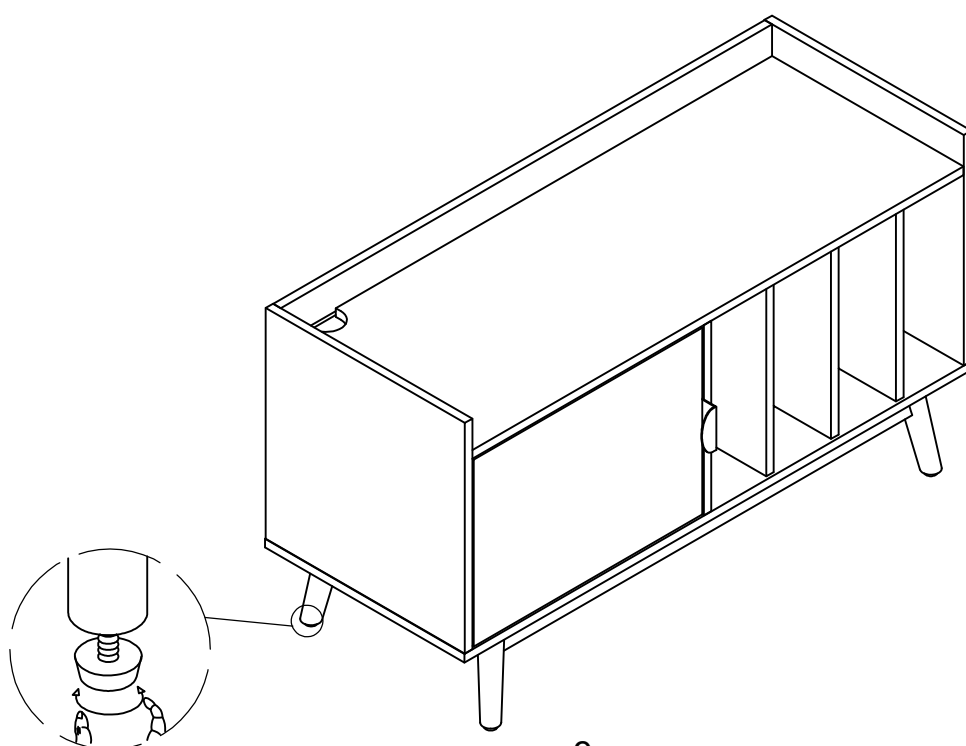  Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



#11 ○ x 10