 
















CROSLEY

FURNITURE









Record Player Stand With Vinyl Storage CF1210

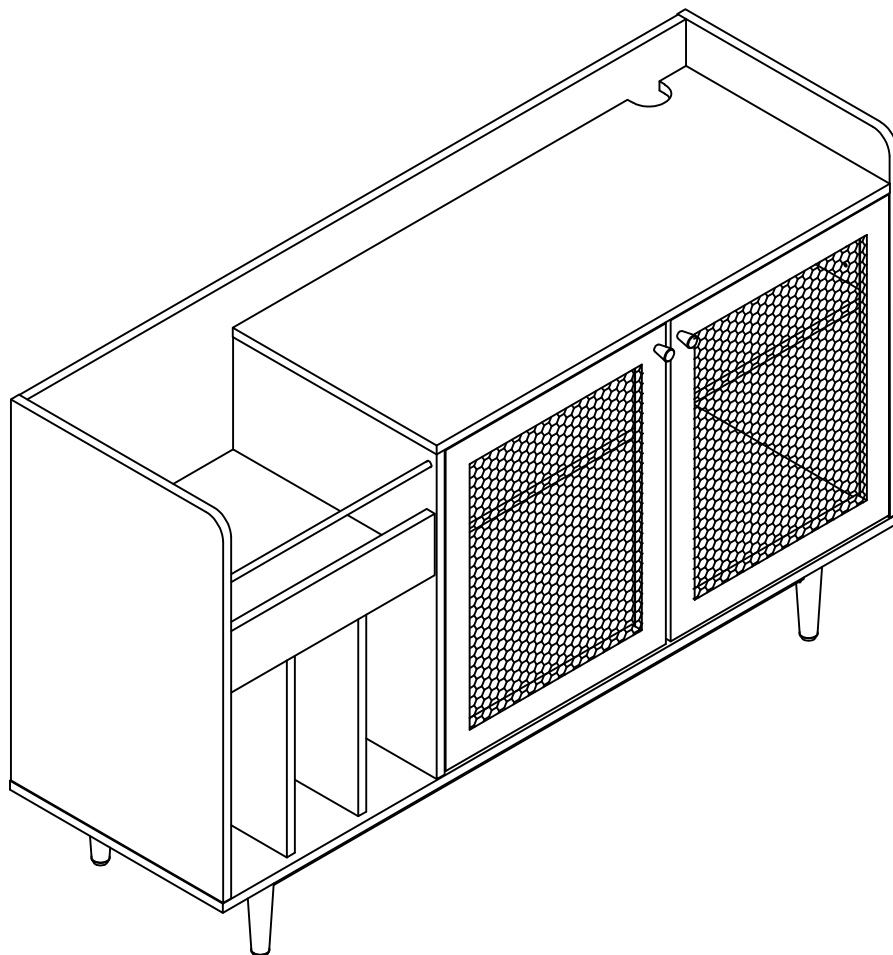

              PARTS LIST

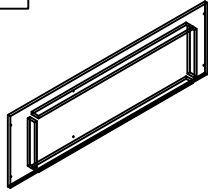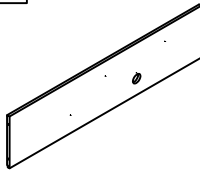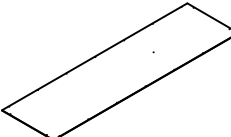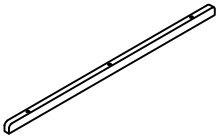
A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Partition Panel 2 PCS	Middle Partition Panel 1 PC
F 	G 	H 	I 	J 
Bottom Panel 1 PC	Left Door 1 PC	Right Door 1 PC	Fixed Shelf 1 PC	Adjustable Shelf 1 PC
K 	L 	M 	N 	O 
Rail 1 PC	Top Back Panel 1 PC	Bottom Back Panel 1 PC	Cover 1 PC	Leg 4 PCS
P 	Q 			
Metal Bar 1 PC	Top Rail 1 PC			

        HARDWARE LIST
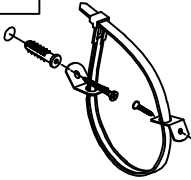
#1 	#2 	#3 	#4 	#5  8*30mm
Knob 2 PCS	Double Magnet 2 PCS	Cam Bolt 19 PCS (Extra 1)	Cam Lock 19 PCS (Extra 1)	Wood Dowel 20 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
7*38mm Tapping Bolt 6 PCS (Extra 1)	1/4"*45mm Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Shelf Holder 4 PCS (Extra 1)
#11 	#12 	#13 	#14 	#15 
M4*20mm Long Round Head Bolt 2 PCS (Extra 1)	M4*10mm Short Round Head Bolt 1 PC (Extra 1)	7*3*15mm Round Head Screw 4 PCS (Extra 1)	8*4*38mm Long Screw 3 PCS (Extra 1)	8*3*12mm Screw 19 PCS (Extra 1)
#16 	#17  M4	#18 		
Cam Sticker 19 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET		

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Insert cam bolts (part #3) into pre-drilled holes of panels (parts A, B, C, E, K & L) using phillips head screwdriver.

 
Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.

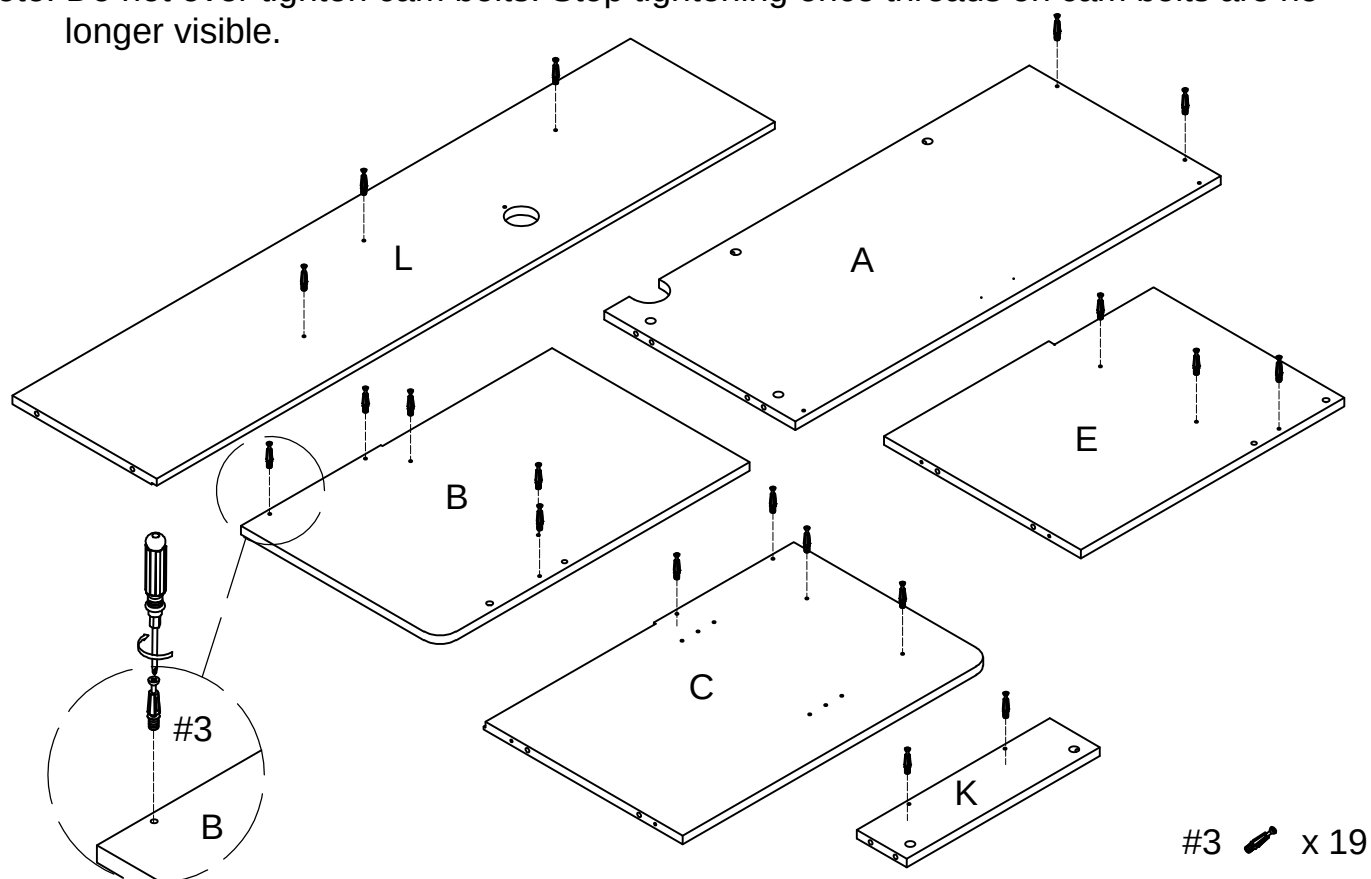

 Step 2. Attach double magnets (part #2) to panels (parts A & F) using round head screws (part #13) and phillips head screwdriver. Attach top rail (part Q) to top panel (part A) using wood dowels (part #5), long screws (part #14) and phillips head screwdriver.

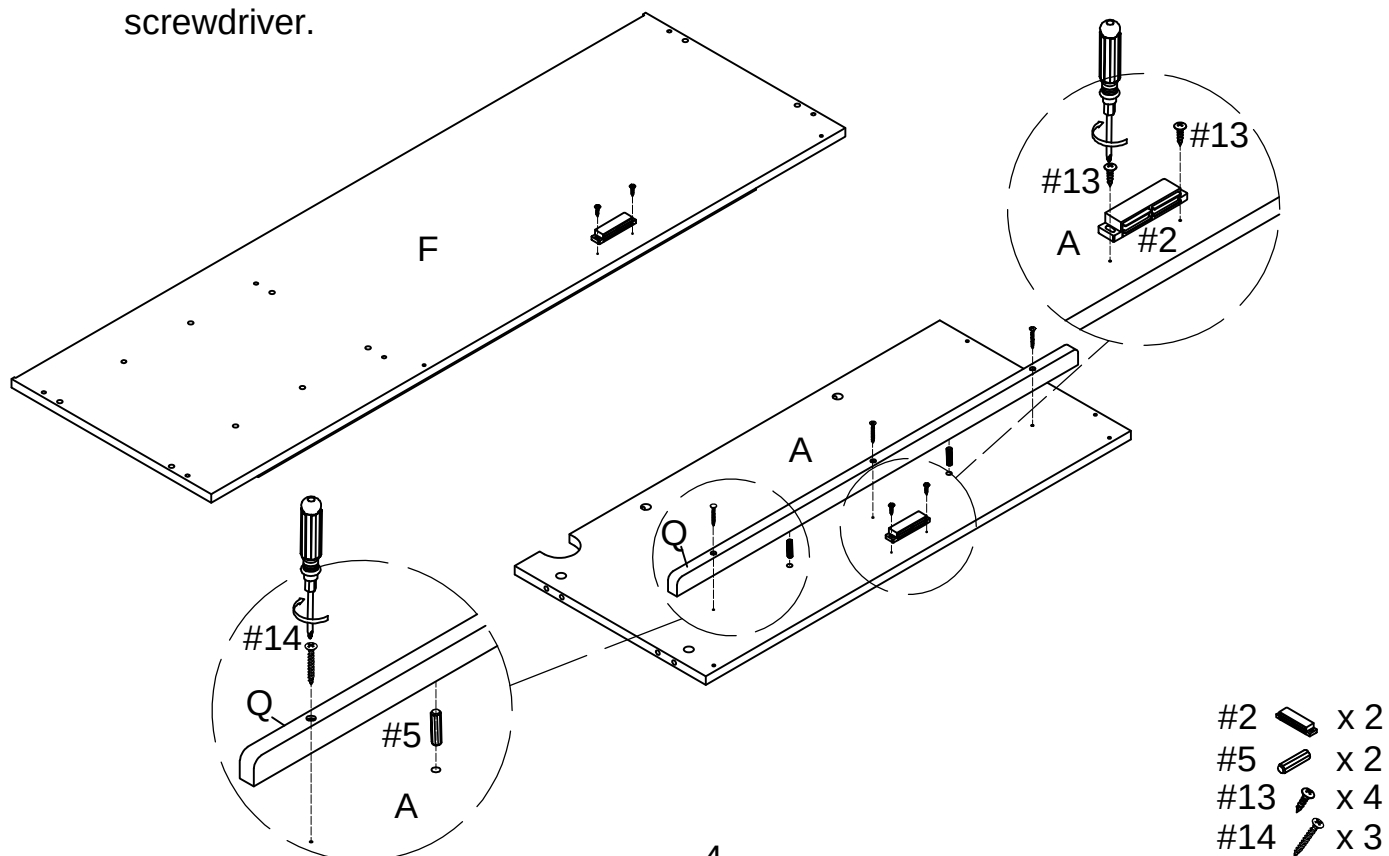


 Step 3. Attach legs (part O) to bottom panel (part F) using bolts (part #7), spring washers (part #8), flat washers (part #9) and allen wrench (part #17).

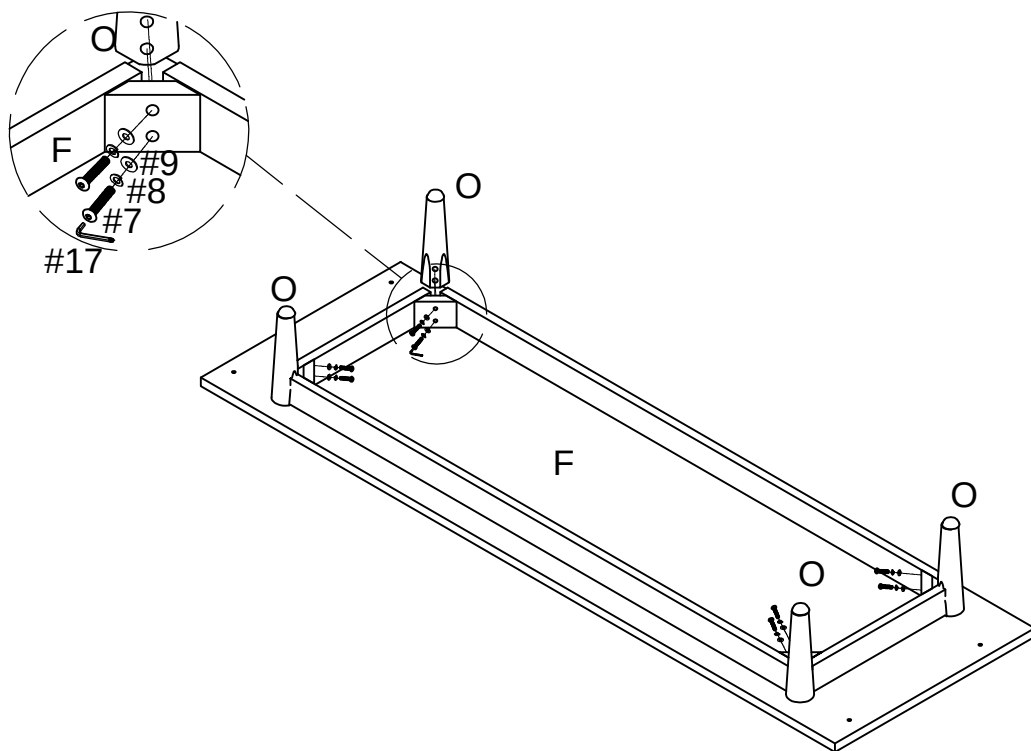


#7  x 8
 #8  x 8
 #9  x 8
 #17  x 1

 Step 4. Attach knobs (part #1) to doors (parts G & H) using long round head bolts (part #11) and phillips head screwdriver.

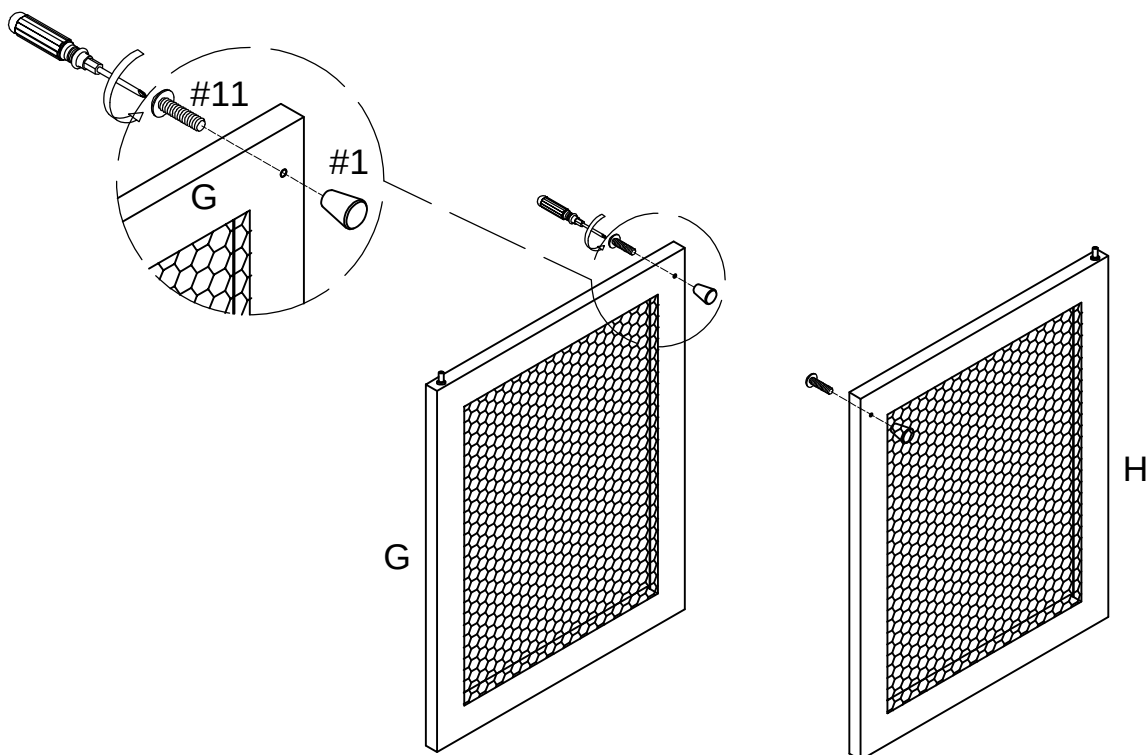

#1  x 2
 #11  x 2


 
Step 5. Attach cover (part N) to top back panel (part L) using short round head bolt (part #12) and phillips head screwdriver.

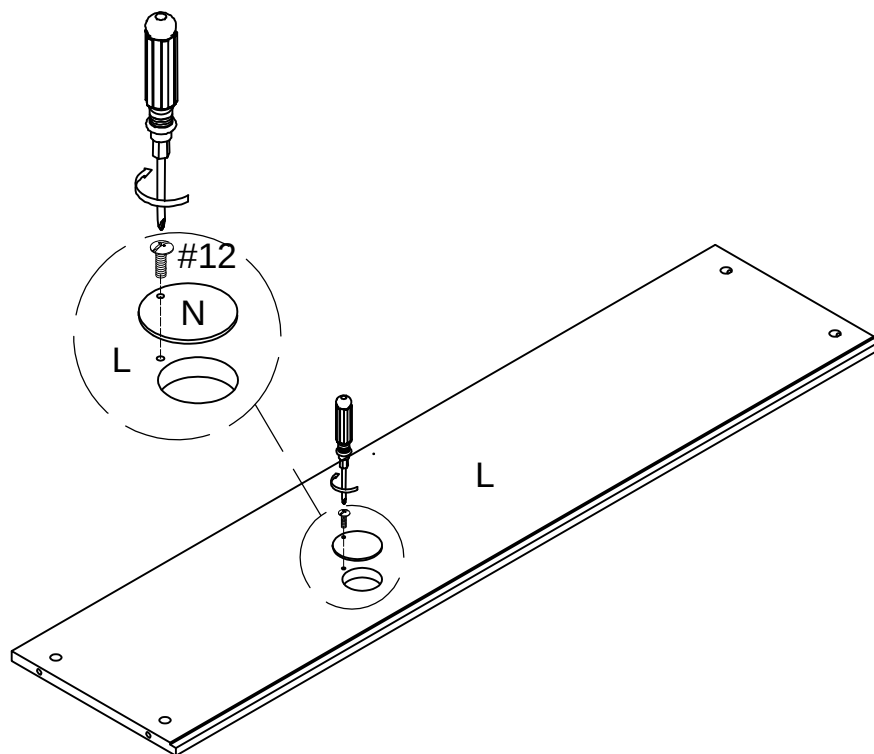

#12  x 1



Step 6. Attach fixed shelf (part I) to rail (part K) using cam locks (part #4) and phillips head screwdriver.

  Note : Cam locks must rotate a full 180°. See pictured insert.

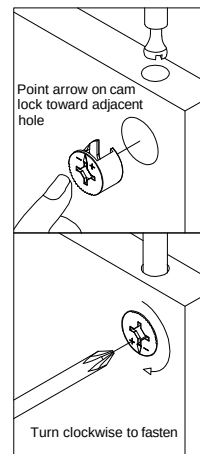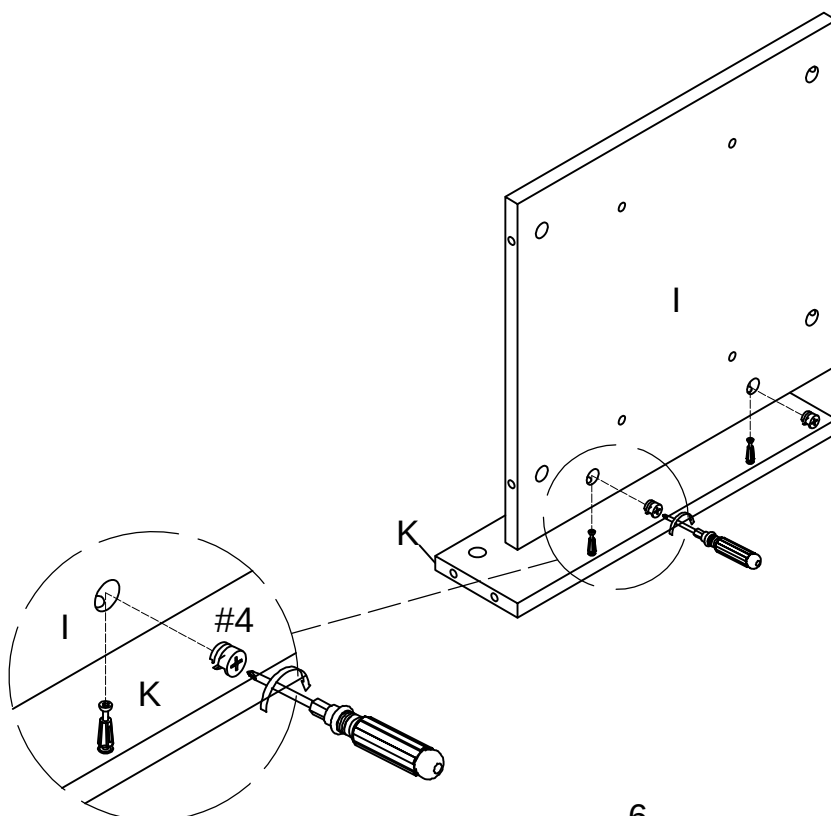



#4  x 2

  Step 7. Attach middle partition panel (part E) to assembled unit (parts K & I) using cam locks (part #4), wood dowel (part #5) and phillips head screwdriver.
 Note : Cam locks must rotate a full 180°. See pictured insert.

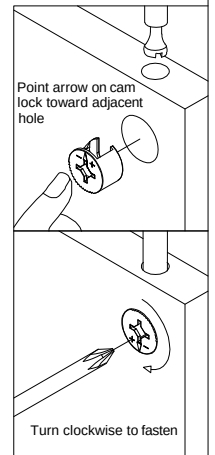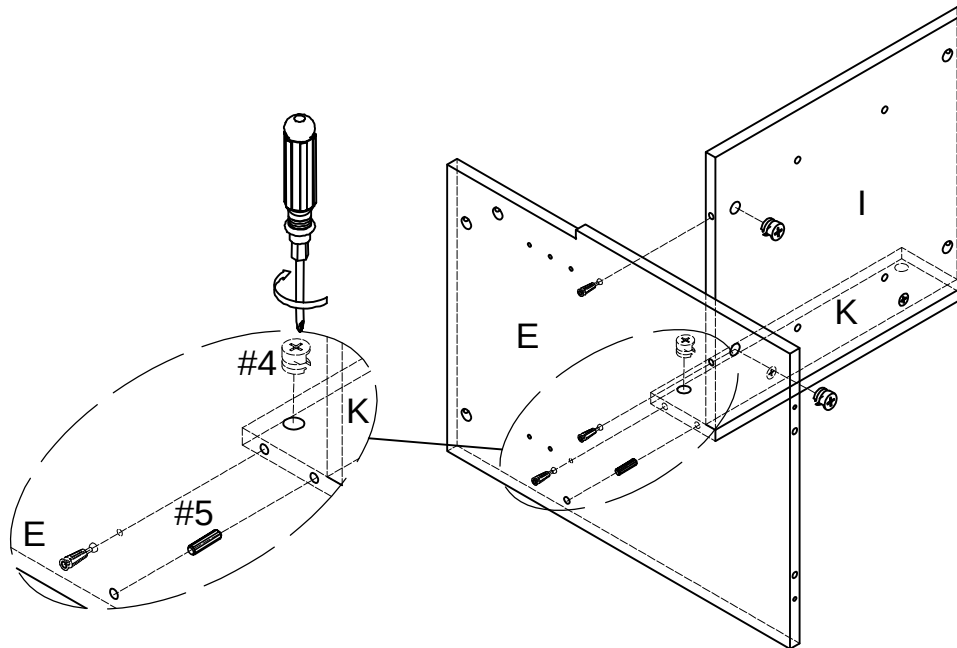

#4  x 3
 #5  x 1

 
 
Step 8. Attach top panel (part A) to middle partition panel (part E) using cam locks (part #4) and phillips head screwdriver.
 Note : Cam locks must rotate a full 180°. See pictured insert.

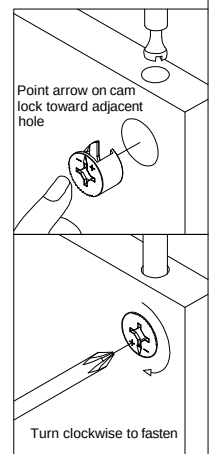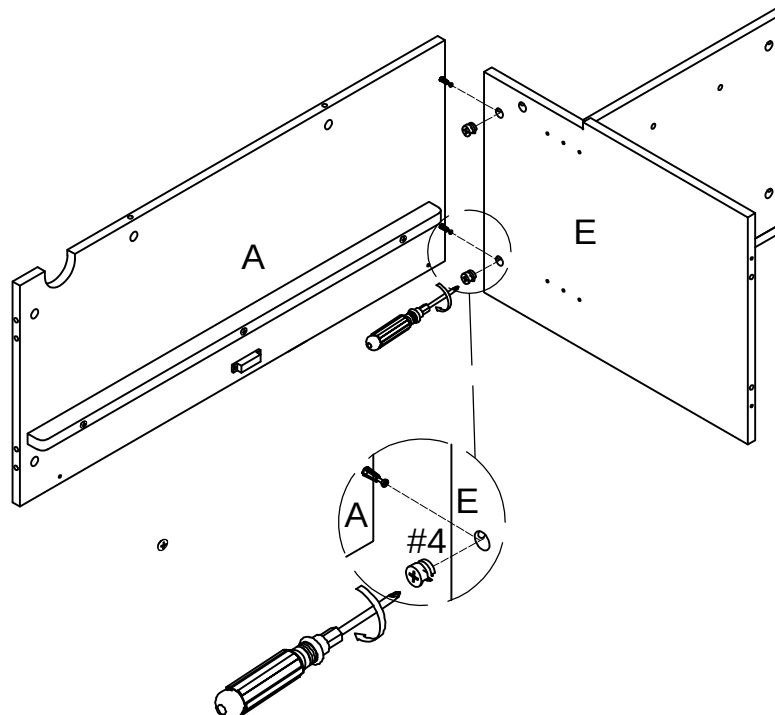

#4  x 2

Step 9. Attach top back panel (part L) to assembled unit (parts A & E) using cam locks (part #4) and phillips head screwdriver.

 
 
Note: Cam locks must rotate a full 180°. See pictured insert.

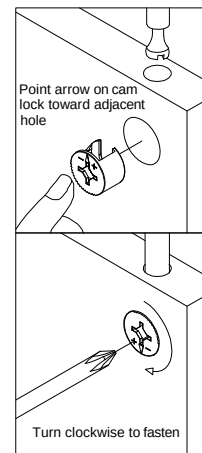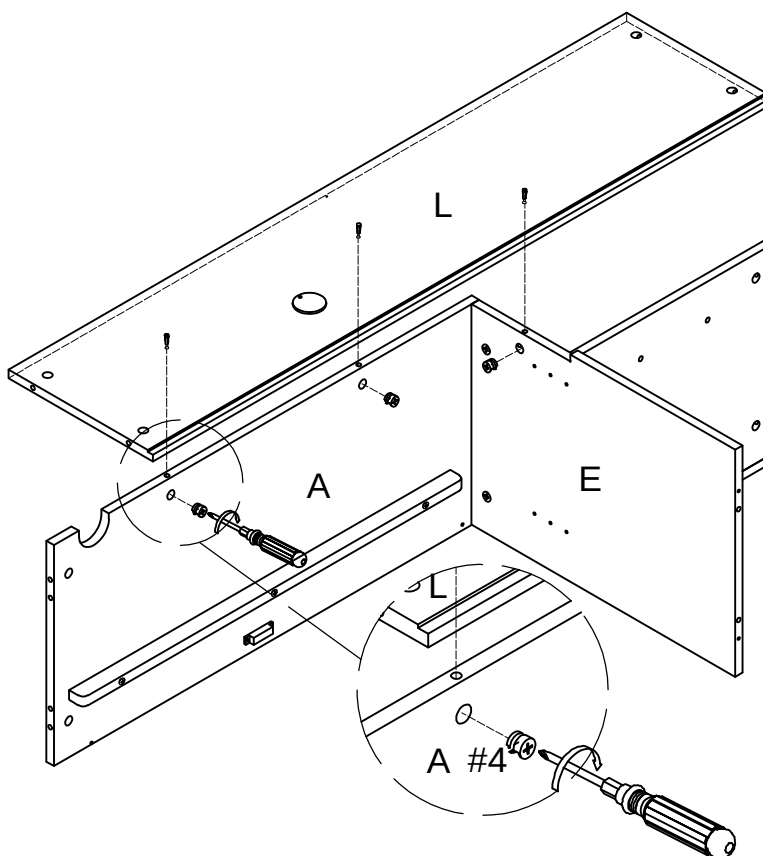

#4  x 3

Step 10. Attach panels (parts B & C) and metal bar (part P) to assembled unit (parts A, E, I, K & L) using cam locks (part #4), wood dowels (part #5) and phillips head screwdriver.

  
Note: Cam locks must rotate a full 180°. See pictured insert.

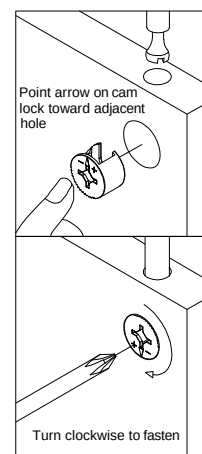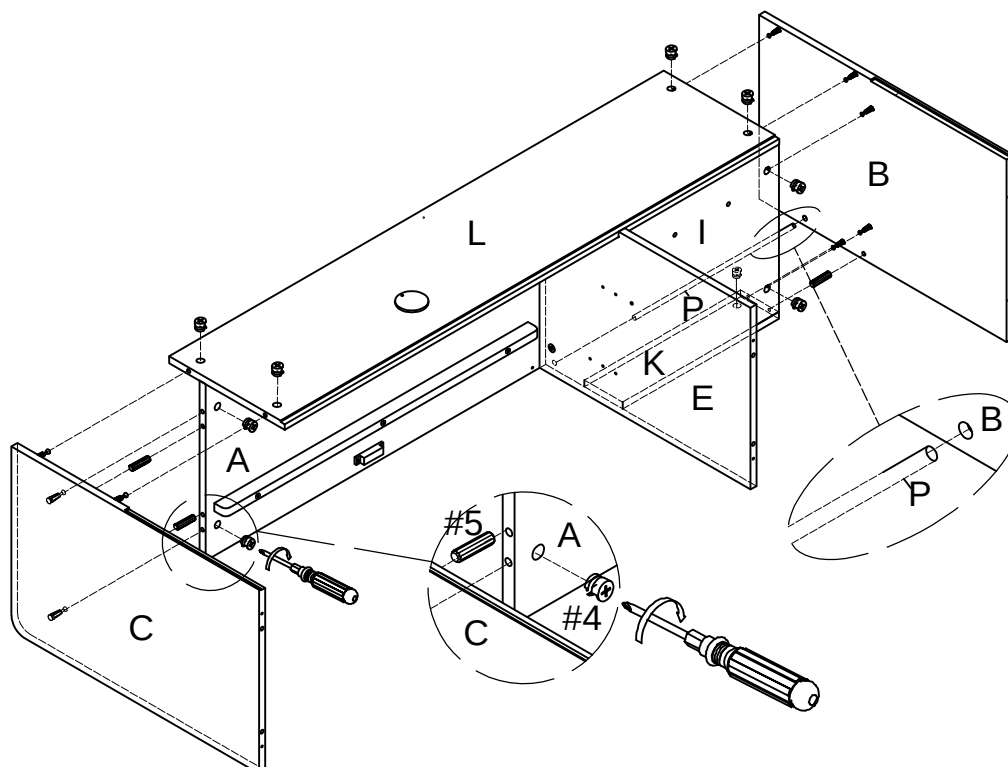

#4  x 9


#5  x 3

 Step 11. Attach left partition panels (part D) to fixed shelf (part I) using wood dowels (part #5).

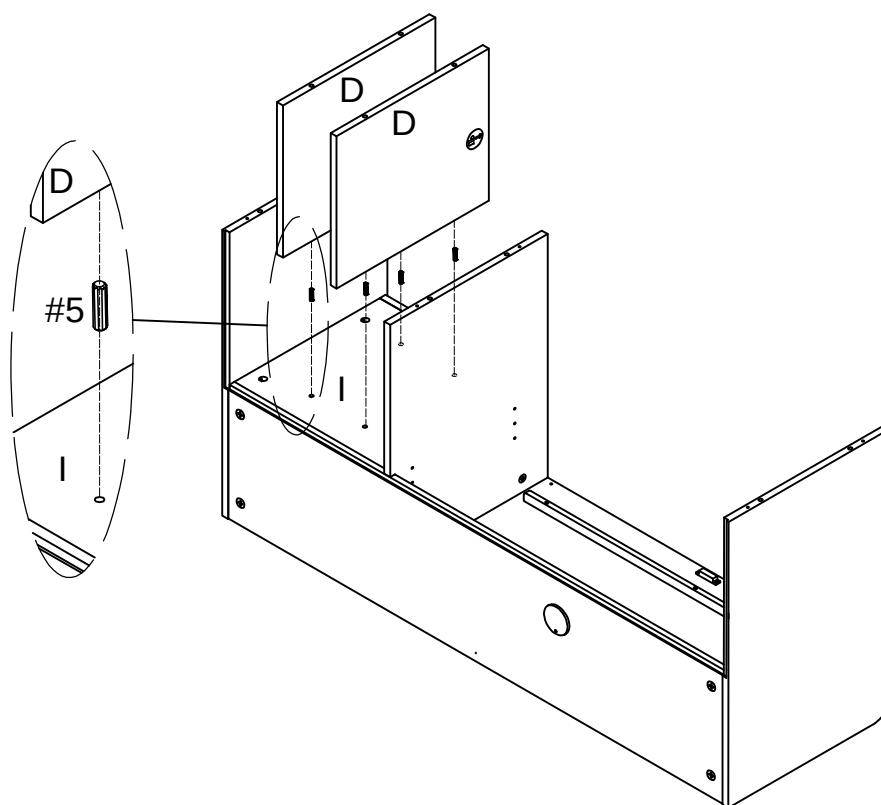

#5  x 4

 Step 12. Attach bottom panel (part F) to assembled unit (parts B, C, D & E) using wood dowels (part #5), tapping bolts (part #6) and allen wrench (part #17).

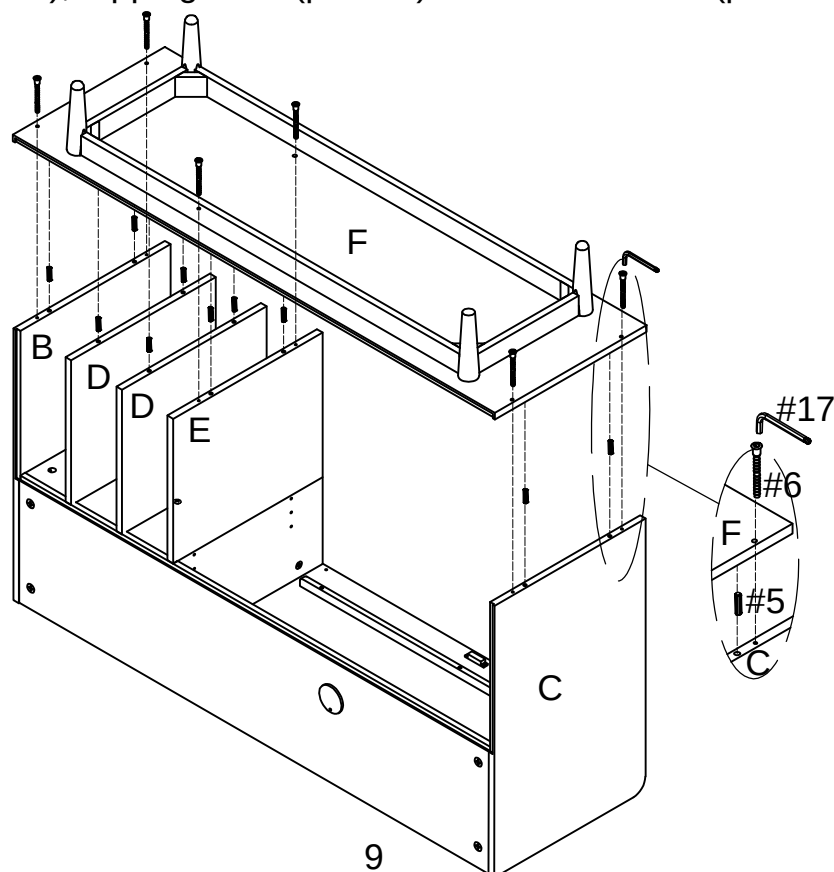


#5  x 10


#6  x 6

#17  x 1

 
Step 13. Attach bottom back panel (part M) to assembled unit (parts B, C, E, F & L) using screws (part #15) and phillips head screwdriver.

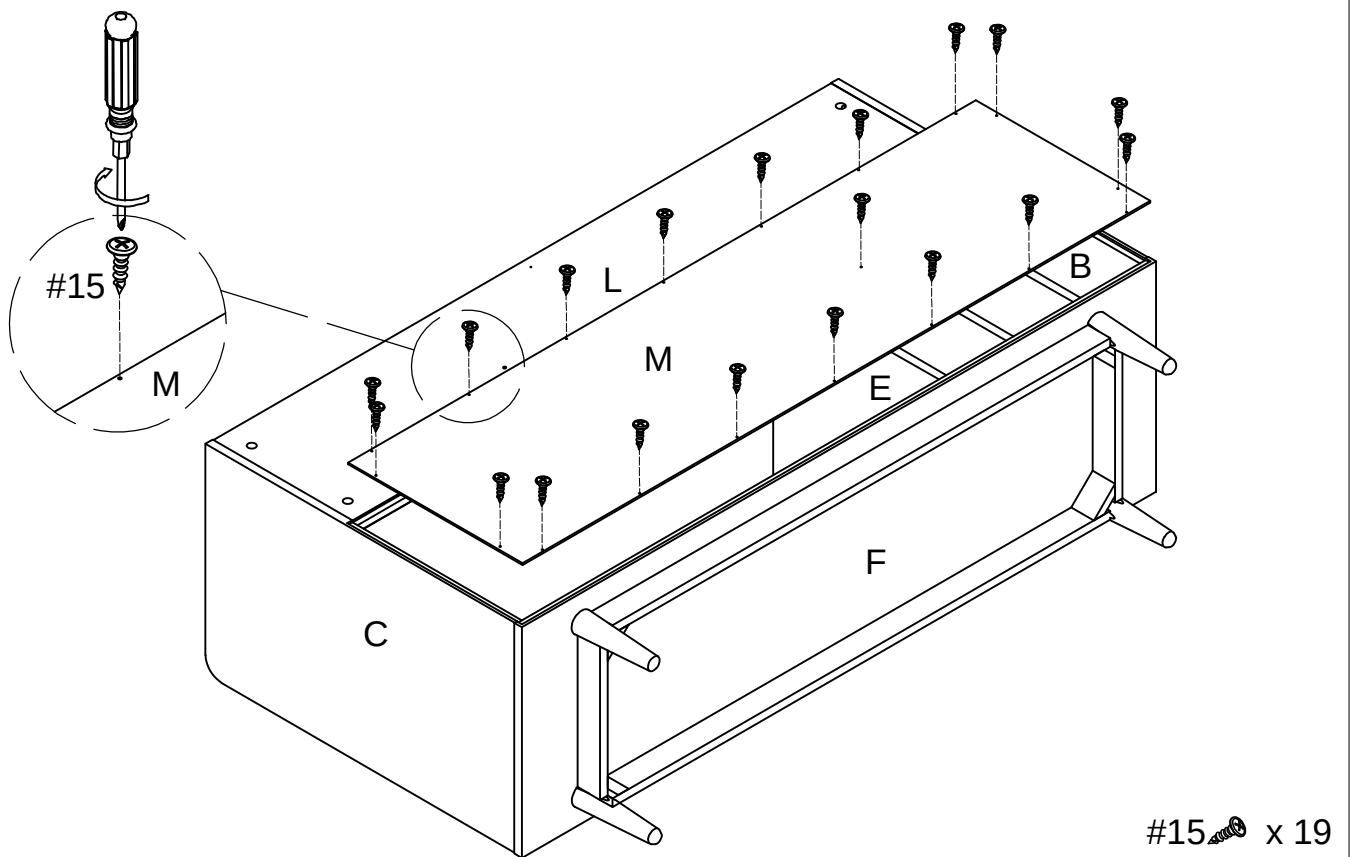

 Step 14. Carefully turn unit upright. Insert shelf holders (part #10) into desired position and slide adjustable shelf (part J) into place.

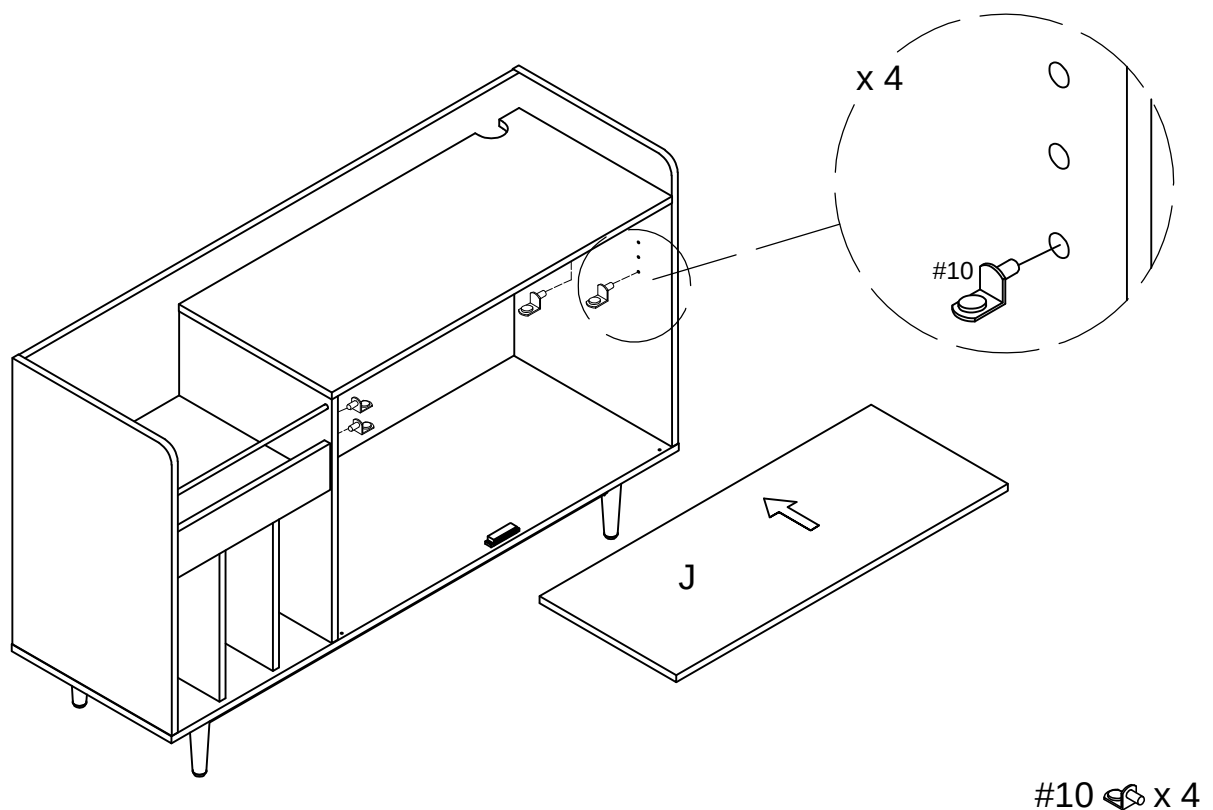


 
Step 15. Attach doors (parts G & H) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part F). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

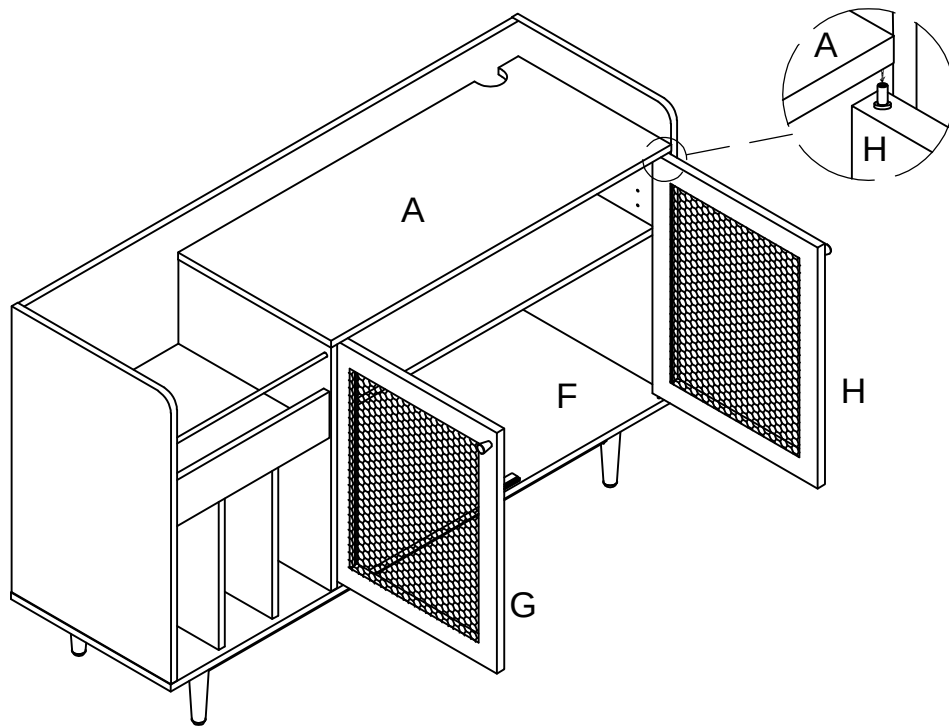


Step 16. Using cam stickers (part #16) cover all cam locks (part #4).

Important: Safety strap kit (part #18) must be installed to prevent tipping damage and/or injury.

  Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

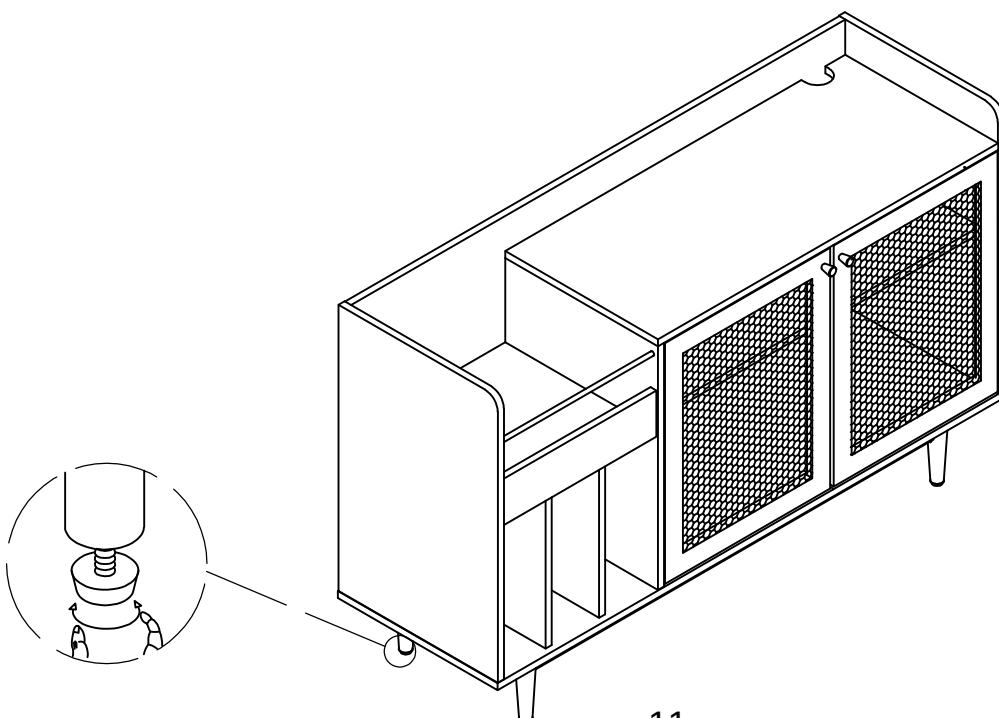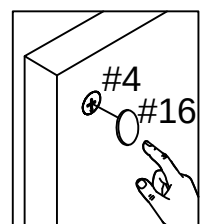

#16 ○ x 19

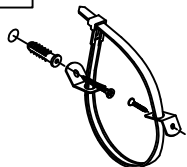 
#18	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top back panel (part L) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top back panel (part L) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

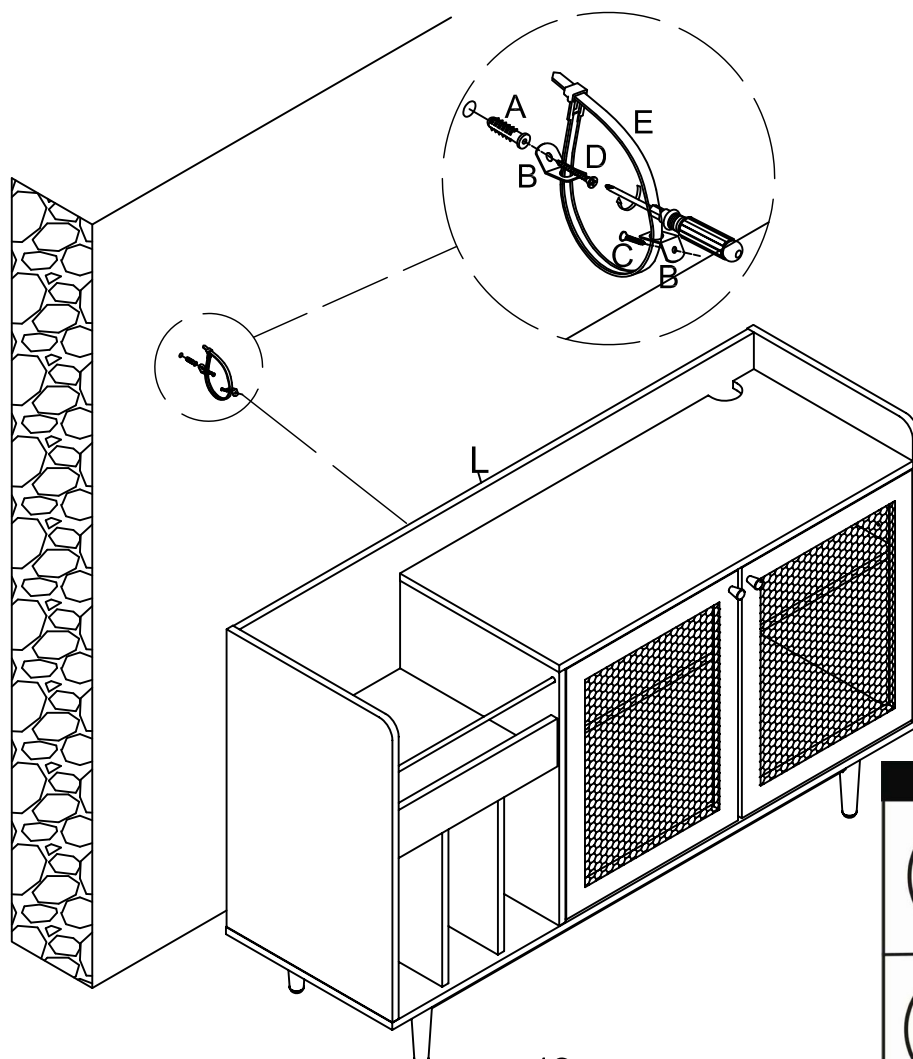

⚠ WARNING




Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.
Do not remove!