 





CROSLEY

FURNITURE


Kitchen Island CF3037

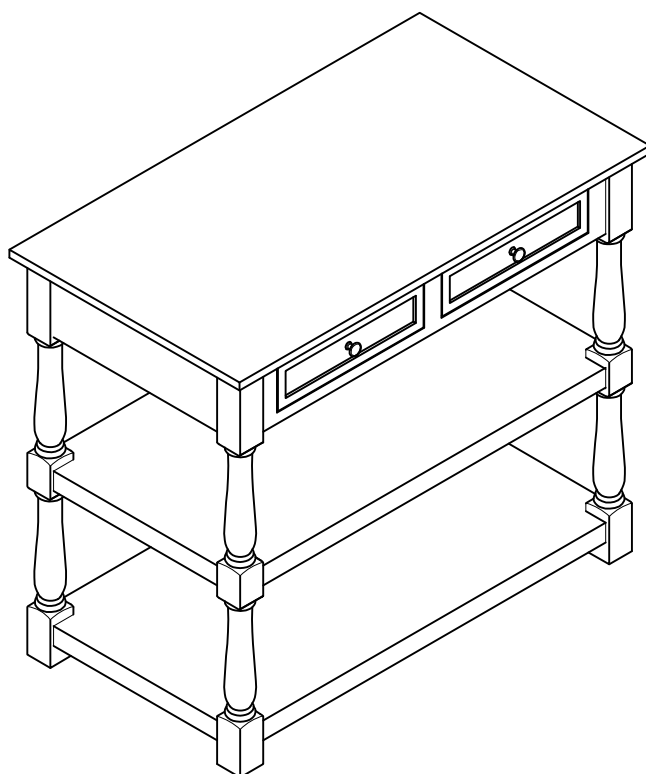

   PART LIST

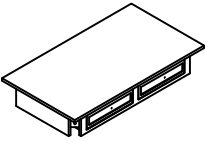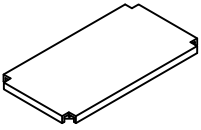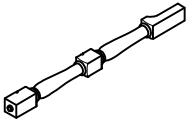
#A 	#B 	#C 
Top 1 PC	Shelf 2 PCS	Leg 4 PCS

 HARDWARE LIST

#1  2"*Ø1/4"	#2 	#3 	#4  5/8"*Ø5/32	#5 
Bolt 16 PCS (Extra 1)	Spring Washer 16 PCS (Extra 1)	Flat Washer 16 PCS (Extra 1)	Round Head Bolt 4 PCS	Knob 4 PCS
#6  Allen Wrench 1 PC				


ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

 
Step 1. Carefully lay top (part A) upside down on a soft surface, such as carpet, then take out the drawers from top (part A) as shown.

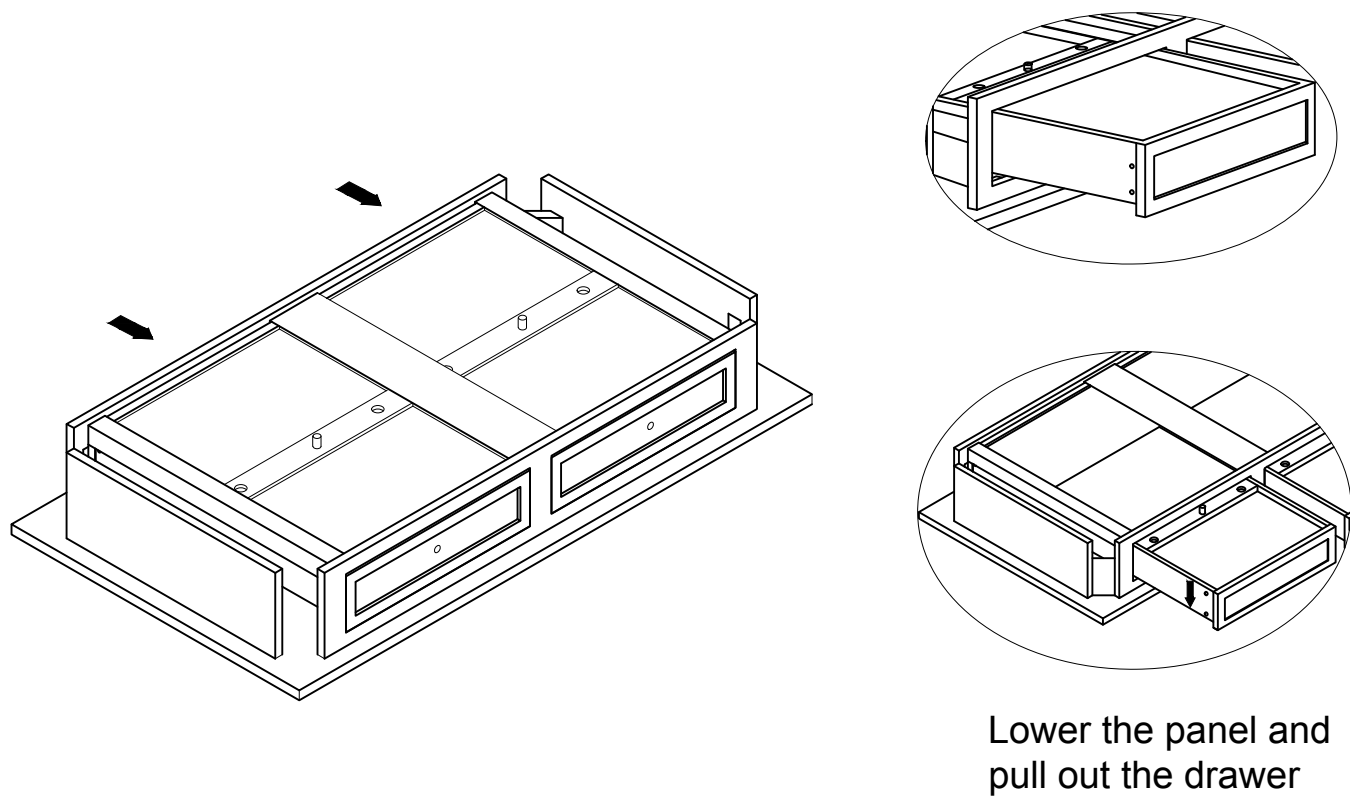

 Step 2. Attach knobs (part #5) to drawer front panel using round head bolts (part #4) and phillips head screwdriver.

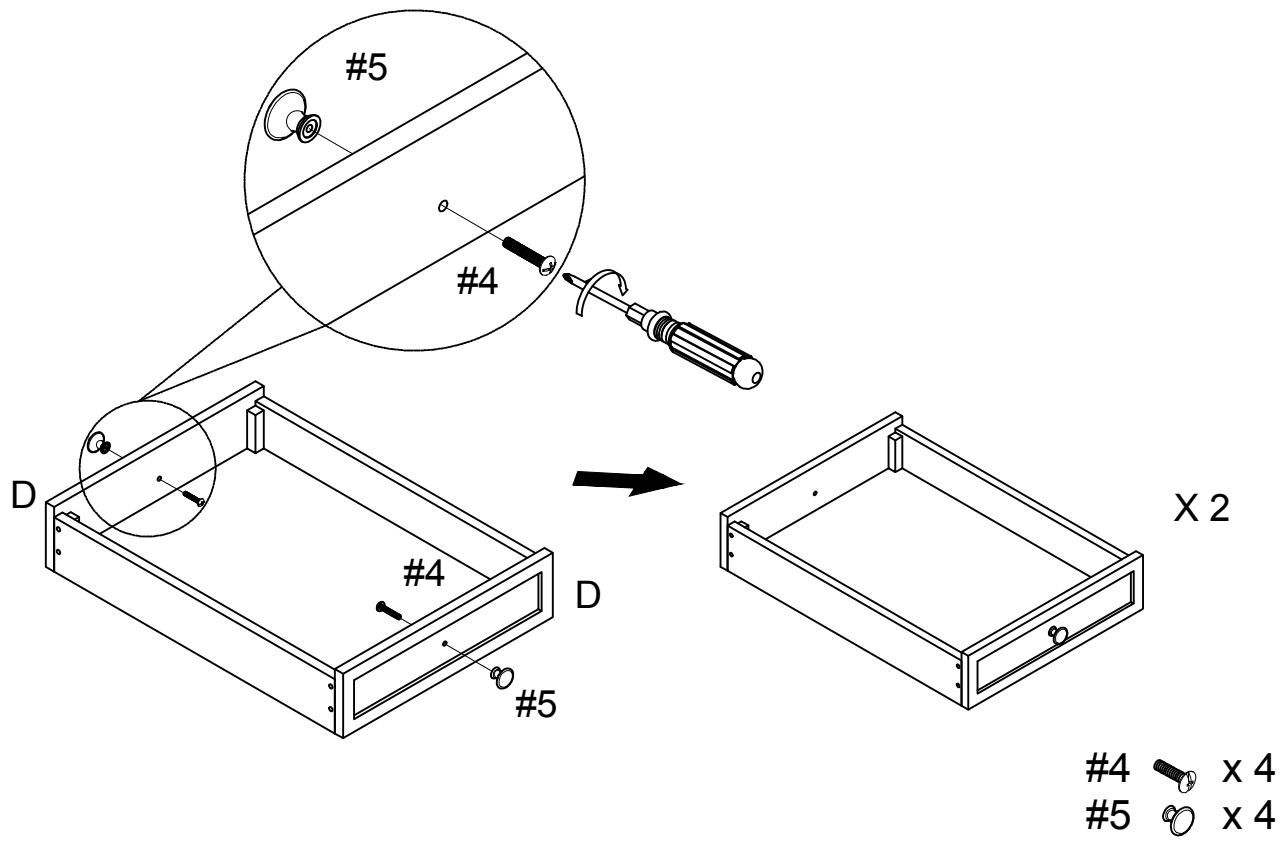


 Step 3. Attach 3 legs (part C) to top (part A) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #6).

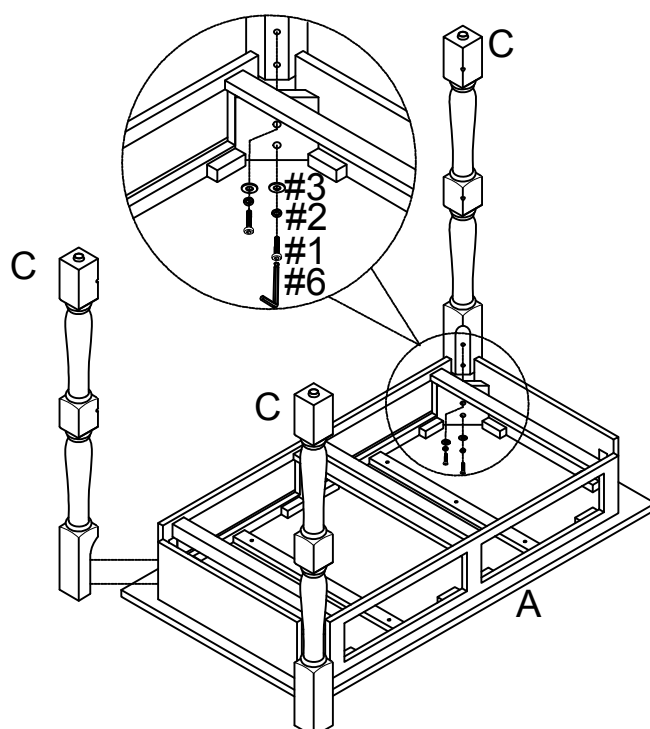


#1  x 6
 #2  x 6
 #3  x 6
 #6  x 1

 Step 4. Attach shelf (part B) to legs (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #6).

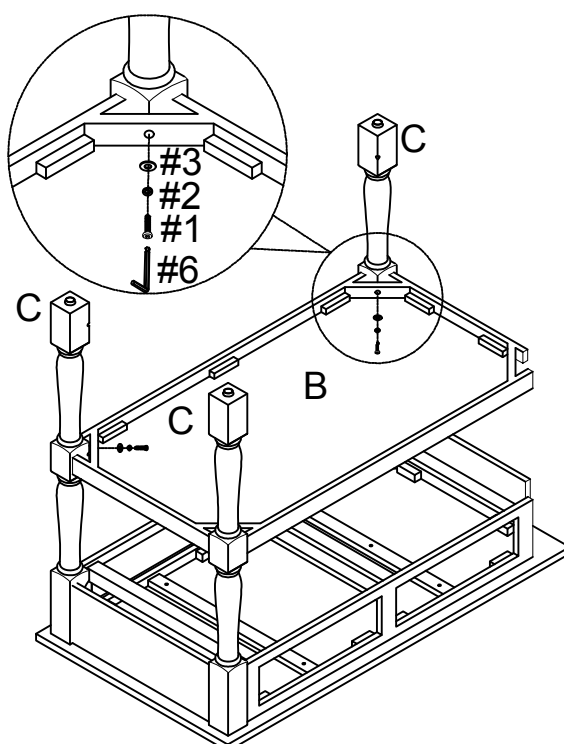


#1  x 3
 #2  x 3
 #3  x 3
 #6  x 1

 Step 5. Attach shelf (part B) to legs (part C) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #6).

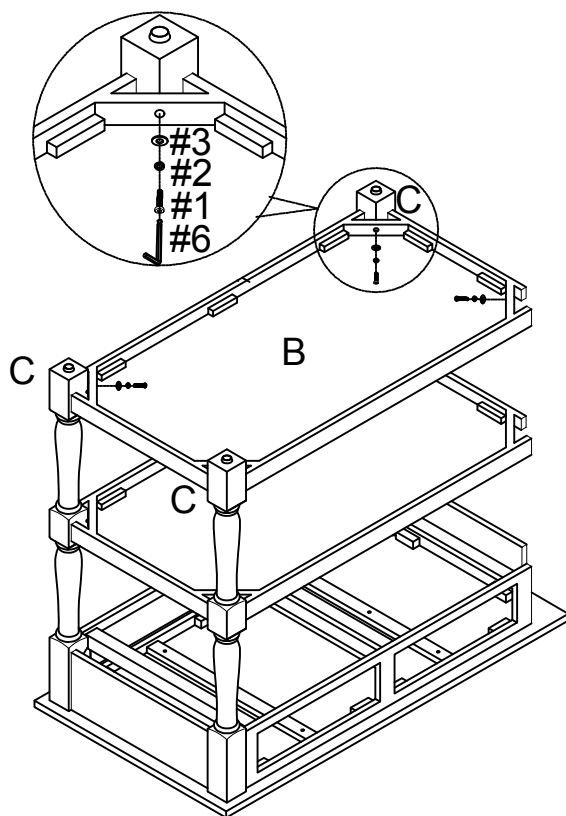

- #1  x 3
- #2  x 3
- #3  x 3
- #6  x 1

 Step 6. Attach leg (part C) to assembled unit (parts A & B) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #6).

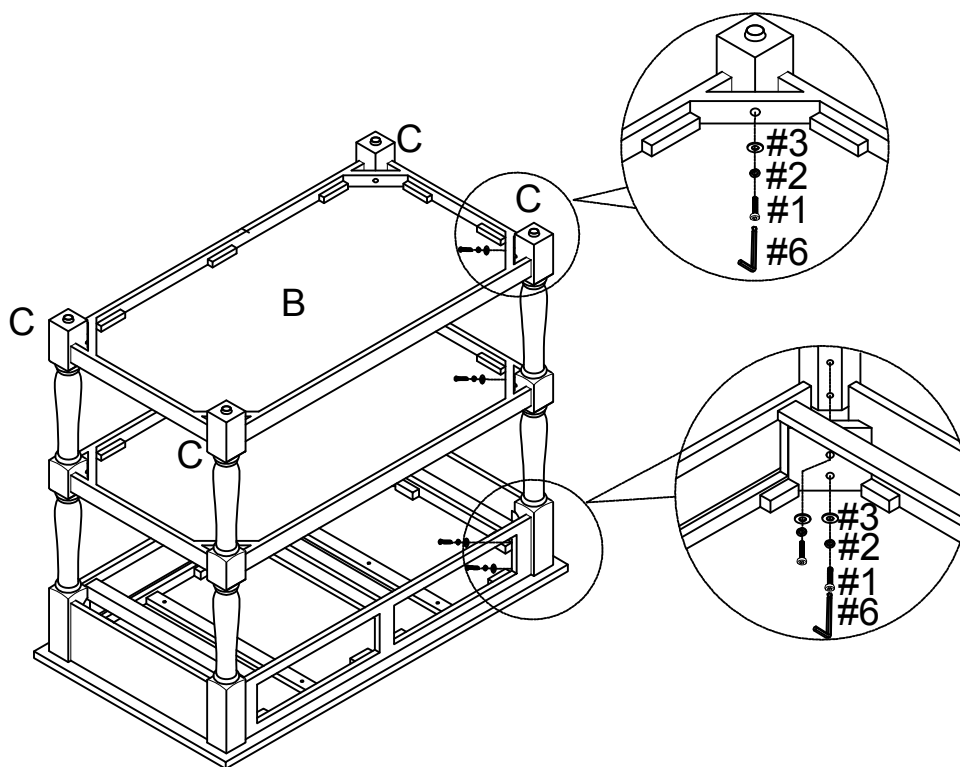

- #1  x 4
- #2  x 4
- #3  x 4
- #6  x 1

Step 7. Carefully turn the unit upright, slide drawers into top (part A) as shown.

Note: It is important to adjust the level once fully assembled and upright. Extend the adjustable level until it touches the floor firmly. If moving, adjust the level as needed until it firmly touches the floor in its new location.

