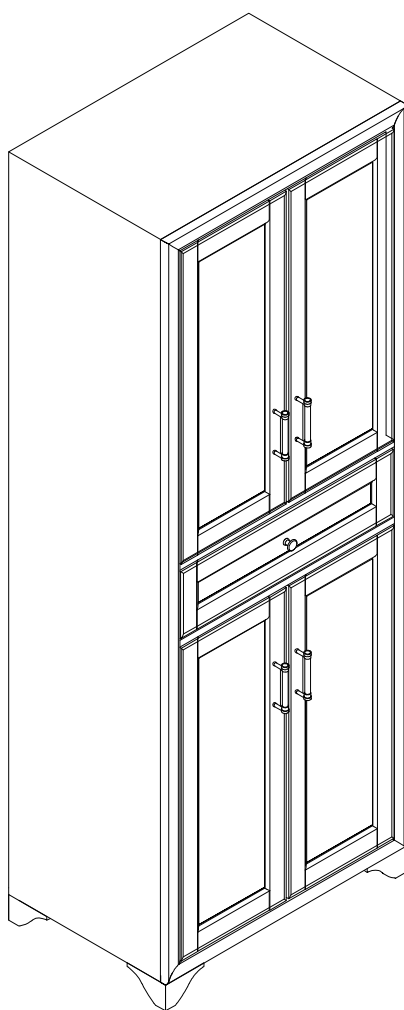


















CROSLEY

FURNITURE











Kitchen Storage Panty CF3111



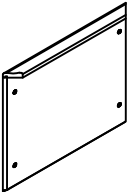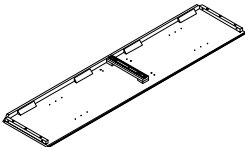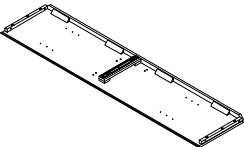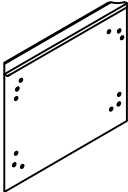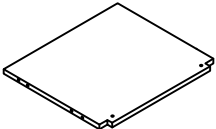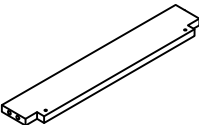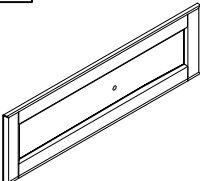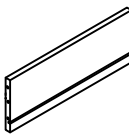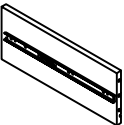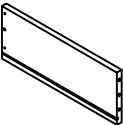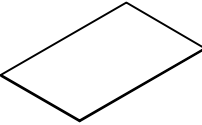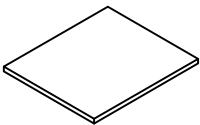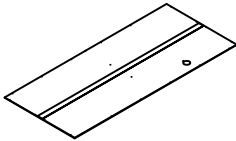   PART LIST


A2 	B2 	C2 	D2 	E3 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Fixed Shelf 1 PC
F2 	G2 	H2 	I2 	J3 
Rail 1 PC	Left Door 2 PCS	Right Door 2 PCS	Drawer Front Panel 1 PC	Drawer Back Panel 1 PC
K3 	L3 	M3 	N3 	O2 
Drawer Left Panel 1 PC	Drawer Right Panel 1 PC	Drawer Bottom Panel 1 PC	Adjustable Shelf 2 PCS	Leg 4 PCS
P3 	Q 			
Back Panel 1 PC	Cover 1 PC			

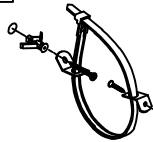         HARDWARE LIST

#1  Ø8*30mm Large Wood Dowel 14 PCS (Extra 1)	#2  Ø6*30mm Small Wood Dowel 4 PCS (Extra 1)	#3  Double Magnet 2 PCS	#4  Round Head Screw 4 PCS (Extra 1)	#5  Handle 4 PCS
#6  Knob 1 PC	#7  Short Round Head Bolt 1 PC (Extra 1)	#8  Long Round Head Bolt 8 PCS (Extra 1)	#9  Bolt 12 PCS (Extra 1)	#10  1/4"*13mm Flat Washer 4 PCS (Extra 1)
#11  1/4"*10mm Spring Washer 4 PCS (Extra 1)	#12  Shelf Holder 8 PCS (Extra 1)	#13  Screw 22 PCS (Extra 1)	#14  Cam Bolt 14 PCS (Extra 1)	#15  Cam Lock 14 PCS (Extra 1)
#16  Binding Post 1 PC (Extra 1)	#17  Cam Sticker 14 PCS (Extra 1)	#18  M2 Small Allen Wrench 1 PC	#19  M4 Allen Wrench 1 PC	#20  Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

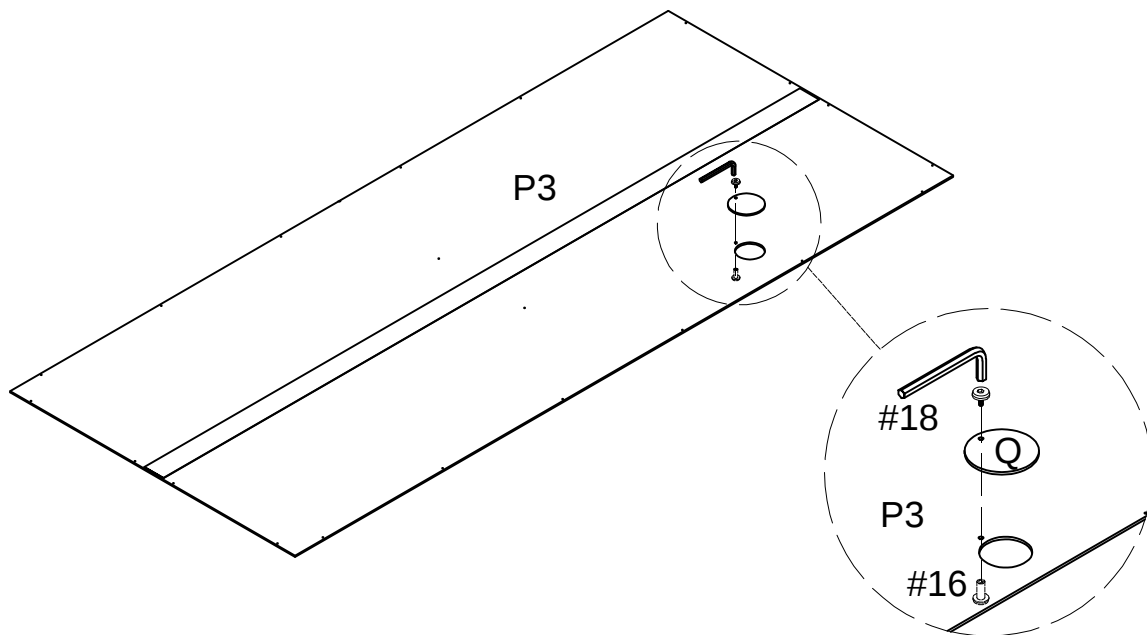
Step 1. Attach cover (part Q) to back panel (part P3) using binding post (part #16) and small allen wrench (part #18).



#16  x 1


#18  x 1

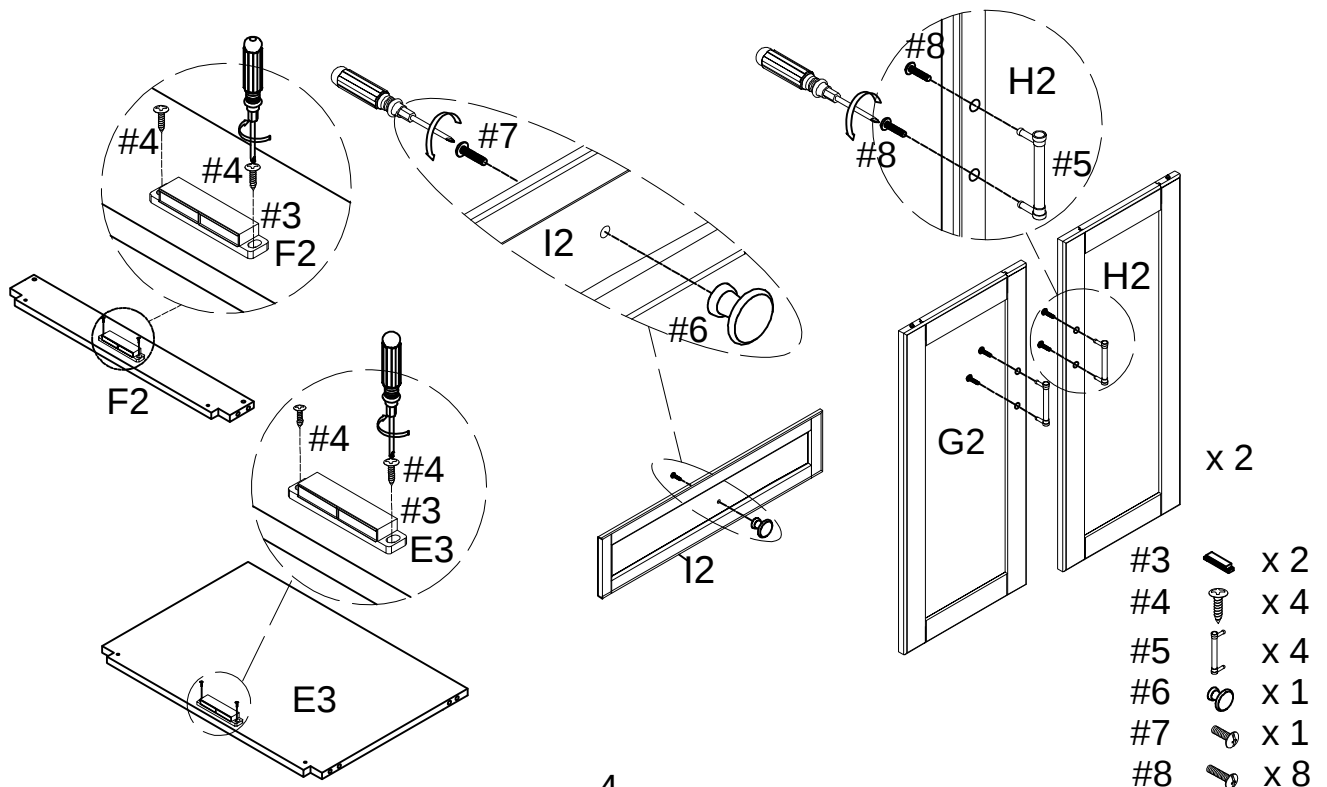Step 2. Attach double magnets (part #3) to fixed shelf (part E3) and rail (part F2) using round head screws (part #4) and phillips head screwdriver. Attach handles (part #5) to doors (parts G2 & H2) using long round head bolts (part #8) and phillips head screwdriver. Attach knob (part #6) to drawer front panel (part I2) using short round head bolt (part #7) and phillips head screwdriver.




Step 3. Insert cam bolts (part #14) into pre-drilled holes of panels (parts B2, C2, I2, K3 & L3) using phillips head screwdriver.

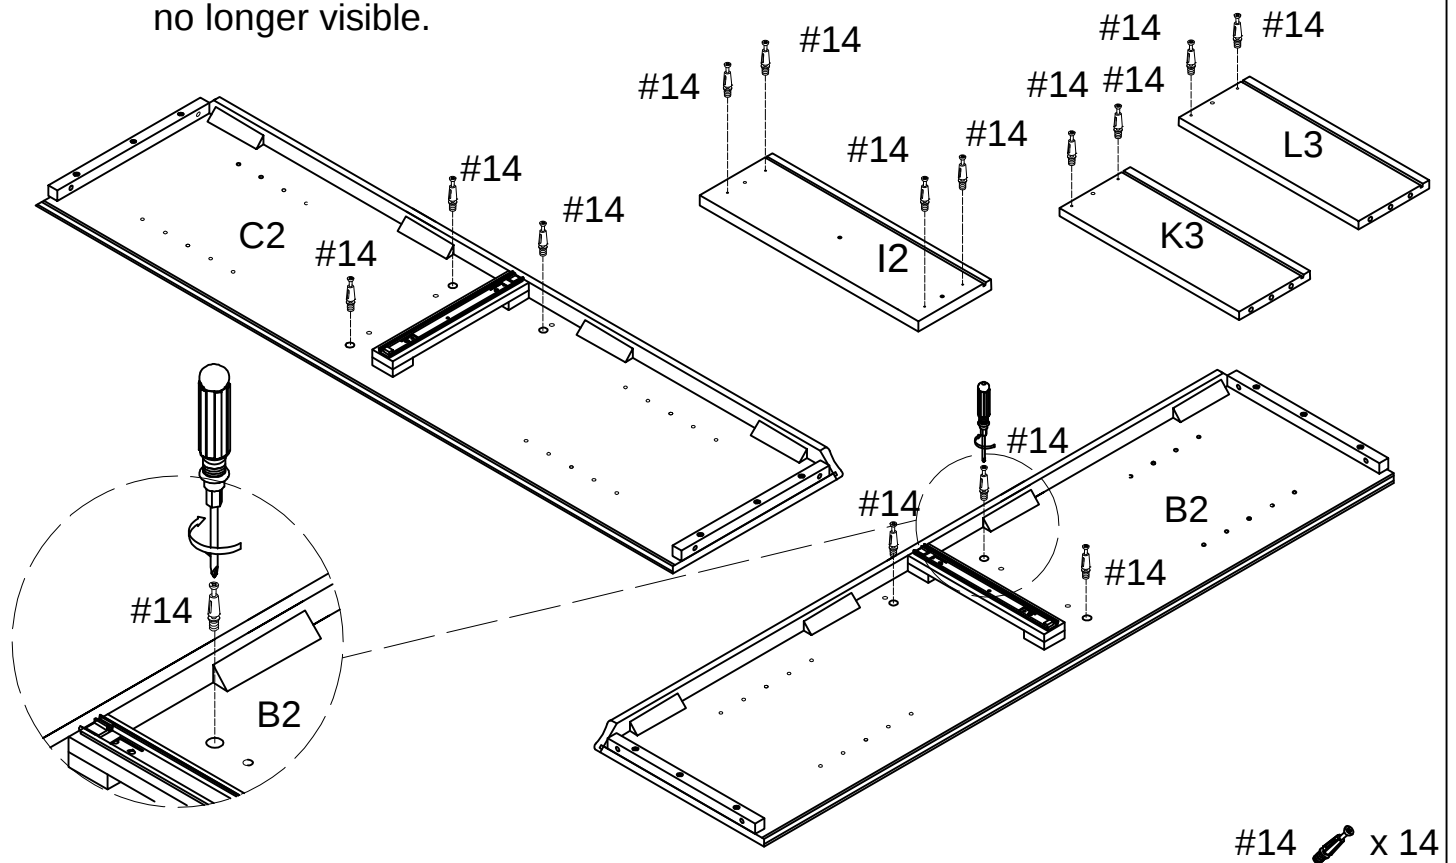Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 4. Attach drawer panels (parts K3 & L3) to drawer back panel (part J3) using small wood dowels (part #2), cam locks (part #15) and phillips head screwdriver. Slide drawer bottom panel (part M3) into grooves of assembled unit (parts J3, K3 & L3). Attach drawer front panel (part I2) to assembled unit (parts K3, L3 & M3) using small wood dowels (part #2), cam locks (part #15) and phillips head screwdriver.

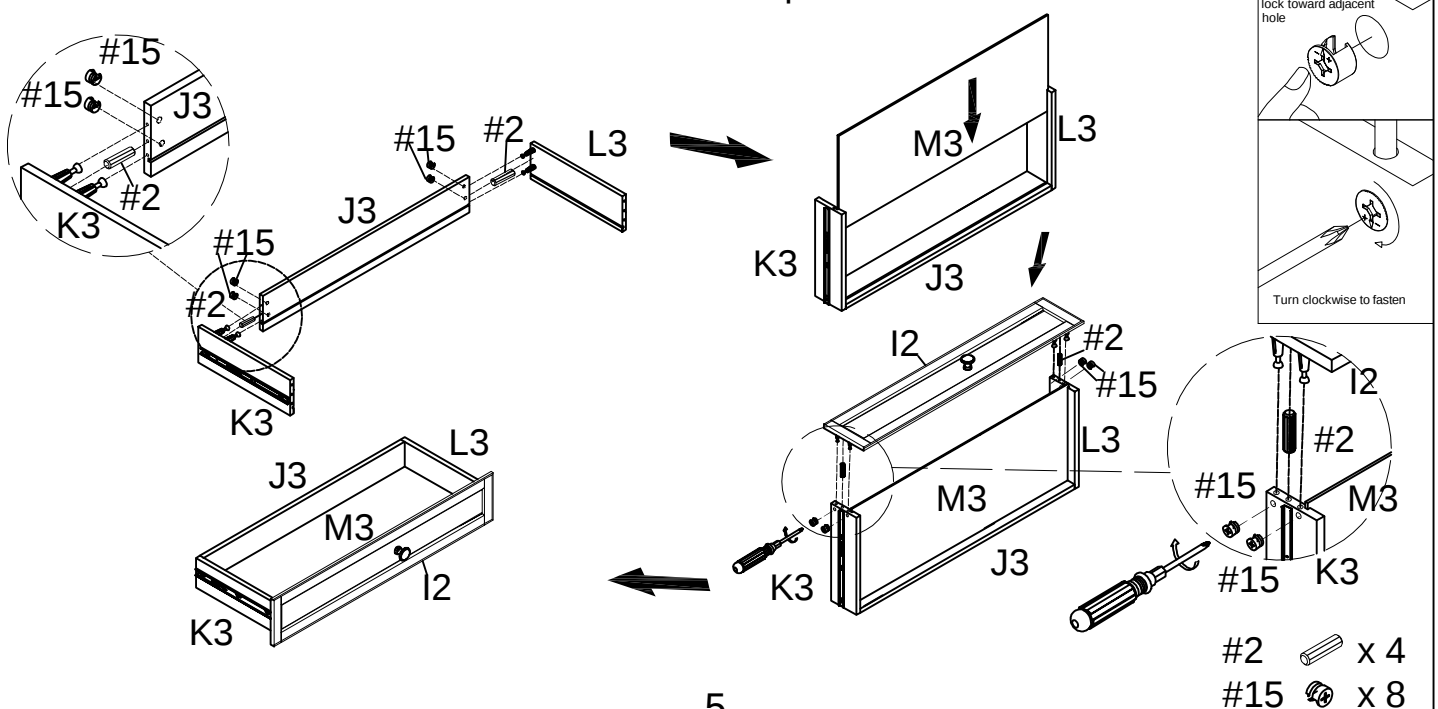Note: Cam locks must rotate a full 180°. See pictured insert.



Step 5. Attach fixed shelf (part E3) and rail (part F2) to left panel (part B2) using large wood dowels (part #1), cam locks (part #15) and phillips head screwdriver.

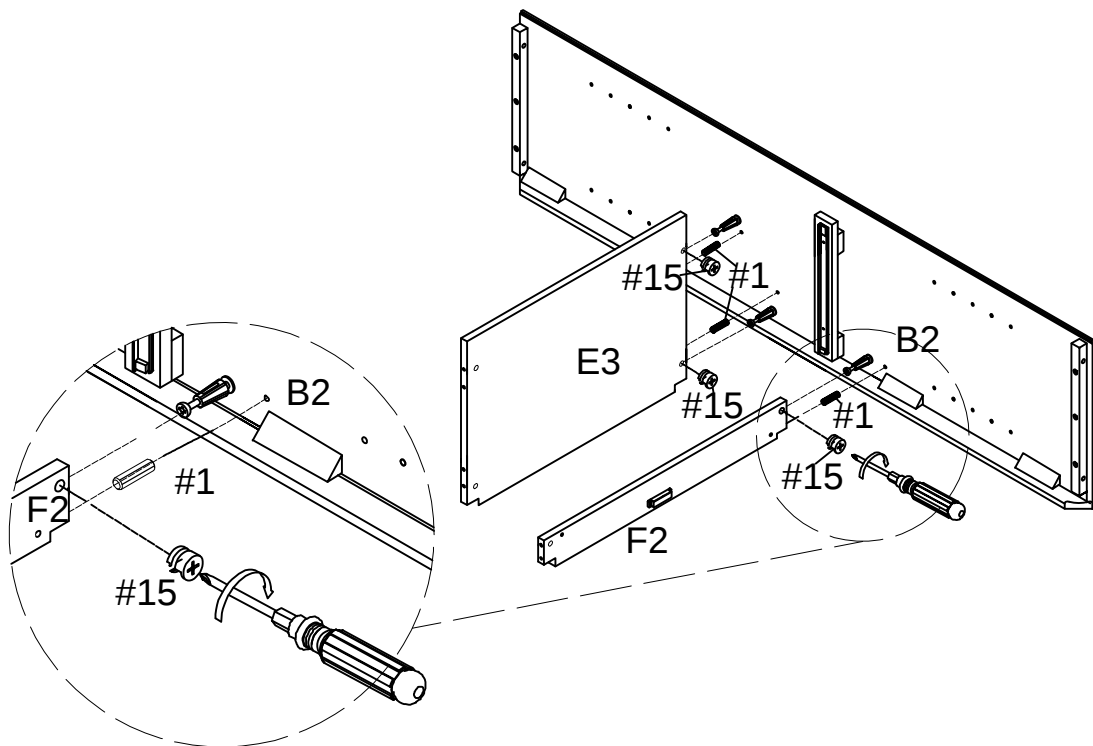
Note: Cam lock must rotate a full 180°. See pictured insert.



#1  x 3
#15  x 3


Step 6. Attach right panel (part C2) to fixed shelf (part E3) and rail (part F2) using large wood dowels (part #1), cam locks (part #15) and phillips head screwdriver.

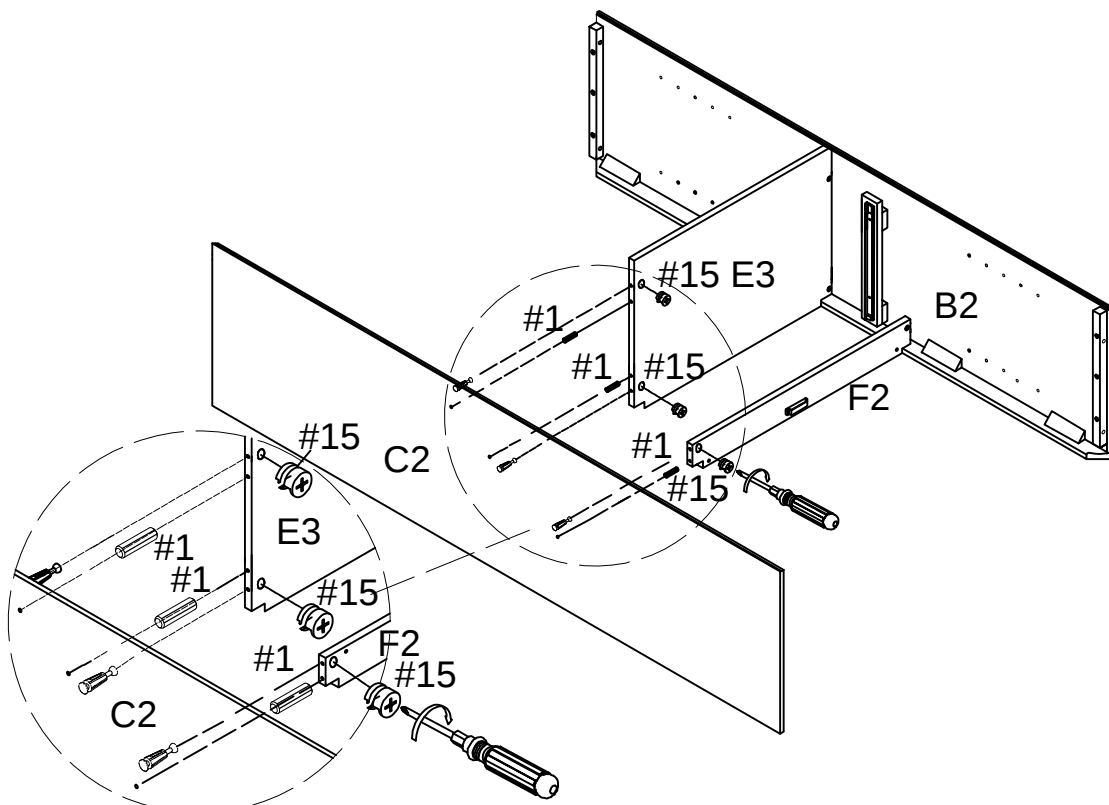Note: Cam locks must rotate a full 180°. See pictured insert.




#1  x 3
#15  x 3

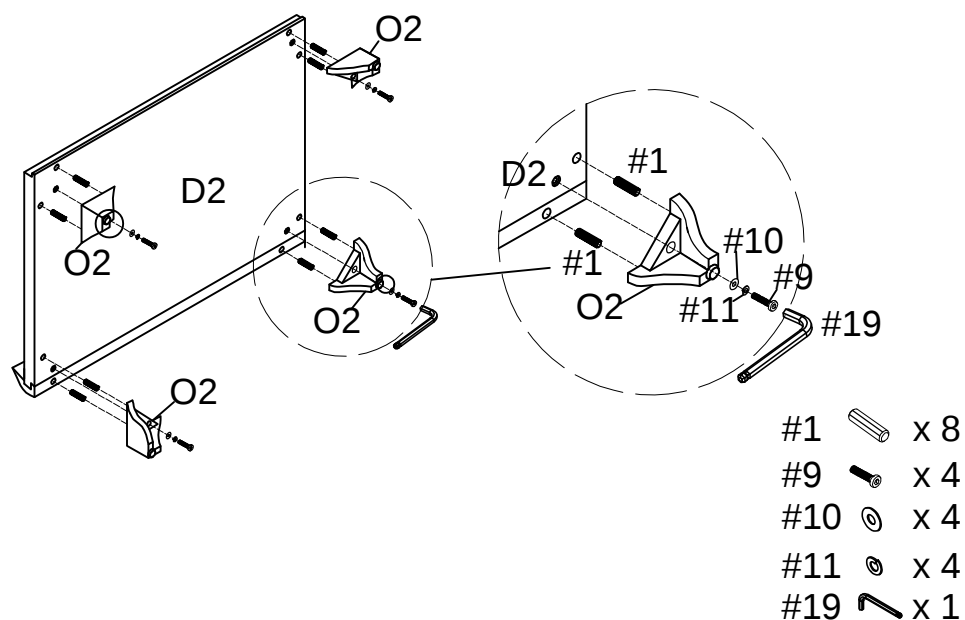
Step 7. Attach legs (part O2) to bottom panel (part D2) using large wood dowels (part #1), bolts (part #9), flat washers (part #10), spring washers (part #11) and allen wrench (part #19).



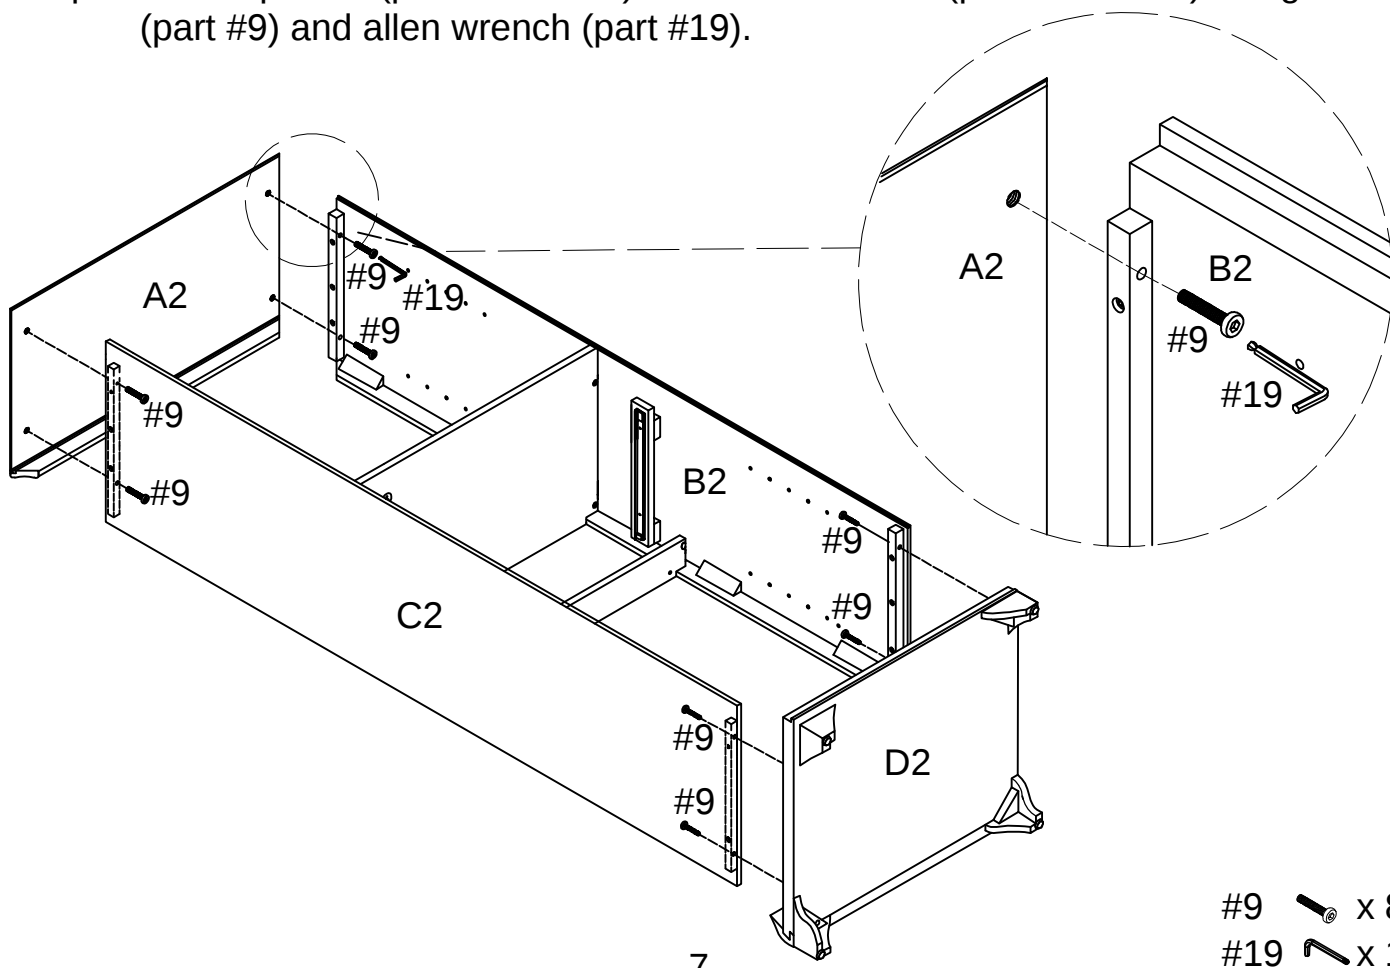Step 8. Attach panels (parts A2 & D2) to assembled unit (parts B2 & C2) using bolts (part #9) and allen wrench (part #19).



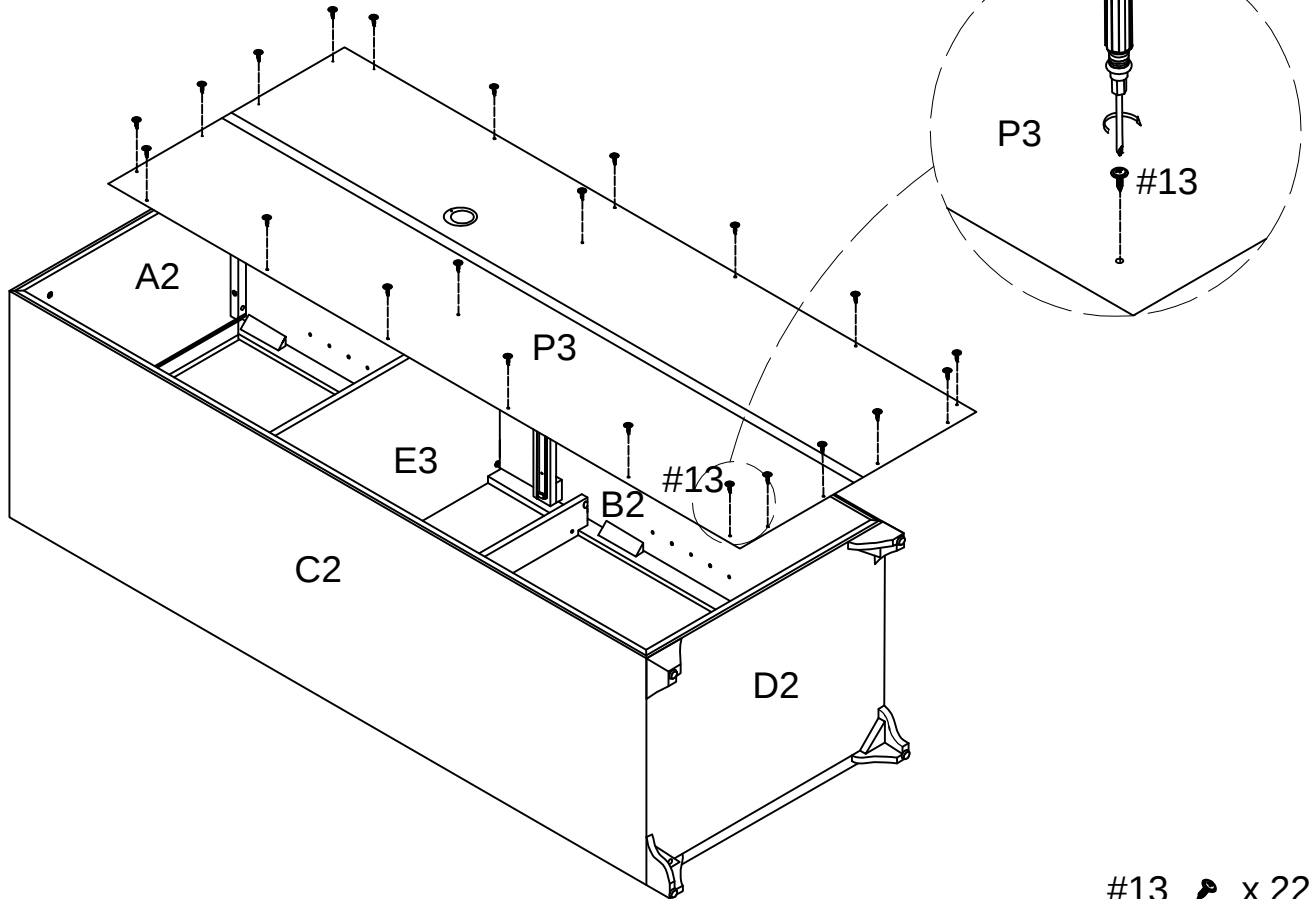Step 9. Attach back panel (part P3) to assembled unit (parts A2, B2, C2, D2 & E3) using screws (part #13) and phillips head screwdriver.




Step 10. Carefully turn unit upright. Slide assembled drawer into place.

Attach doors (parts G2 & H2) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D2) and fixed shelf (part E3). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of rail (part F2) and top panel (part A2).




Note: Be sure top and bottom pin hinges are fully extended to secure door in place.

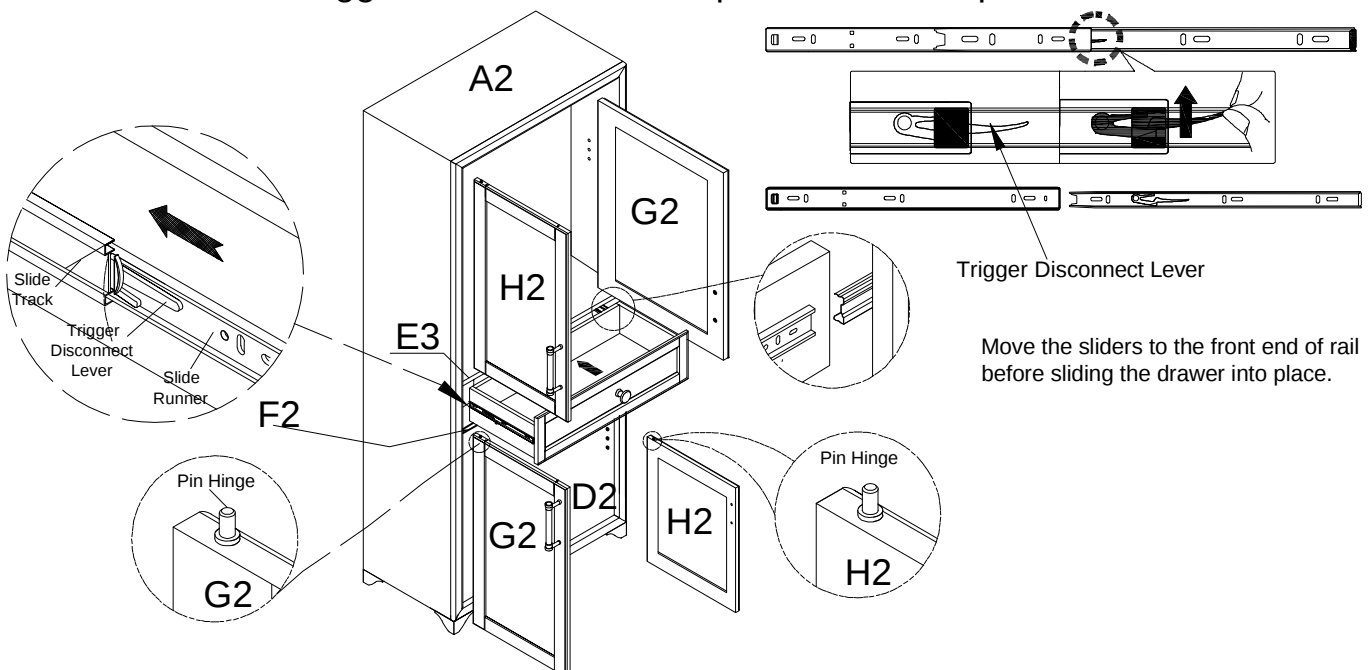Note: To release trigger disconnect levers push one side up and the other down.



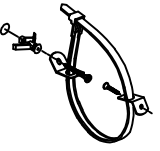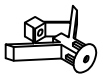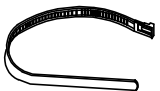  Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.




#20	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

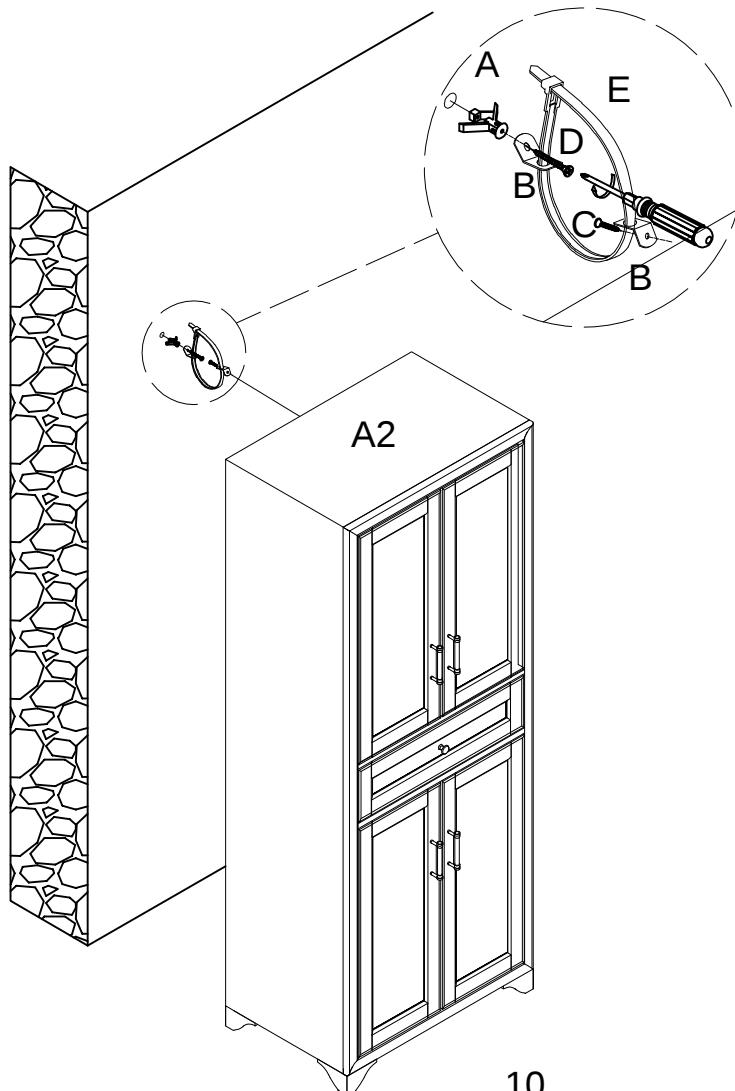Note: This item is not intended for clothing storage use.



⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>