 











CROSLEY

F U R N I T U R E






Stackable Pantry CF3126

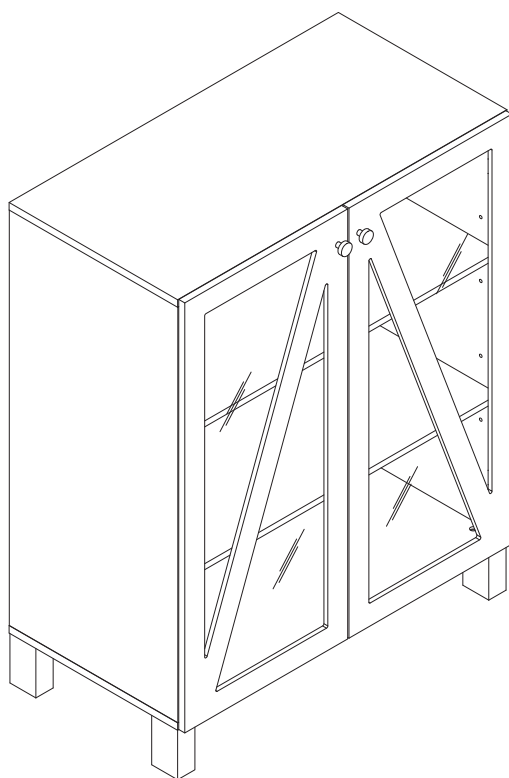

         PART LIST

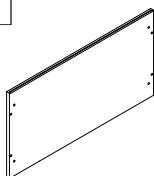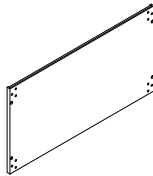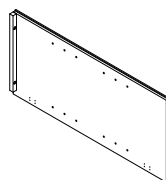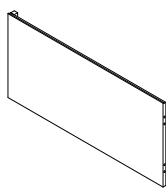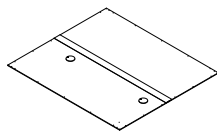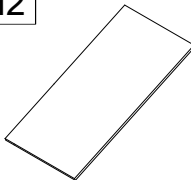
A2		B2		C2		D2		E	
Top Panel 1 PC		Bottom Panel 1 PC		Left Panel 1 PC		Right Panel 1 PC		Left Door 1 PC	
F		G2		H2		I			
Right Door 1 PC		Back Panel 1 PC		Adjustable Shelf 2 PCS		Leg 4 PCS			

     HARDWARE LIST
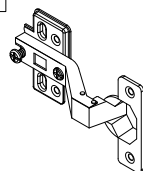
#1		#2		#3		#4		#5	
Bolt 16 PCS (Extra 1)		Wood Dowel 12 PCS (Extra 1)		Hinge 4 PCS		Screw 32 PCS (Extra 1)		Knob 2 PCS	
#6		#7		#8		#9		#10	
Round Head Bolt 2 PCS (Extra 1)		Round Head Screw 22 PCS (Extra 1)		Shelf Holder 8 PCS (Extra 1)		Connecting Bar 2 PCS		Allen Wrench 1 PC	
#11		#12							
Cover 8 PCS (Extra 1)		Safety Strap Kit 1 SET							

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.

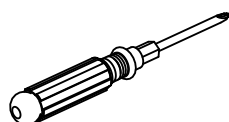


Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Step 1. Attach hinges (part #3) to doors (parts E & F) using screws (part #4) and phillips head screwdriver. Attach knobs (part #5) to doors (parts E & F) using round head bolts (part #6) and phillips head screwdriver.

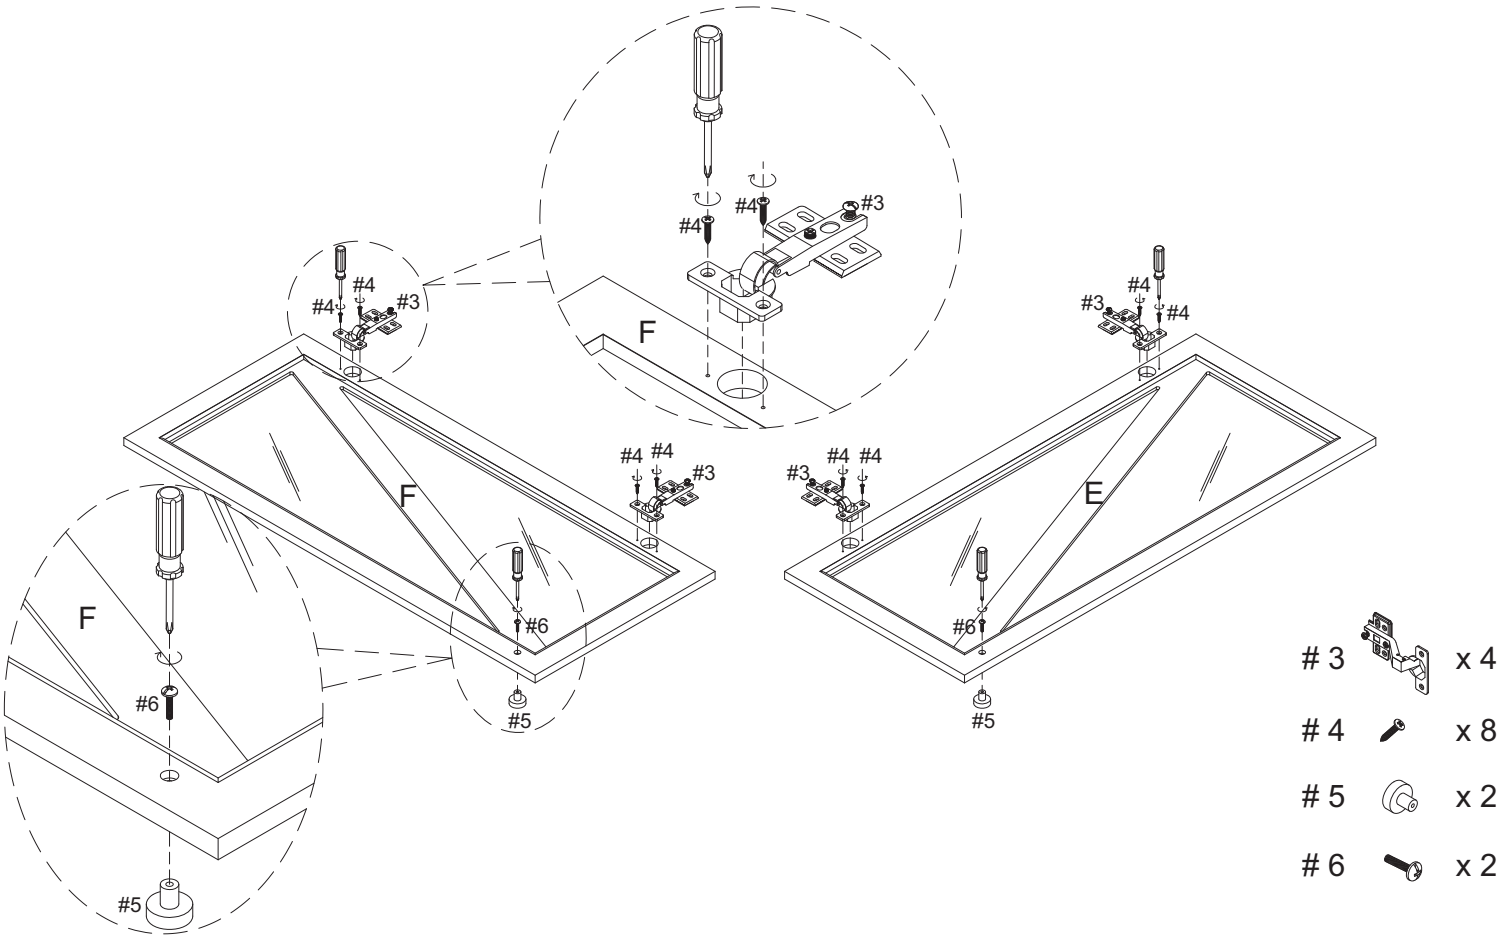

 
Step 2. Attach panels (parts C2 & D2) to top panel (part A2) using bolts (part #1), wood dowels (part #2) and allen wrench (part #10).

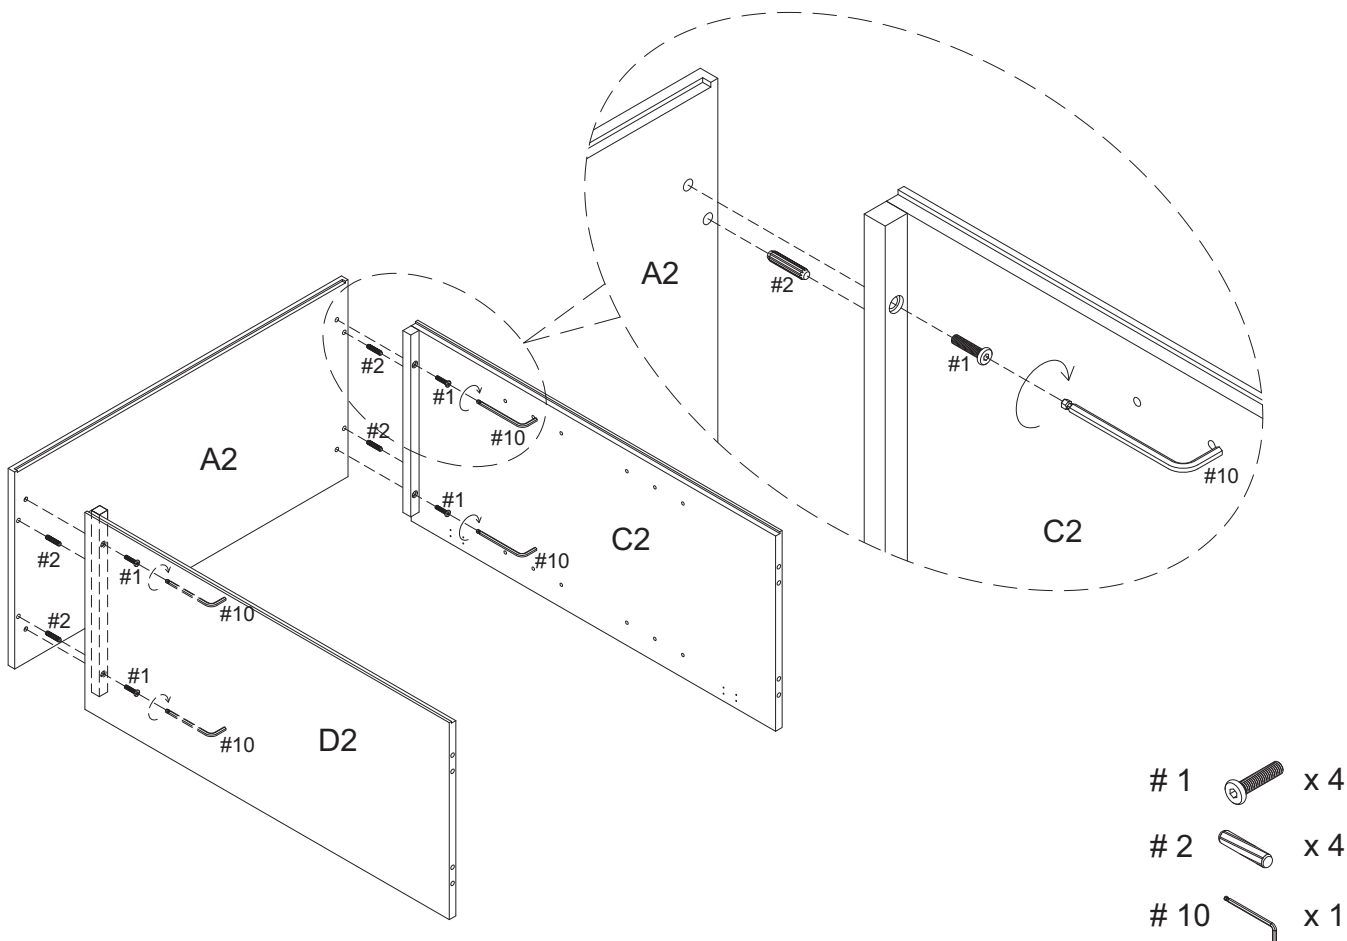

 Step 3. Attach bottom panel (part B2) to panels (parts C2 & D2) using bolts (part #1), wood dowels (part #2) and allen wrench (part #10).

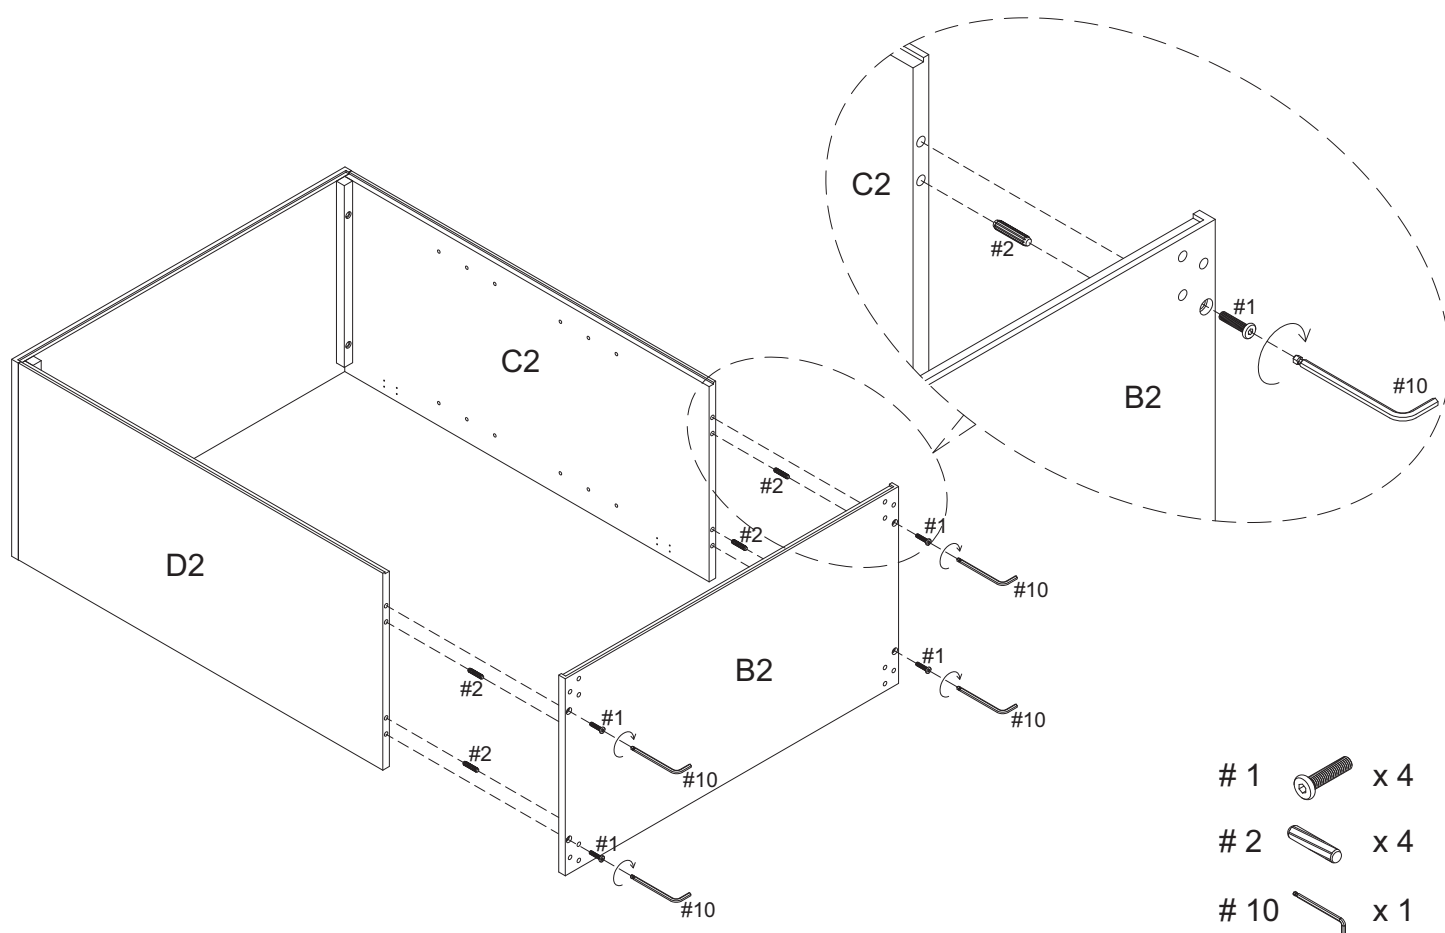


 Step 4. Attach legs (part I) to bottom panel (part B2) using bolts (part #1), wood dowels (part #2) and allen wrench (part #10).

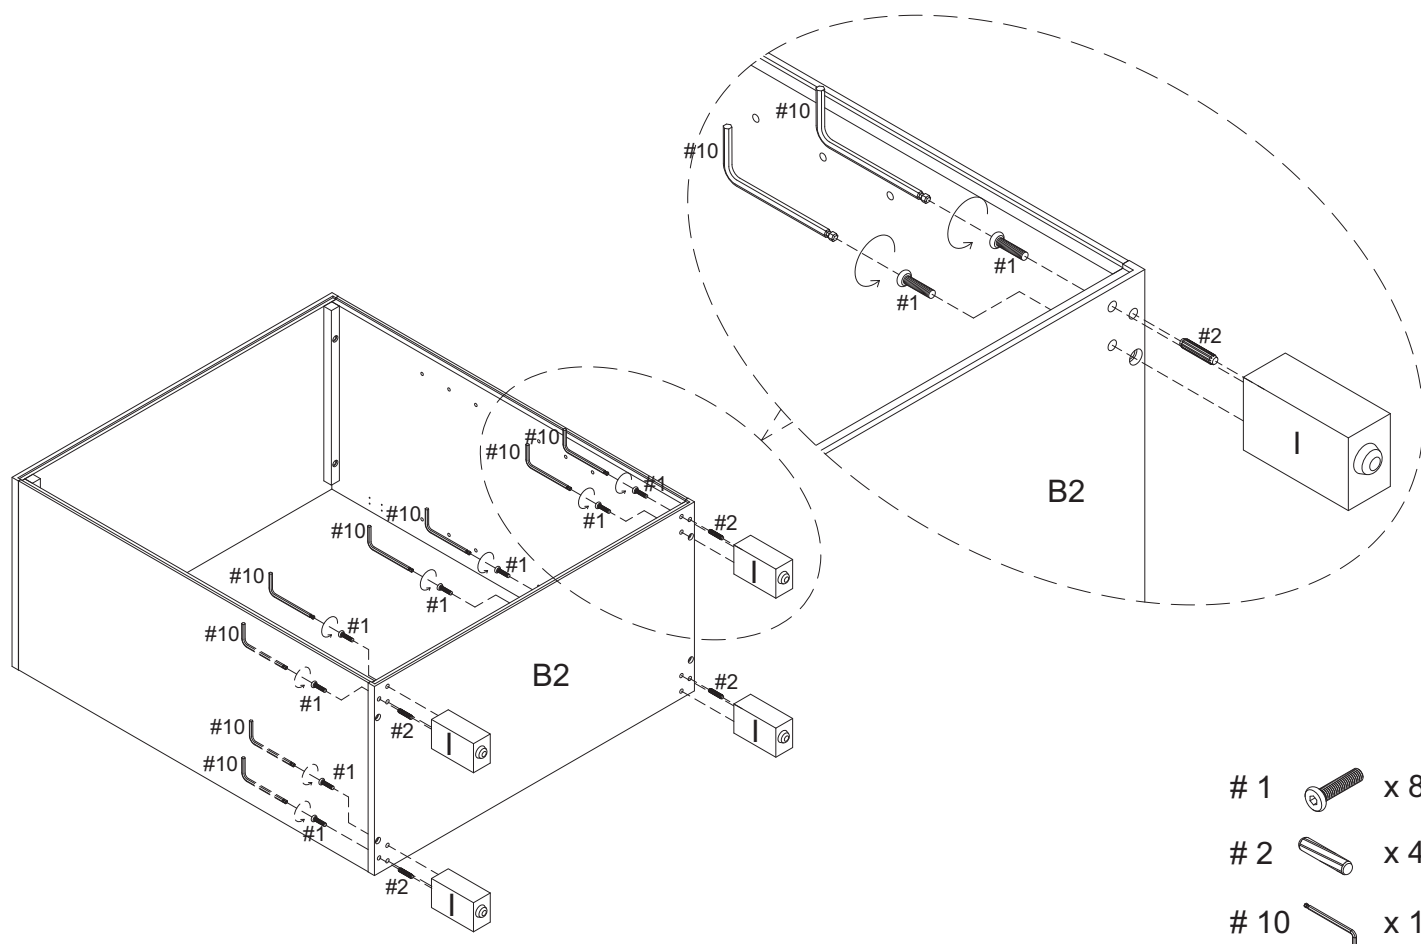


Step 5. Carefully turn unit upright. There are two installation options for back panel (part G2).

 When used as a base. Attach back panel (part G2) to assembled unit (parts A2, B2, C2& D2) using round head screws (part #7) and phillips head screwdriver as below left image. When used as a top. Please turn back panel (part G2) 180° and attach to assembled unit (parts A2, B2, C2 & D2) using round head screws (part #7) and philips head screwdriver as below right image.

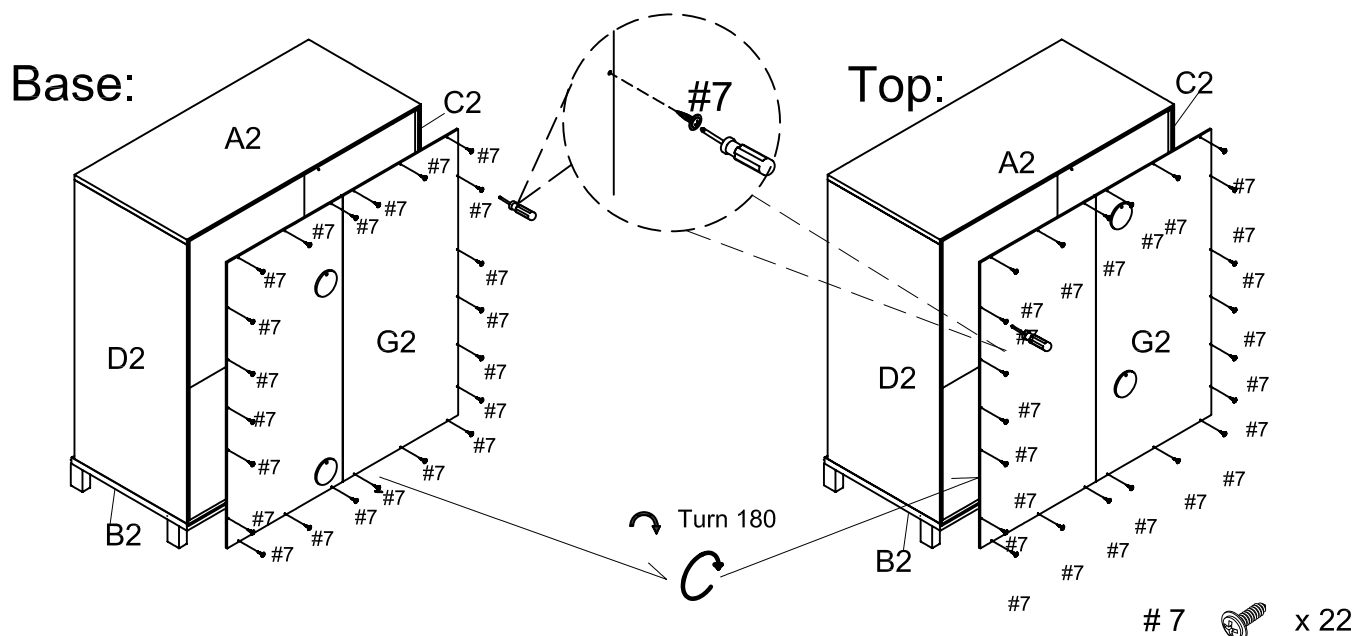


Step 6. Attach doors (parts E & F) to panels (parts C & D) using screws (part #4) and phillips head screwdriver.

 
Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

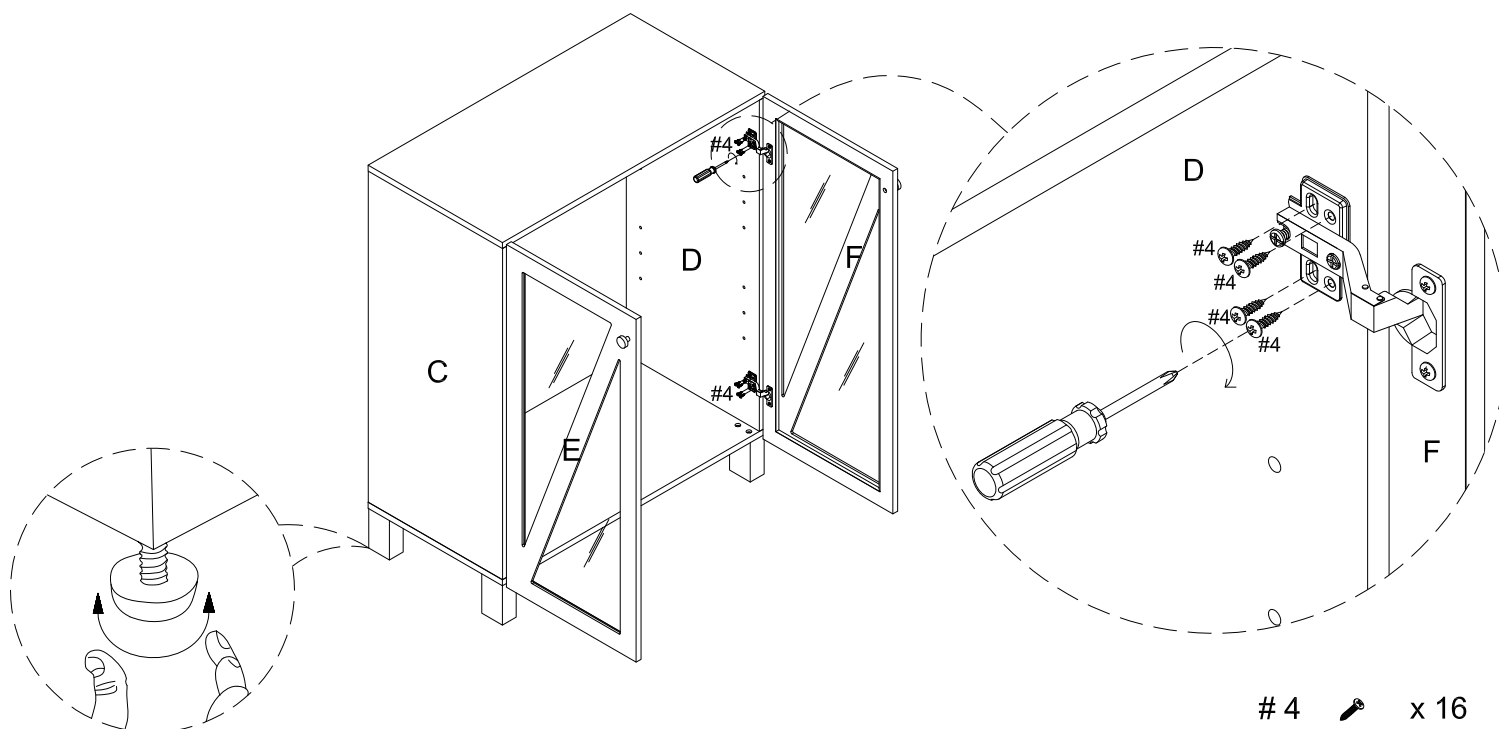

 
Step 7. Place shelf holders (part #8) into desired position and slide adjustable shelves (part H2) into place.
Important: Safety strap kit (part #12) must be installed to prevent tipping, damage and/or injury.

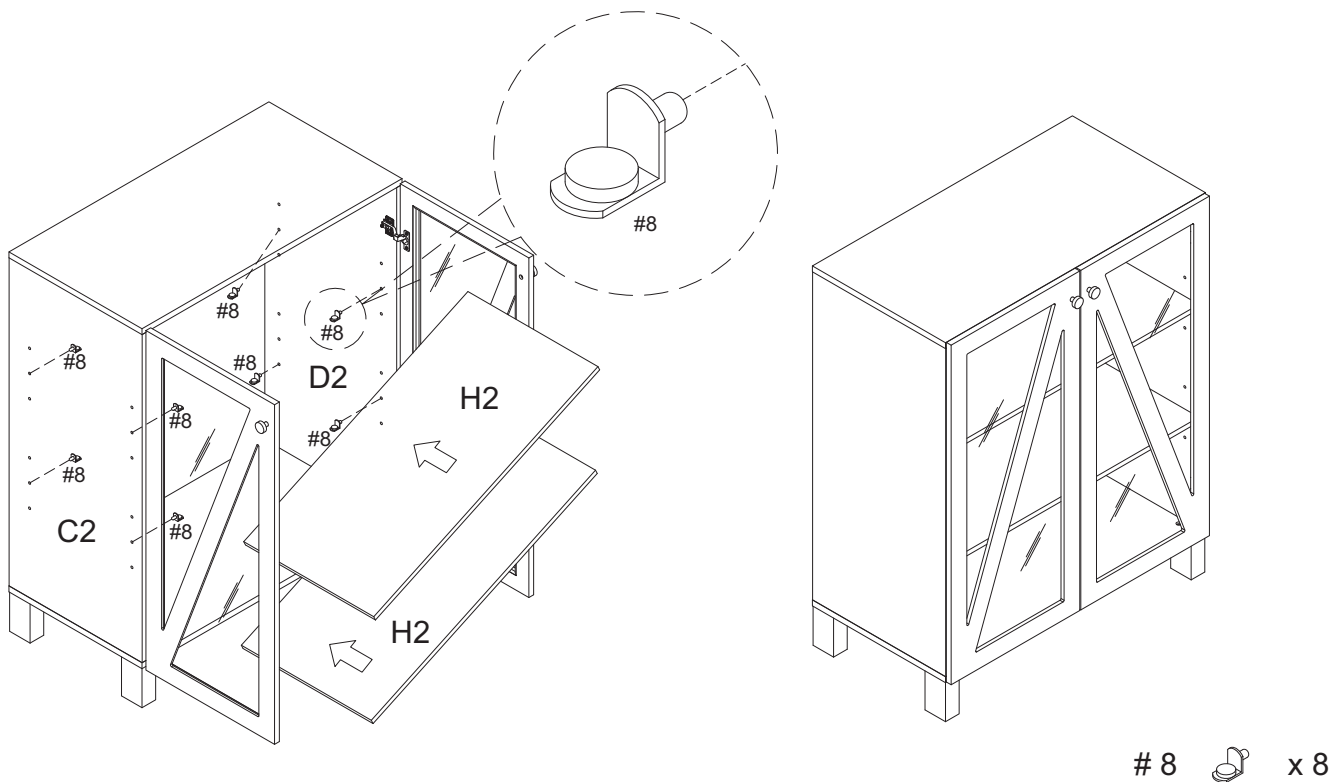

 
Step 8. Flip and place pantries together by lining up top panels (part A2).
Note: Please remove the legs from hutch before stacking.

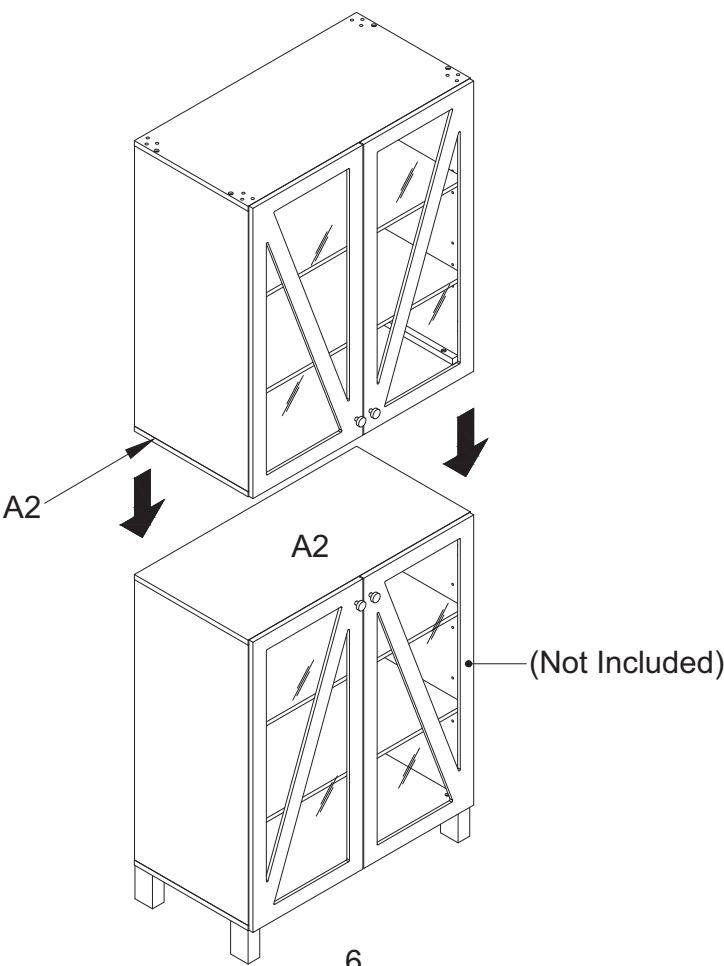


 Step 9. Attach connecting bars (part #9) to back panels (part G2) using screws (part #4) and phillips head screwdriver.

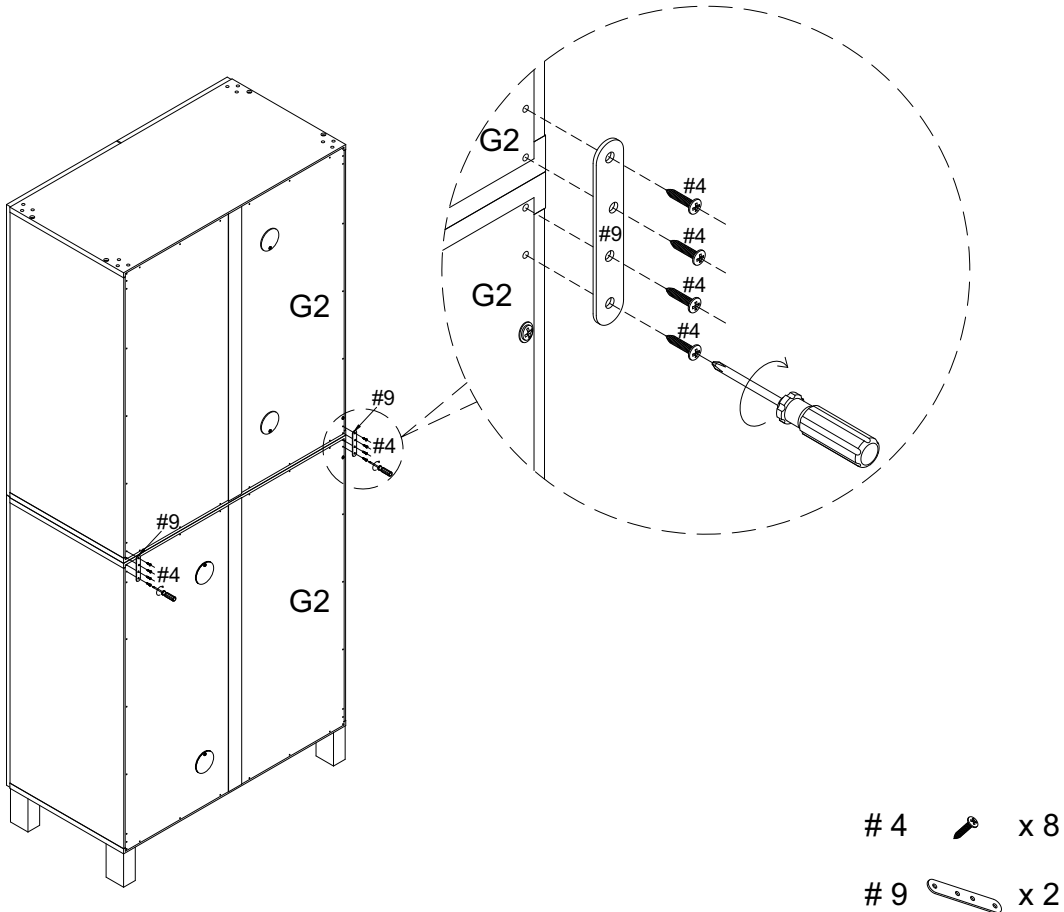

  Step 10. Attach covers (part #11) to bolt holes of bottom panel (part B2) as shown.

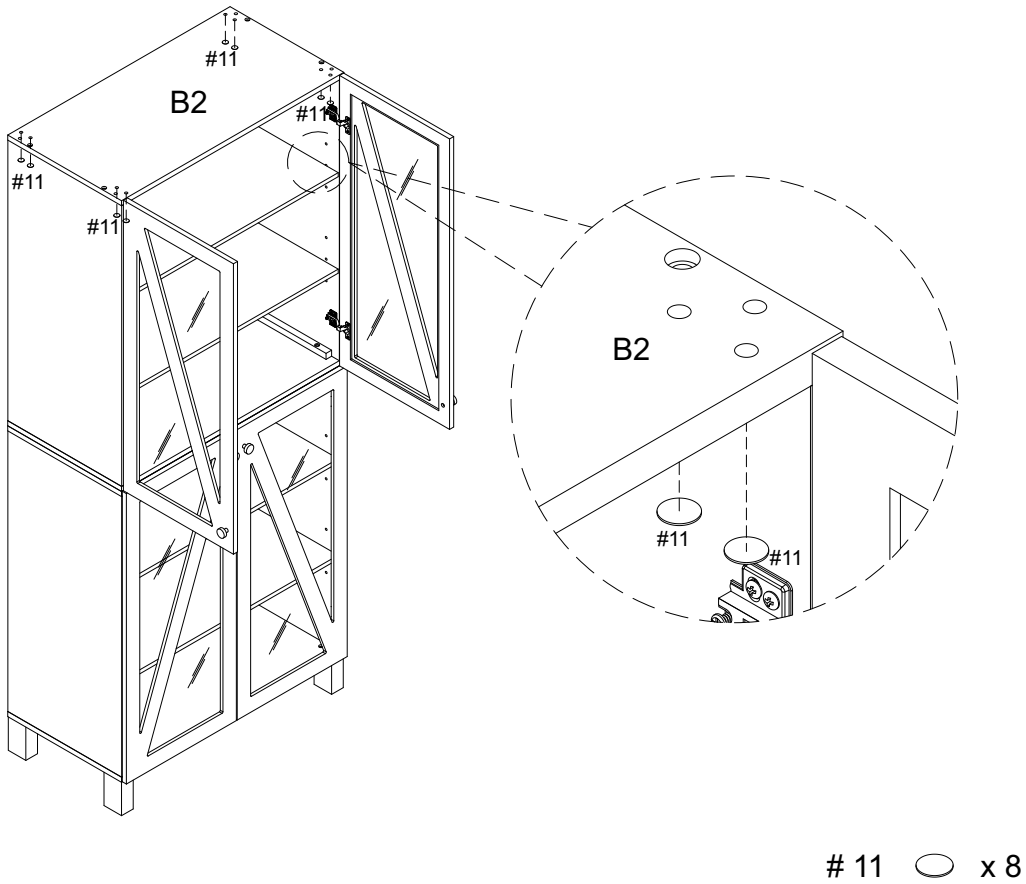


#12	A	B	C	D	E
					
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

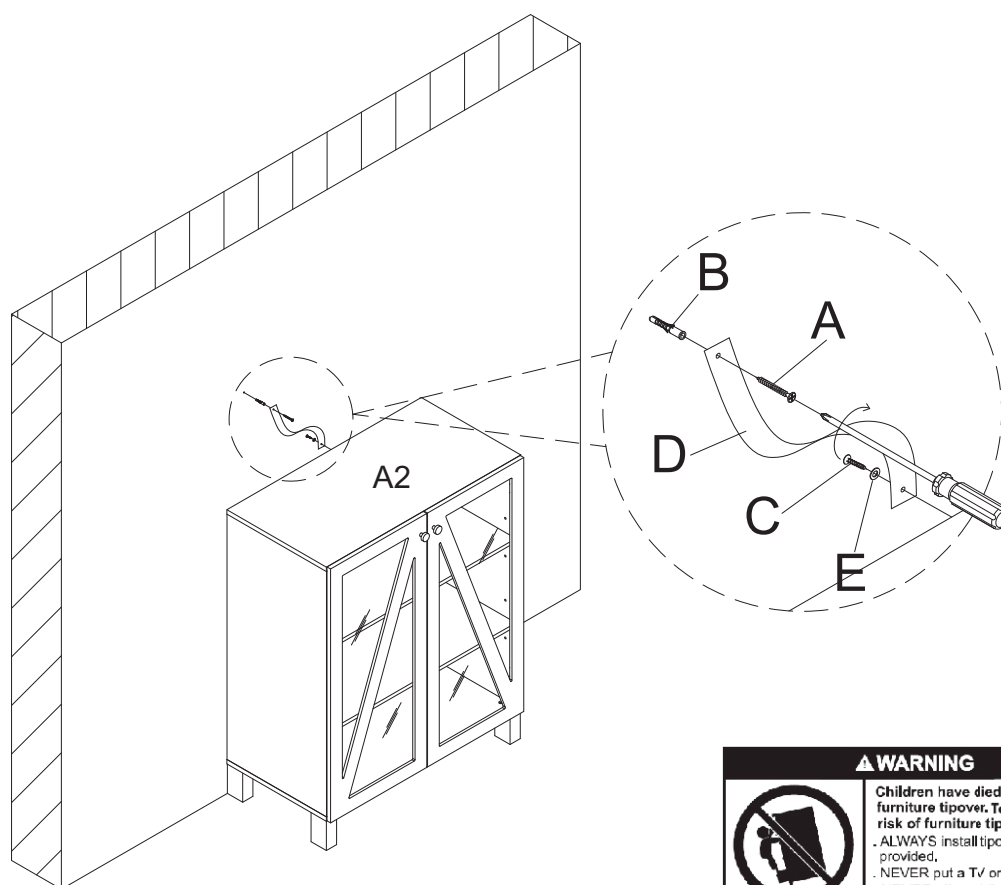


▲ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	<i>This is a permanent label. Do not remove!</i>

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

 Open the door

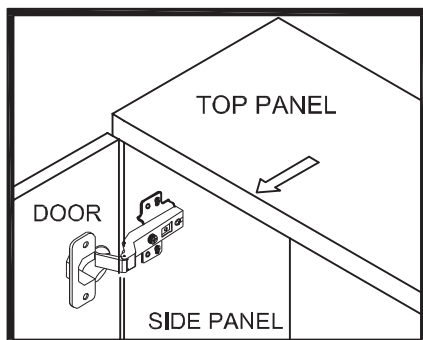


STEP 2

 Adjust the gap between door panel and side panel

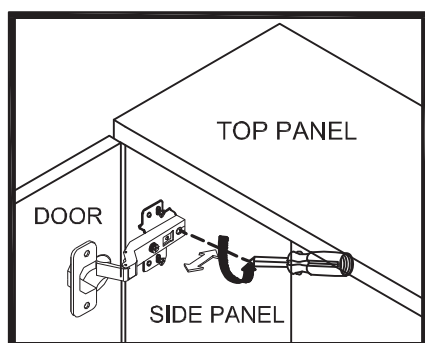


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

 STEP 2a MOVE DOOR IN

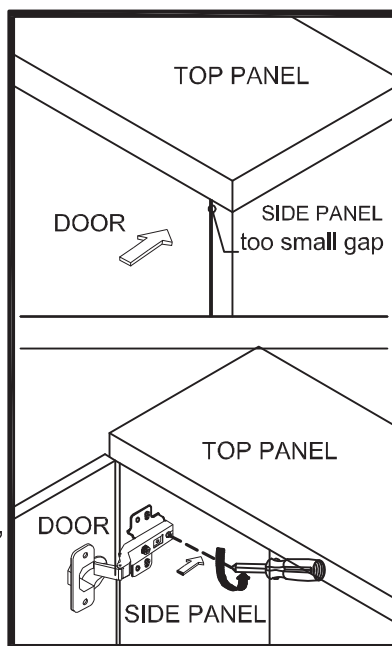

Push the hinge back a little.

 
STEP 2b MOVE DOOR OUT

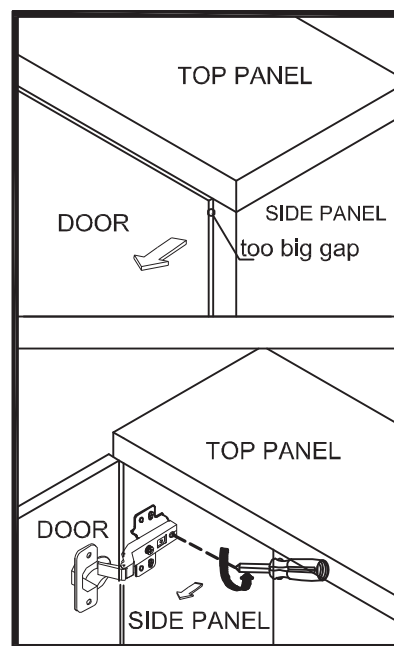

Pull the hinge forward a little.


STEP 3

 To adjust the gap between two door

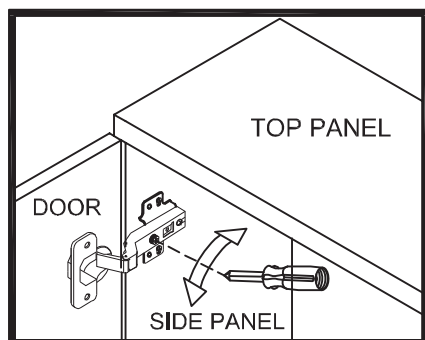


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

 STEP 3a MOVE DOOR RIGHT

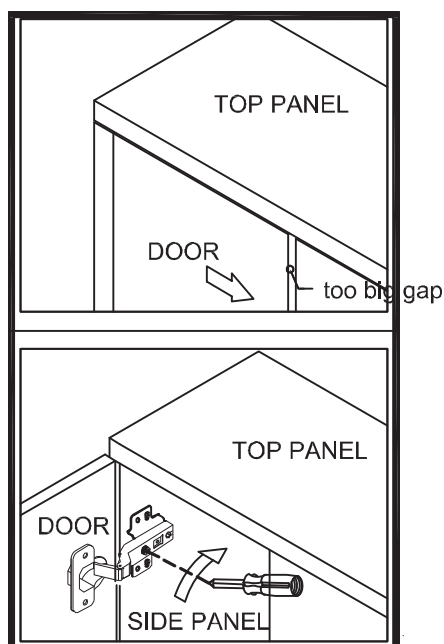

Turn the screw clockwise a little as shown to make the gap small.

 STEP 3b MOVE DOOR LEFT

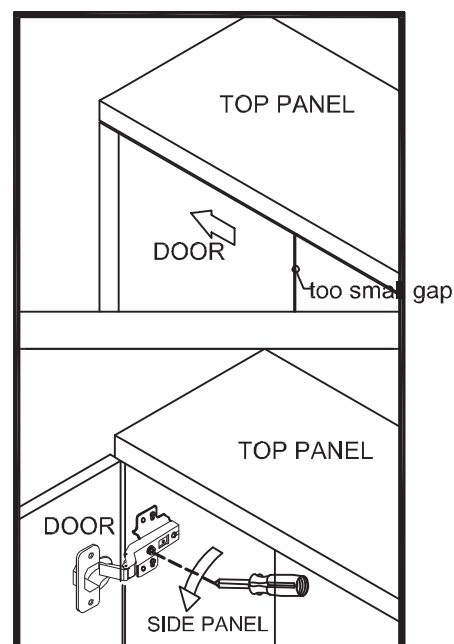

Turn the screw counterclockwise a little as shown to make the gap big.