 


 

 
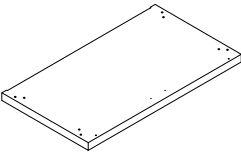 
 
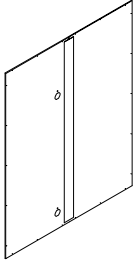 
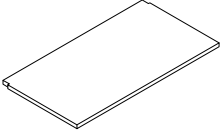 
 
 

**CROSLEY**

FURNITURE

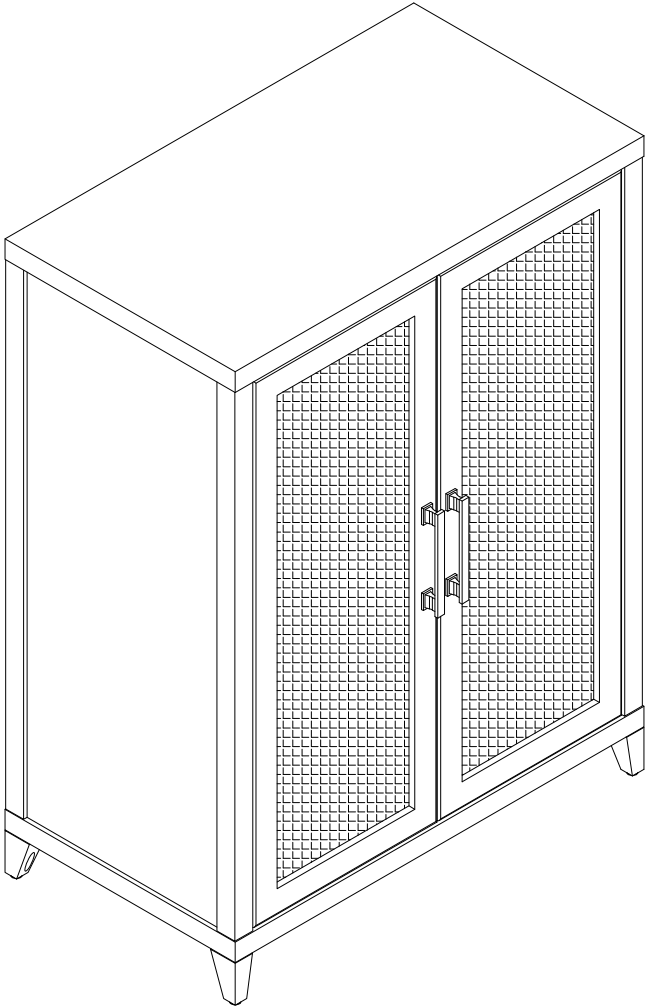 


 

 

 

 

 



Stackable Pantry  
CF3127

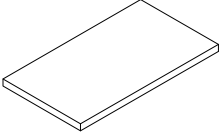

# PART LIST

 
|  |  |   |  |   |
|--|--|---|--|---|
| <p><b>A</b></p>   | <p><b>B</b></p>   | <p><b>C</b></p>  | <p><b>D</b></p>  | <p><b>E</b></p>  |
| <p>Top Panel<br/>1 PC</p>  | <p>Left Panel<br/>1 PC</p>   | <p>Right Panel<br/>1 PC</p>   | <p>Bottom Panel<br/>1 PC</p>   | <p>Door<br/>2 PCS</p>   |
| <p><b>F3</b></p>  | <p><b>G2</b></p>  | <p><b>H</b></p>  | <p><b>I</b></p>  | <p><b>J</b></p>  |
| <p>Back Panel<br/>1 PC</p>   | <p>Adjustable Shelf<br/>2 PCS</p>  | <p>Right Leg<br/>2 PCS</p>  | <p>Left Leg<br/>2 PCS</p>  | <p>Cover<br/>2 PCS</p>  |

# HARDWARE LIST
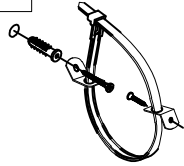
|  |  |   |  |  |
|--|--|---|--|--|
| <br>Ø1/4"*25mm                              | <br>Ø1/4"*11mm  | <br>Ø1/4"*13mm                         | <br>4mm*90  | <br>Ø8*30mm                         |
| Bolt<br>12 PCS (Extra 1)   | Spring Washer<br>12 PCS (Extra 1)  | Flat Washer<br>12 PCS (Extra 1)   | Allen Wrench<br>1 PC   | Wood Dowel<br>12 PCS (Extra 1)   |
| <br>Magnet<br>2 PCS                         | <br>6*3*15mm<br>Round Head<br>Screw<br>12 PCS (Extra 1) | <br>Handle<br>2 PCS                    | <br>5/32"*25mm<br>Round<br>Head Bolt<br>4 PCS (Extra 1) | <br>Shelf Holder<br>8 PCS (Extra 1) |
| <br>8*3*12mm<br>Screw<br>22 PCS (Extra 1) | <br>Connecting Bar<br>2 PCS                           | <br>Binding Post<br>2 SETS (Extra 1) | <br>M2<br>Small Allen<br>Wrench<br>1 PC               | <br>Safety Strap Kit<br>1 SET      |

## ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Step 1. Attach magnets (part #6) to top panel (part A) and bottom panel (part D) using round head screws (part #7) and phillips head screwdriver.

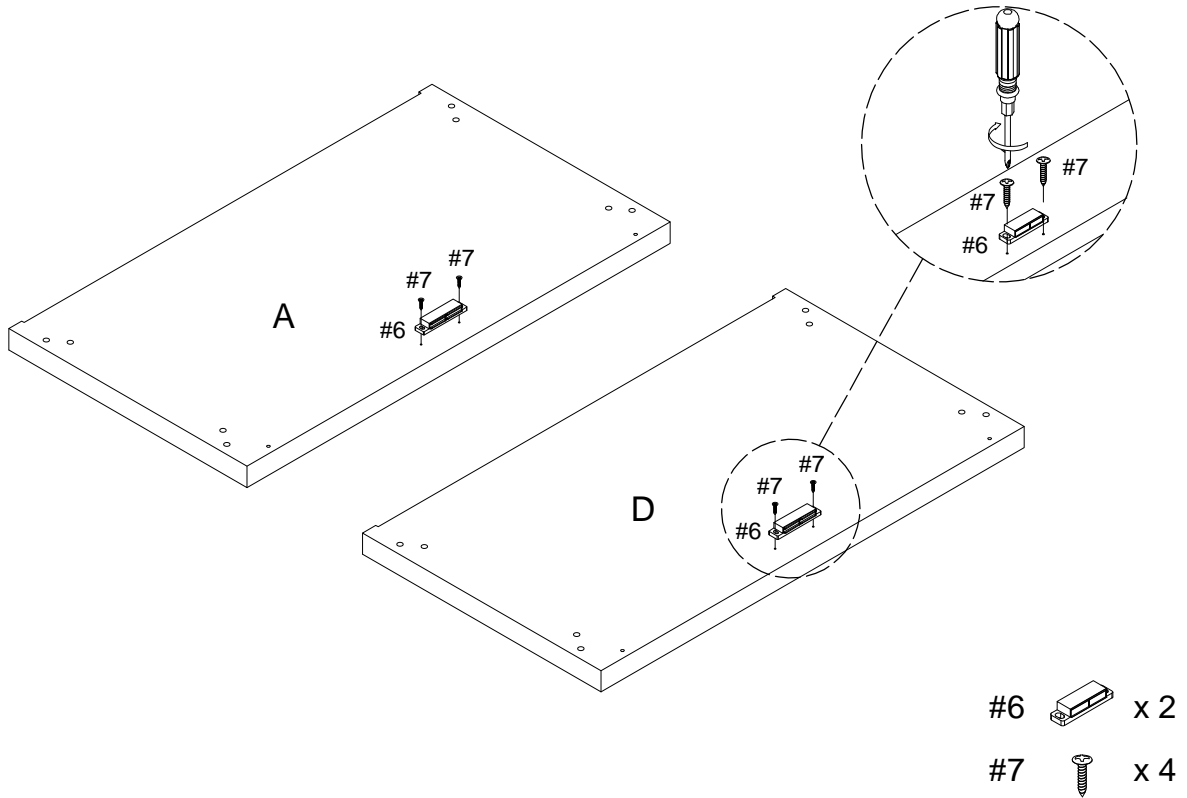

 
Step 2. Attach handles (part #8) to doors (part E) using round head bolts (part #9) and phillips head screwdriver.

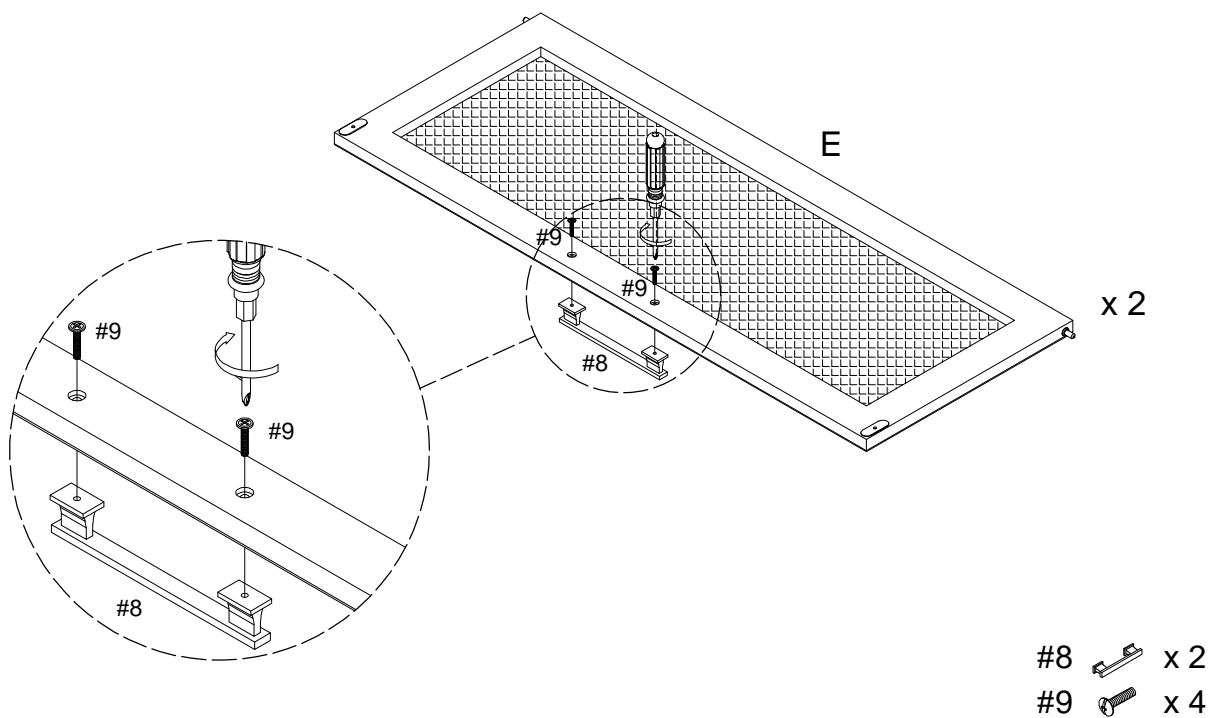

 
Step 3. Attach covers (part J) to back panel (part F3) using binding posts (part #13) and small allen wrench (part #14).

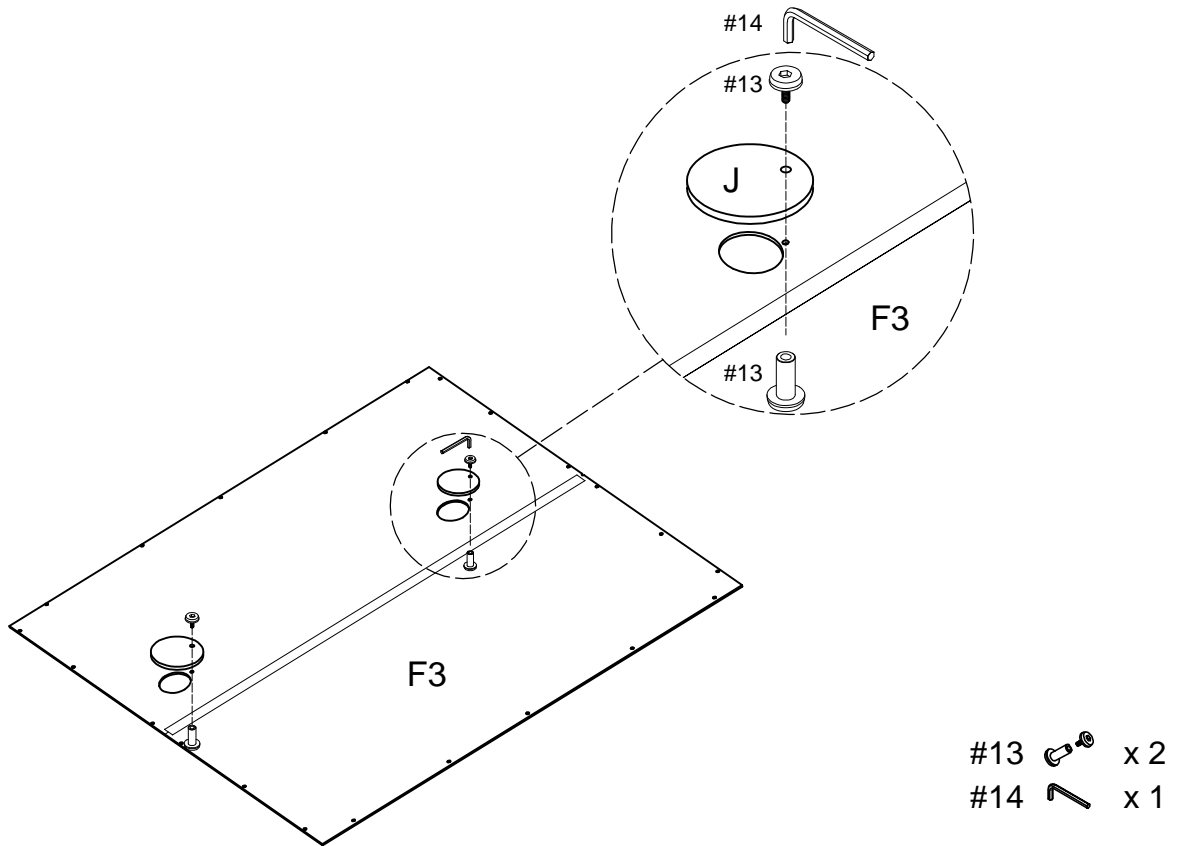

 Step 4. Attach panels (parts B & C) to top panel (part A) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

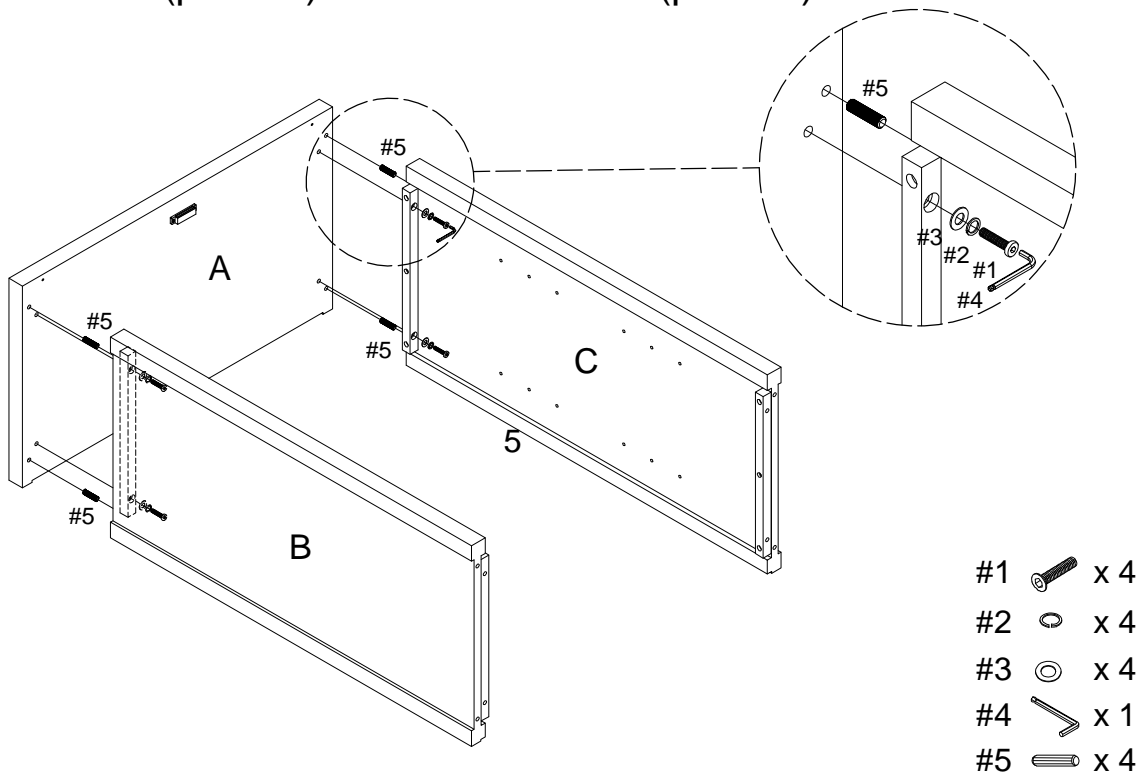


 Step 5. Attach bottom panel (part D) to panels (parts B & C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

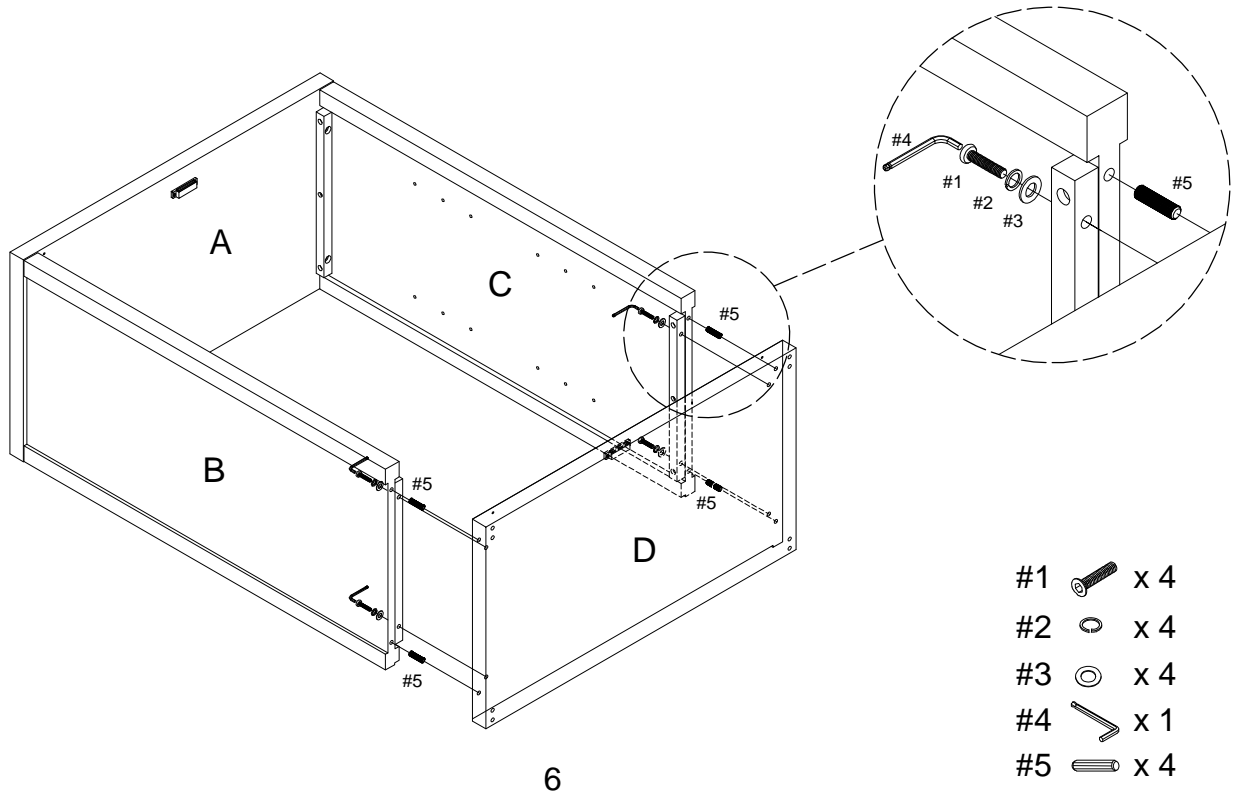

6

 
Step 6. Attach legs (parts H & I) to bottom panel (part D) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

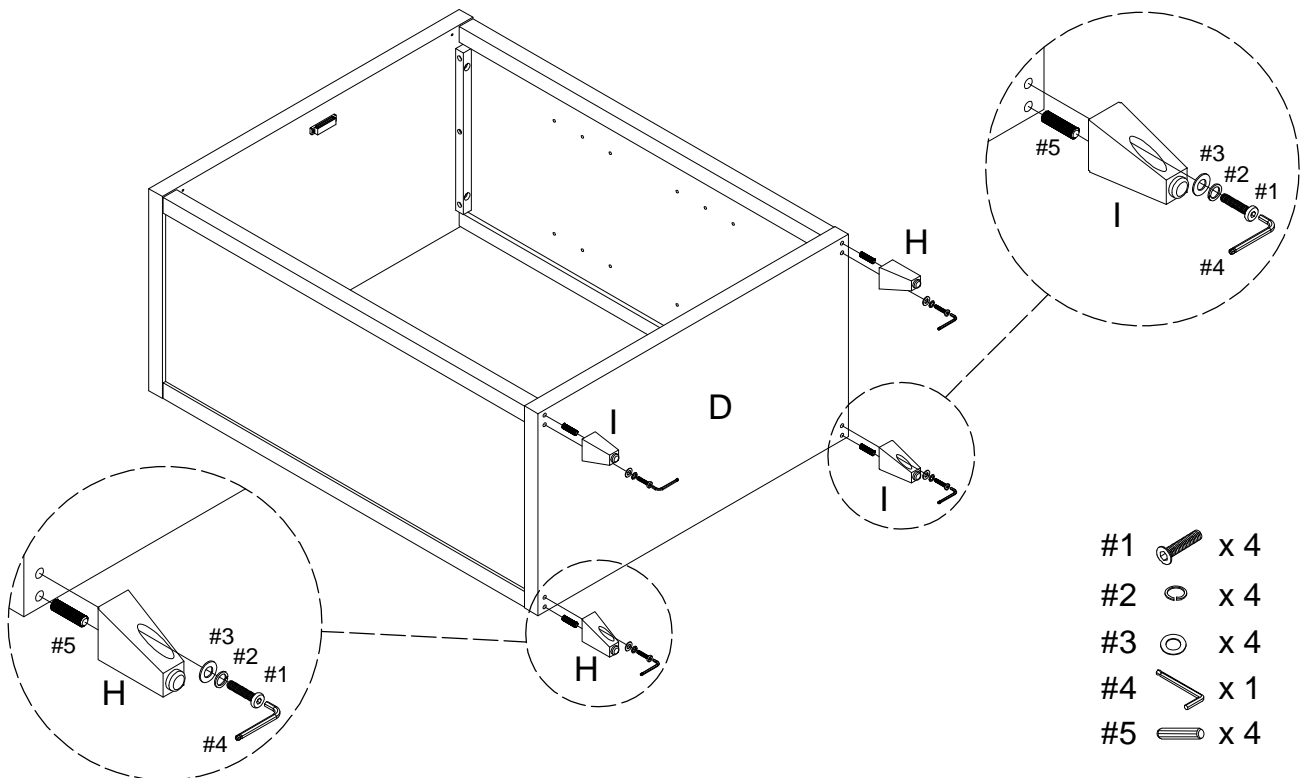

Step 7. Carefully turn unit upright. There are two installation options for back panel (part F3)

When use as a base. Attach back panel (part F3) to assembled unit (parts A, B, C & D) using screws (part #11) and phillips head screwdriver as below left image.

 
When use as a top. Please turn back panel (F3) 180° and attach to assembled unit (parts A, B, C & D) using screws (part #11) and phillips head screwdriver as below right image.

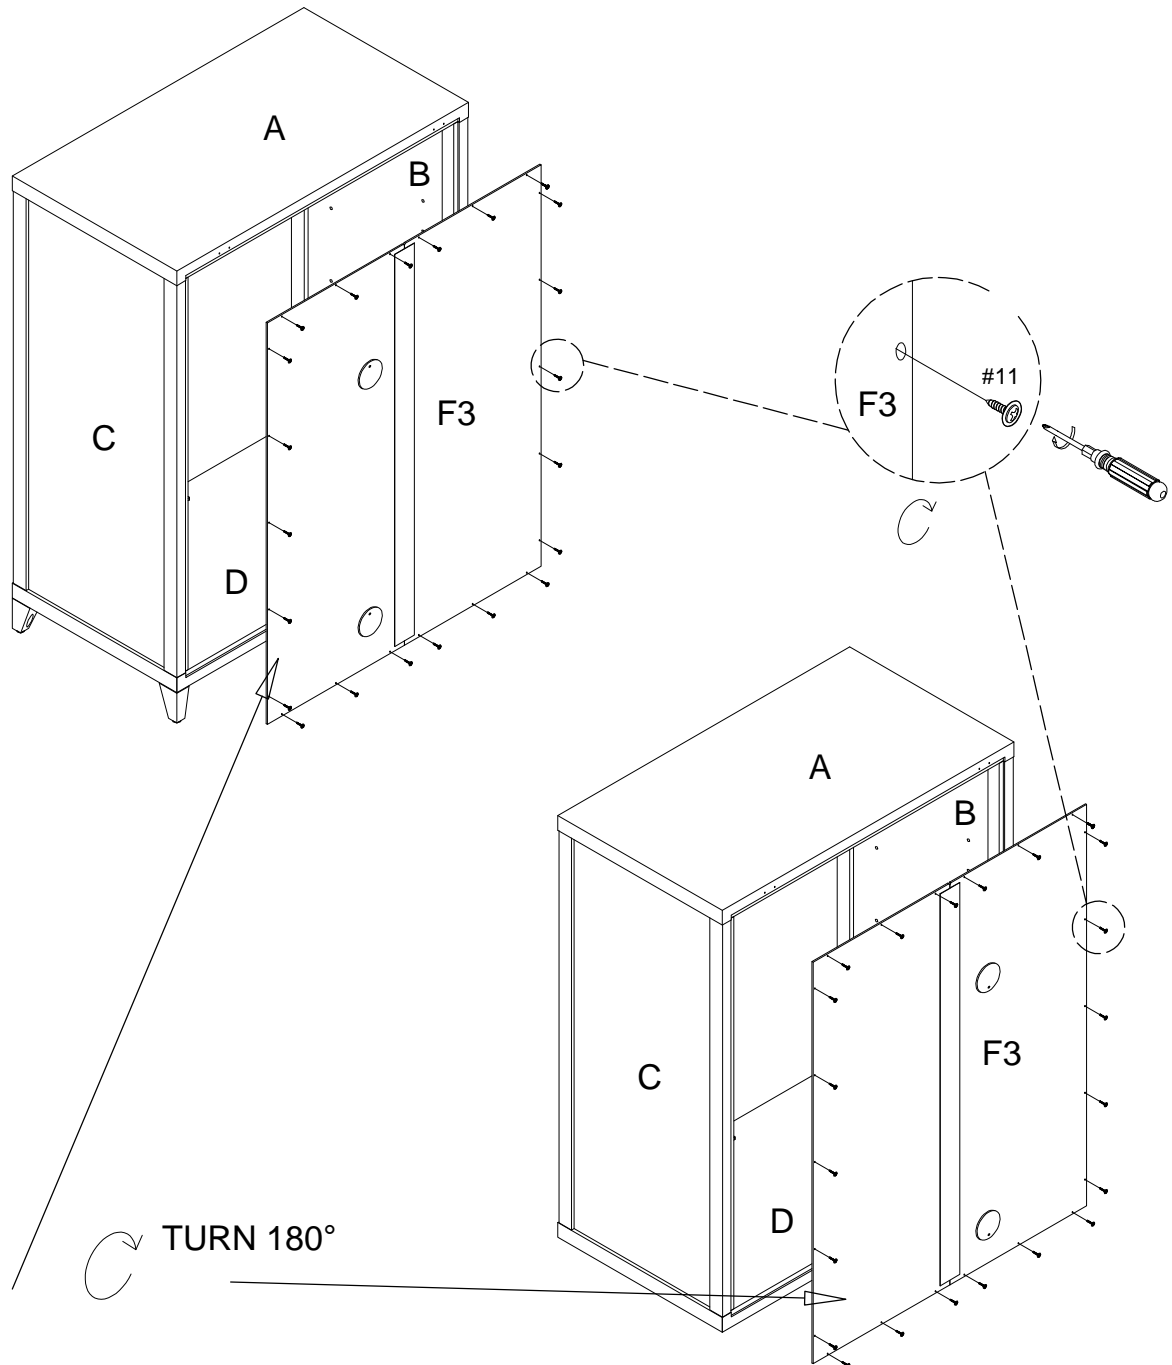

Step 8. Attach doors (part E) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).


NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

 
NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

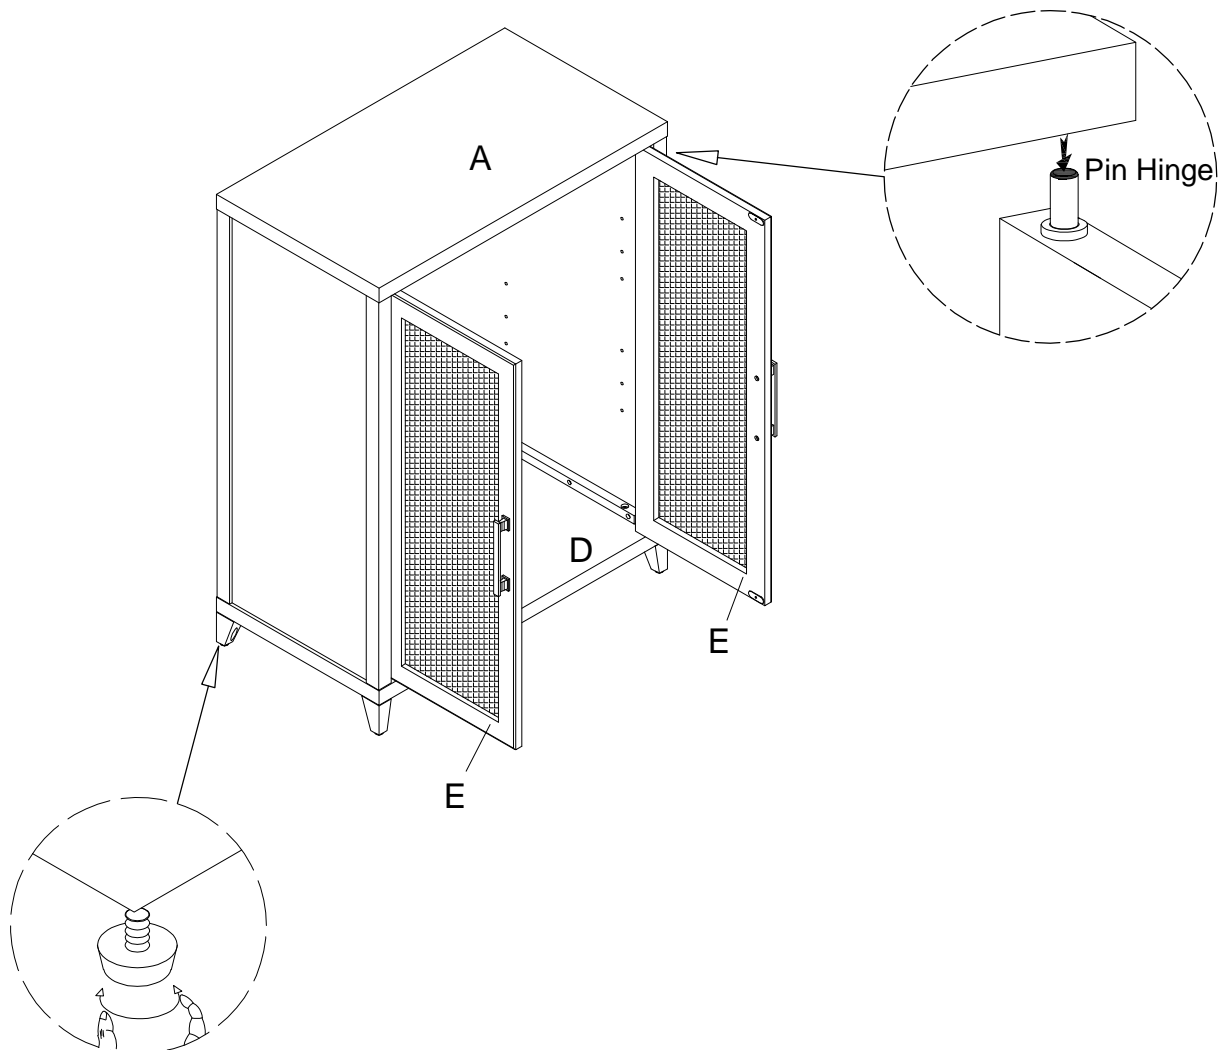


Step 9. Place shelf holders (part #10) into desired position and slide adjustable shelves (part G2) into place.

 Important: Safety strap kit (part #15) must be installed to prevent tipping damage and/or injury.

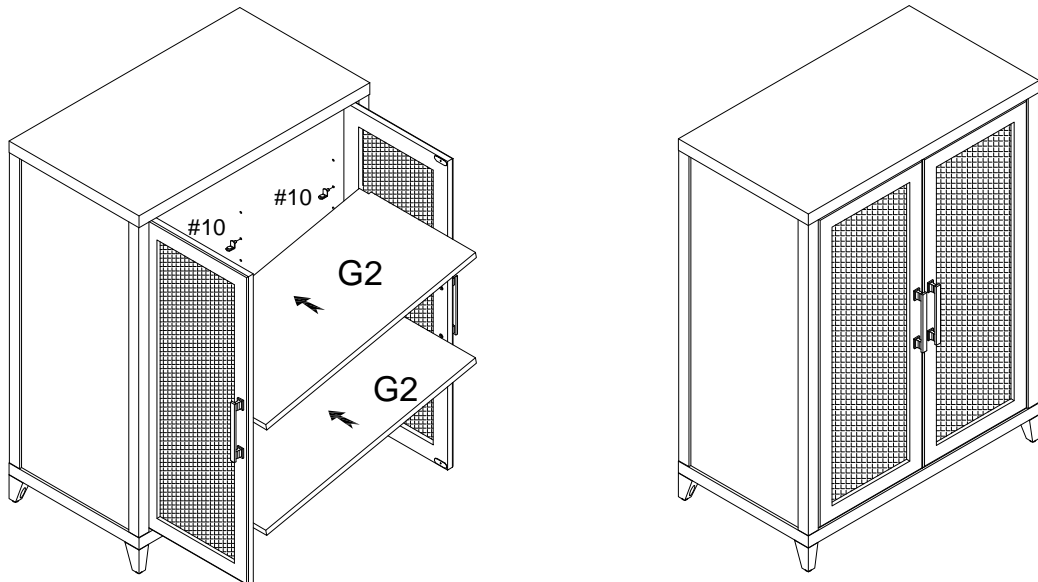


#10  x 8

  Step 10. Flip and place pantries together by lining up top panels (part A).  
Note: Please remove the legs from hutch before stacking.

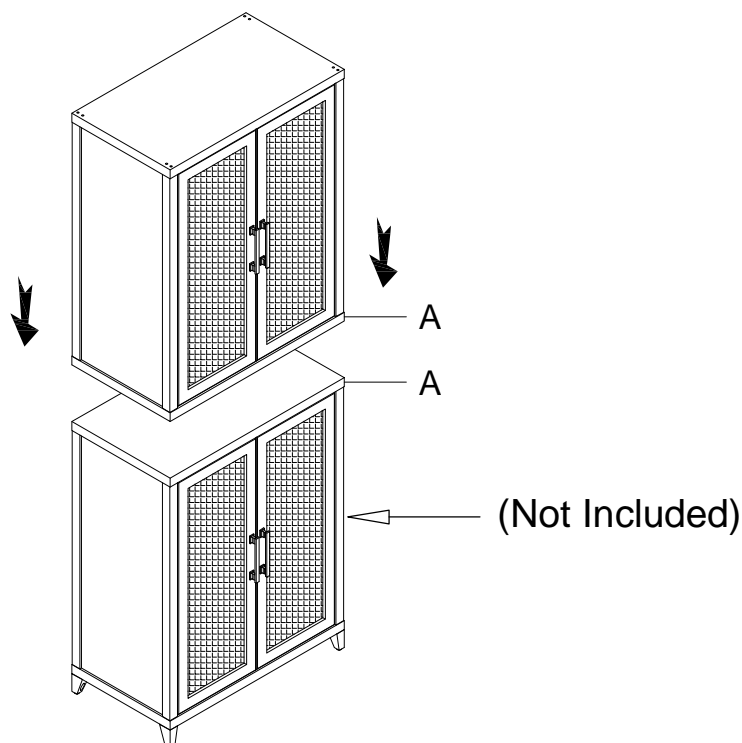 

 


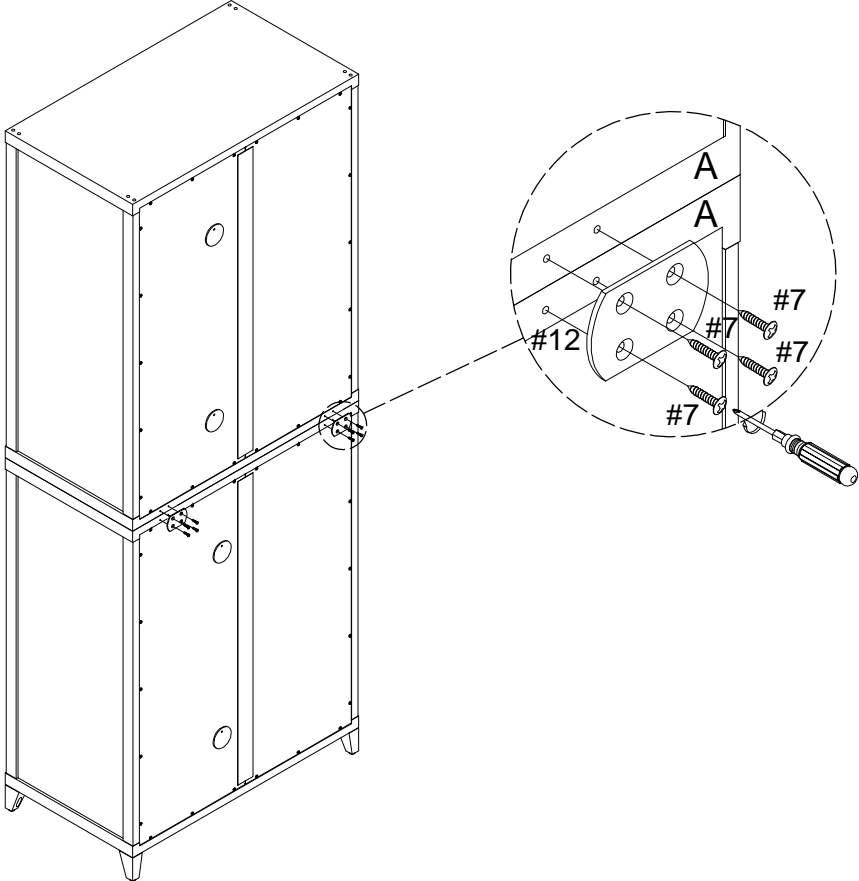


Step 11. Attach connecting bars (part #12) to top panels (part A) using round head screws (part #7) and phillips head screwdriver.



#7  x 8
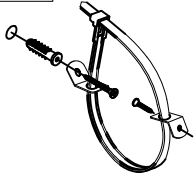
#12  x 2

 
|  |   |   |   |   |   |
|--|---|---|---|---|---|
| #15  | A   | B   | C   | D   | E   |
|  |  |  |  |  |  |
| Safety Strap Kit<br>1 SET  | Wall Anchor<br>1 PC   | Bracket<br>2 PCS  | Short Screw<br>1 PC   | Long Screw<br>1 PC  | Safety Wall Strap<br>1 PC   |

## SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

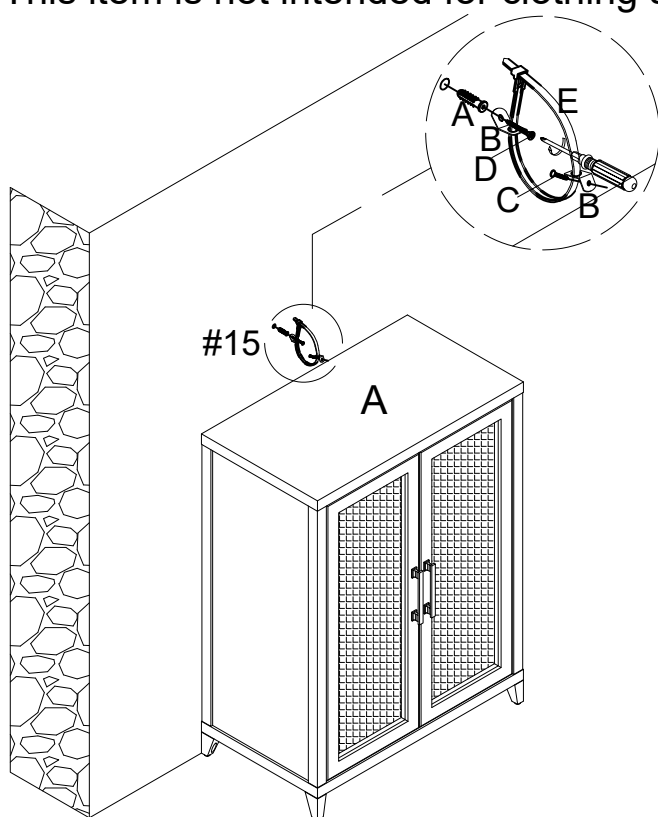

| <b>⚠ WARNING</b>  |   |
|---|---|
|  | Children have died from furniture tipover. To reduce the risk of furniture tipover:   |
|  | <ul style="list-style-type: none"> <li>• ALWAYS install tipover restraint provided.</li> <li>• NEVER put a TV on this product.</li> <li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li> <li>• NEVER open more than one drawer at a time.</li> <li>• Place heaviest items in the lowest drawers.</li> </ul> <p><i>This is a permanent label. Do not remove!</i></p> |