
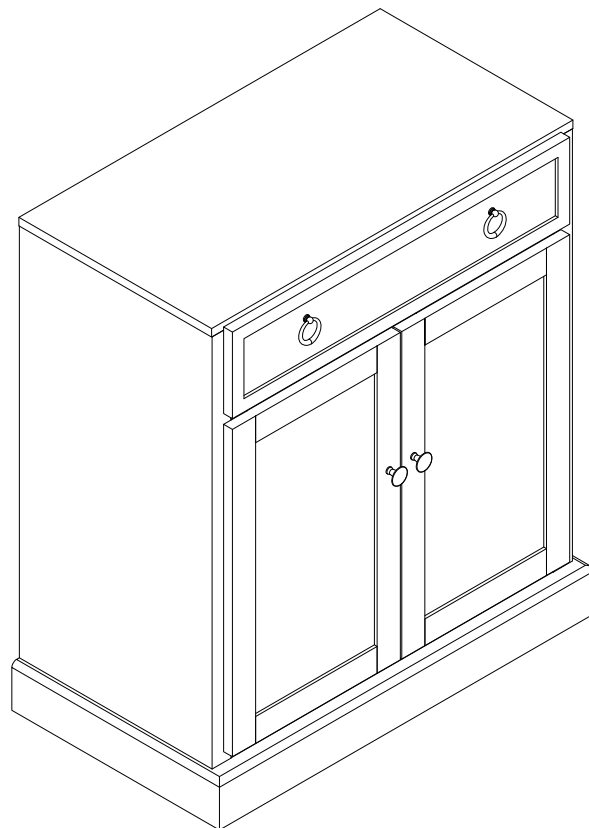
 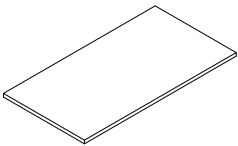

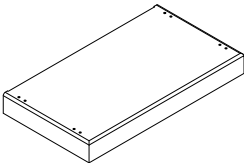
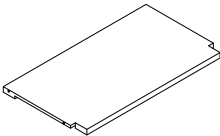
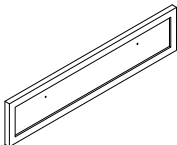
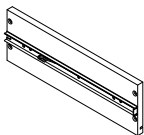
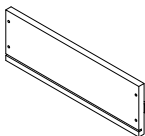
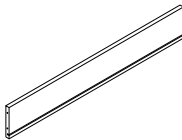
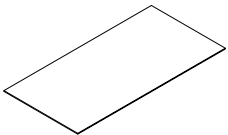
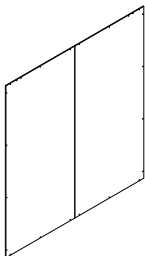
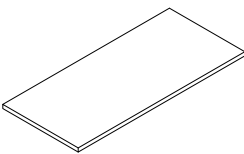 
 


CROSLEY
FURNITURE










Pantry Base
CF3129



PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Cross Rail 1 PC	Bottom Panel 1 PC
F 	G 	H 	I 	J 
Bottom Shelf 1 PC	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	Drawer Right Panel 1 PC	Drawer Back Panel 1 PC
K 	L 	M 	N 	O 
Drawer Bottom Panel 1 PC	Back Panel 1 PC	Adjustable Shelf 1 PC	Left Door 1 PC	Right Door 1 PC

       HARDWARE LIST
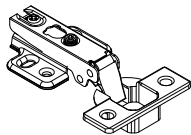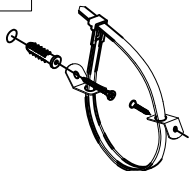
#1  Ø1/4"*25mm Short Bolt 4 PCS (Extra 1)	#2  Ø1/4"*60mm Long Bolt 4 PCS (Extra 1)	#3  Ø1/4"*11mm Spring Washer 8 PCS (Extra 1)	#4  Ø1/4"*13mm Flat Washer 8 PCS (Extra 1)	#5  4mm*90 Allen Wrench 1 PC
#6  Ø8*30mm Wood Dowel 14 PCS (Extra 1)	#7  Magnet 1 PC	#8  Door Knob 2 PCS	#9  Drawer Handle 2 PCS	#10  Hinge 4 PCS
#11  Barrel Nut 4 PCS (Extra 1)	#12  Shelf Holder 4 PCS (Extra 1)	#13  5/32"*25mm Long Round Head Bolt 2 PCS (Extra 1)	#14  5/32"*18mm Short Round Head Bolt 2 PCS (Extra 1)	#15  6*3*15mm Round Head Screw 2 PCS (Extra 1)
#16  8*4*25mm Long Screw 8 PCS (Extra 1)	#17  7*3.5*15mm Short Screw 24 PCS (Extra 1)	#18  8*3*12mm Screw 20 PCS (Extra 1)	#19  Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.

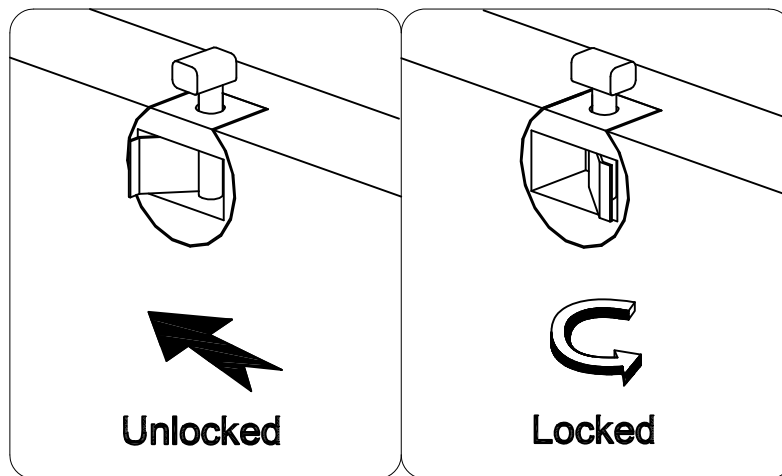

Reference the images above any time the instructions state "lock the hardware"

Note: Be sure to check all hardware is locked when completed.

Step 1. Attach magnet (part #7) to cross rail (part D) using round head screws (part #15) and phillips head screwdriver.
Attach drawer handles (part #9) to drawer front panel (part G) using short round head bolts (part #14) and phillips head screwdriver.


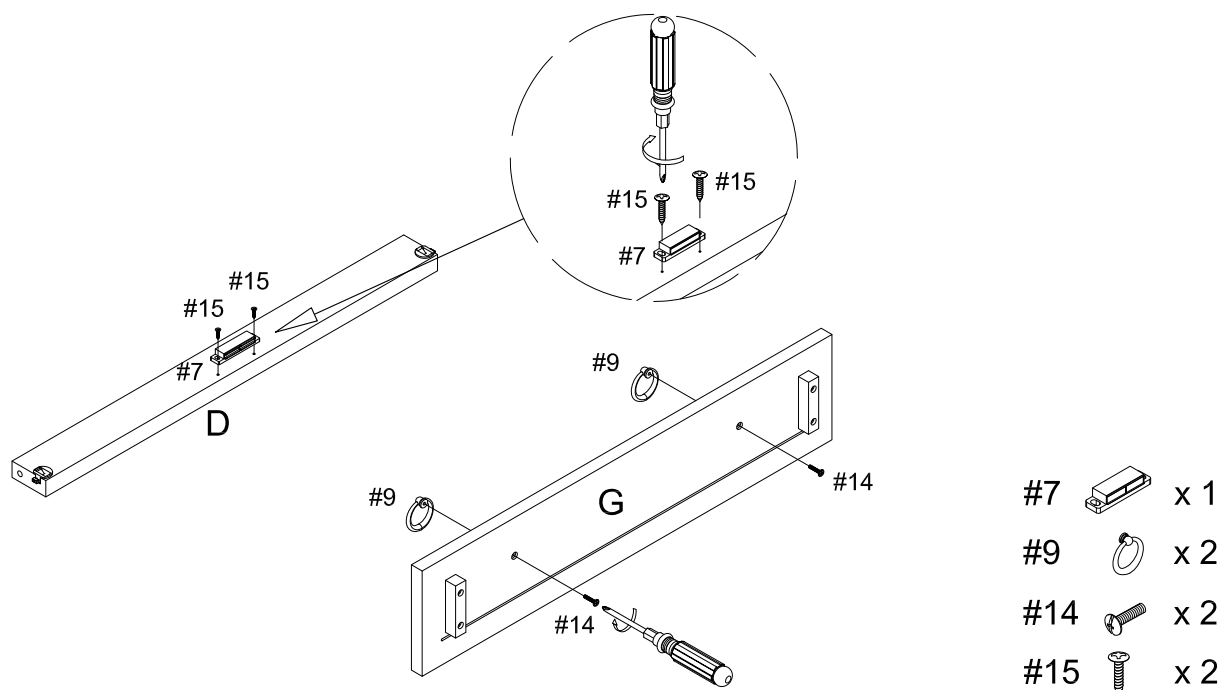



Diagram 5 illustrates the final assembly steps. It shows the front panel (K) being attached to the side rails (H) using screws (#16). The final assembled unit is shown on the right, featuring the front panel (K) and the side rails (H) secured with screws (#16).

Step 4. Attach cross rail (part D) and bottom shelf (part F) to left panel (part B) using wood dowels (part #6) and lock the hardware.

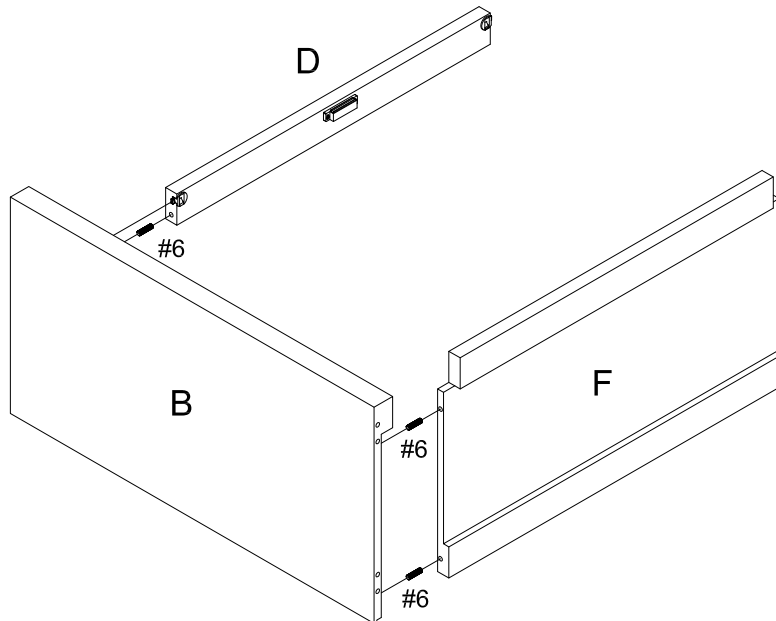


#6  x 3

Step 5. Attach right panel (part C) to cross rail (part D) and bottom shelf (part F) using wood dowels (part #6) and lock the hardware.

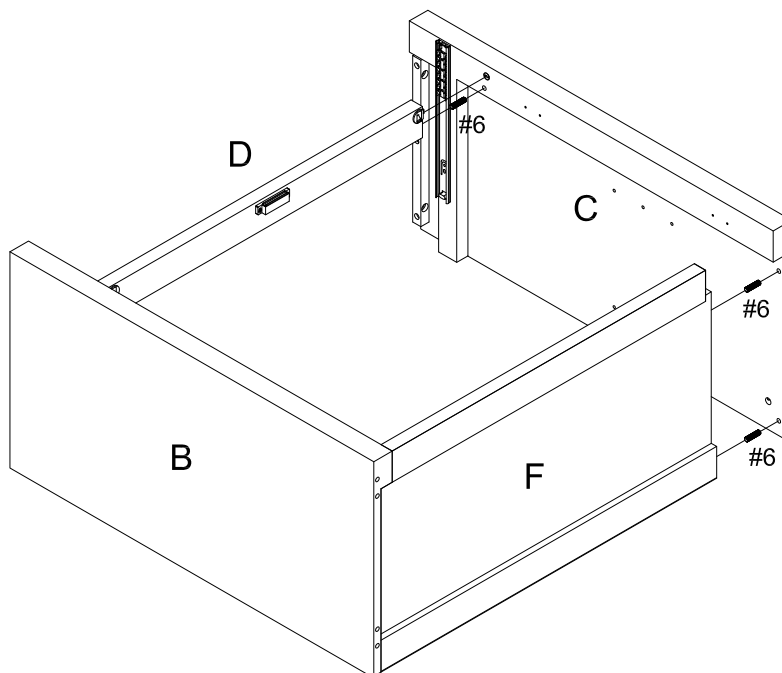


#6  x 3


Step 6. Attach bottom panel (part E) to panels (parts B, C & F) using wood dowels (part #6), long bolts (part #2), barrel nuts (part #11), spring washers (part #3), flat washers (part #4) and allen wrench (part #5).

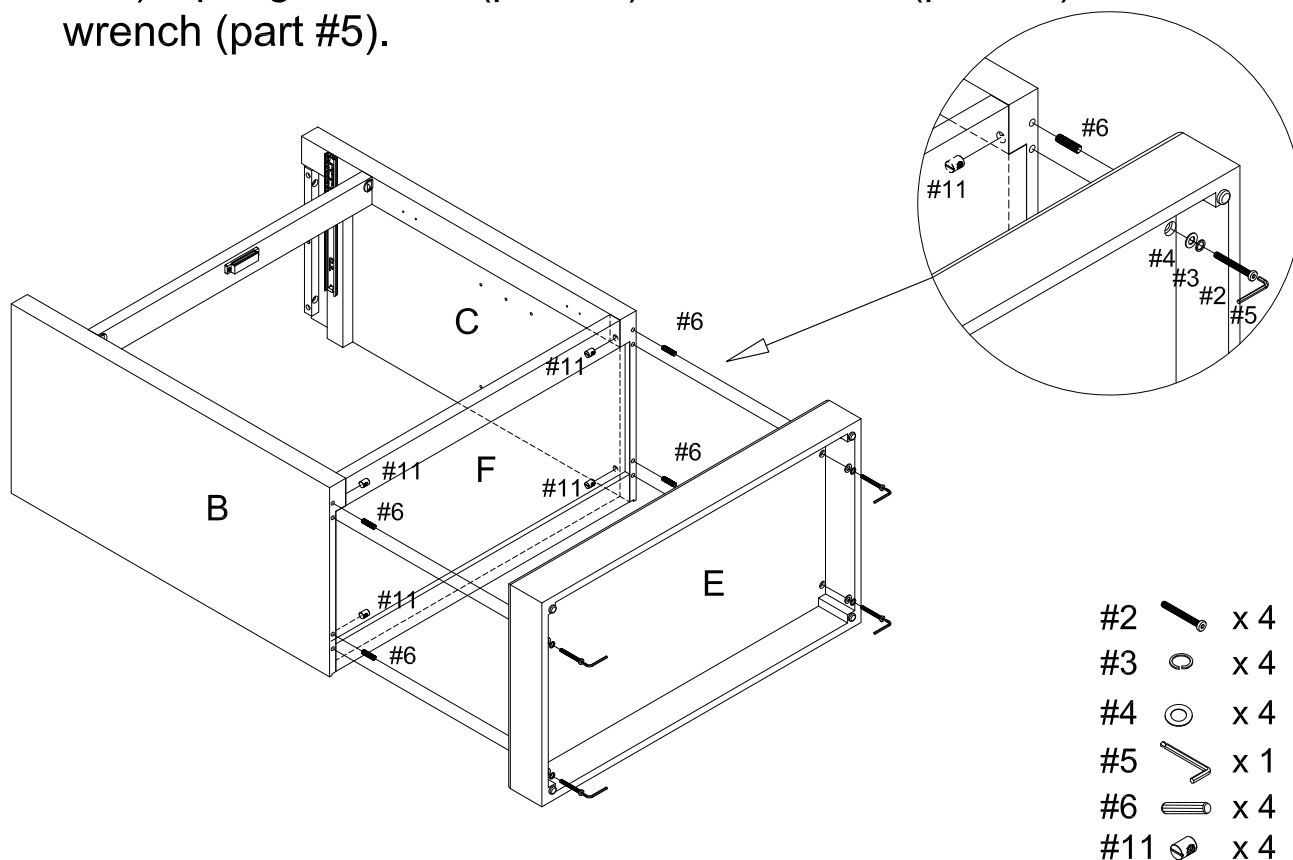

Step 7. Attach top panel (part A) to panels (parts B & C) using wood dowels (part #6), short bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #5).

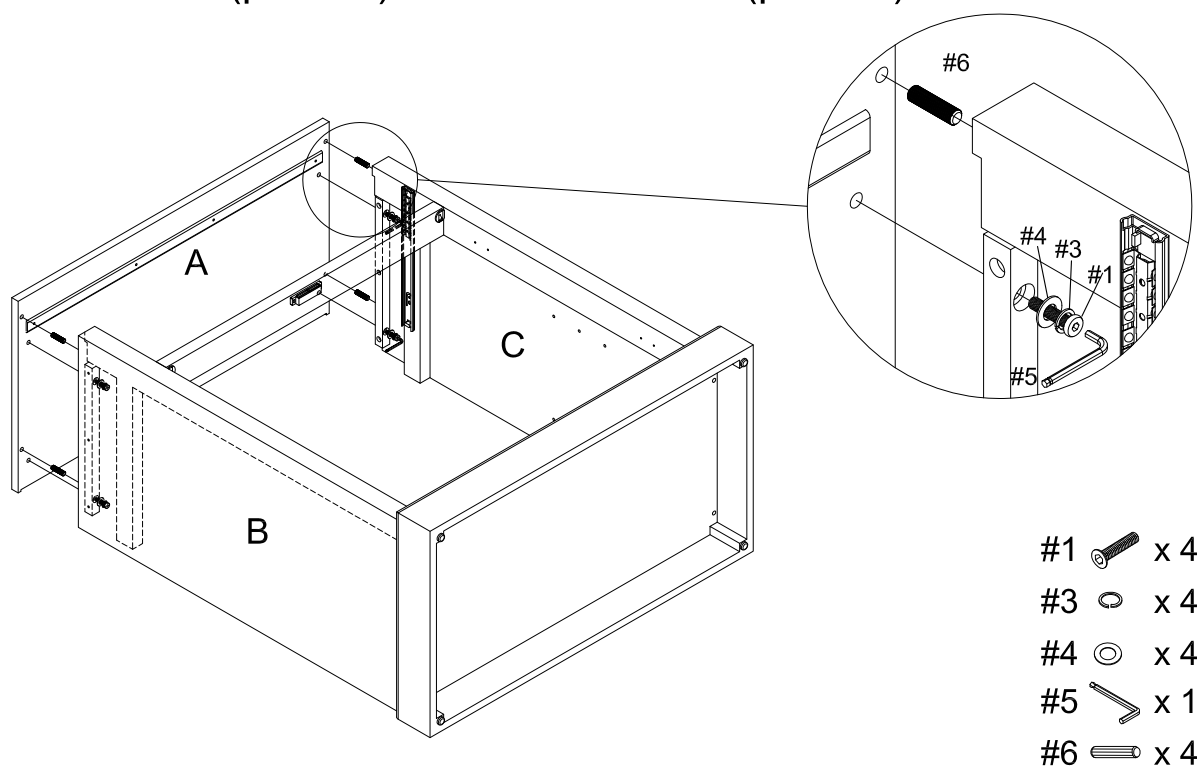


Step 8. Carefully turn unit upright. Attach back panel (part L) to assembled unit (parts A, B, C & E) using screws (part #18) and phillips head screwdriver.

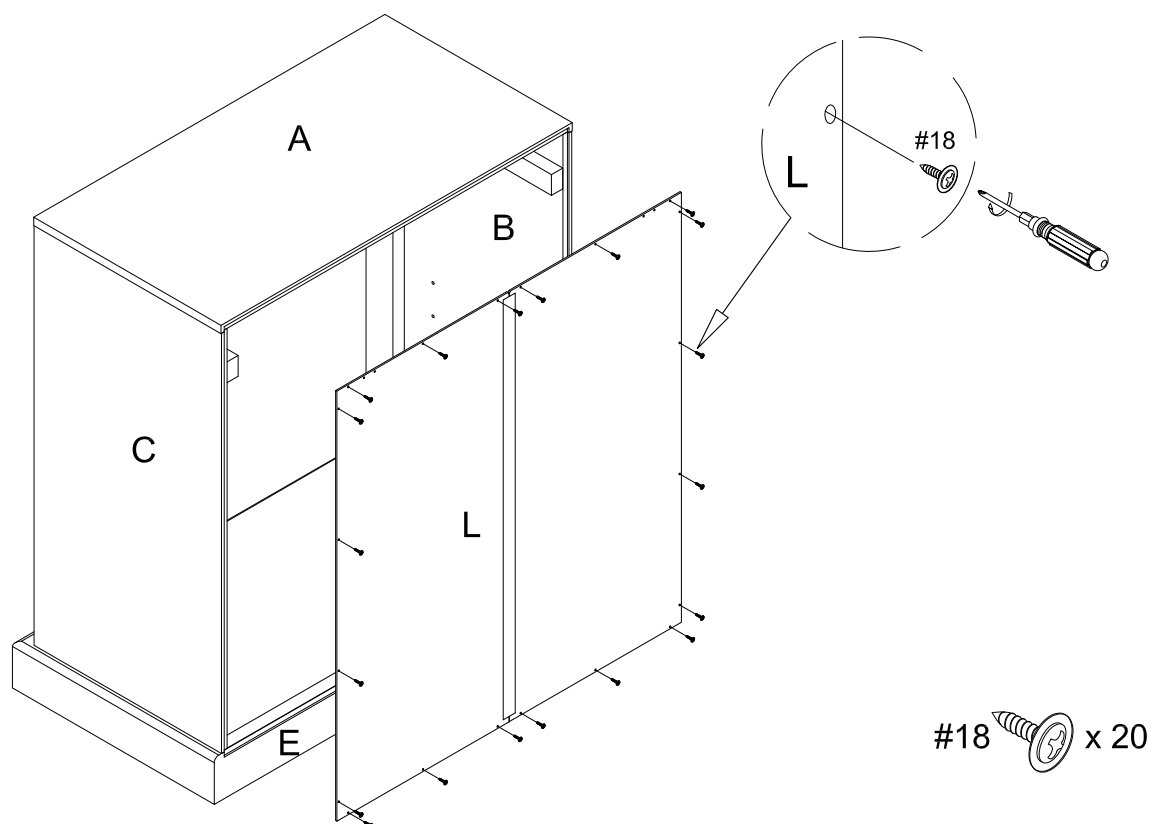


Step 9. Slide assembled drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.


Move the sliders to the front end of rail before sliding the drawer into place.

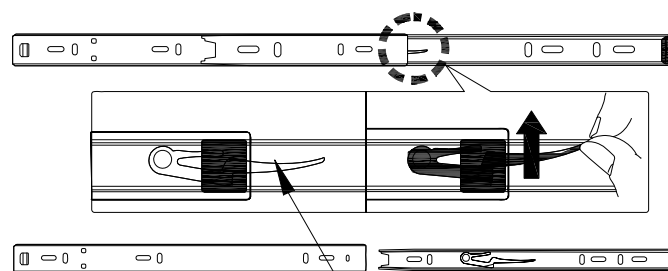

Trigger Disconnect Lever

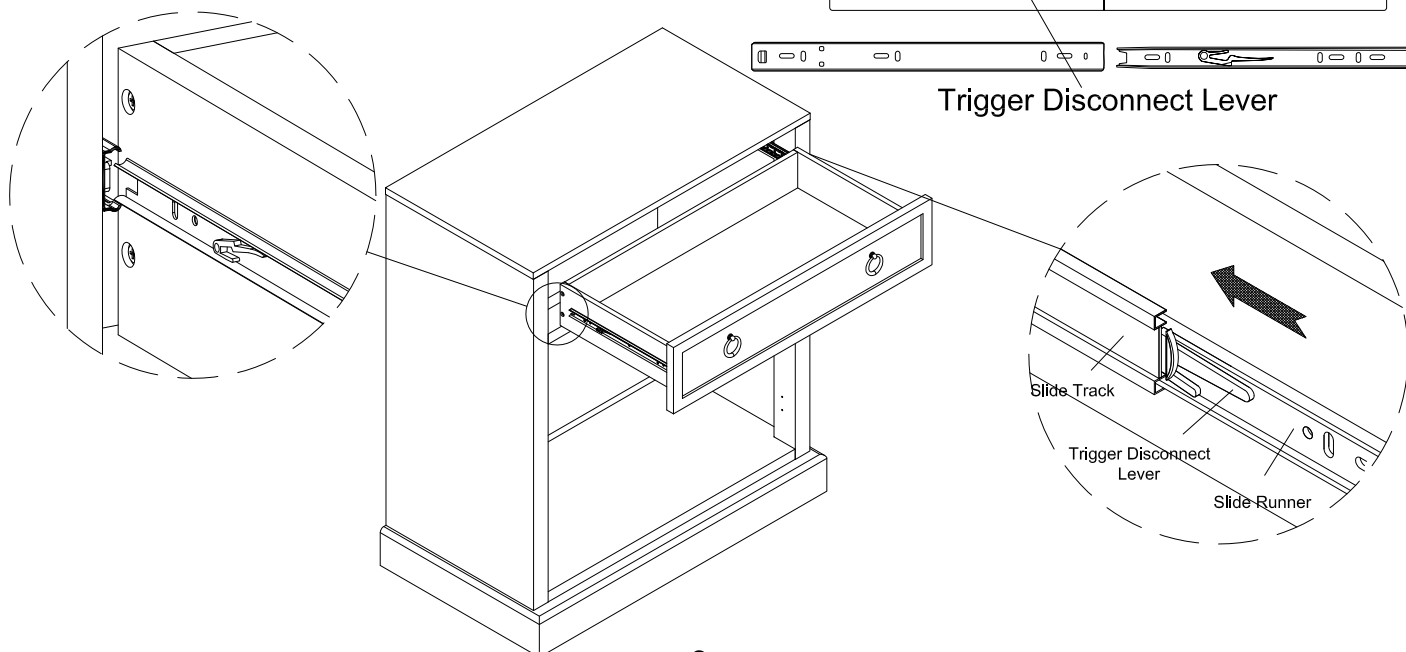


Step 10. Attach doors (parts N & O) to panels (parts B & C) using short screws (part #17) and phillips head screwdriver.

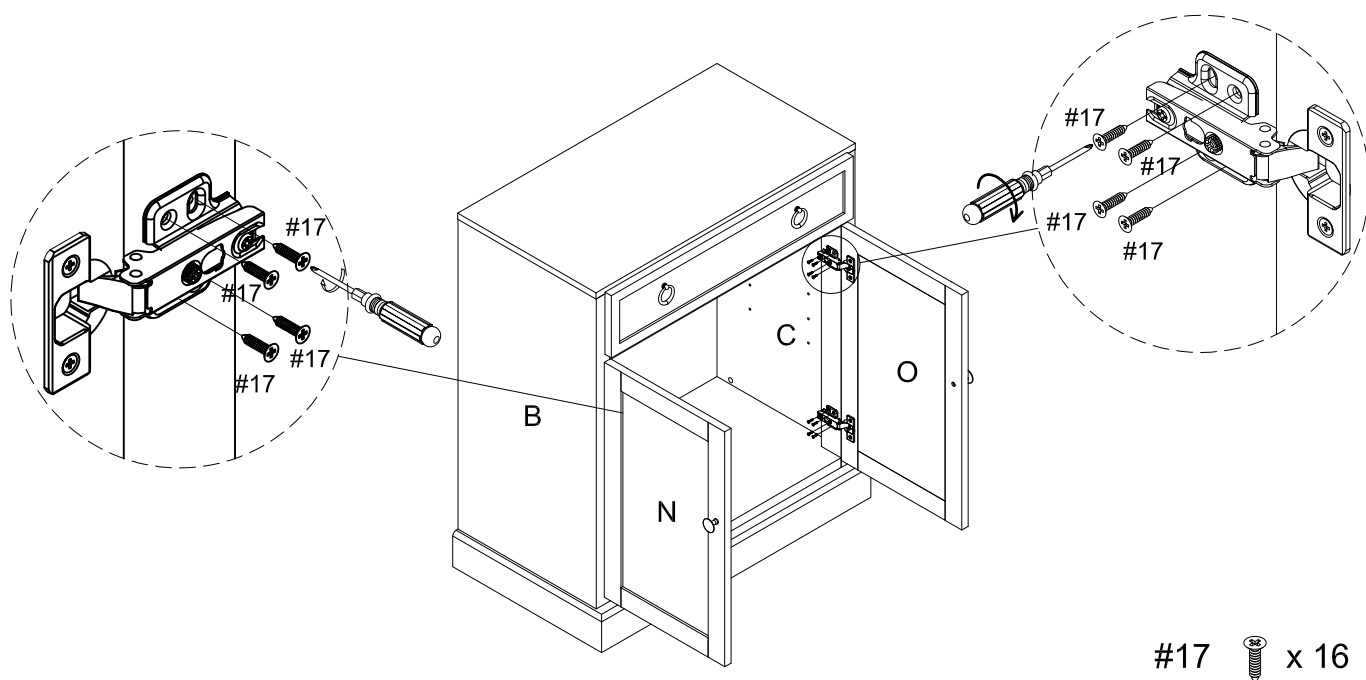

Step 11. Place shelf holders (part #12) into desired position, slide adjustable shelf (part M) into place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #19) must be installed to prevent tipping, damage and/or injury.

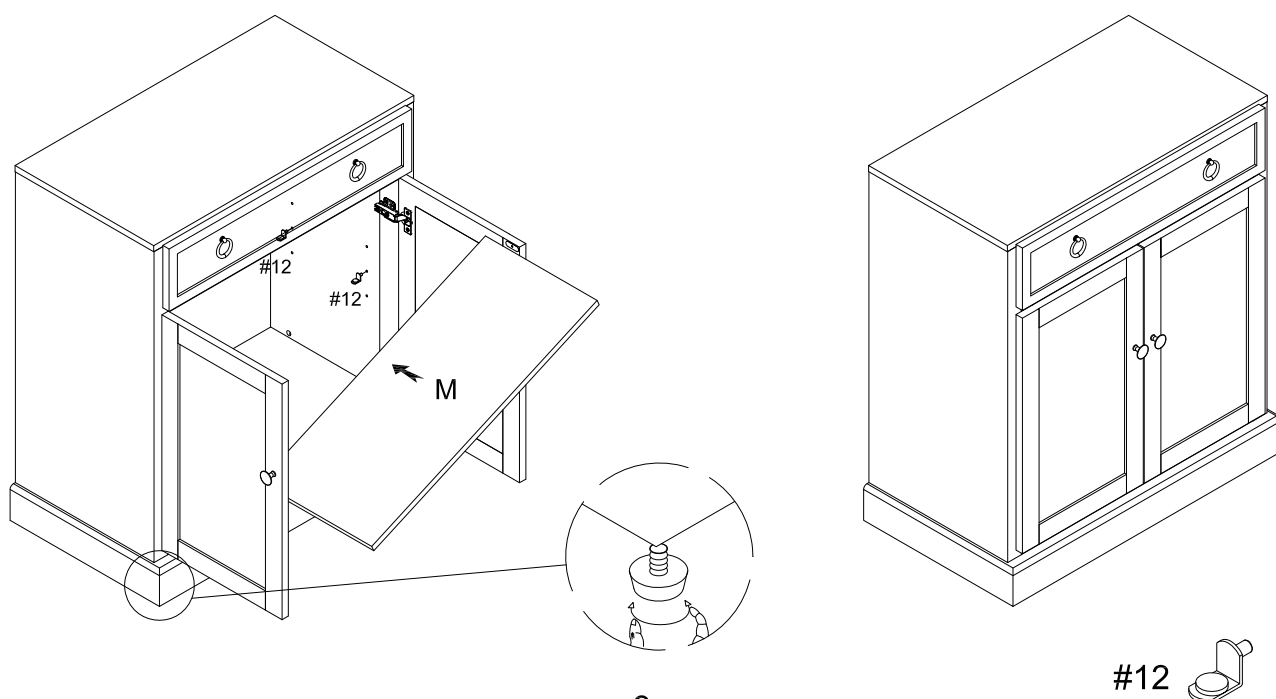


#19	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC 8*3*15mm	Long Screw 1 PC 8*4*35mm	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

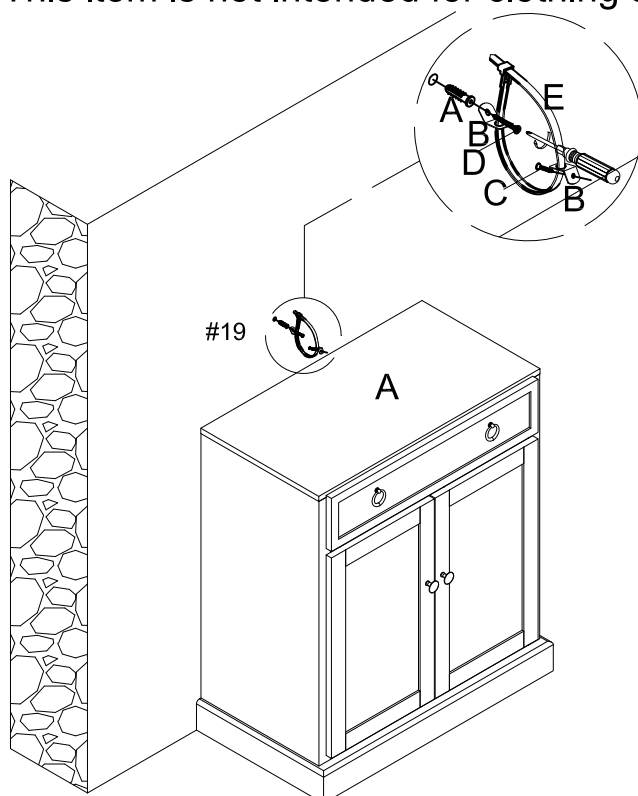


⚠ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. <i>This is a permanent label. Do not remove!</i>
	

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door

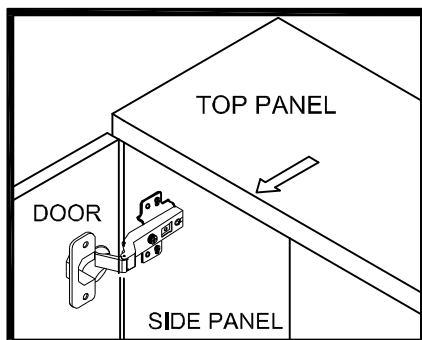


STEP 2

Adjust the gap between door panel and side panel

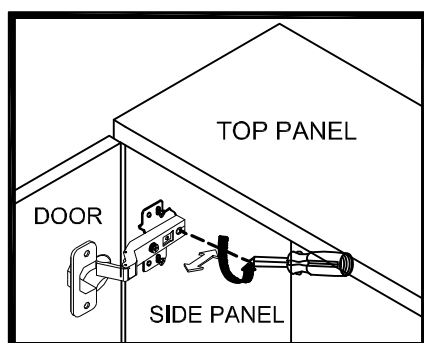


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

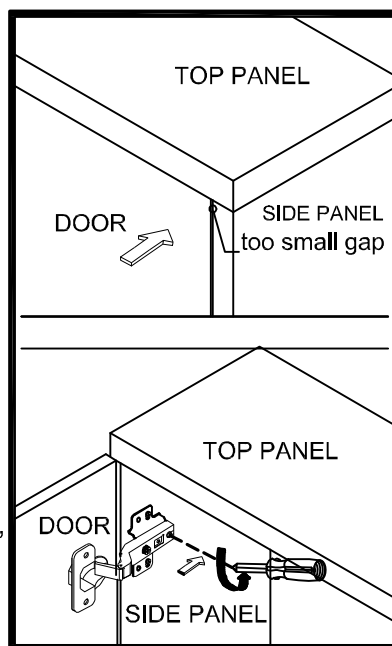

Push the hinge back a little.


STEP 2b MOVE DOOR OUT

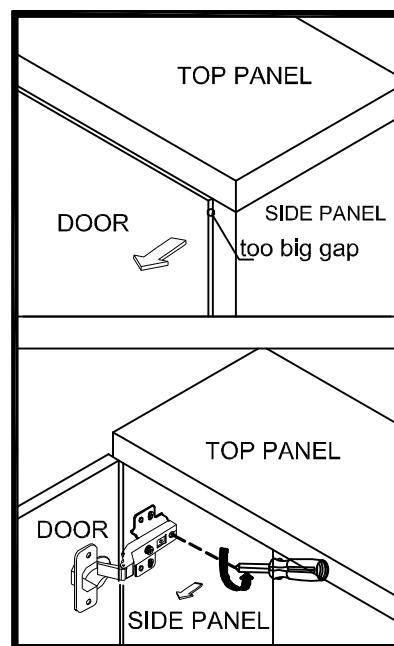

Pull the hinge forward a little.


STEP 3

To adjust the gap between two door

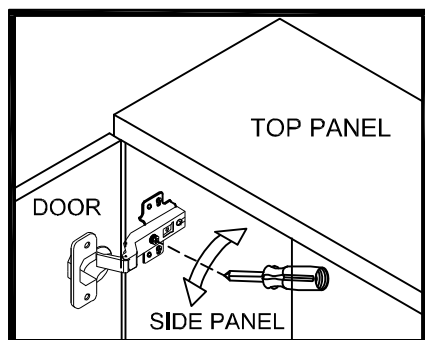


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

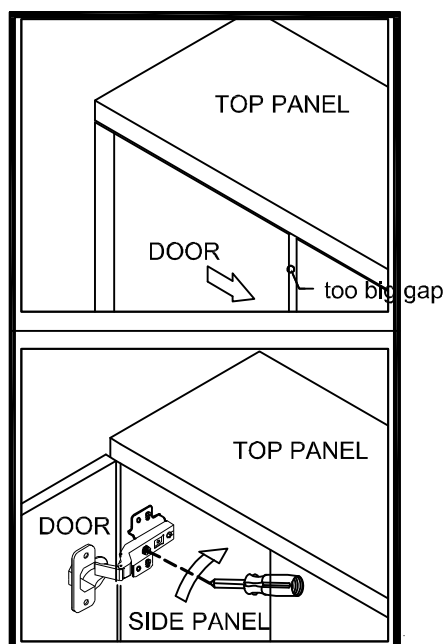

Turn the screw clockwise a little as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

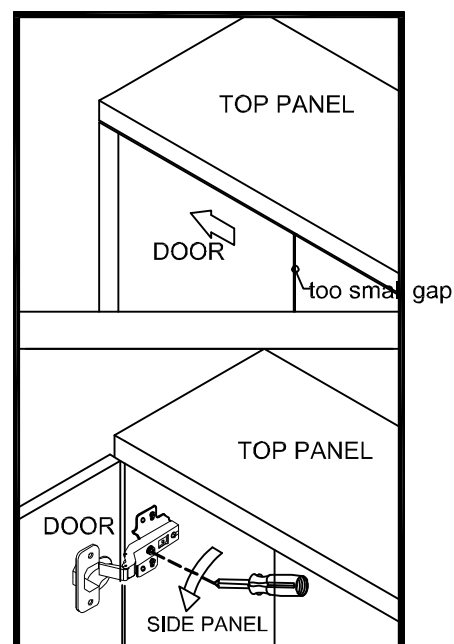

Turn the screw counterclockwise a little as shown to make the gap big.