 
 

 
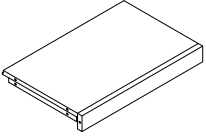 
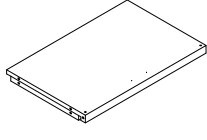 
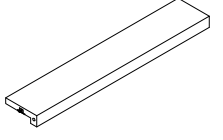 
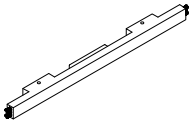 
 
 
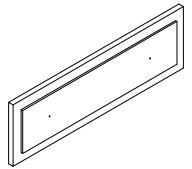 
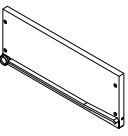 
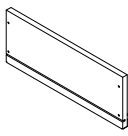 
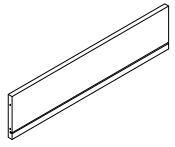 
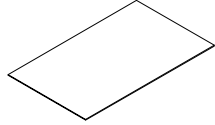 
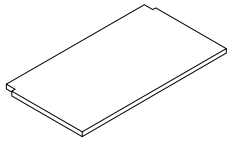 



CROSLEY
FURNITURE

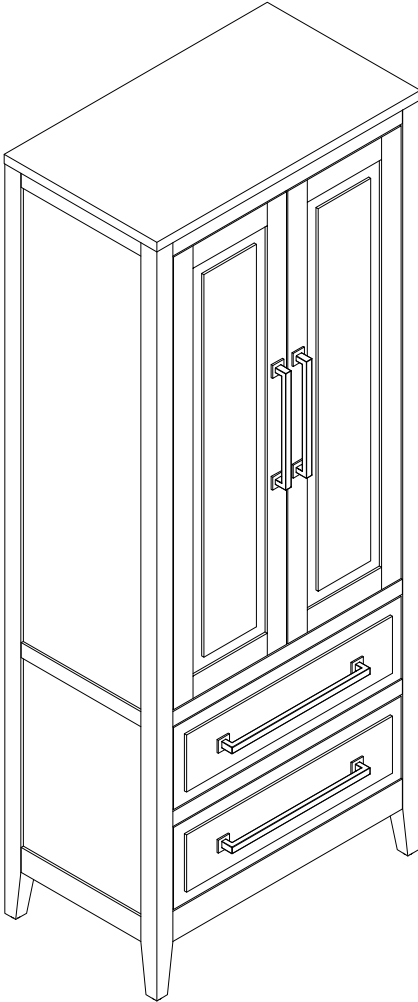 


 

 

 
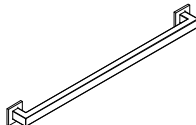 
 


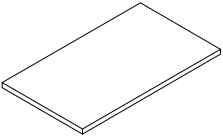 


 
Storage Pantry
CF3136



PART LIST

 
<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Middle Shelf 1 PC</p>
<p>F</p> 	<p>G</p> 	<p>H3</p> 	<p>I</p> 	<p>J</p> 
<p>Cross Rail 1 PC</p>	<p>Top Rail 1 PC</p>	<p>Back Panel 1 PC</p>	<p>Door 2 PCS</p>	<p>Drawer Front Panel 2 PCS</p>
<p>K2</p> 	<p>L2</p> 	<p>M2</p> 	<p>N2</p> 	<p>O2</p> 
<p>Drawer Left Panel 2 PCS</p>	<p>Drawer Right Panel 2 PCS</p>	<p>Drawer Back Panel 2 PCS</p>	<p>Drawer Bottom Panel 2 PCS</p>	<p>Adjustable Shelf 2 PCS</p>
<p>P</p>  <p>Cover 2 PCS</p>				

HARDWARE LIST

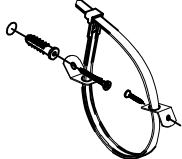 Ø1/4"*25mm Bolt 14 PCS (Extra 1)	 Ø1/4"*11mm Spring Washer 14 PCS (Extra 1)	 Ø1/4"*13mm Flat Washer 14 PCS (Extra 1)	 4mm*90 Allen Wrench 1 PC	 Ø8*30mm Wood Dowel 18 PCS (Extra 1)
 Magnet 2 PCS	 6*3*15mm Round Head Screw 4 PCS (Extra 1)	 Door Handle 2 PCS	 Drawer Handle 2 PCS	 5/32"*22mm Round Head Bolt 8 PCS (Extra 1)
 8*4*25 Long Screw 16 PCS (Extra 1)	 8*3*12mm Short Screw 30 PCS (Extra 1)	 Shelf Holder 8 PCS (Extra 1)	 Binding Post 2 SETS (Extra 1)	 M2 Small Allen Wrench 1 PC
 Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 
Please do not use tools to assemble this unit unless specifically indicated.

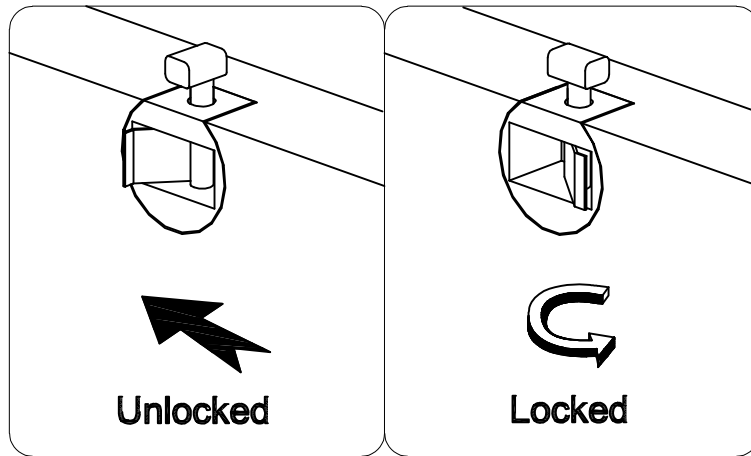

 
Reference the images above any time the instructions state "lock the hardware"

Note: Be sure to check all hardware is locked when completed.

Step 1. Attach magnets (part #6) to middle shelf (part E2) and top rail (part G) using round head screws (part #7) and phillips head screwdriver.

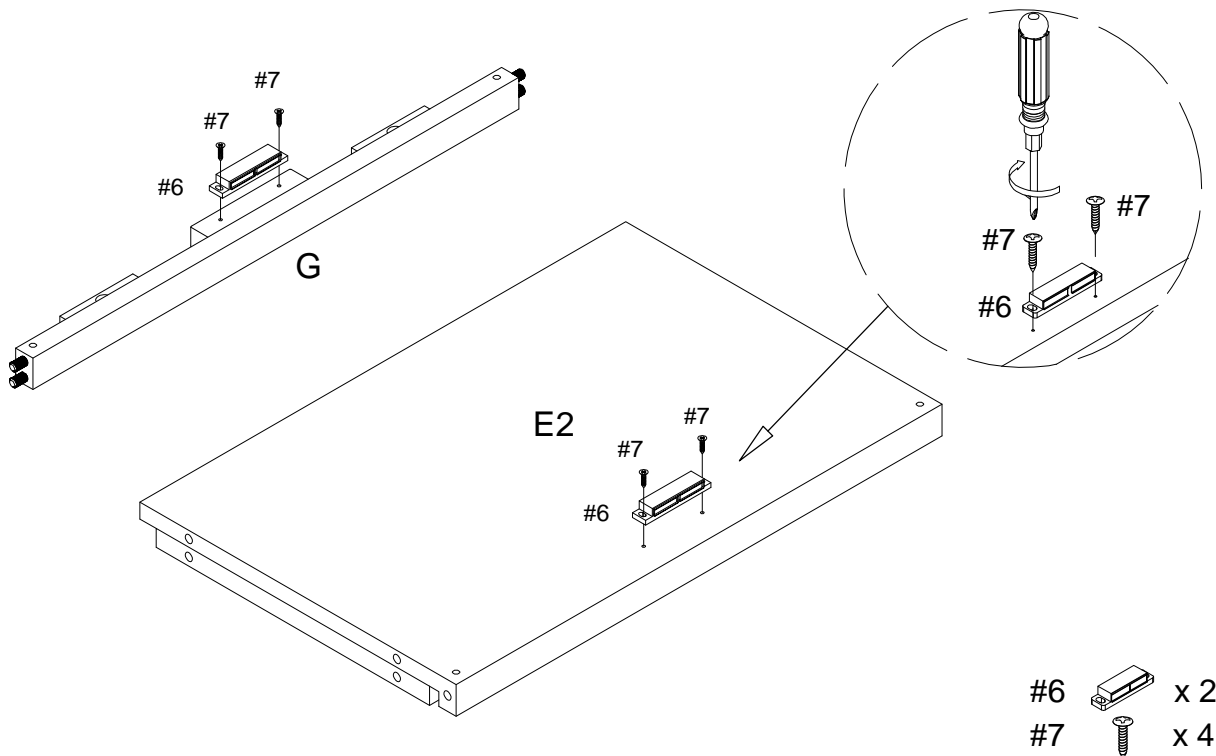 


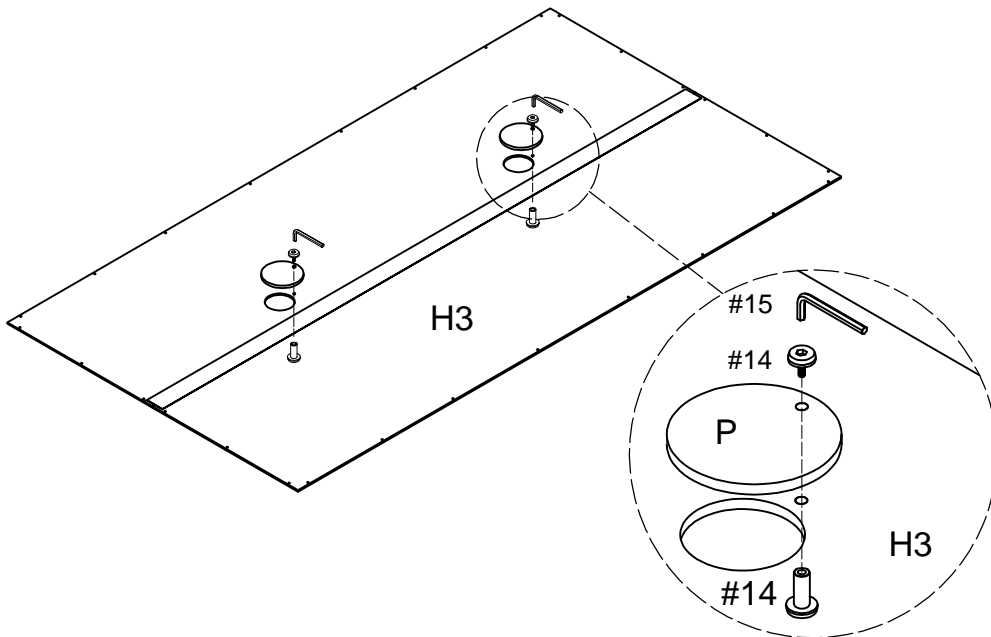 


Step 2. Attach covers (part P) to back panel (part H3) using binding posts (part #14) and small allen wrench (part #15).



 
- #14  x 2
- #15  x 1

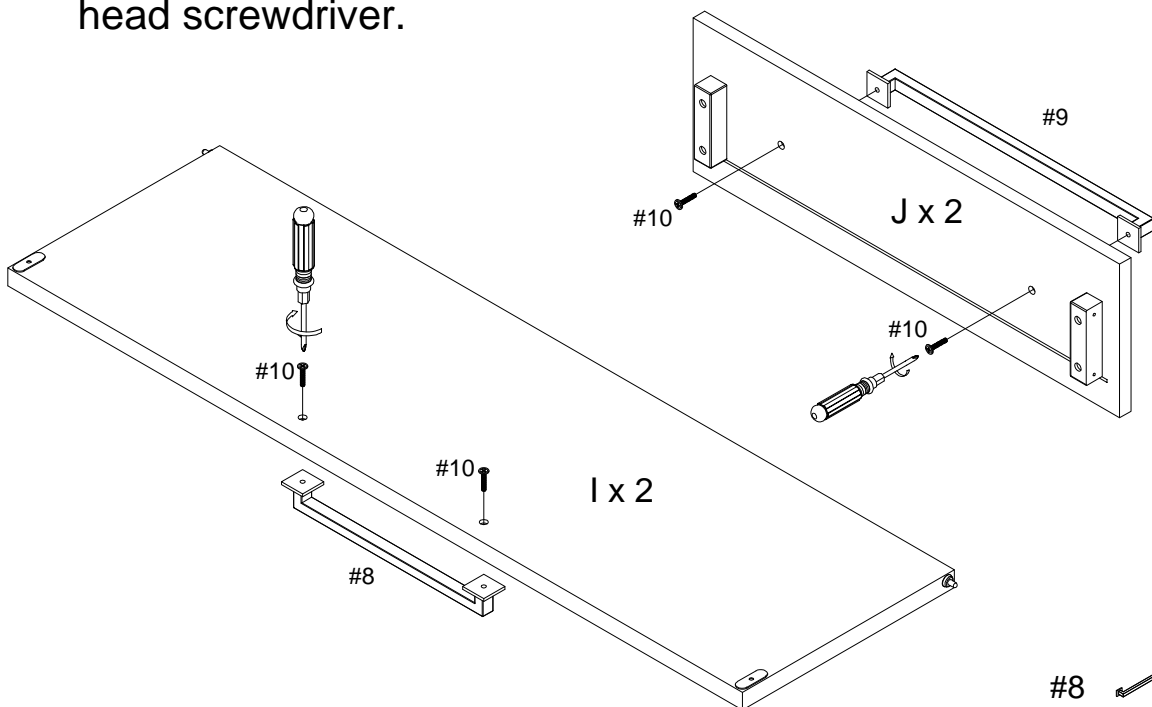Step 3. Attach handles (parts #8 & #9) to doors (part I) and drawer front panels (part J) using round head bolts (part #10) and phillips head screwdriver.

 


- #8  x 2
- #9  x 2
- #10  x 8

 
Step 4. Attach drawer panels (parts K2 & L2) to drawer front panel (part J) using long screws (part #11) and phillips head screwdriver. Slide drawer bottom panel (part N2) into grooves of assembled unit (parts J, K2 & L2). Attach drawer back panel (part M2) to assembled unit (parts K2, L2 & N2) using long screws (part #11) and phillips head screwdriver. Repeat for remaining drawer.

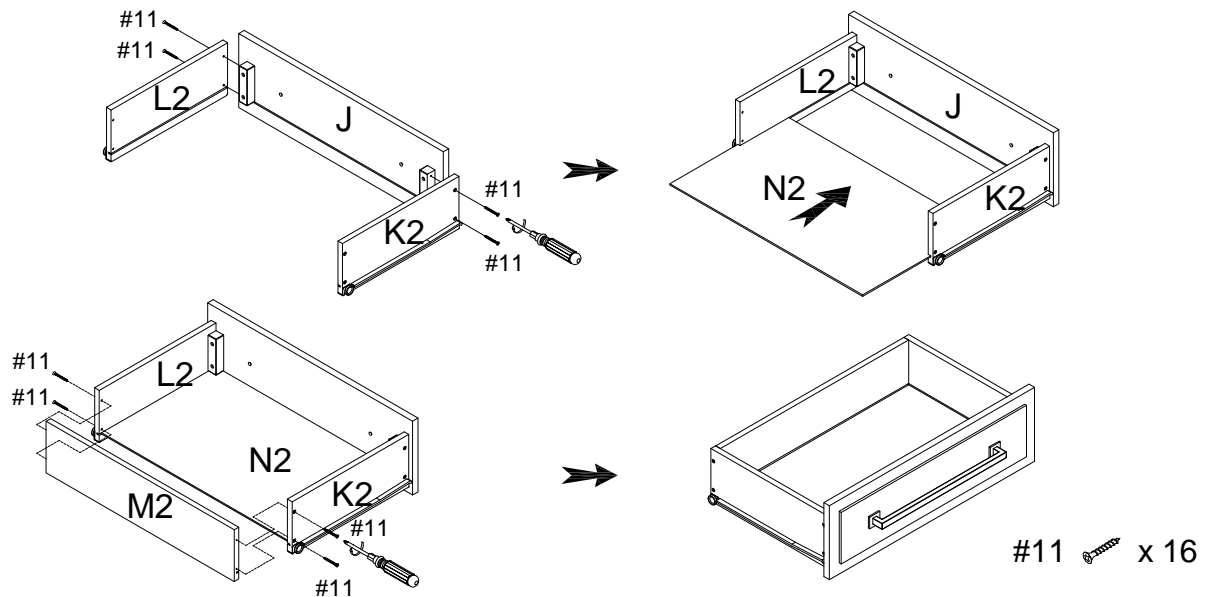

 
Step 5. Attach bottom panel (part D2) and middle shelf (part E2) to right panel (part C) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

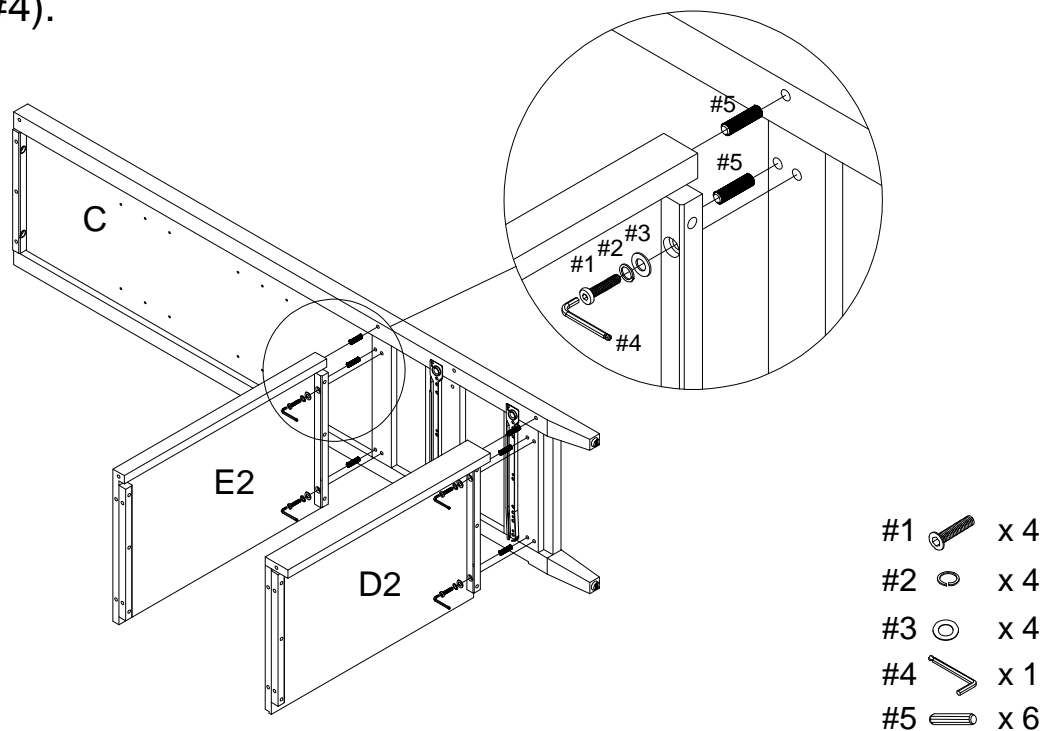

 
Step 6. Attach left panel (part B), top rail (part G) and cross rail (part F) to assembled unit (parts C, D2 & E2) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3), allen wrench (part #4) and lock the hardware.

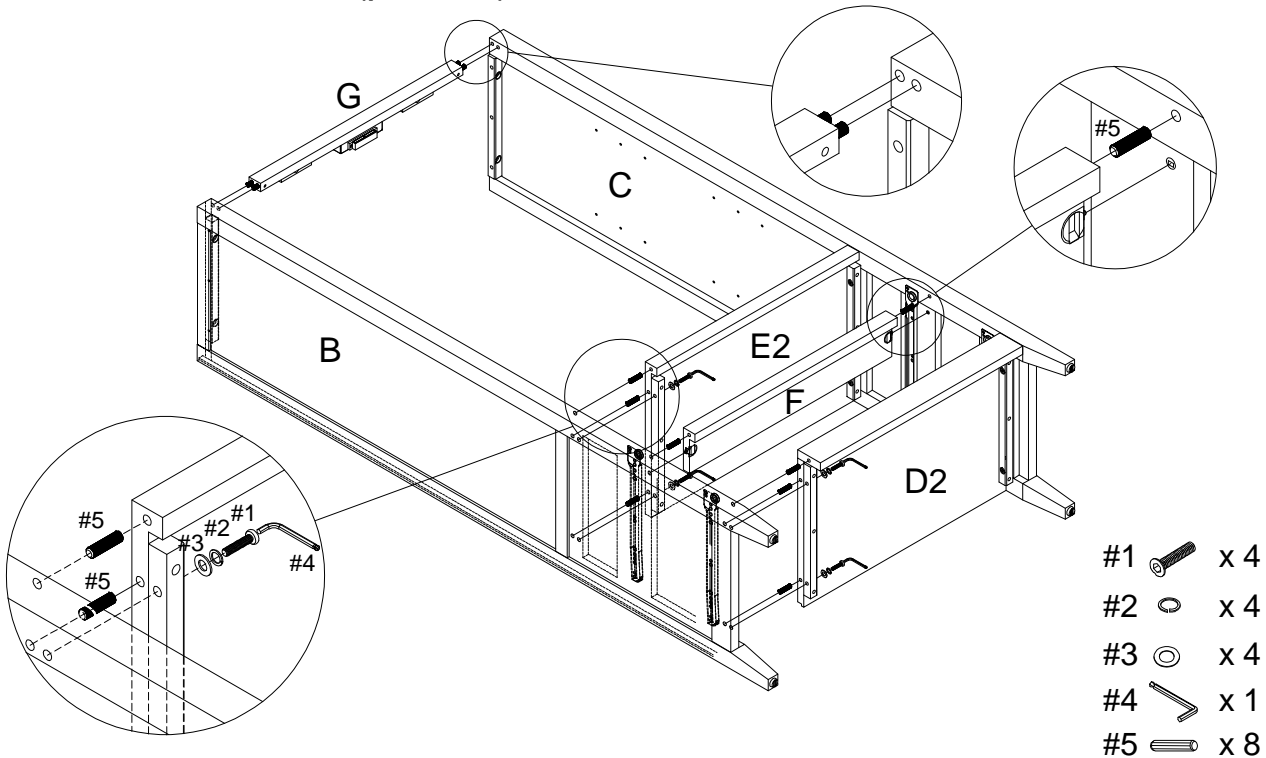

Step 7. Attach top panel (part A) to assembled unit (parts B, C & G) using wood dowels (part #5), bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #4).

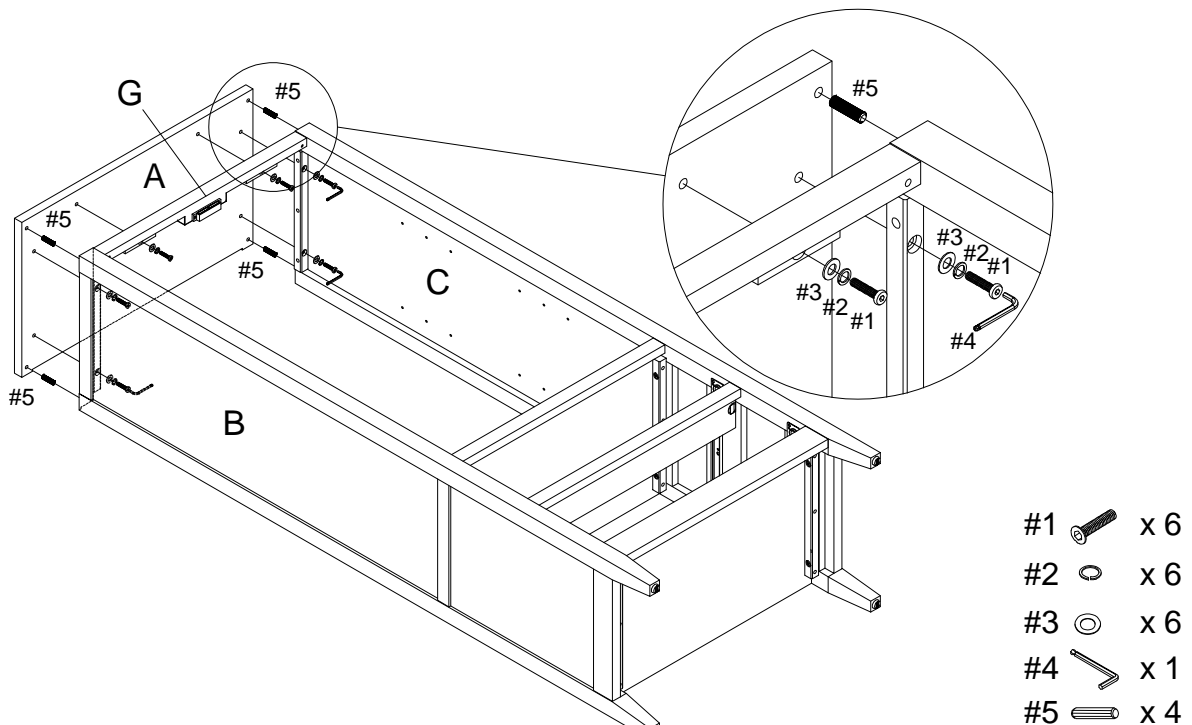 


Step 8. Carefully turn unit upright. Attach back panel (part H3) to assembled unit (parts A, B, C, D2 & E2) using short screws (part #12) and phillips head screwdriver.

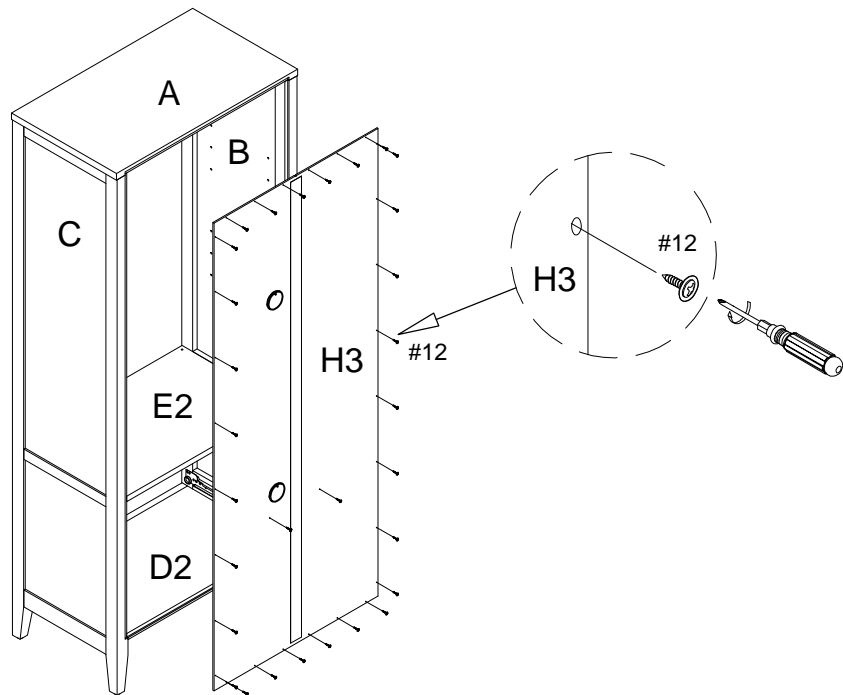

#12  x 30

 
Step 9. Slide assembled drawers into place.

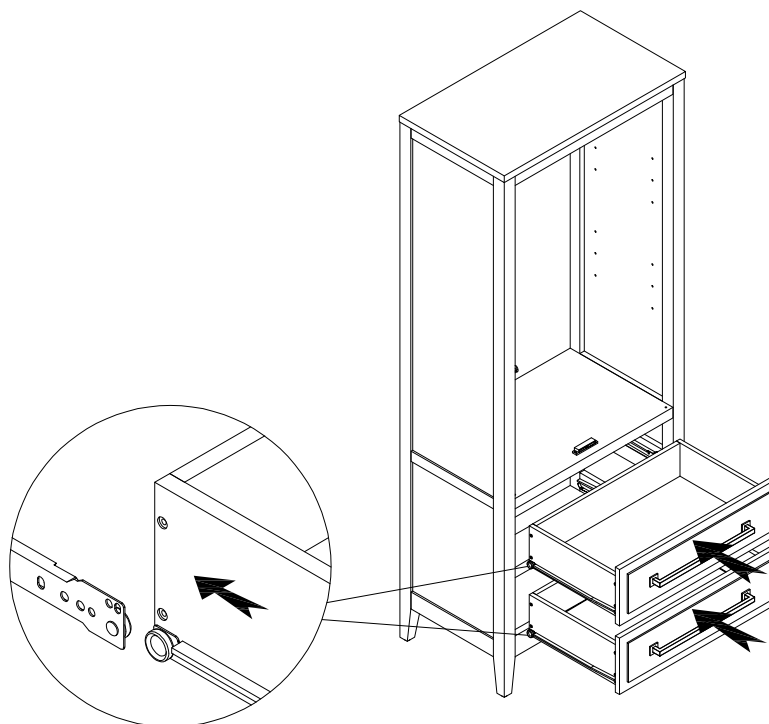

Step 10. Attach doors (part I) by placing pin hinge (pre-installed in door) in the pre-drilled hole of middle shelf (part E2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top rail (part G).

 
NOTE: Be sure top and bottom pin hinges are fully extended to secure doors in place.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

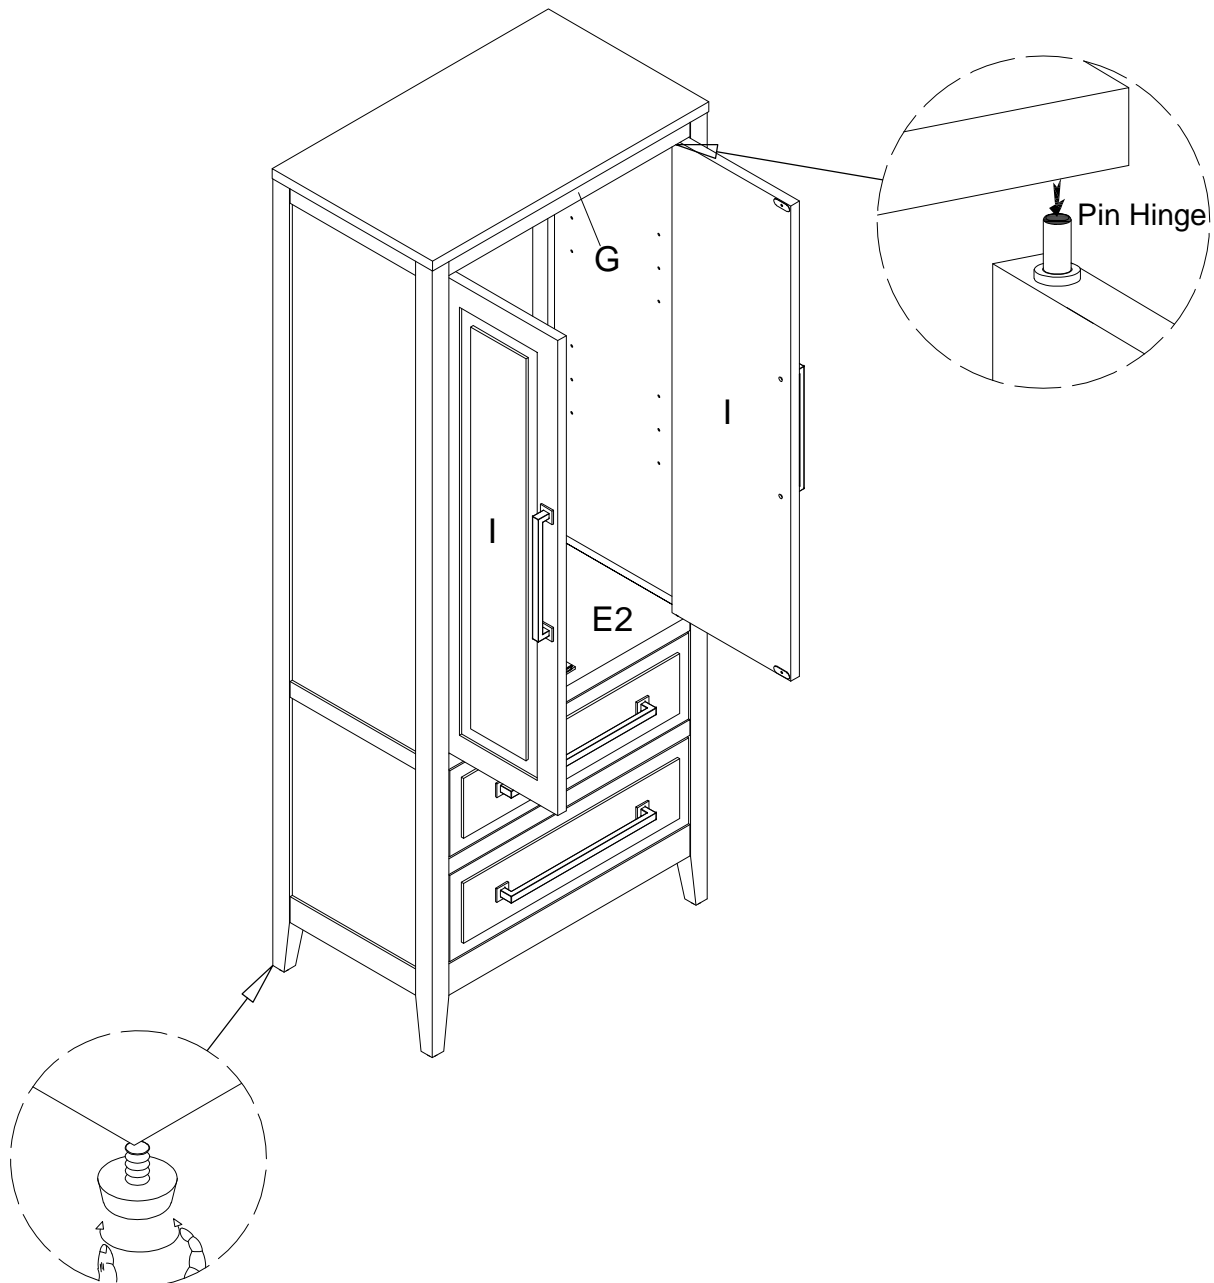 


 

 



Step 11. Place shelf holders (part #13) into desired position and slide adjustable shelves (part O2) into place.

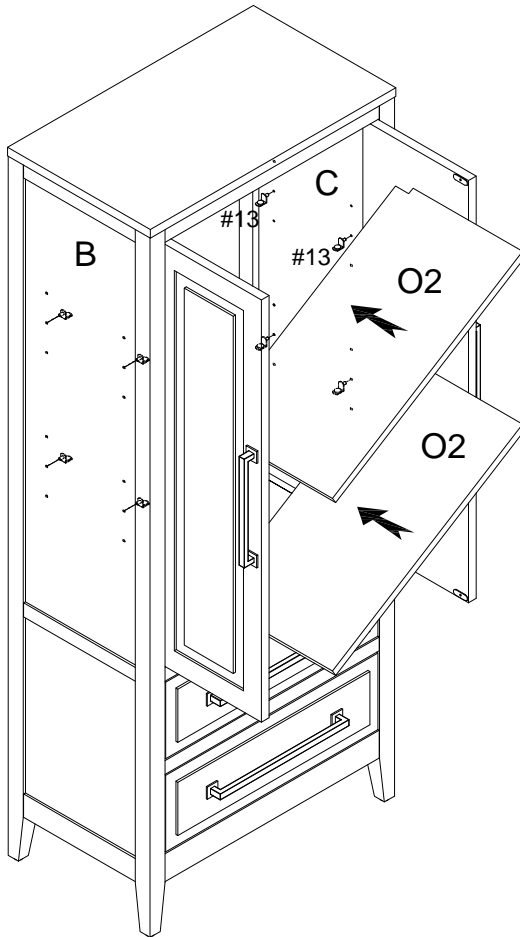Important: Safety strap kit (part #16) must be installed to prevent tipping, damage and/or injury.

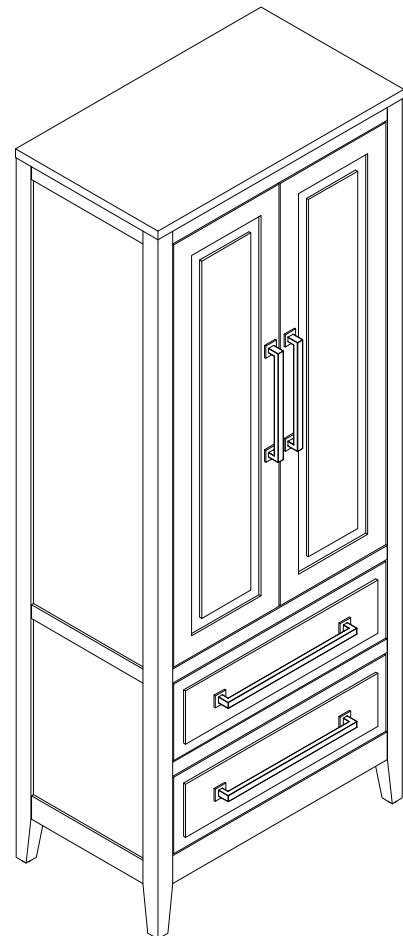

#13  x 8

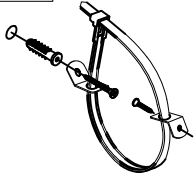

 
#16	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC


SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

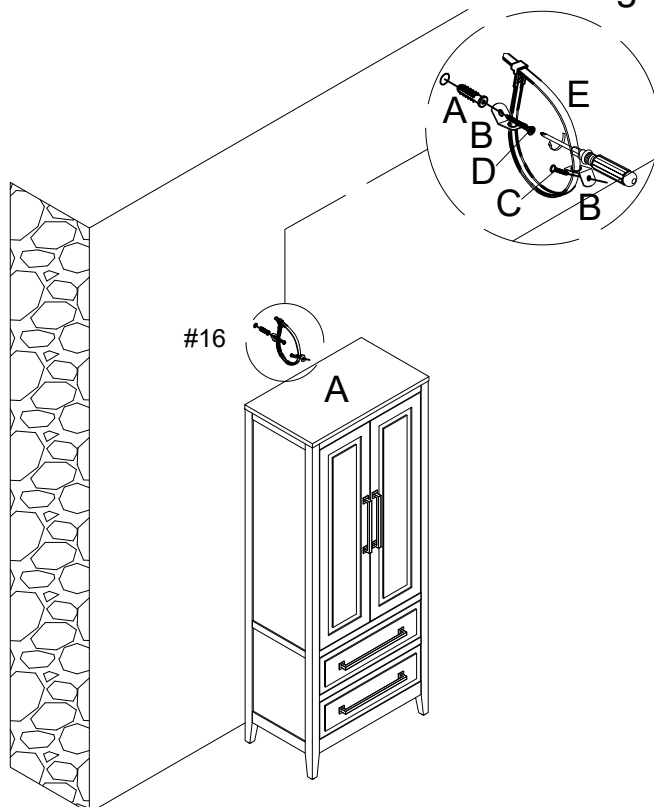

▲WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. <i>This is a permanent label. Do not remove!</i>
