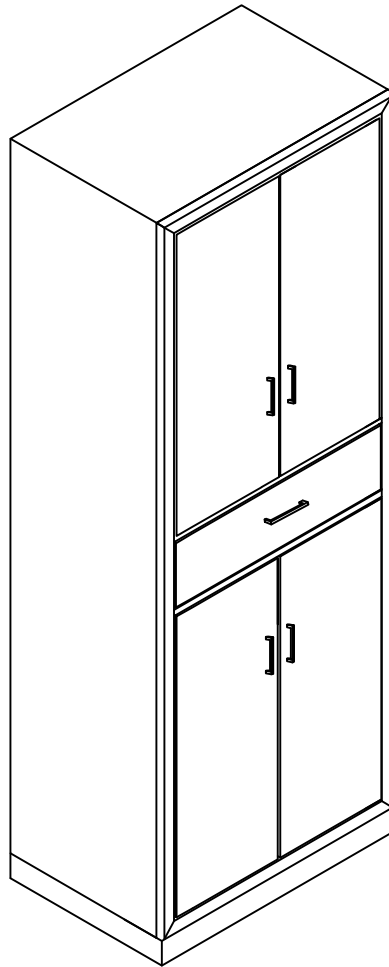


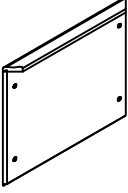
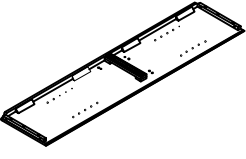
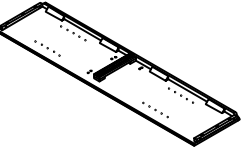
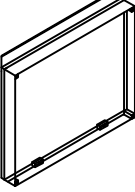
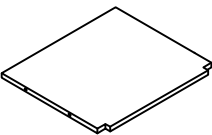
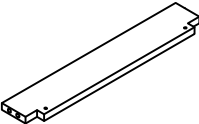

 
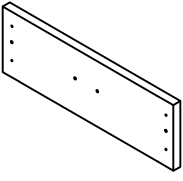
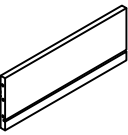
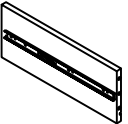
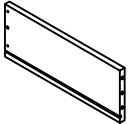
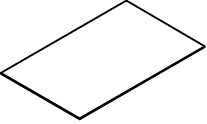
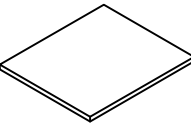

 
CROSLEY

FURNITURE

 
 
 

 

 
 
 

 
 
Pantry
CF3139



PART LIST


<p>A2</p> 	<p>B2</p> 	<p>C2</p> 	<p>D2</p> 	<p>E2</p> 
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>	<p>Fixed Shelf 1 PC</p>
<p>F2</p> 	<p>G2</p> 	<p>H2</p> 	<p>I2</p> 	<p>J2</p> 
<p>Rail 1 PC</p>	<p>Door Panel 2 PCS</p>	<p>Door Panel 2 PCS</p>	<p>Drawer Front Panel 1 PC</p>	<p>Drawer Back Panel 1 PC</p>
<p>K2</p> 	<p>L2</p> 	<p>M2</p> 	<p>N2</p> 	<p>O2</p> 
<p>Drawer Left Panel 1 PC</p>	<p>Drawer Right Panel 1 PC</p>	<p>Drawer Bottom Panel 1 PC</p>	<p>Adjustable Shelf 4 PCS</p>	<p>Back Panel 1 PC</p>
<p>P</p>  <p>Cover 1 PC</p>				

HARDWARE LIST

#1  Ø8*30mm	#2  Ø6*30mm	#3 	#4  7*3*15mm	#5 
Long Wood Dowel 6 PCS (Extra 1)	Short Wood Dowel 4 PCS (Extra 1)	Double Magnet 2 PCS	Round Head Screw 4 PCS (Extra 1)	Handle 5 PCS
#6 	#7 	#8  Ø5/32"*20mm	#9  1/4*28mm	#10 
Shelf Holder 16 PCS (Extra 1)	Screw 28 PCS (Extra 1)	Round Head Bolt 10 PCS (Extra 1)	Bolt 8 PCS (Extra 1)	Cam Bolt 14 PCS (Extra 1)
#11 	#12 	#13 	#14  M2	#15  M4
Cam Lock 14 PCS (Extra 1)	Binding Post 1 PC (Extra 1)	Cam Sticker 14 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC
#16 				
Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

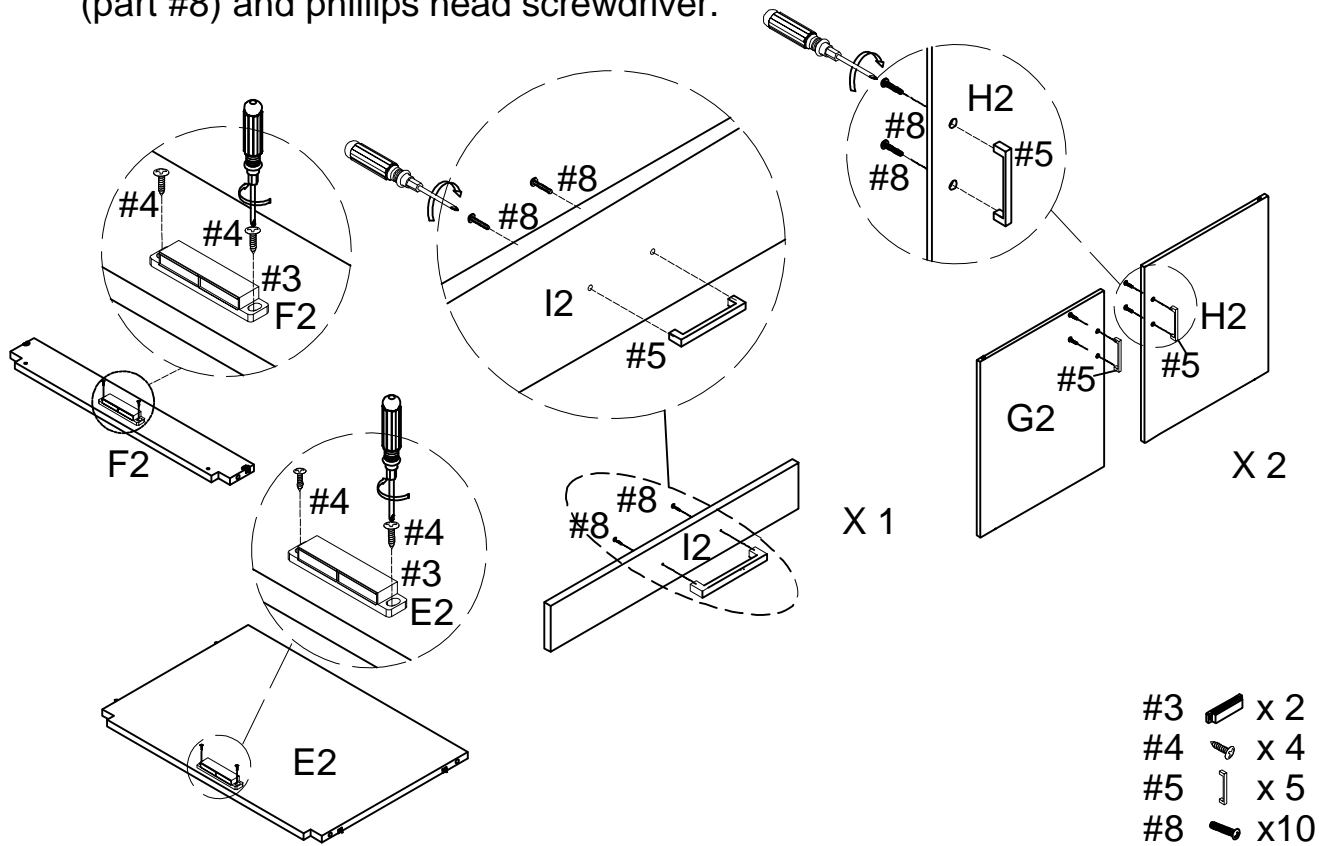Step 1. Attach double magnets (part #3) to fixed shelf (part E2) and rail (part F2) using round head screws (part #4) and phillips head screwdriver. Attach handles (part #5) to panels (parts G2, H2 & I2) using round head bolts (part #8) and phillips head screwdriver.




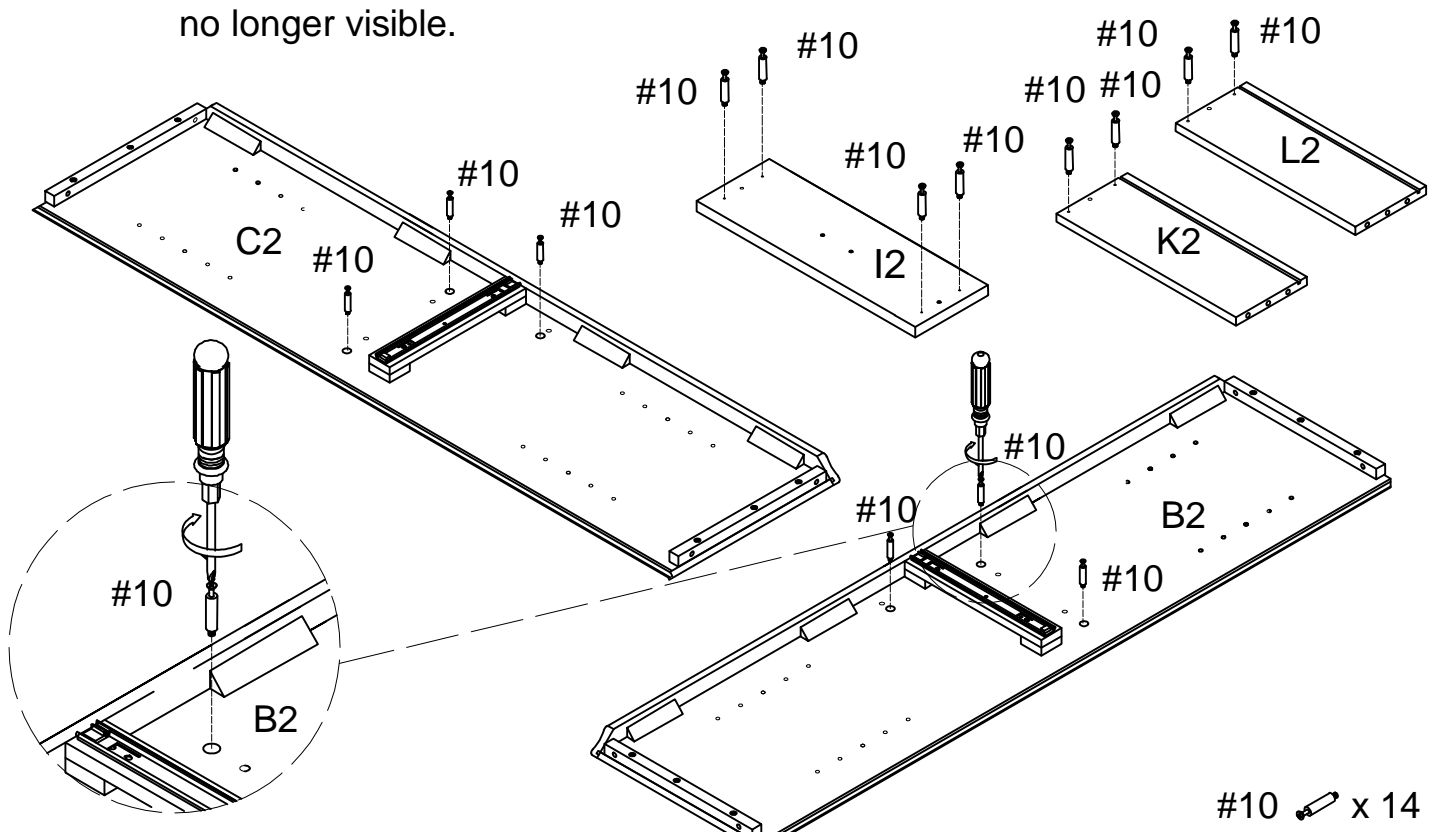Step 2. Insert cam bolts (part #10) into pre-drilled holes of panels (parts B2, C2, I2, K2 & L2) using phillips head screwdriver.
 NOTE: Do not over-tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 3. Attach drawer panels (parts K2 & L2) to drawer back panel (part J2) using short wood dowels (part #2), cam locks (part #11) and phillips head screwdriver. Slide drawer bottom panel (part M2) into grooves of assembled unit (parts J2, K2 & L2). Attach drawer front panel (part I2) to assembled unit (parts K2, L2 & M2) using short wood dowels (part #2), cam locks (part #11) and phillips head screwdriver.

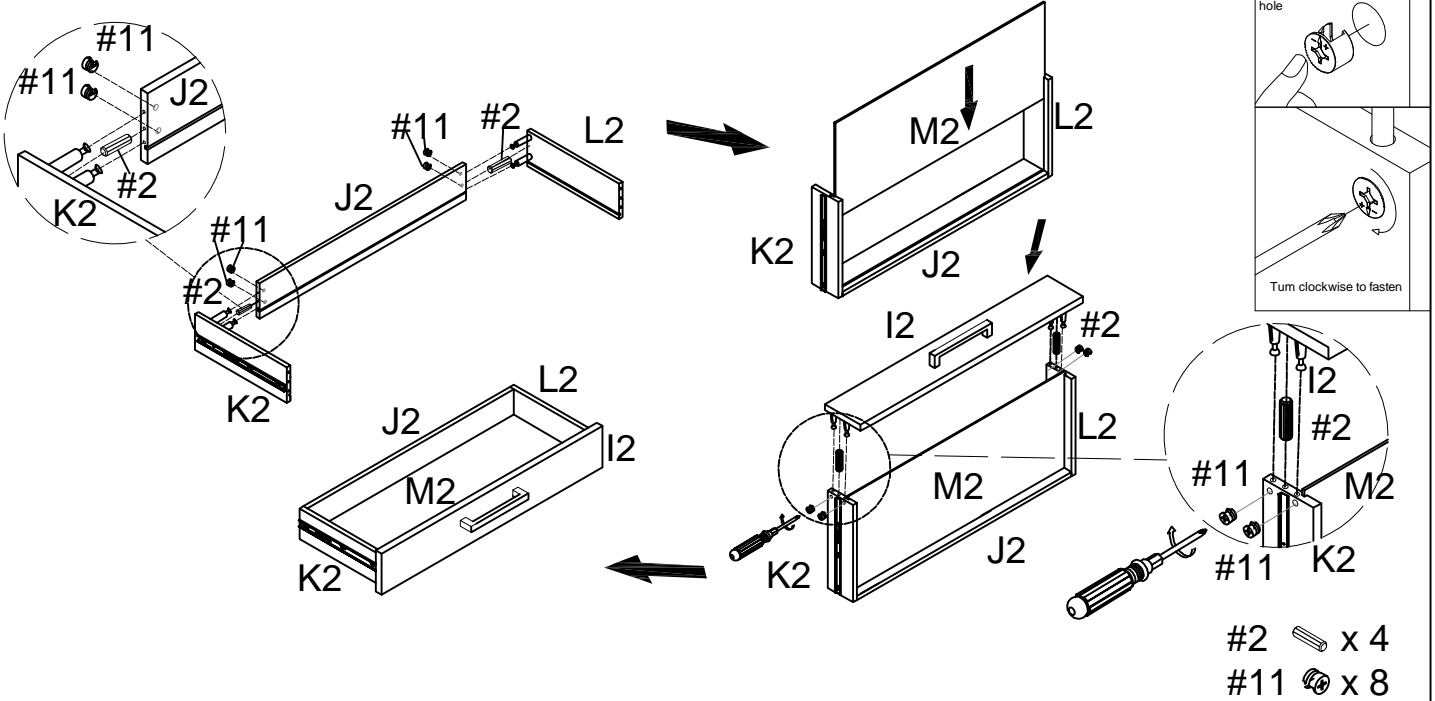Note: Cam locks must rotate a full 180°. See pictured insert.




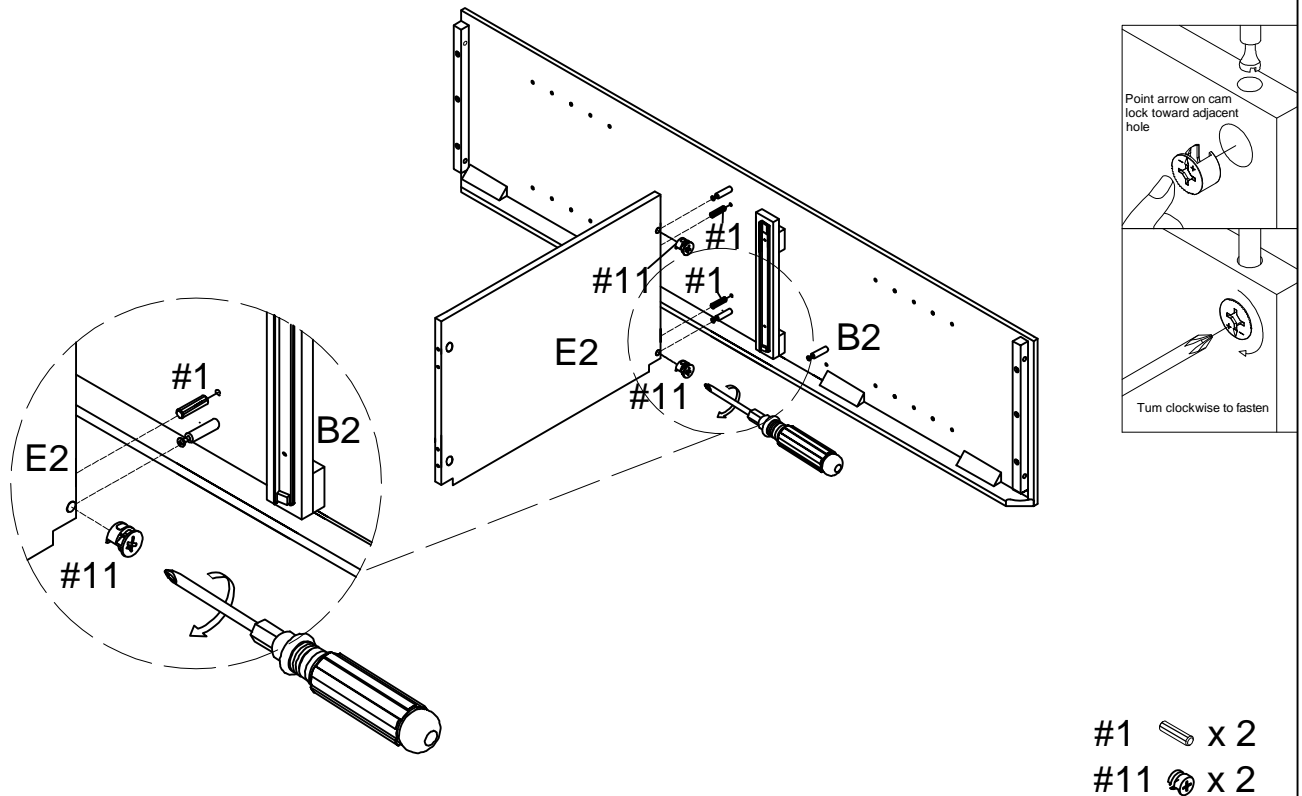
Step 4. Attach fixed shelf (part E2) to left panel (part B2) using long wood dowels (part #1), cam locks (part #11) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.



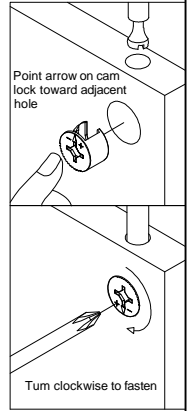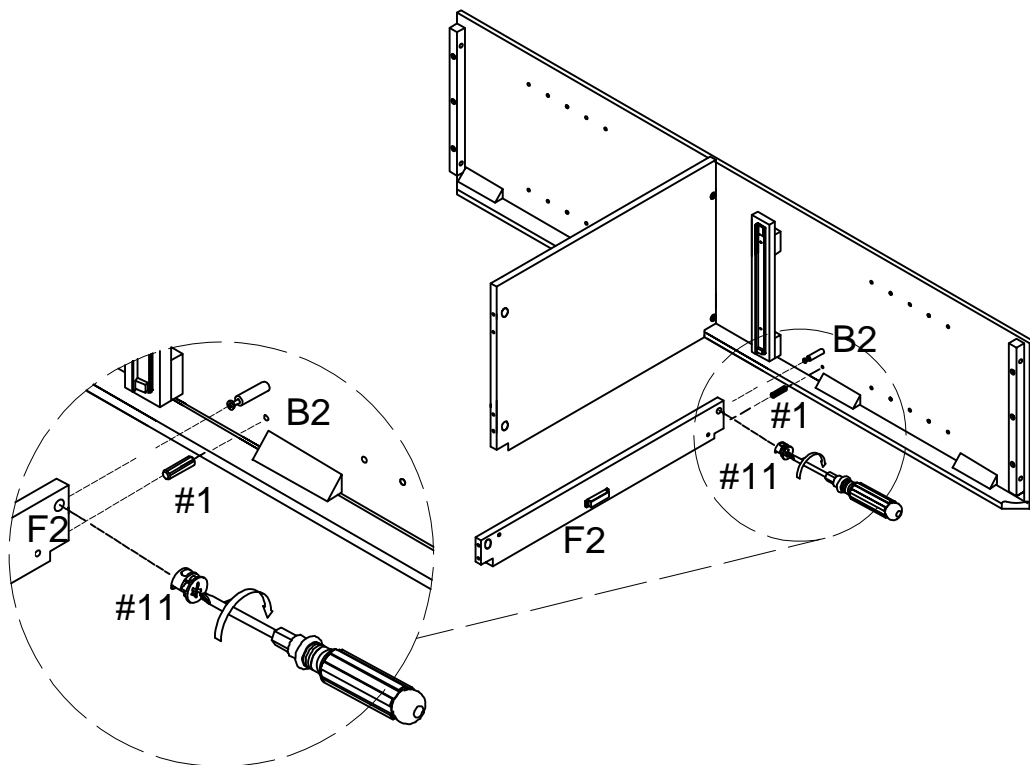Step 5. Attach rail (part F2) to left panel (part B2) using long wood dowel (part #1), cam lock (part #11) and phillips head screwdriver.



Note: Cam lock must rotate a full 180°. See pictured insert.





#1  x 1
 #11  x 1

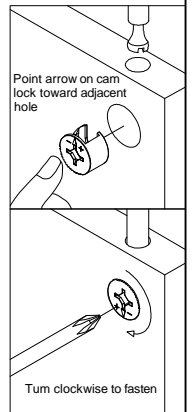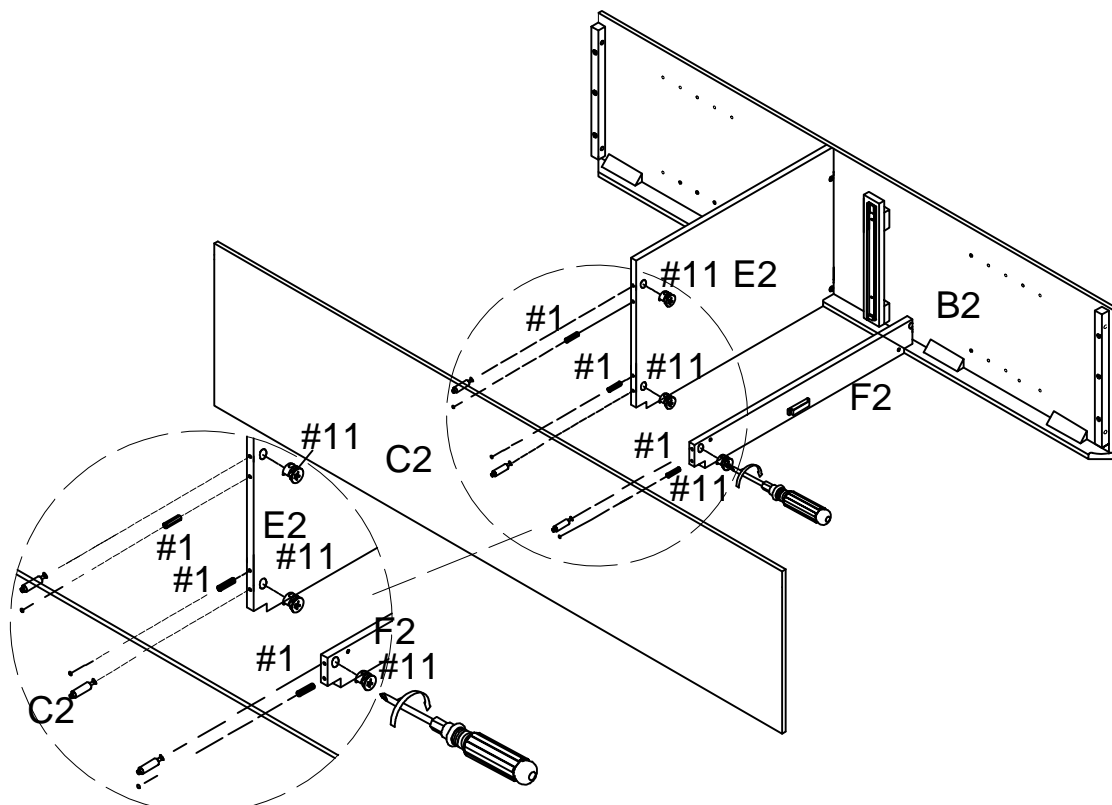
Step 6. Attach right panel (part C2) to fixed shelf (part E2) and rail (part F2) using long wood dowels (part #1), cam locks (part #11) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.




#1  x 3
 #11  x 3

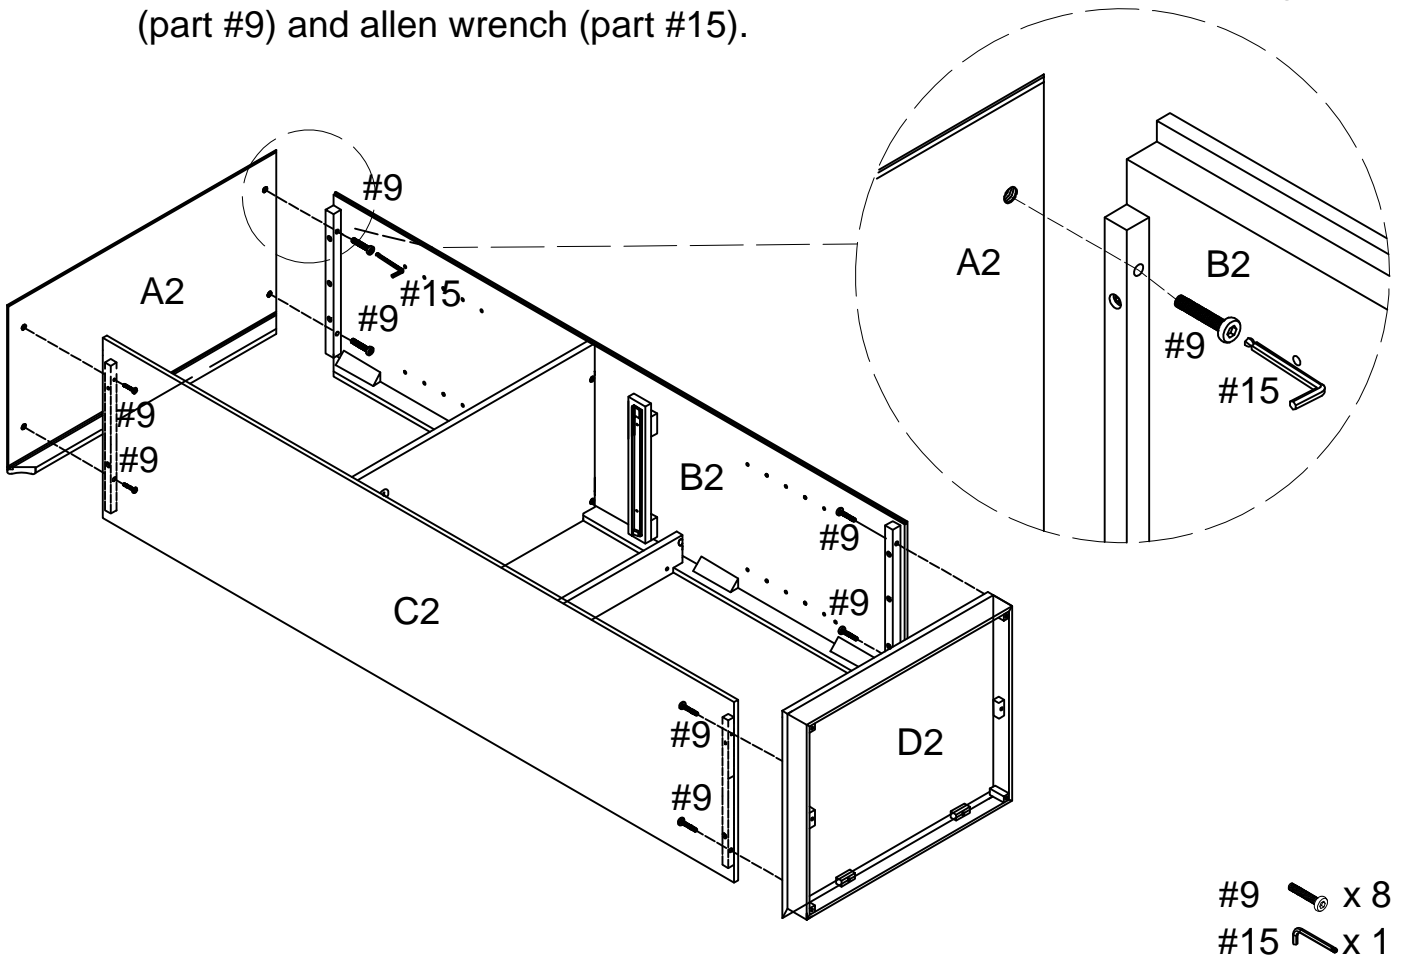
Step 7. Attach panels (parts A2 & D2) to assembled unit (parts B2 & C2) using bolts (part #9) and allen wrench (part #15).



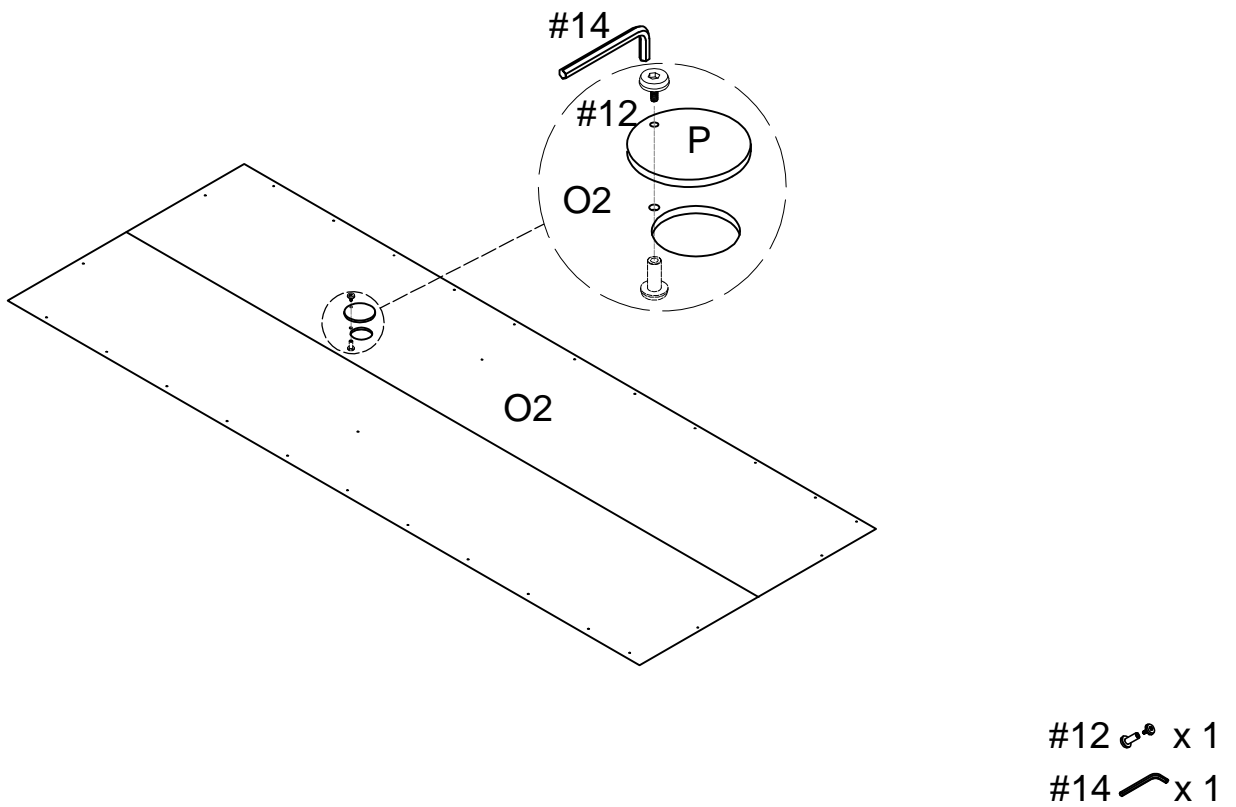Step 8. Attach cover (part P) to back panel (part O2) using binding post (part #12) and small allen wrench (part #14).



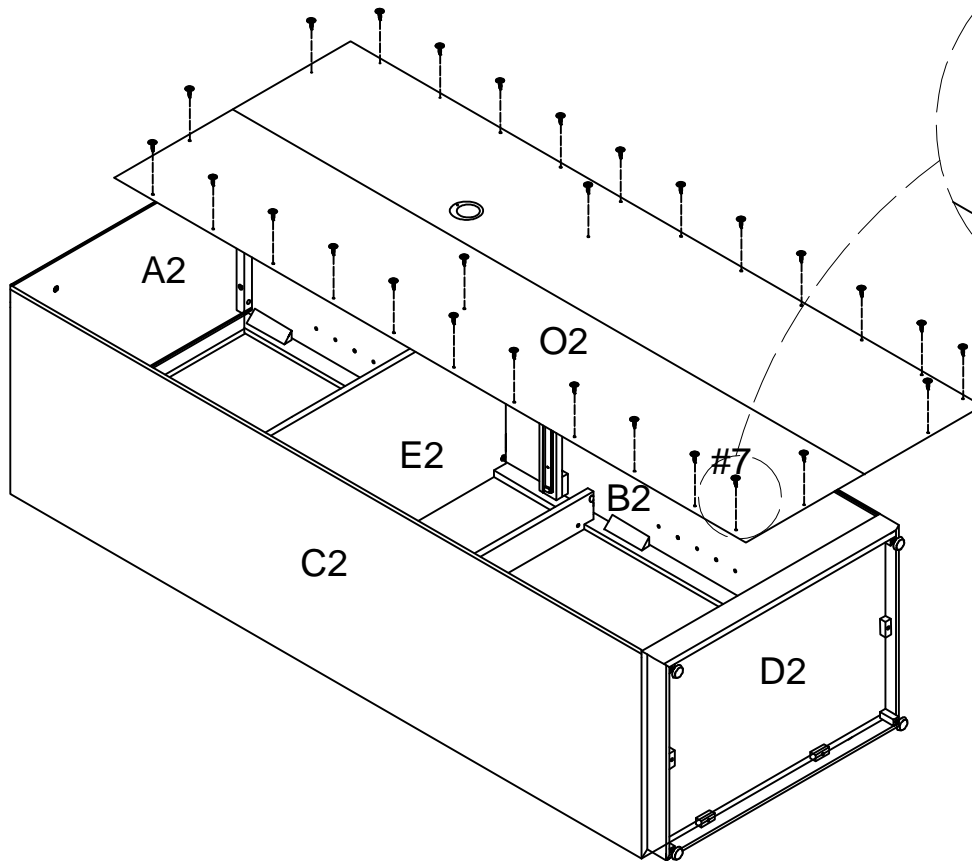Step 9. Attach back panel (part O2) to assembled unit (parts A2, B2, C2, D2 & E2) using screws (part #7) and phillips head screwdriver.




#7  x 28

Step 10. Carefully turn unit upright. Slide assembled drawer into place.

Attach doors (parts G2 & H2) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D2) and fixed shelf (part E2). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of rail (part F2) and top panel (part A2).

NOTE: Be sure top and bottom pin hinges are fully extended to secure door in place.

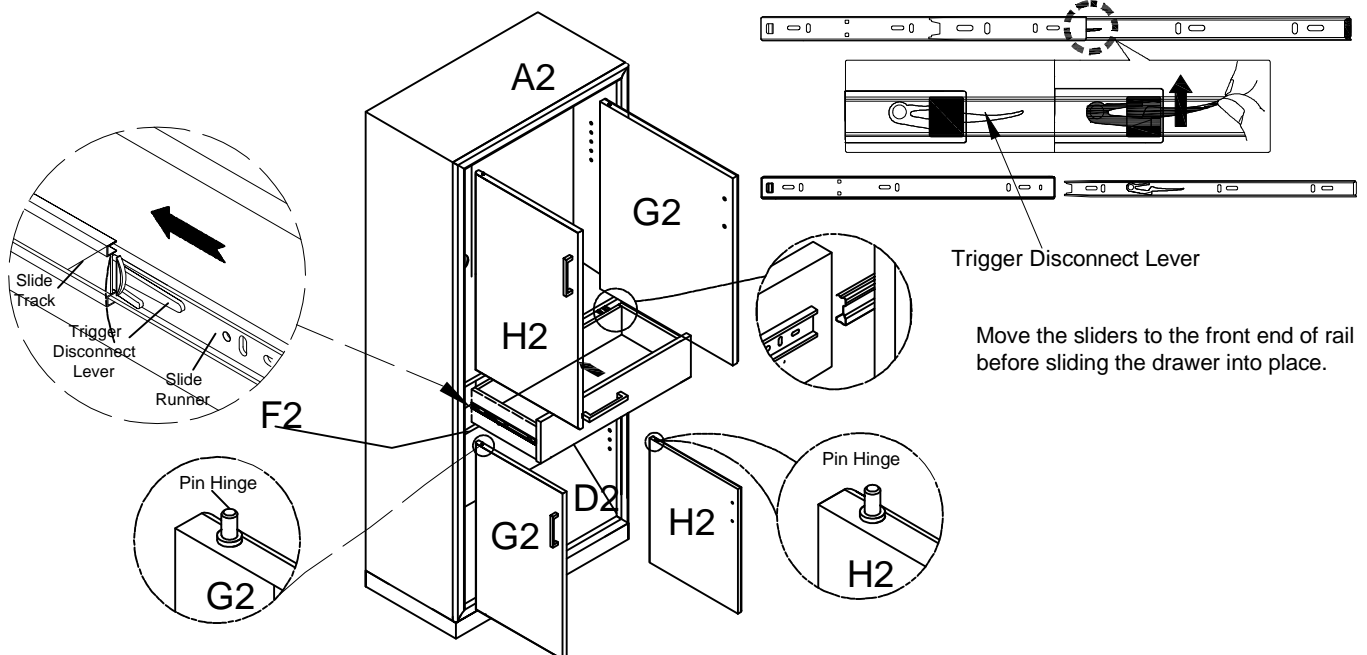NOTE: To release trigger disconnect levers push one side up and the other down.

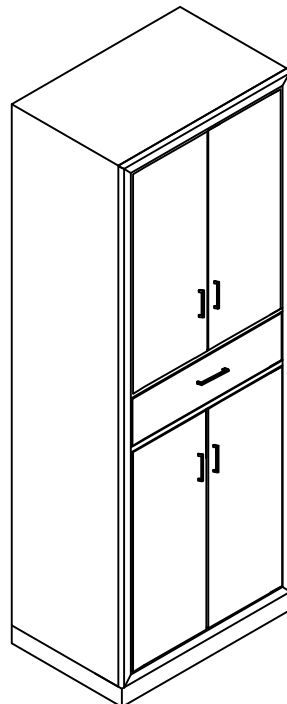
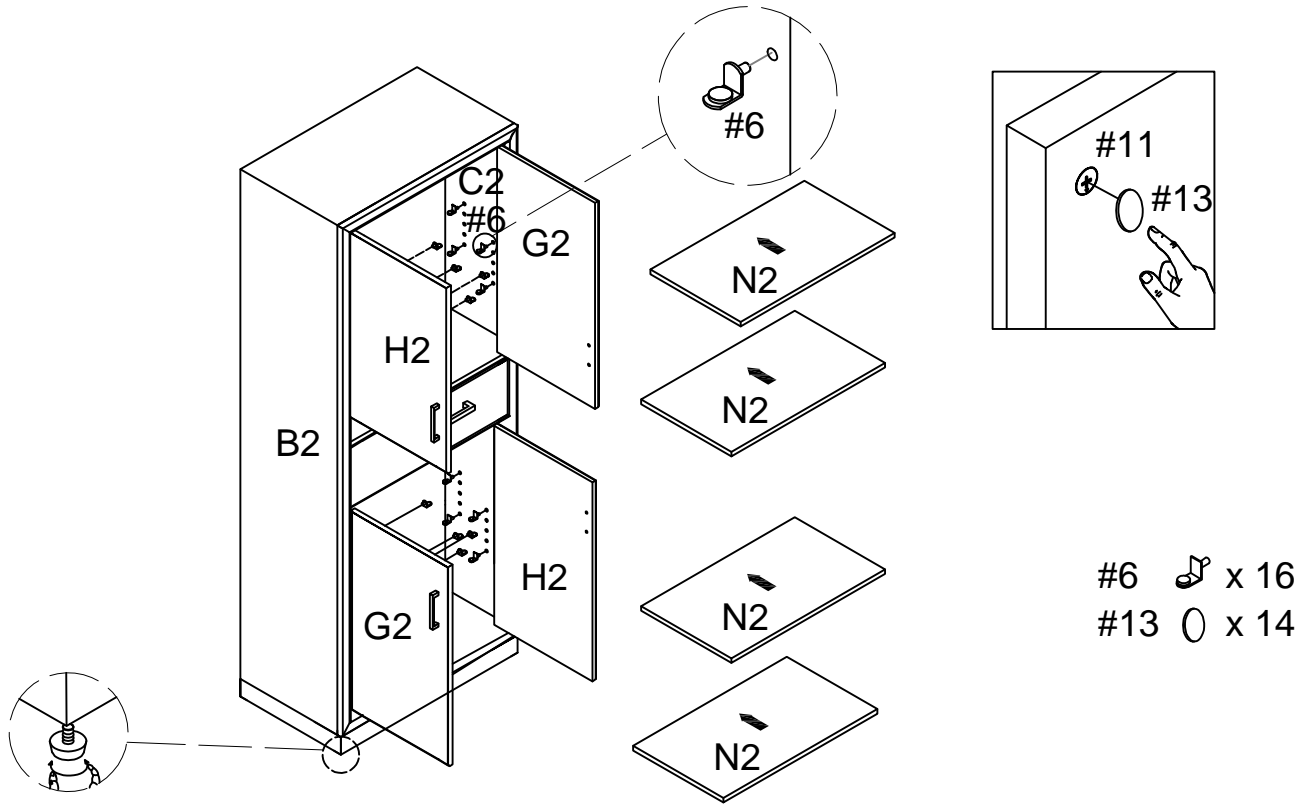



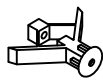



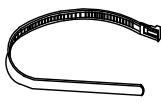
Move the sliders to the front end of rail before sliding the drawer into place.

Step 11. Place shelf holders (part #6) into desired position and then slide adjustable shelves (part N2) into place. Using cam stickers (part #13) cover all cam locks (part #11).

Important: Safety strap kit (part #16) must be installed to prevent tipping damage and/or injury.

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.




#16	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

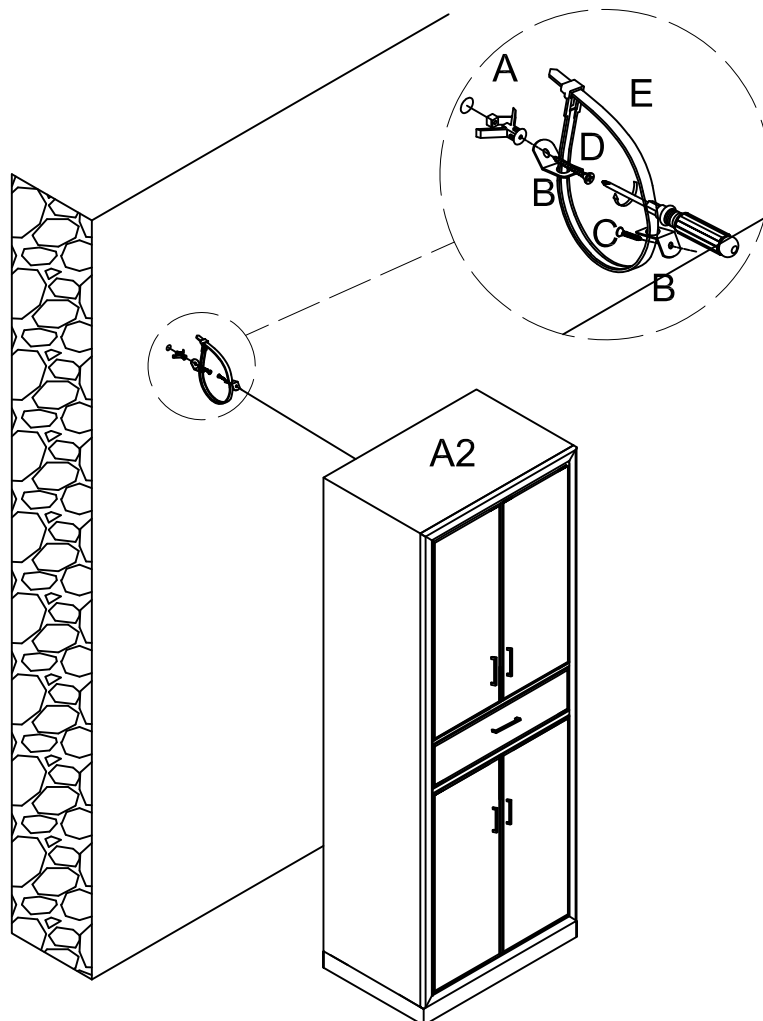Note: This item is not intended for clothing storage use.



⚠ WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none"> • ALWAYS install tipover restraint provided. • NEVER put a TV on this product. • NEVER allow children to stand, climb or hang on drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>
	