 












CROSLEY

FURNITURE







Kitchen Storage Cabinet CF3141

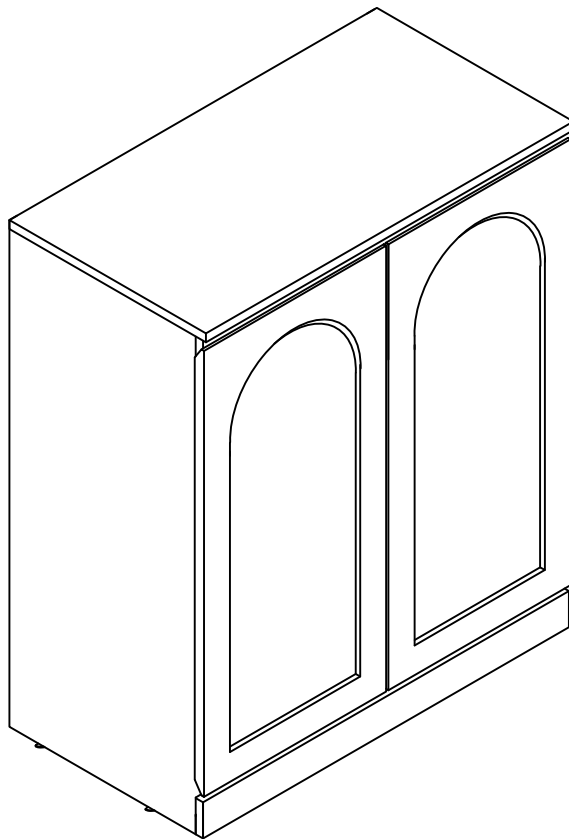

          PART LIST

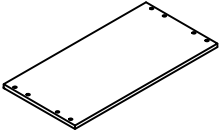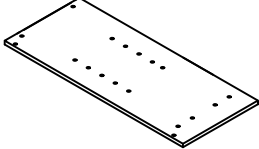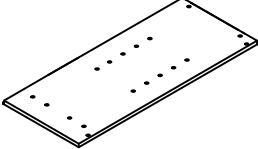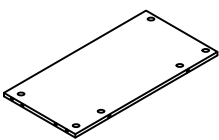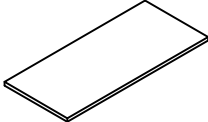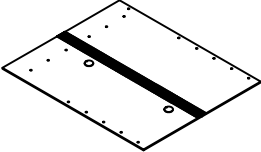
A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Left Door 1 PC
F 	G 	H 	I 	J 
Right Door 1 PC	Adjustable Shelf 2 PCS	Back Panel 1 PC	Top Rail 1 PC	Bottom Rail 1 PC
K 				
Cover 2 PCS				

      HARDWARE LIST
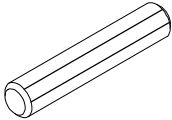
#1  Ø8*30mm Wood Dowel 10 PCS (Extra 1)	#2  Cam Bolt 16 PCS (Extra 1)	#3  Cam Lock 16 PCS (Extra 1)	#4  Door Hinge 4 PCS	#5  Round Head Screw 22 PCS (Extra 1)
#6  Ø3.5*12mm Screw 24 PCS (Extra 1)	#7  Binding Post 2 SETS (Extra 1)	#8  ØM2 Allen Wrench 1 PC	#9  Shelf Holder 8 PCS (Extra 1)	#10  Adjustable Leveler 4 PCS
#11  Cover 16 PCS	#12  Safety Strap Kit 1 SET			

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Step 1. Attach hinges (part #4) to door panels (parts E & F) using screws (part #6) and phillips head screwdriver.

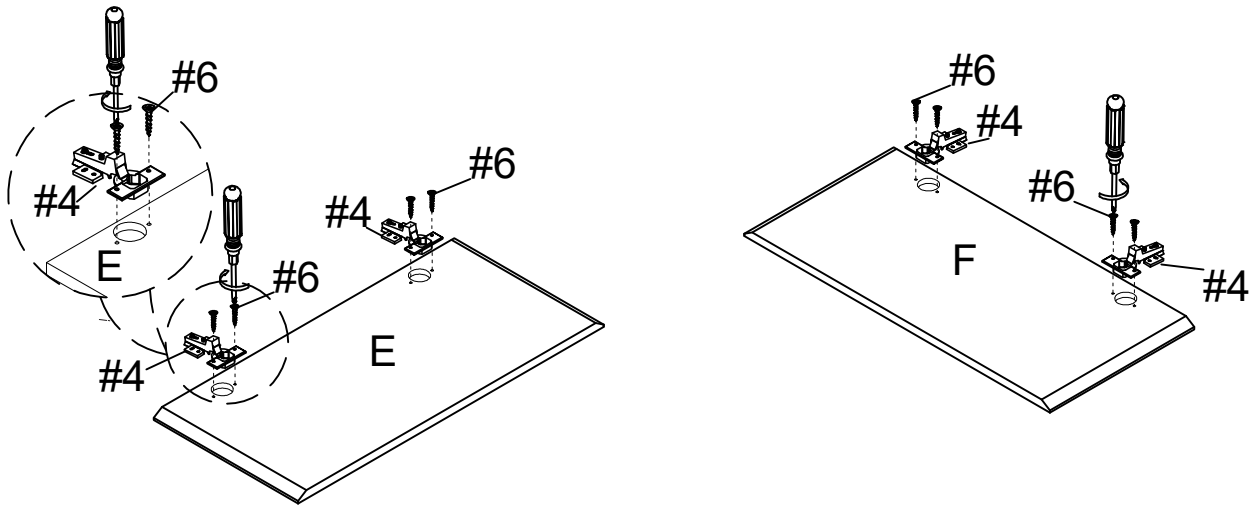


#4  x 4
 #6  x 8

 Step 2. Insert cam bolts (part #2) into pre-drilled holes of panels (parts A , B, C & J) using phillips head screwdriver.
 Note : Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.

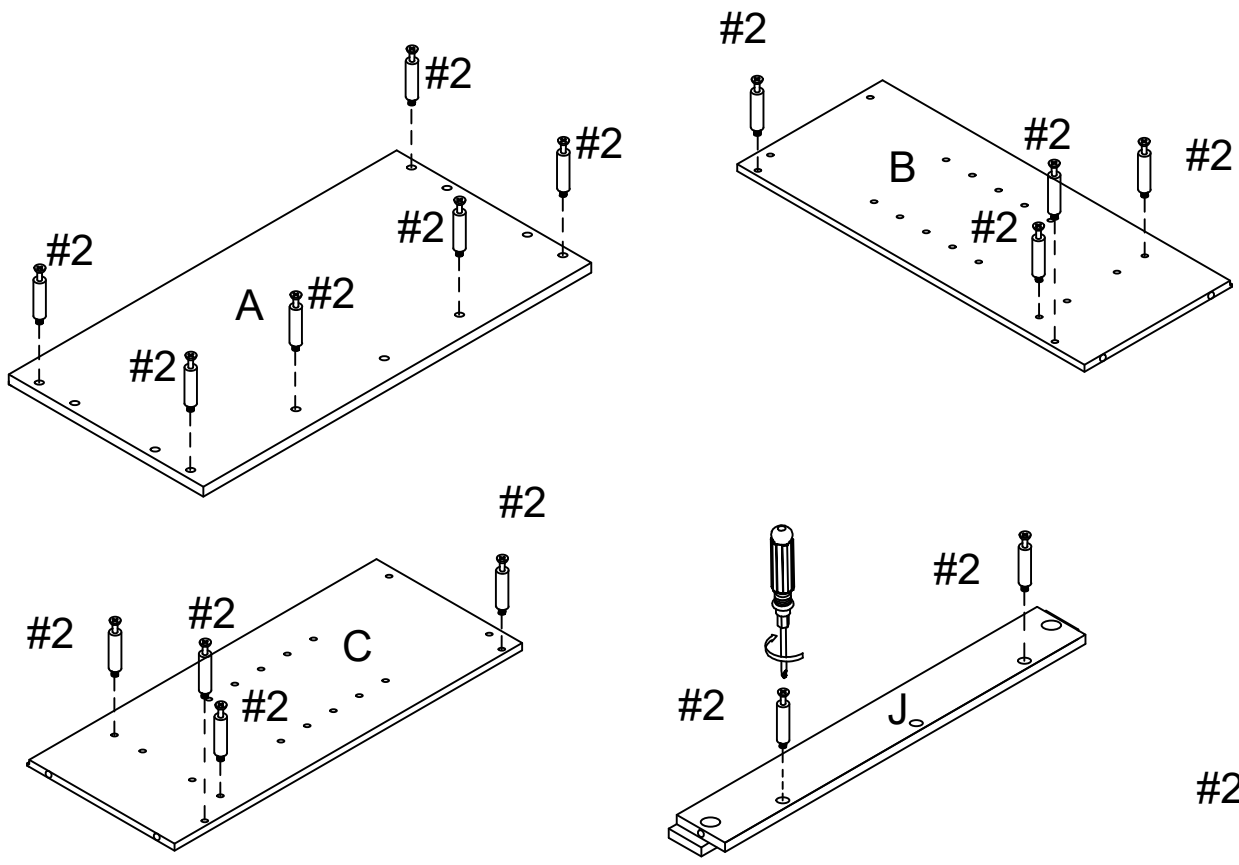

#2  x 16

 
Step 3. Attach covers (part K) to back panel (part H) using binding posts (part #7) and allen wrench (part #8).

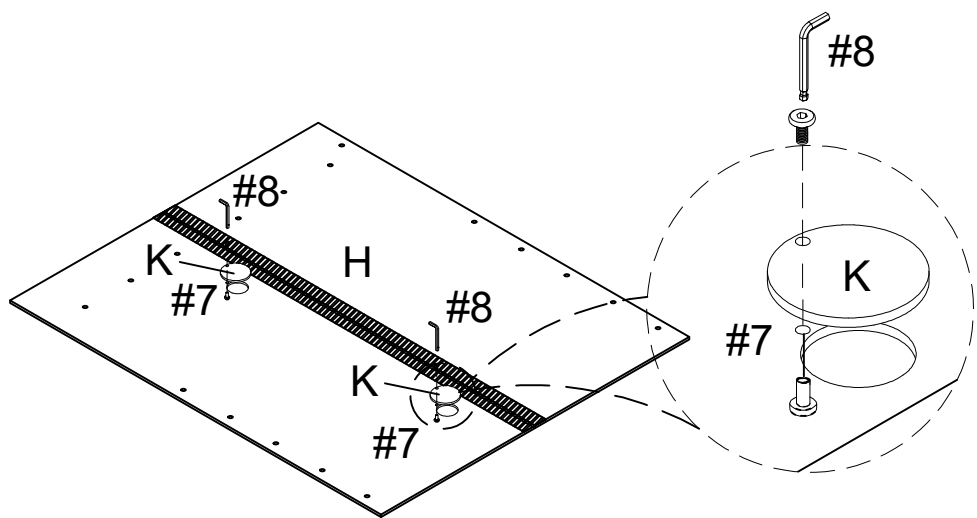

- #7  x 2
- #8  x 1

Step 4. Attach bottom rail (part J) to bottom panel (part D) using wood dowel (part #1), cam locks (part #3) and phillips head screwdriver.

 
Note : Cam locks must rotate a full 180°. See pictured insert.

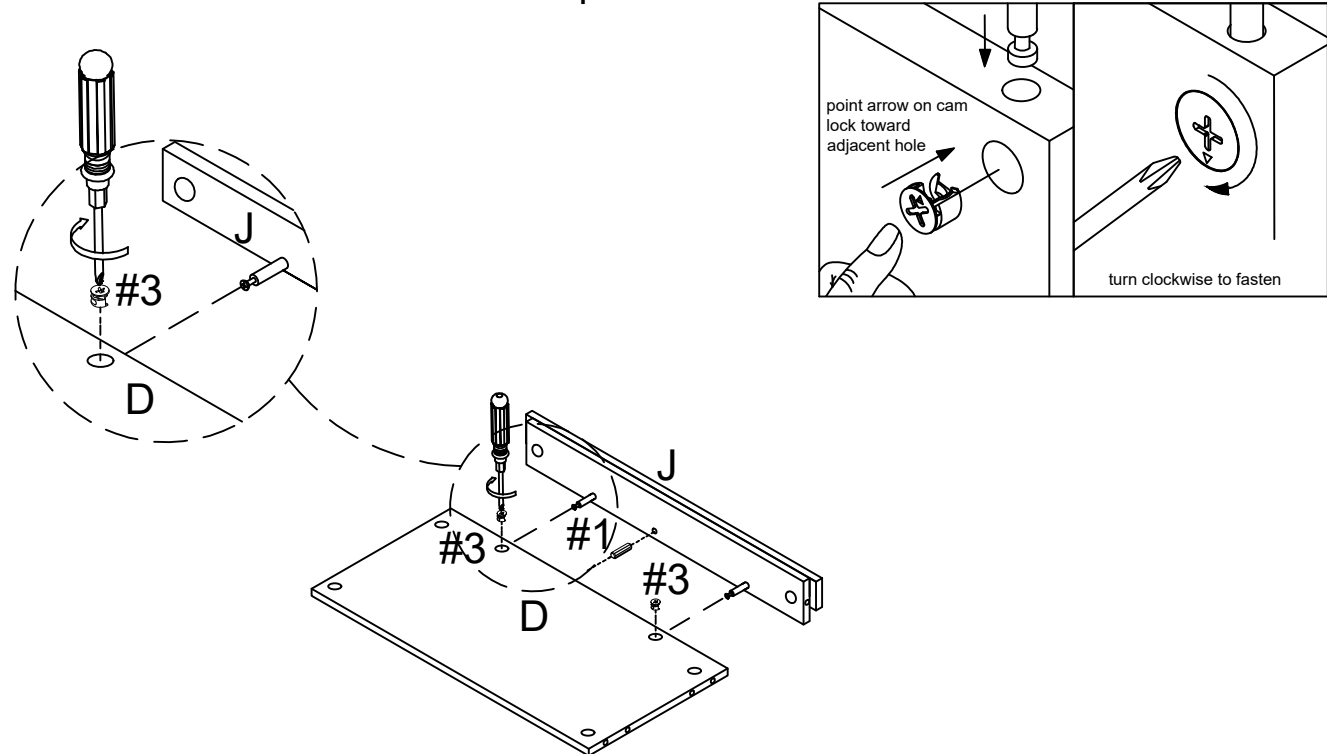

- #1  x 1
- #3  x 2

Step 5 . Attach assembled unit (parts D & J) and top rail (part I) to right panel (part C) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

 
Note : Cam locks must rotate a full 180°. See pictured insert.

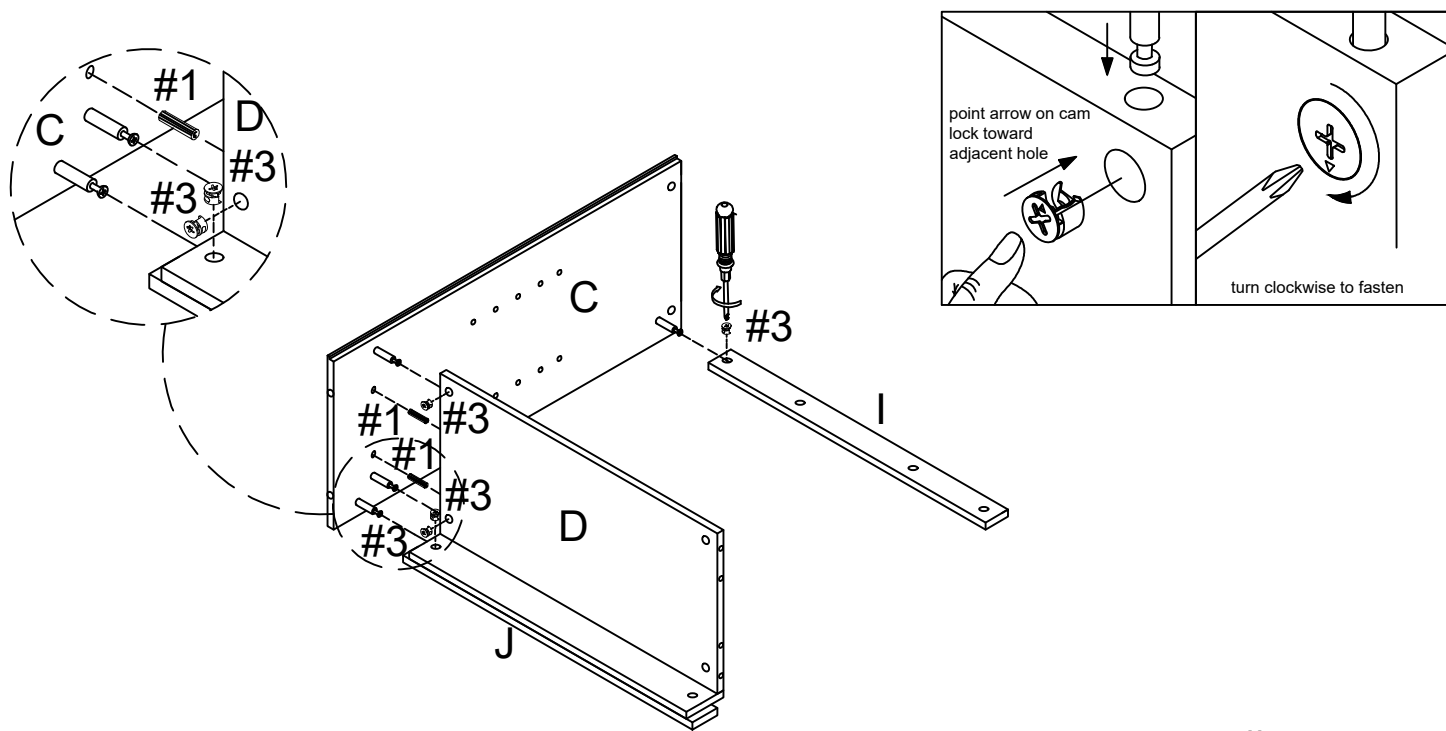

#1  x 2
 #3  x 4


Step 6 . Attach left panel (part B) to assembled unit (parts D, I & J) using wood dowels (part #1), cam locks (part #3) and phillips head screwdrivers.

 Note : Cam locks must rotate a full 180°. See pictured insert.

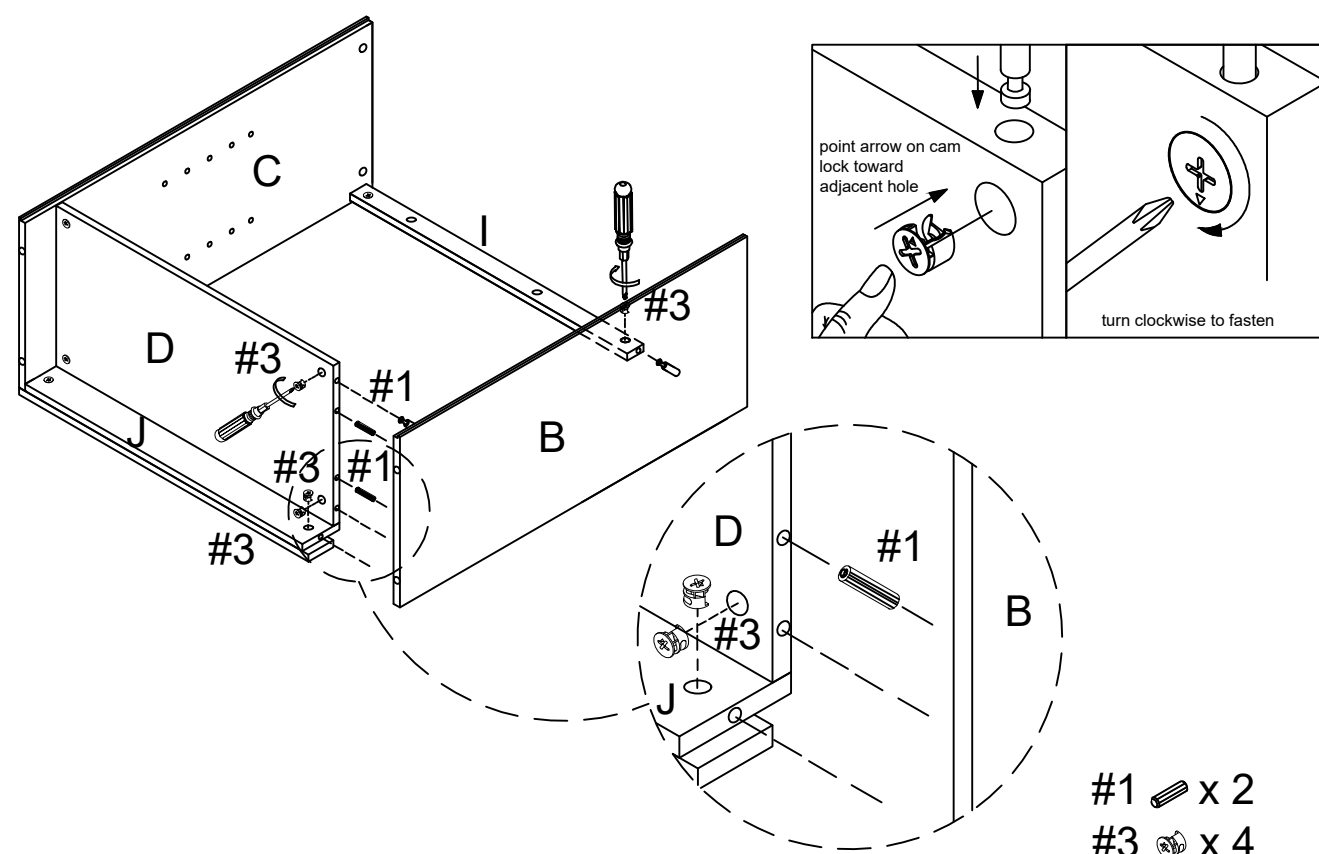

#1  x 2
 #3  x 4


 
Step 7. Attach adjustable levelers (part #10) to panels (parts B & C).

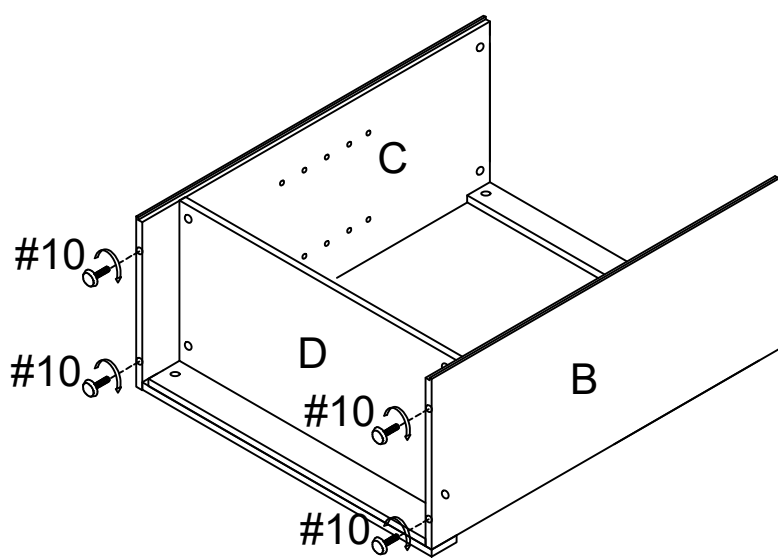

#10  x 4


Step 8 . Carefully turn unit upright. Attach top panel (part A) to assembled unit (parts B, C & I) using wood dowels (part #1), cam locks (part #3) and phillips head screwdriver.

  Note : Cam locks must rotate a full 180°. See pictured insert.

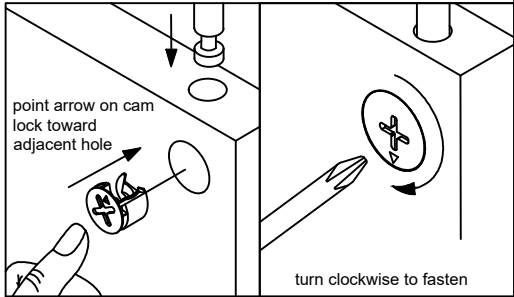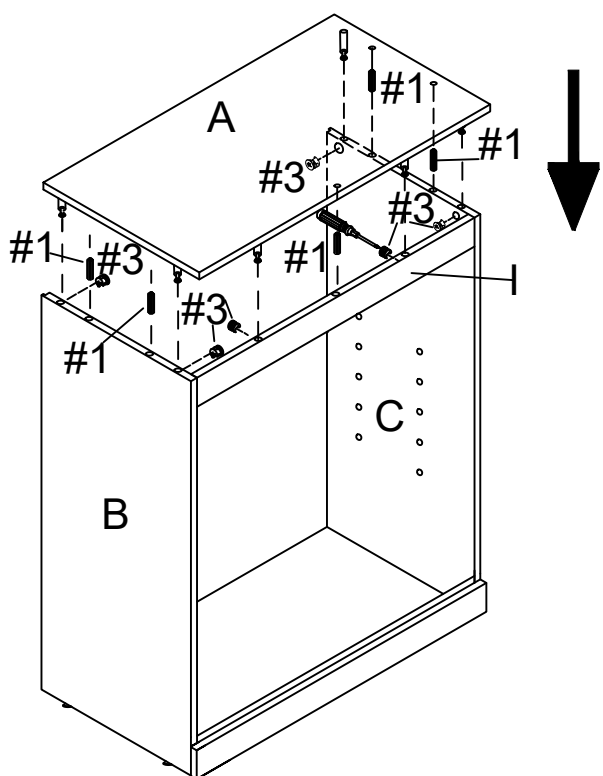


#1  x 5
#3  x 6

 Step 9. Attach back panel (part H) to assembled unit (parts A, B, C & D) using round head screws (part #5) and phillips head screwdriver.

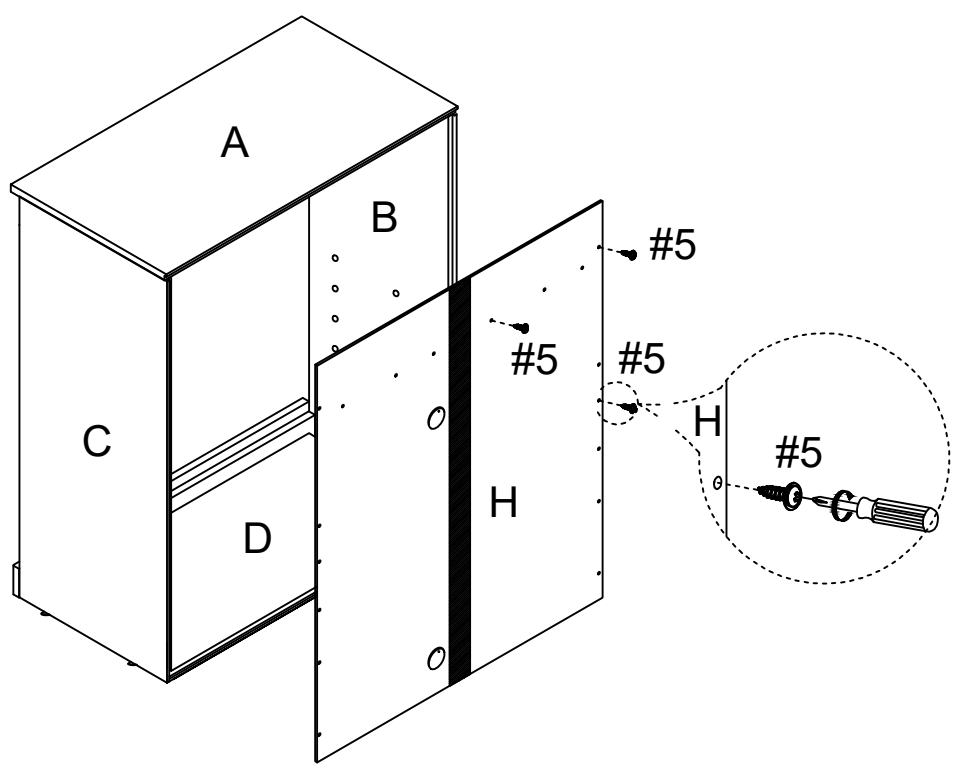


#5  x 22

 Step 10. Attach right door (part F) to right panel (part C) using screws (part #6) and phliips head screwdriver.


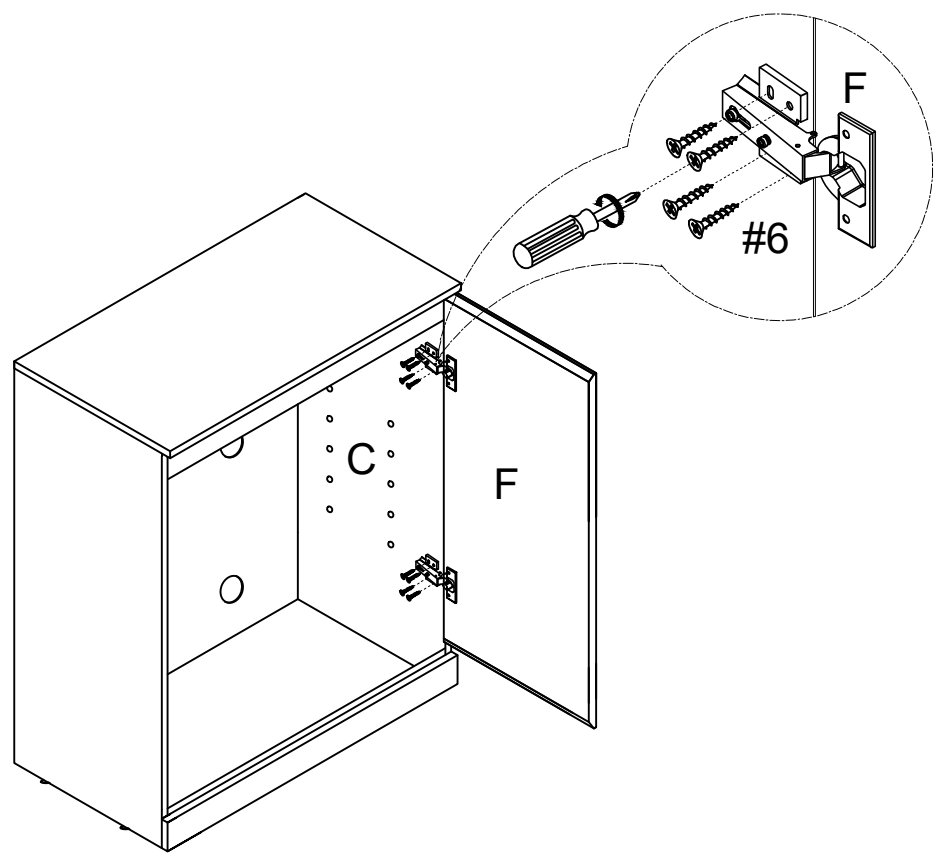


#6  x 8

 

Note : It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

#9  x 8
#11  x 16

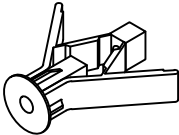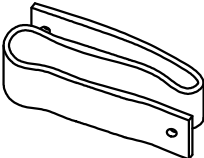  
#12	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Washer 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top back panel (part H) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part H) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

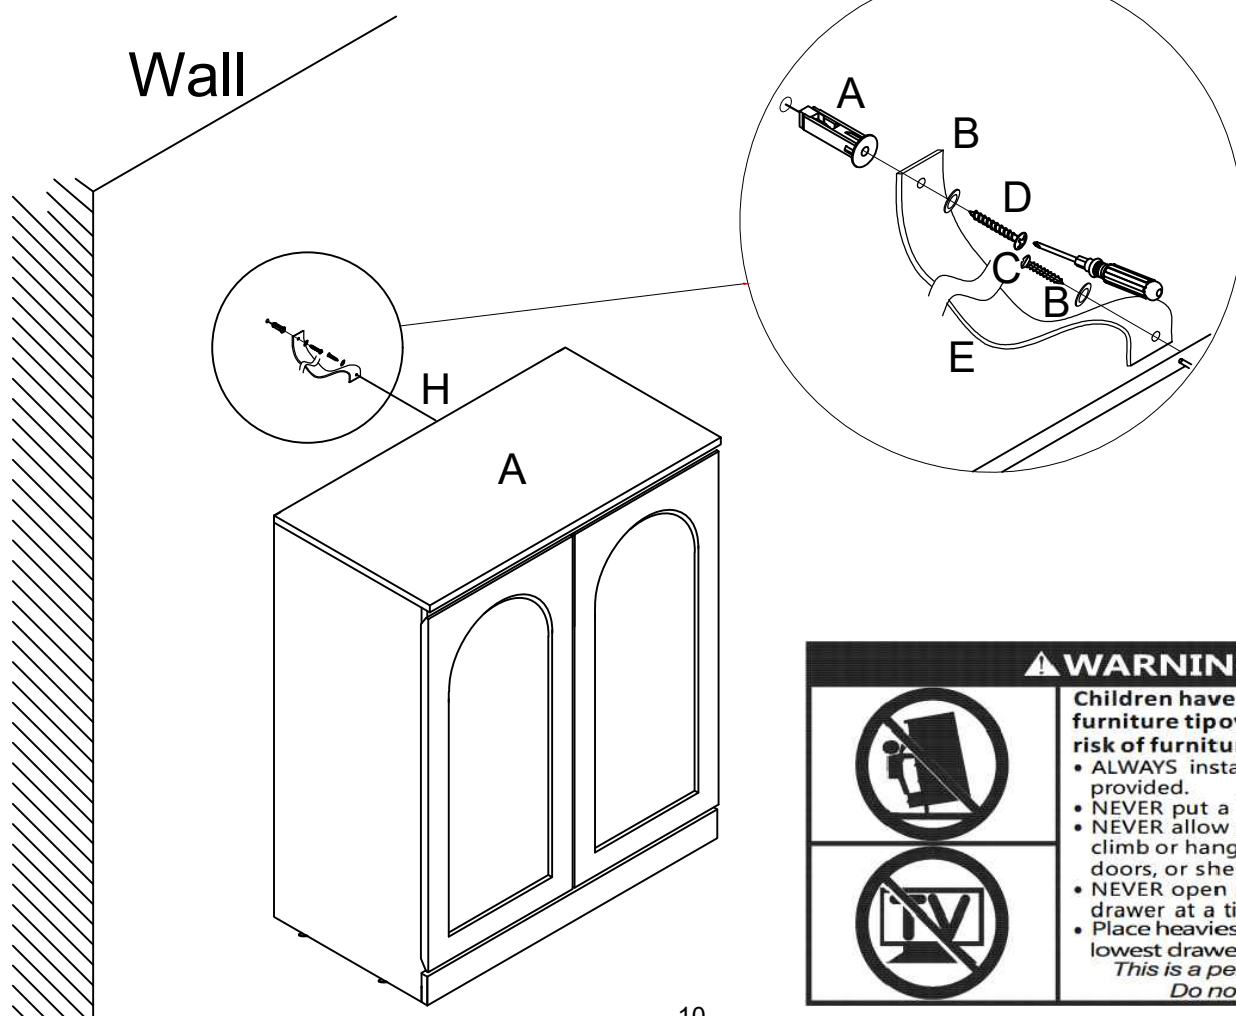




⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

 
- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN(OPTIONAL)


Step 1.

Open the door

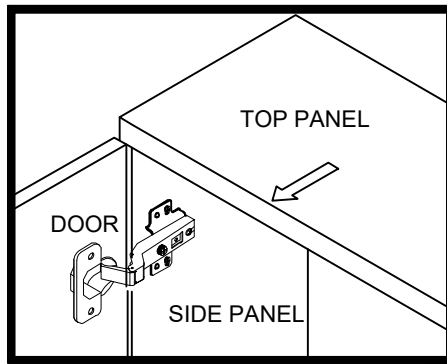


Step 2

 Adjust the gap between door panel and side panel

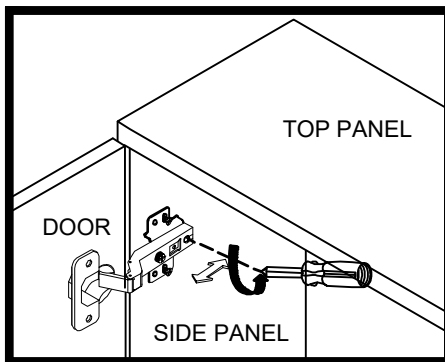


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

 Step 2a MOVE DOOR IN

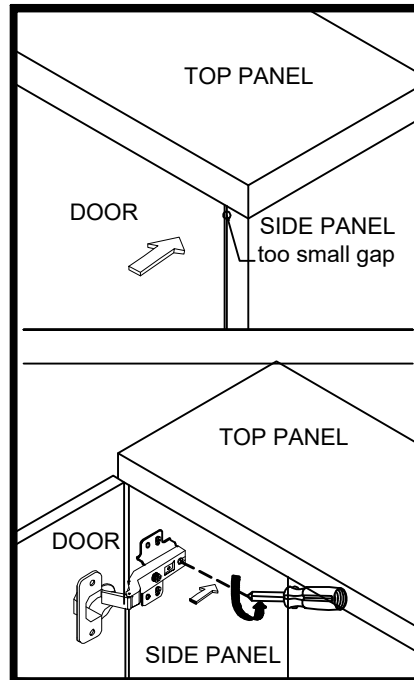

Push the hinge back a little.

 
Step 2b MOVE DOOR OUT

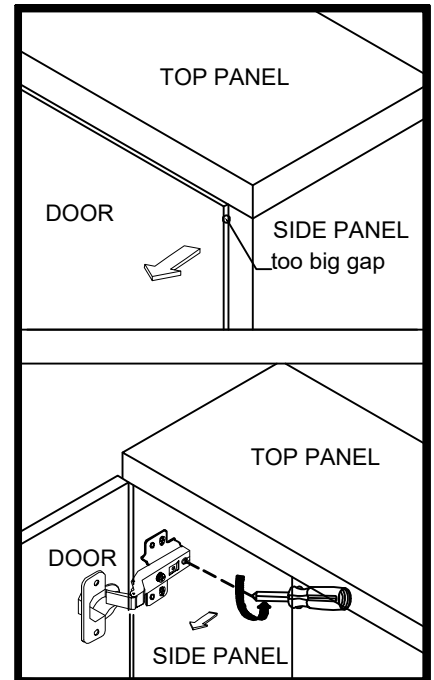

Pull the hinge forward a little.


Step 3

 To adjust the gap between two door

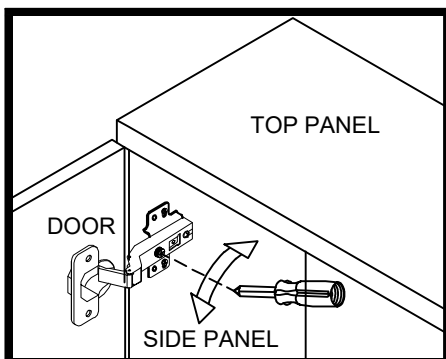


Loosen or tighten the screw indicated a little to adjust the gap between doors panels(see step 3a & 3b)

 Step 3a MOVE DOOR RIGHT

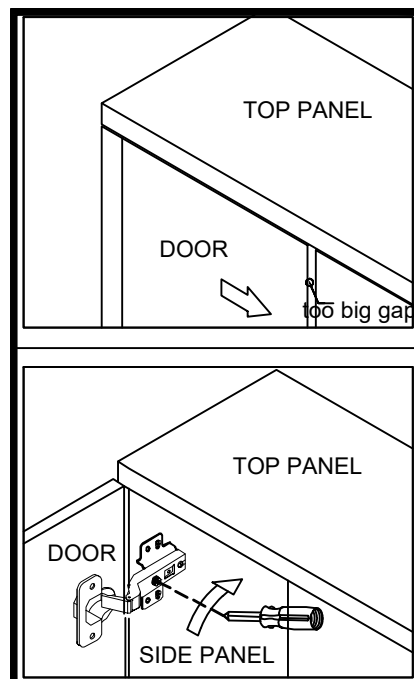

Turn the screw clockwise a little as shown to make the gap small.

 Step 3b MOVE DOOR LEFT

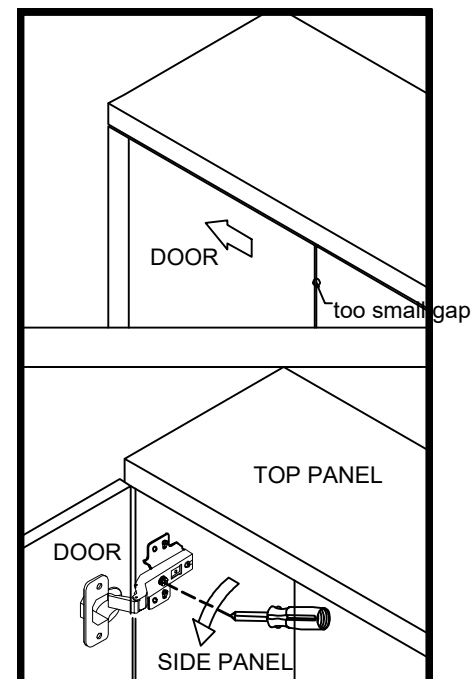

Turn the screw counterclockwise a little as shown to make the gap big.