
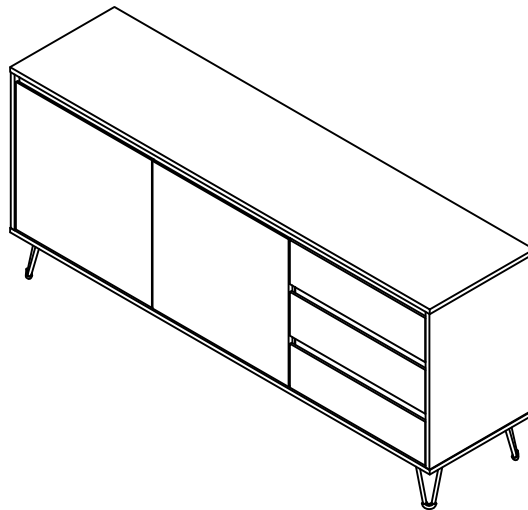
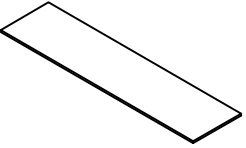
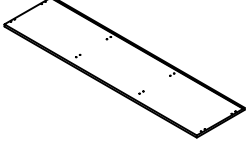
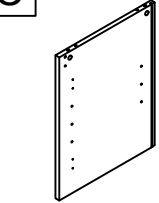
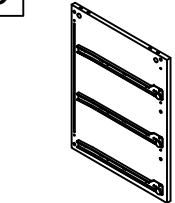
 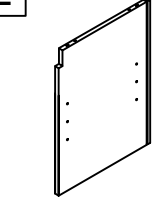

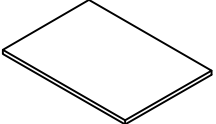
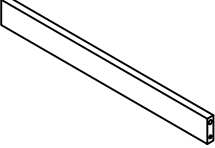
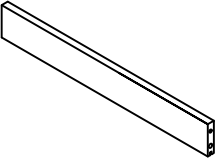
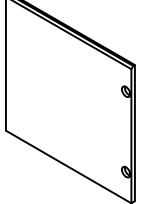
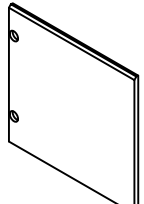
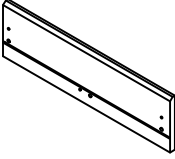
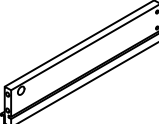
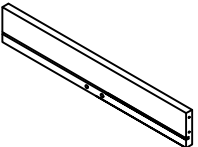
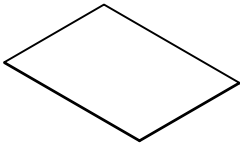
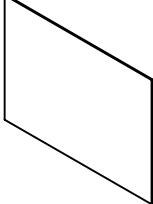


CROSLEY
FURNITURE





Media Console Sideboard
CF4217

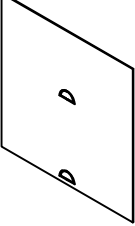

PART LIST

A 	B 	C 	D 	E 
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Left Center Panel 1 PC
F 	G 	H 	I 	J 
Right Center Panel 1 PC	Adjustable Shelf 2 PCS	Top Front Rail 1 PC	Drawer Front Rail 2 PCS	Back Rail 2 PCS
K 	L 	M 	N 	O 
Left Door 1 PC	Right Door 1 PC	Drawer Front Panel 3 PCS	Left Drawer Panel 3 PCS	Right Drawer Panel 3 PCS
P 	Q 	R 	S 	T 
Drawer Back Panel 3 PCS	Drawer Bottom Panel 3 PCS	Right Back Panel 1 PC	Left Back Panel 2 PCS	Drawer Support 3 PCS

    HARDWARE LIST

#1  Ø1/4" x L2"	#2  Ø1/4" x L19/32"	#3  Ø5/32" x L1 1/2"	#4  Ø1/8" x L5/8"	#5 
Screw 8 PCS (Extra 1)	Bolt 4 PCS (Extra 1)	Long Screw 15 PCS (Extra 1)	Short Screw 40 PCS (Extra 2)	Cam Lock 29 PCS (Extra 2)
#6 	#7  Ø8 x L25mm	#8  7/8"	#9  2/8"	#10 
Cam Bolt 29 PCS (Extra 2)	Wood Dowel 40 PCS (Extra 2)	Big Hinge 2 PCS	Small Hinge 2 PCS	Back Bracket 4 PCS
#11 	#12  5 7/8"	#13 	#14  5/32"	#15 
Shelf Support 8 PCS	Side Leg 4 PCS	Center Leg 2 PCS	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach cam bolts (part #6) to panels (parts A, C, D, F & M) using phillips head screwdriver.


Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

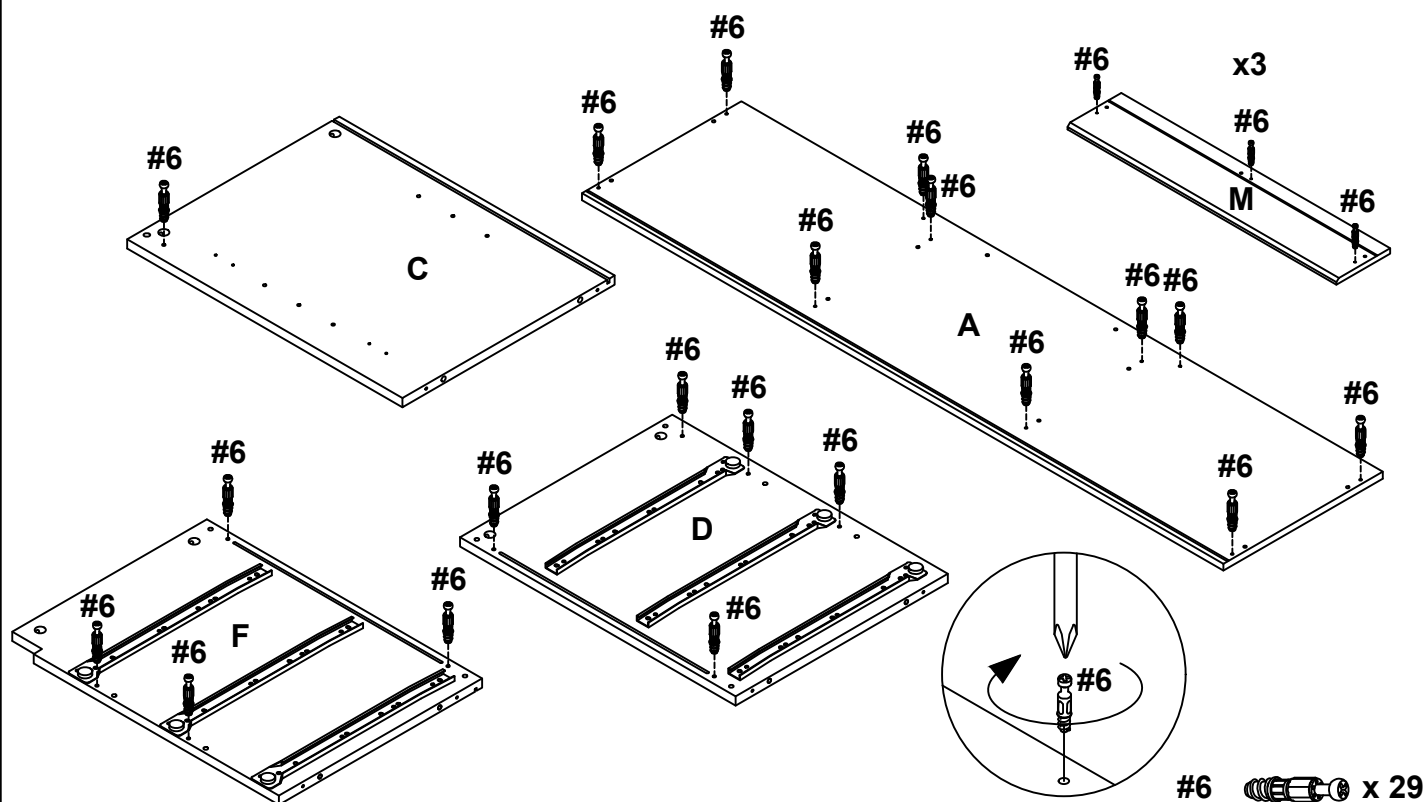


Step 2. Attach legs (parts #12 & #13) to bottom panel (part B) using bolts (part #2), short screws (part #4), allen wrench (part #14) and phillips head screwdriver.

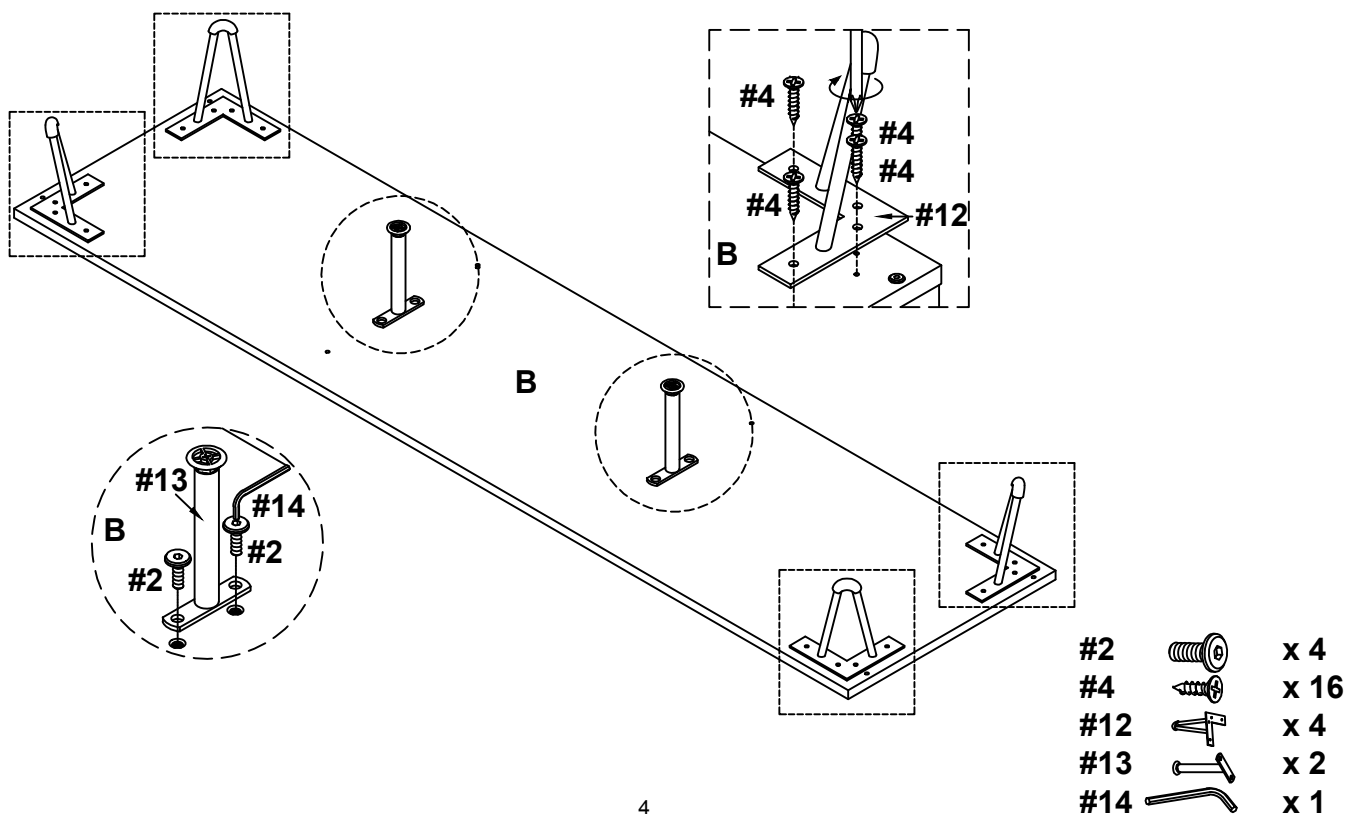


Step 3. Attach drawer panels (parts N & O) to drawer front panel (part M) using wood dowels (part #7) and cam locks (part #5). Slide drawer bottom panel (part Q) into grooves of assembled unit (parts M, N & O). Attach drawer support (part T) to drawer front panel (part M) using wood dowel (part #7) and cam lock (part #5). Attach drawer back panel (part P) to assembled unit (parts N, O, Q & T) using wood dowel (part #7), long screws (part #3) and phillips head screwdriver. Repeat for remaining drawers.

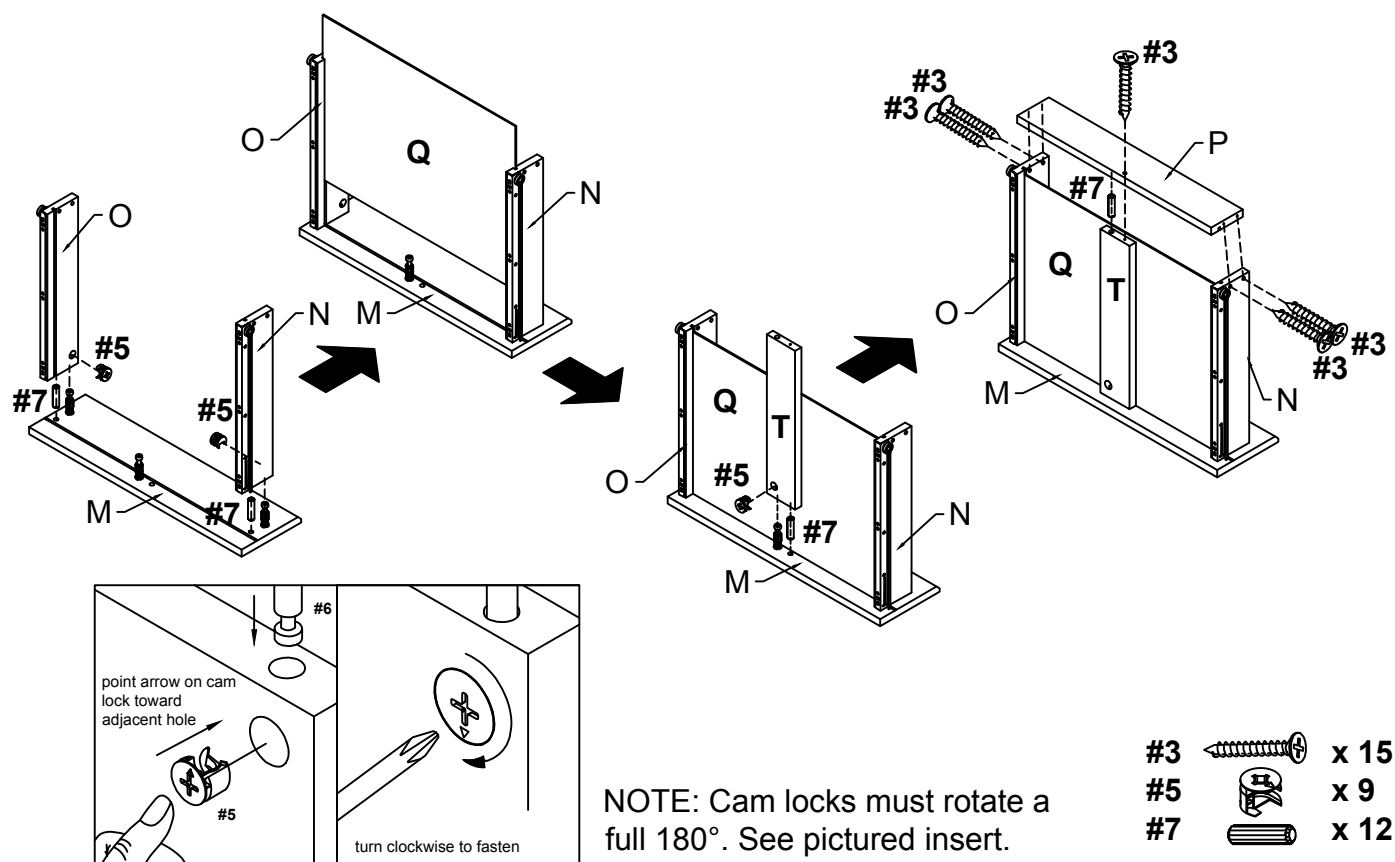

Step 4. Attach rails (parts I & J) to right center panel (part F) using wood dowels (part #7) and cam locks (part #5).

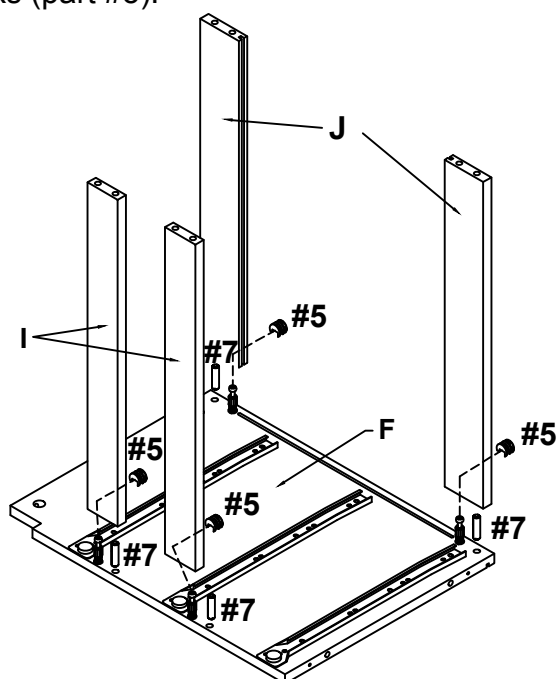


NOTE: Cam locks must rotate a full 180°. See pictured insert.

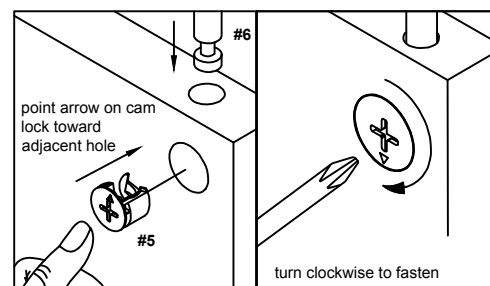



#5		x 4
#7		x 4

Step 5. Insert right back panel (part R) into grooves of assembled unit (parts F & J).

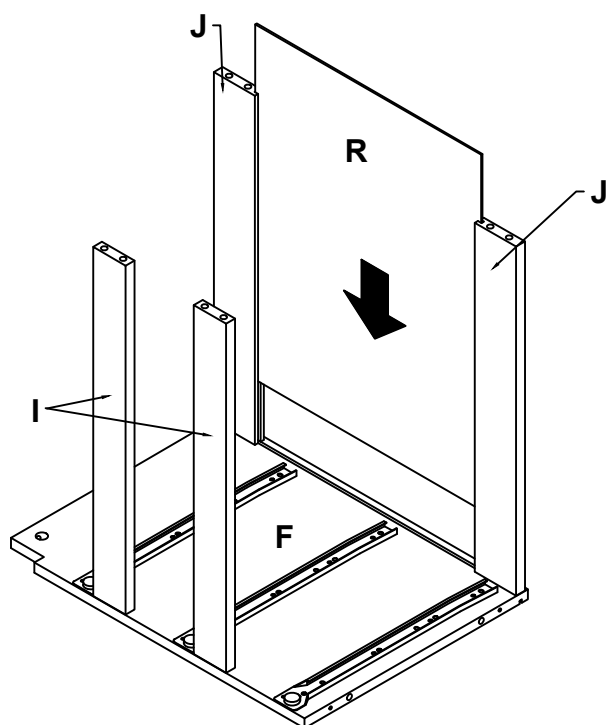

Step 6. Attach right panel (part D) to assembled unit (parts I & J) using wood dowels (part #7) and cam locks (part #5).


NOTE: Cam locks must rotate a full 180°.
See pictured insert.

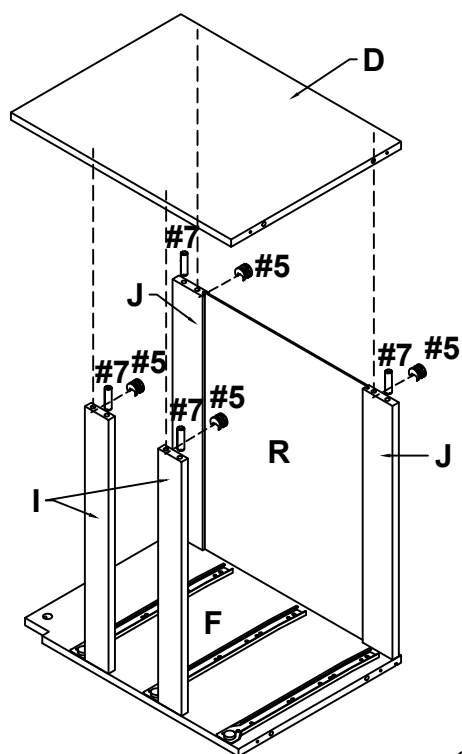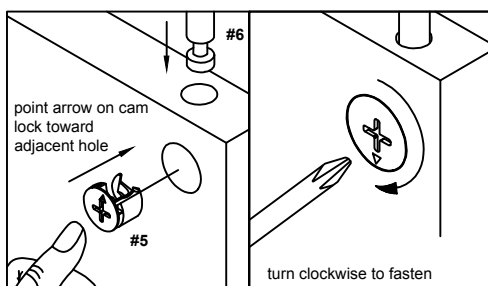

#5  x 4
#7  x 4


Step 7. Attach top front rail (part H) to assembled unit (parts D & F) and left panel (part C) using wood dowels (part #7) and cam locks (part #5).

NOTE: Cam locks must rotate a full 180°.
See pictured insert.

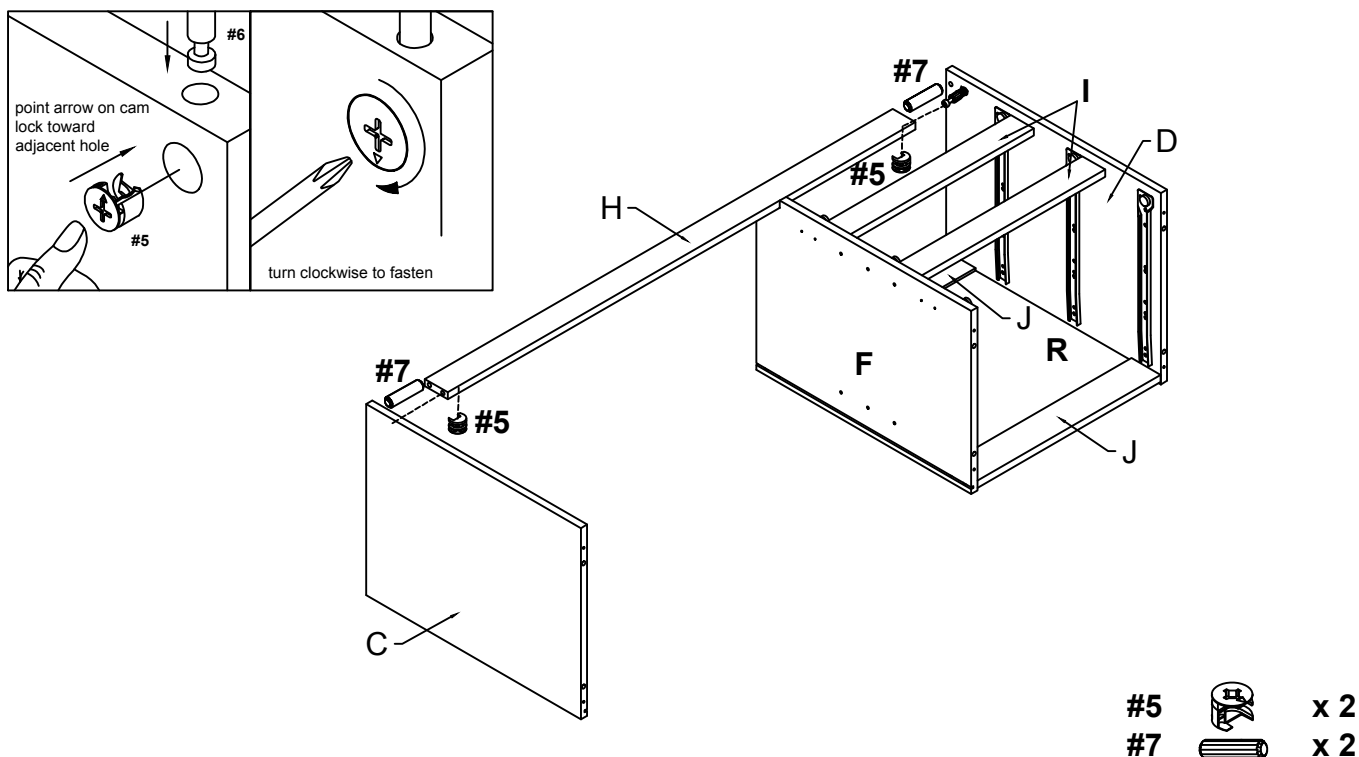



Step 8. Attach top panel (part A) to assembled unit (parts C, D, F & H) using wood dowels (part #7) and cam locks (part #5).

NOTE: Cam locks must rotate a full 180°.
See pictured insert.

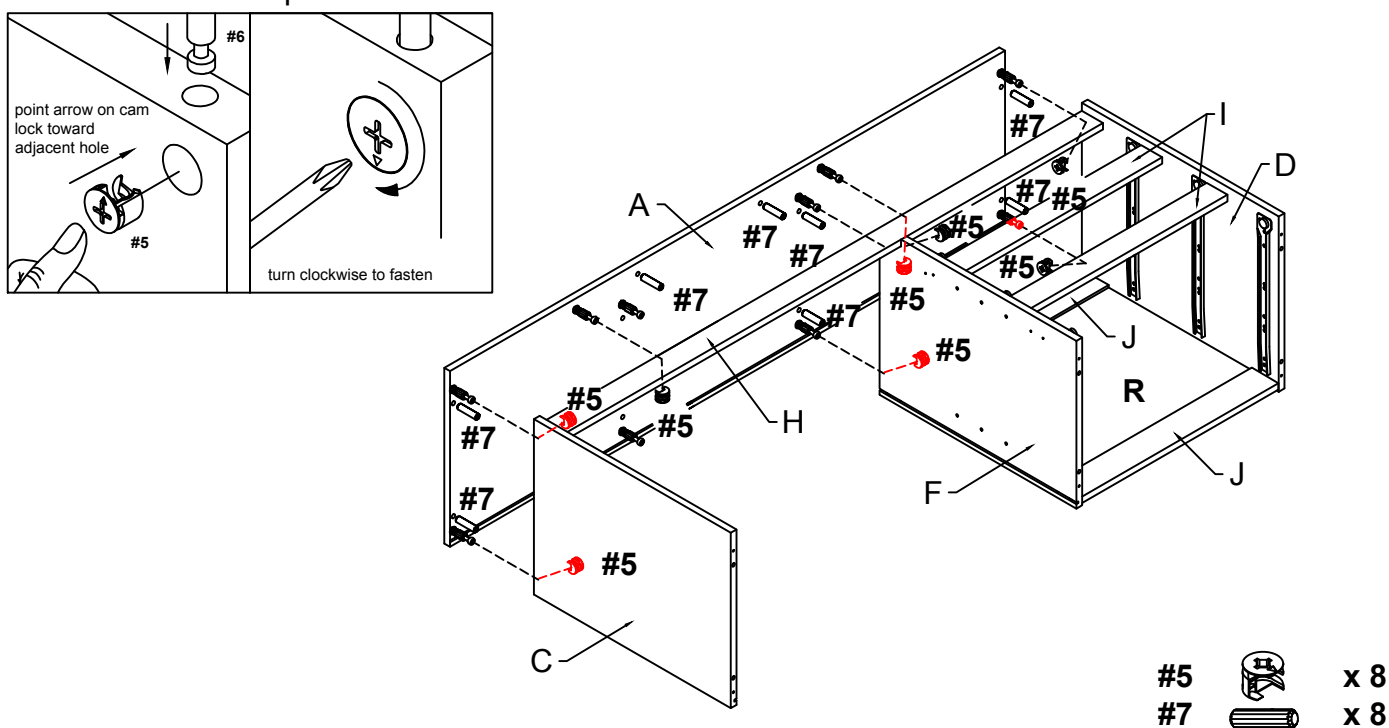


Step 9. Attach left center panel (part E) to top panel (part A) using wood dowels (part #7) and cam locks (part #5).


NOTE: Cam locks must rotate a full 180°.
See pictured insert.

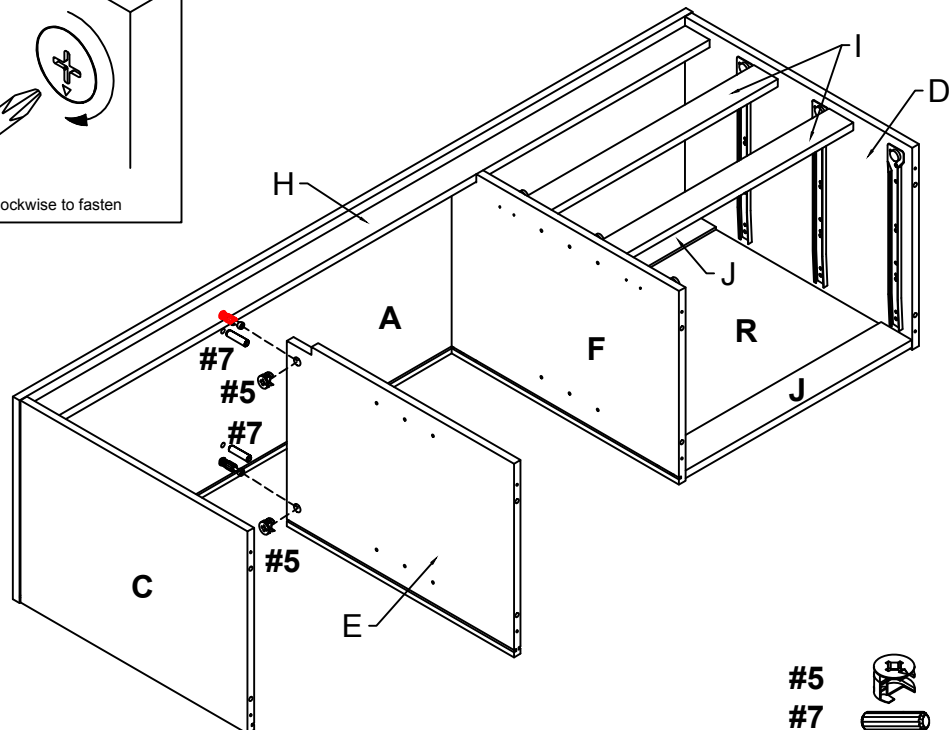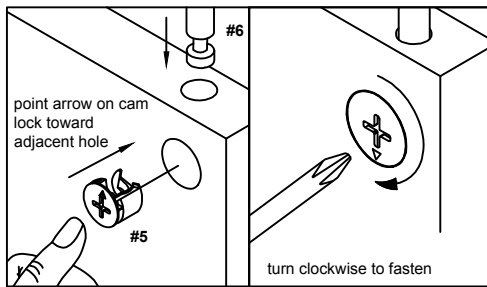

Step 10. Carefully turn unit upside-down. Insert left back panels (part S) into grooves of assembled unit (parts A, C, E & F).

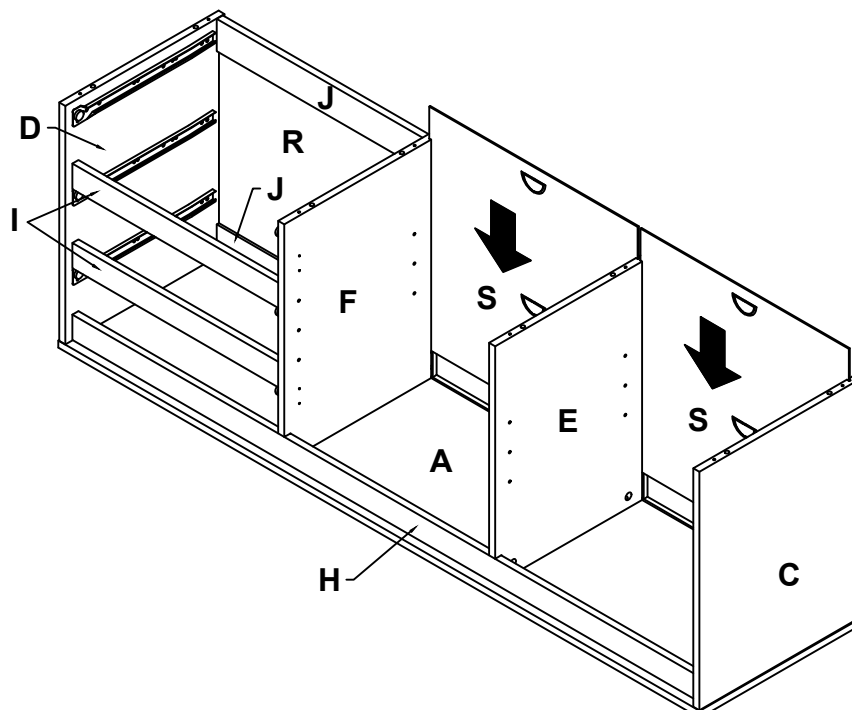


Step 11. Attach bottom panel (part B) to assembled unit (parts C, D, E & F) using wood dowels (part #7), screws (part #1) and allen wrench (part #14).

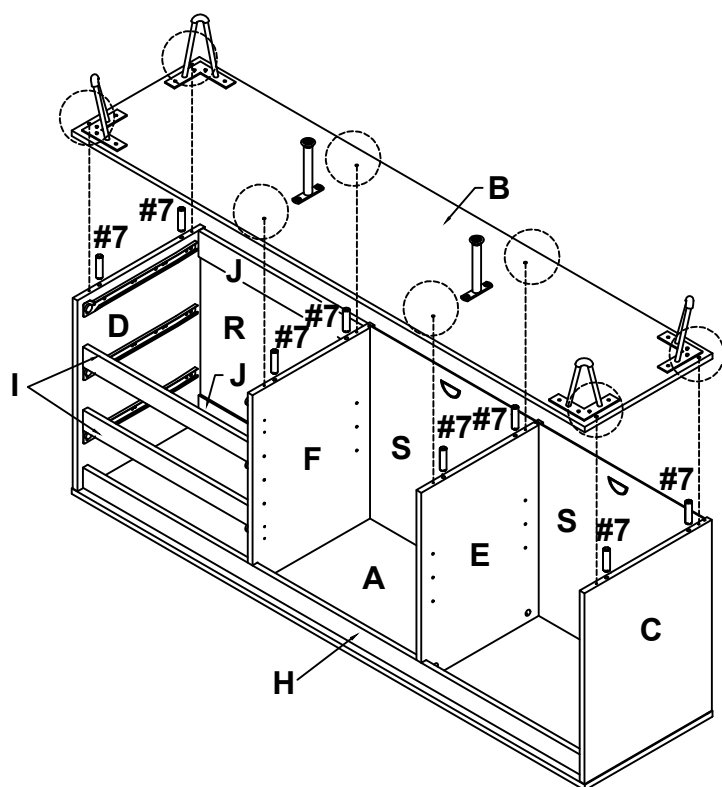


- | | | |
|-----|--|-----|
| #1 |  | x 8 |
| #7 |  | x 8 |
| #14 |  | x 1 |

Step 12. Carefully turn unit upright. Secure back brackets (part #10) at the corner of left back panels (part S) using short screws (part #4) and phillips head screwdriver.

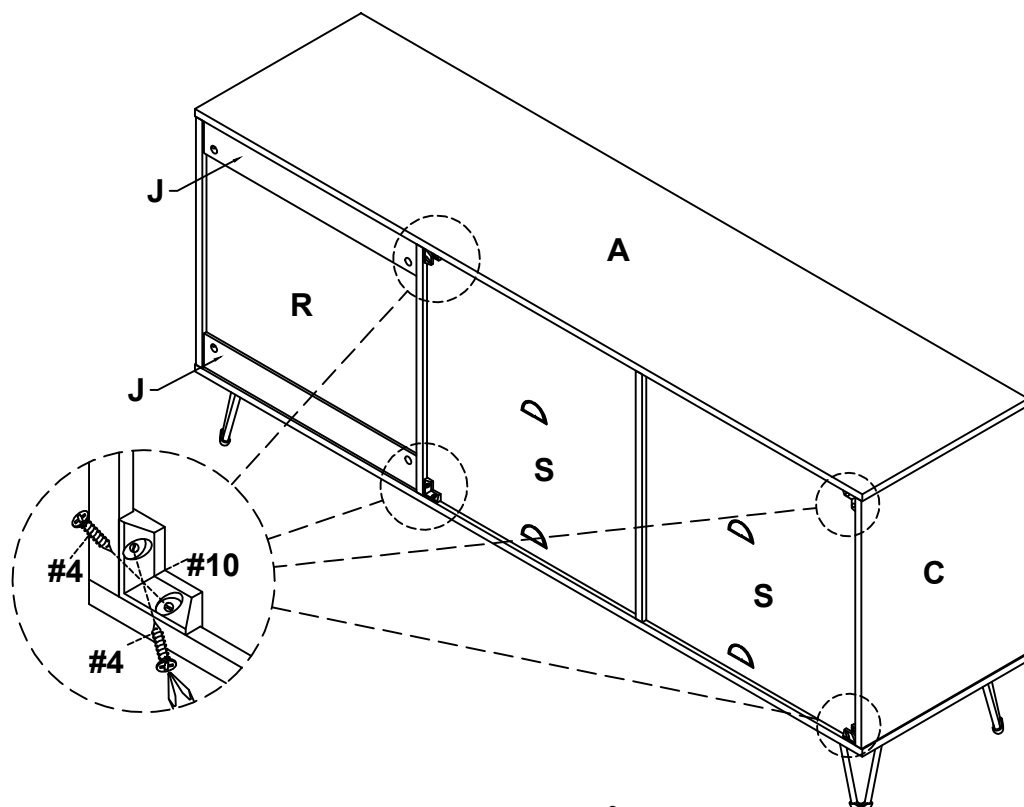


- | | | |
|-----|---|-----|
| #4 |  | x 8 |
| #10 |  | x 4 |

Step 13. Place shelf supports (part #11) into desired position and slide adjustable shelves (part G) into place.

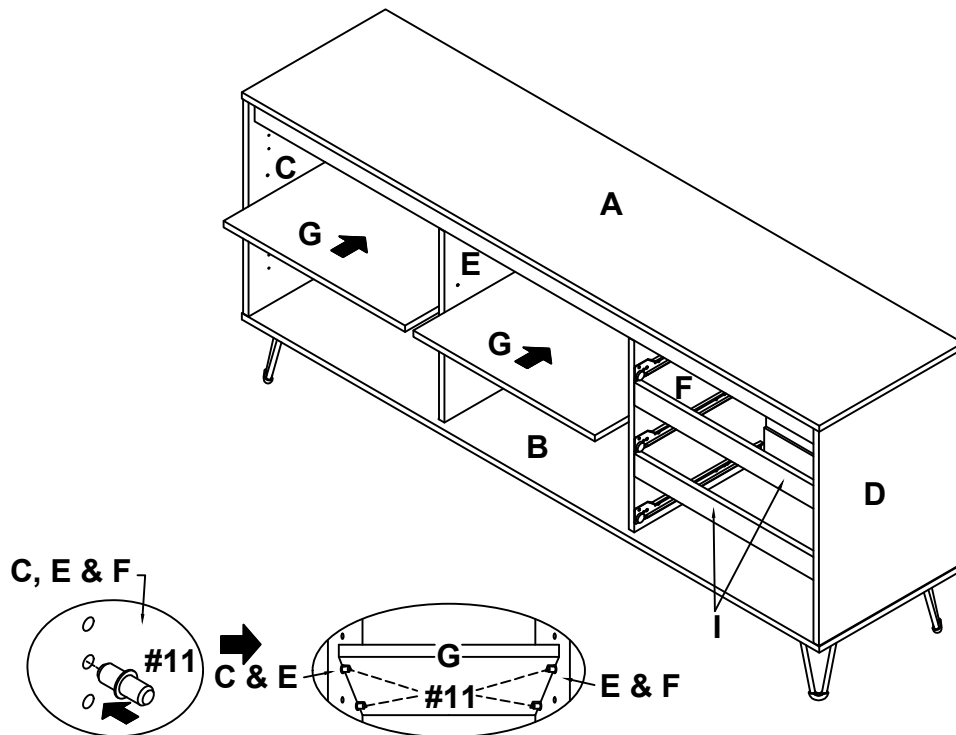

#11  x 8

Step 14. Attach big hinges (part #8) to left door (part K) and small hinges (part #9) to right door (part L) using short screws (part #4) and phillips head screwdriver. Attach doors (parts K & L) to panels (parts C & F) using short screws (part #4) and phillips head screwdriver.

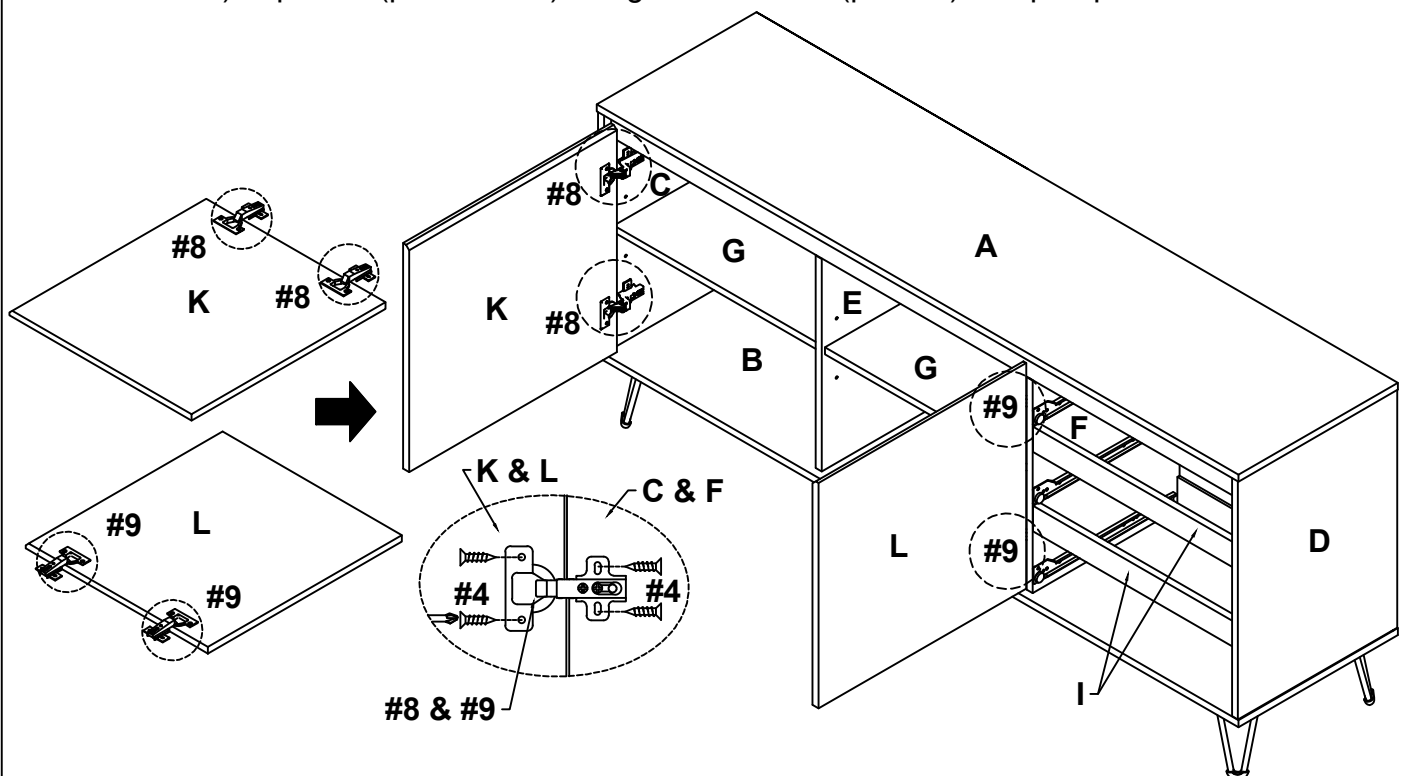




#4  x 16
 #8  x 2
 #9  x 2

Step 15. Slide assembled drawers into place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

  Important: Safety strap kit (part #15) must be installed to prevent tipping, damaged and/or injury.

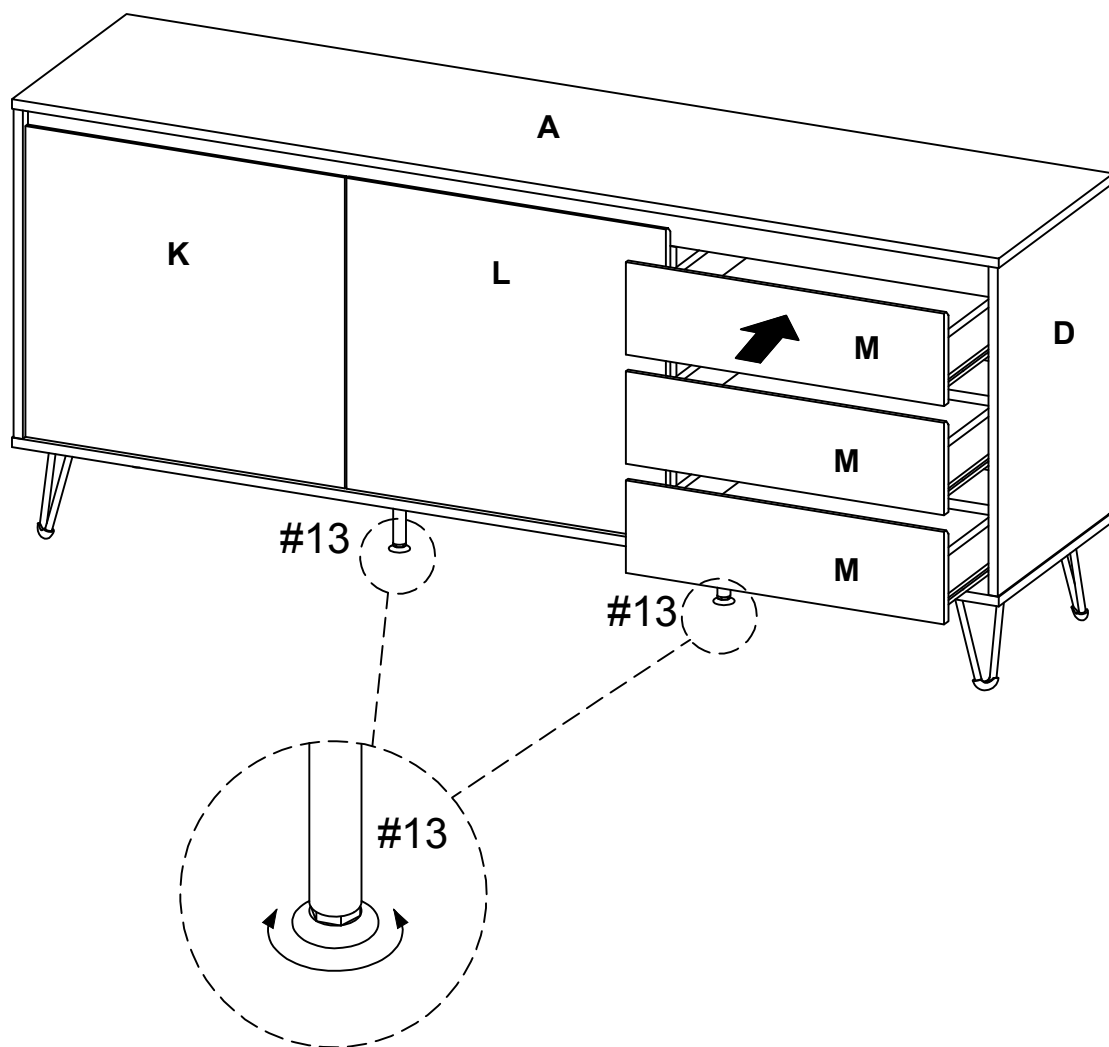


#15	A	B	C	D	E
			 Ø1/8" x L5/8"	 Ø5/32" x L1 1/2"	
Safety Strap Kit 1 SET	Wall Anchor 2 PCS	Washer 4 PCS	Short Screw 2 PCS	Long Screw 2 PCS	Safety Wall Strap 2 PCS

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

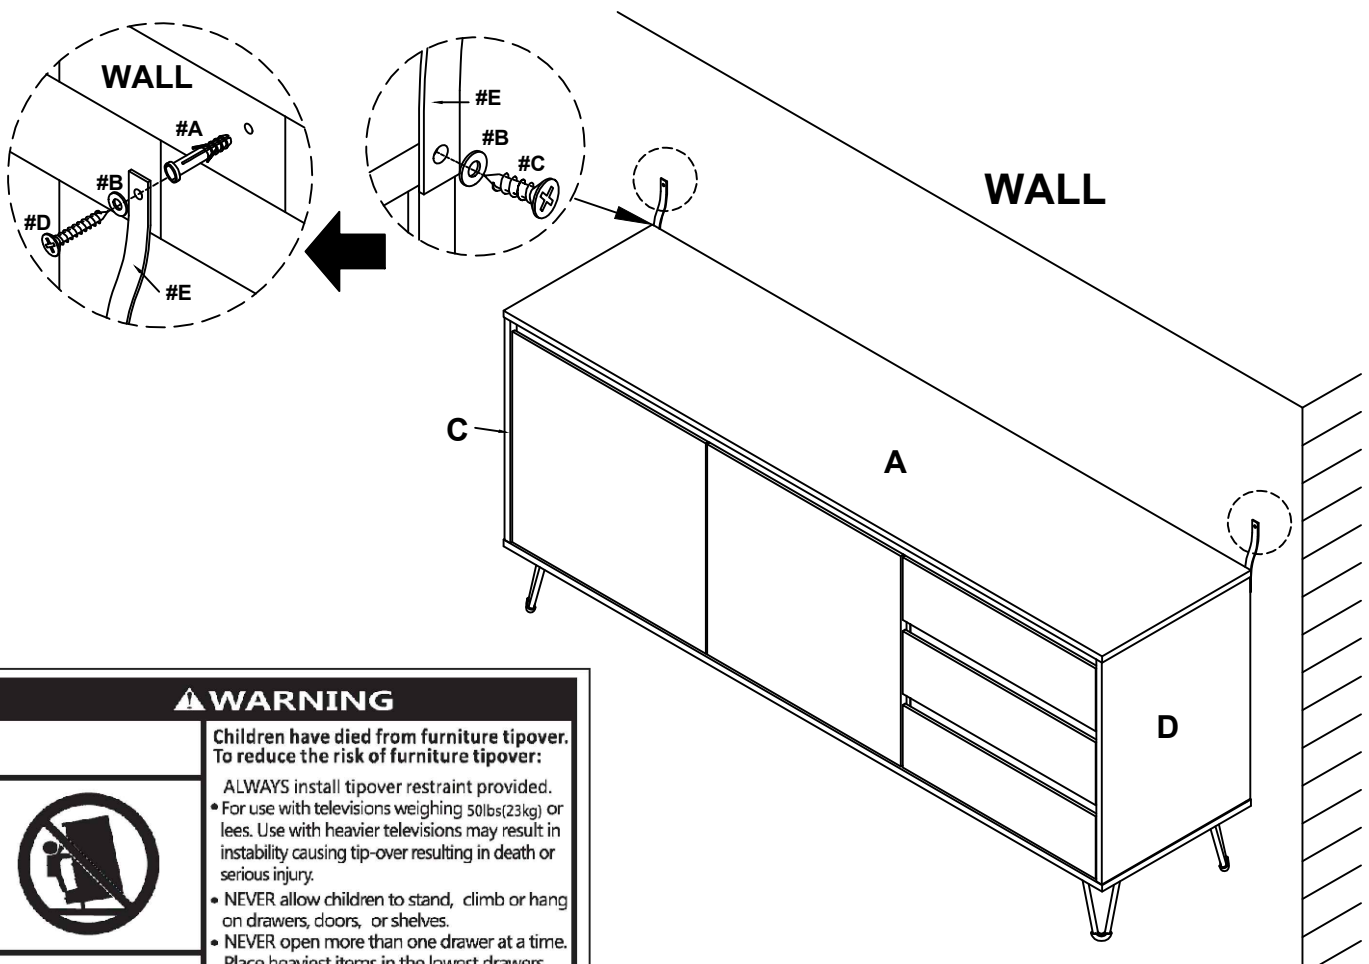

⚠ WARNING


Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
 - For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
 - NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
 - NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.
- This is a permanent label. Do not remove!*

ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


STEP 1

Open the door

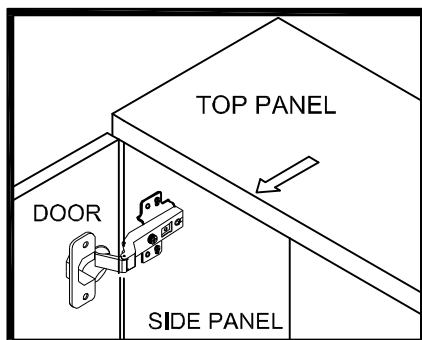


STEP 2

Adjust the gap between door panel and side panel

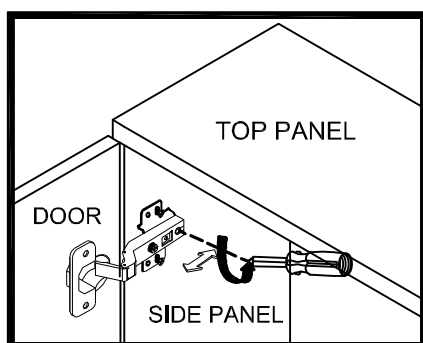


Loosen the screw indicated a **little**, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

STEP 2a MOVE DOOR IN

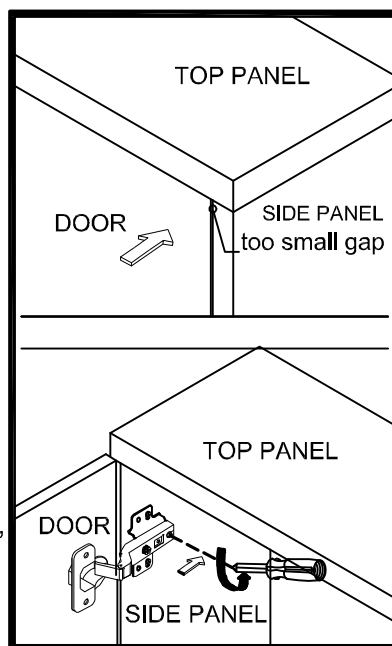

Push the hinge back a **little**.


STEP 2b MOVE DOOR OUT

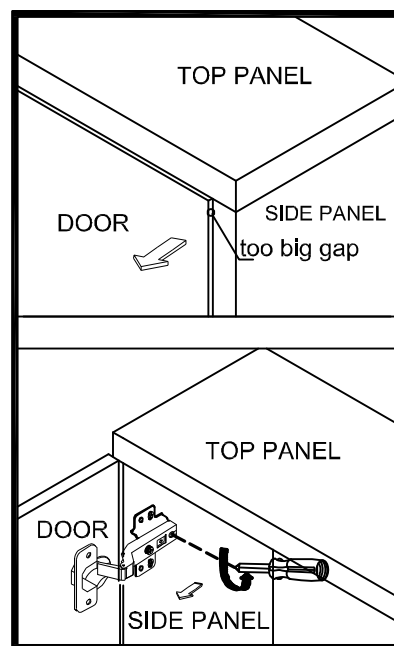

Pull the hinge forward a **little**.


STEP 3

To adjust the gap between two door

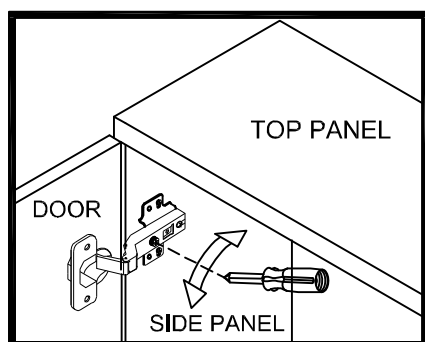


Loosen or tighten the screw indicated a **little** to adjust the gap between doors panels (see step 3a & step 3b)

STEP 3a MOVE DOOR RIGHT

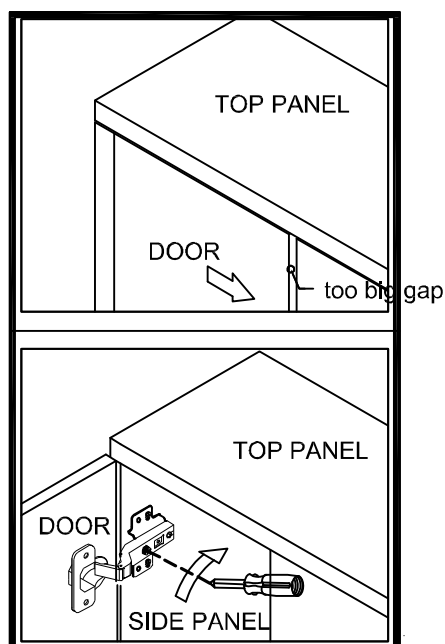

Turn the screw clockwise a **little** as shown to make the gap small.

STEP 3b MOVE DOOR LEFT

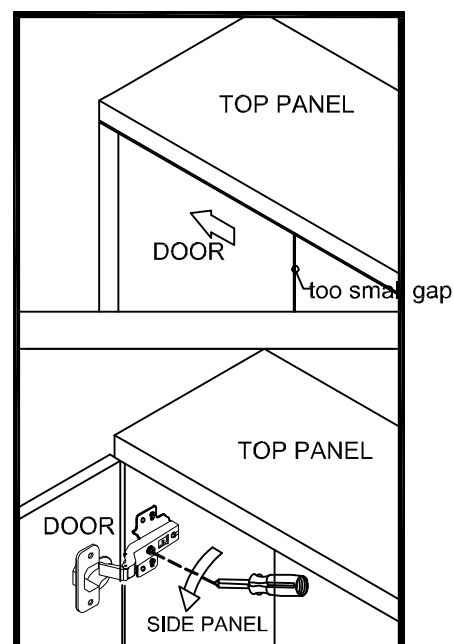

Turn the screw counterclockwise a **little** as shown to make the gap big.