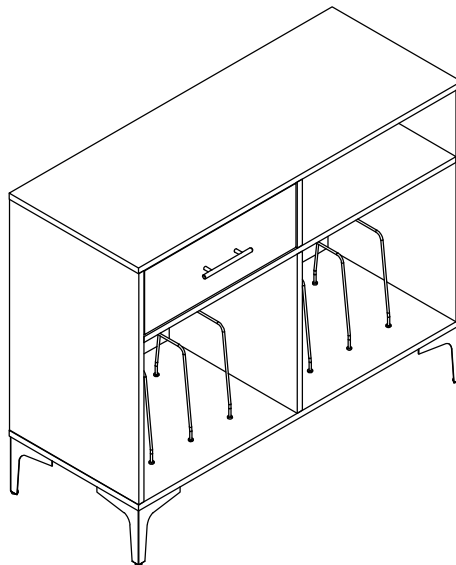 

















CROSLEY

FURNITURE





Record Storage Media Console CF4218



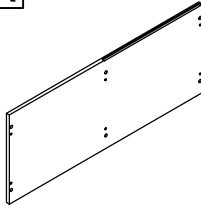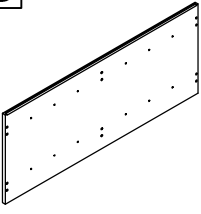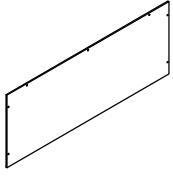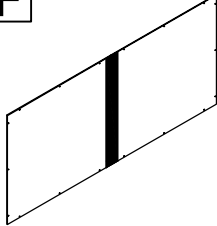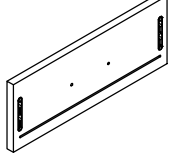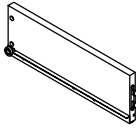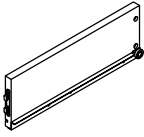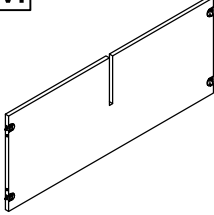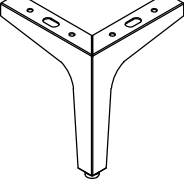               PART LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Upper Back Panel 1 PC
F 	G 	H 	I 	J 
Lower Back Panel 1 PC	Partition Panel 1 PC	Drawer Front Panel 1 PC	Drawer Left Panel 1 PC	Drawer Right Panel 1 PC
K 	L 	M 	N 	O 
Drawer Back Panel 1 PC	Drawer Bottom Panel 1 PC	Fixed Shelf Panel 1 PC	U-Shaped Bar 6 PCS	Leg 4 PCS
P 				
Center Leg 1 PC				

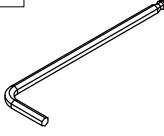    HARDWARE LIST

#1  Ø3*15mm Short Screw	#2  Ø3*30mm Long Screw	#3  Ø7*38mm Long Bolt	#4  Ø5/32"*22mm Round Head Bolt	#5  Ø1/4"*13mm Bolt
25 PCS (Extra 2)	4 PCS (Extra 1)	6 PCS (Extra 2)	2 PCS	10 PCS (Extra 2)
#6  Ø1/4" Flat Washer	#7  Ø8*30mm Wood Dowel	#8  149*28*10mm Handle	#9  4mm Allen Wrench	#10  Butterfly Nut
10 PCS (Extra 2)	16 PCS (Extra 2)	1 PC	1 PC	12 PCS (Extra 2)
#11  Safety Strap Kit 1 SET				

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

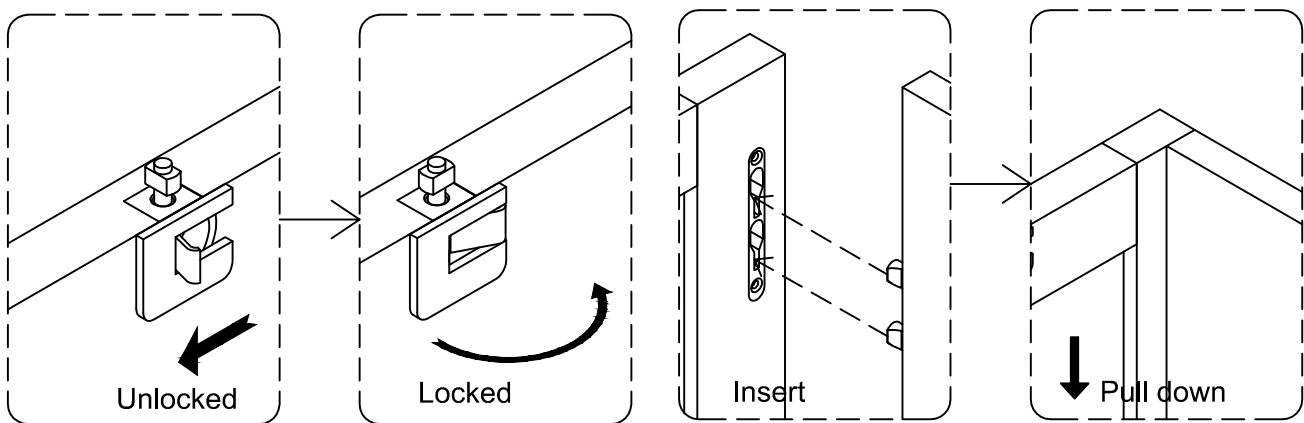 
Please do not use tools to assemble this unit unless specifically indicated.




Reference the image above any time the instructions state "lock the hardware" or "insert hardware and pull down to lock".

Be sure to check all hardware is locked when complete.

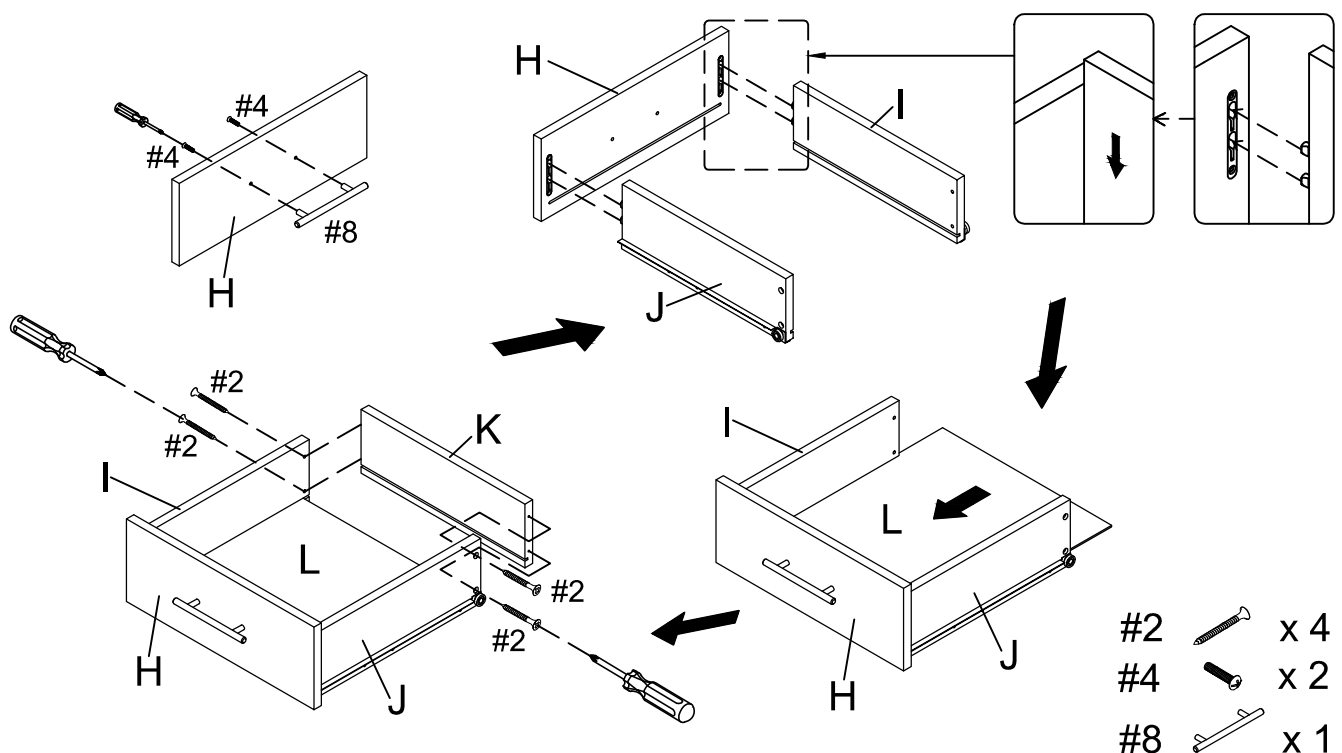 
Step 1. Attach handle (part #8) to drawer front panel (part H) using round head bolts (part #4) and phillips head screwdriver. Insert drawer left panel (part I) and drawer right panel (part J) into drawer front panel (part H) pull down to lock. Slide drawer bottom panel (part L) into grooves of assembled unit (parts H, I & J). Attach drawer back panel (part K) to assembled unit (parts I, J & L) using long screws (part #2) and phillips head screwdriver.



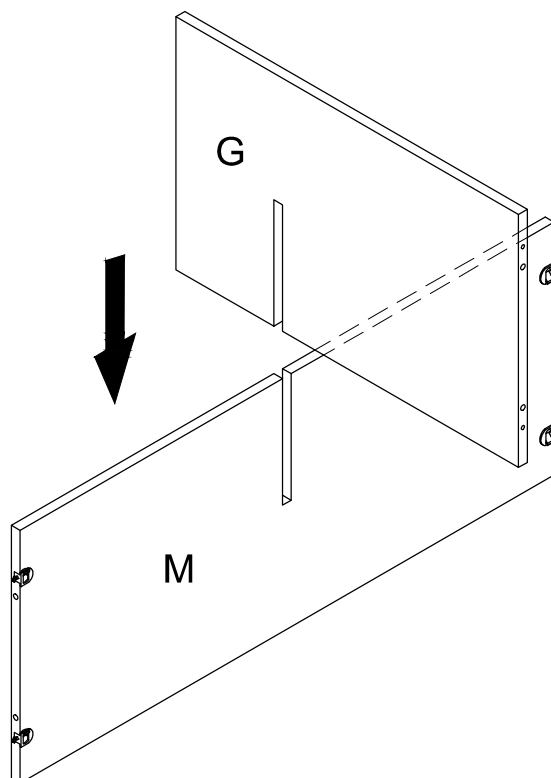 Step 2. Insert partition panel (part G) to fixed shelf panel (part M).




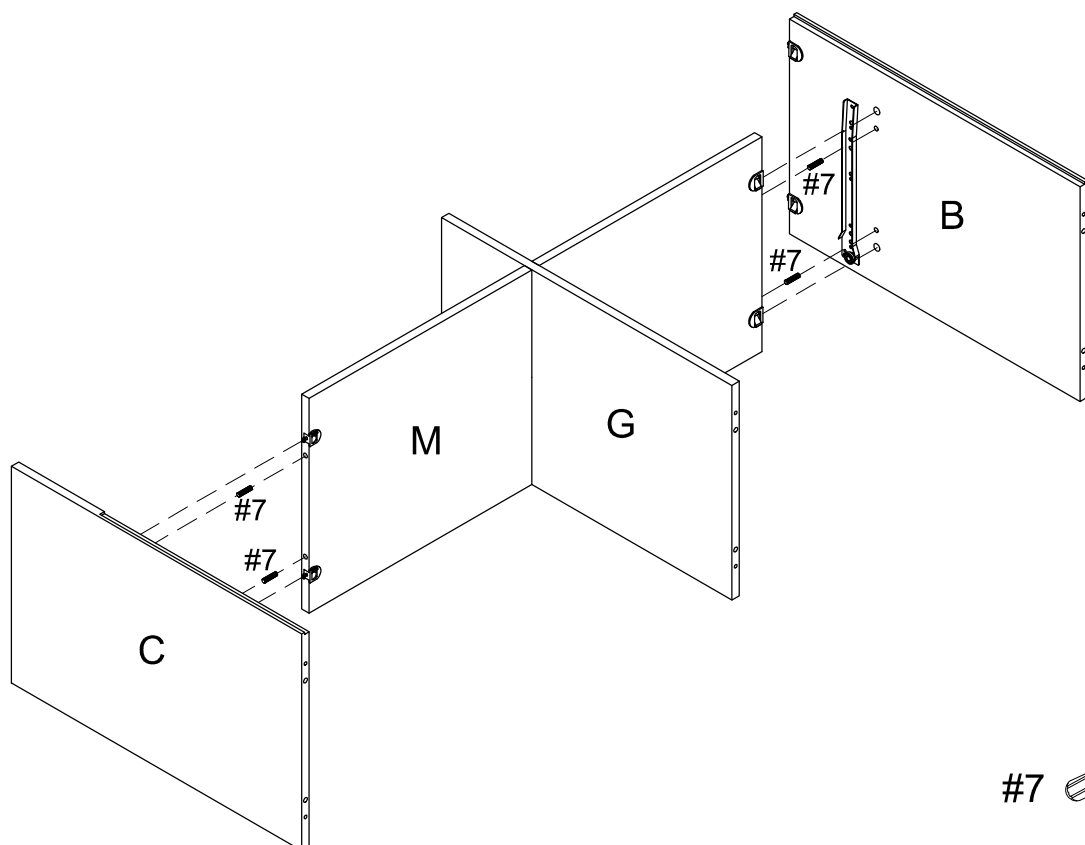 Step 3. Attach panels (parts B & C) to fixed shelf panel (part M) using wood dowels (part #7) and lock the hardware.




#7  x 4

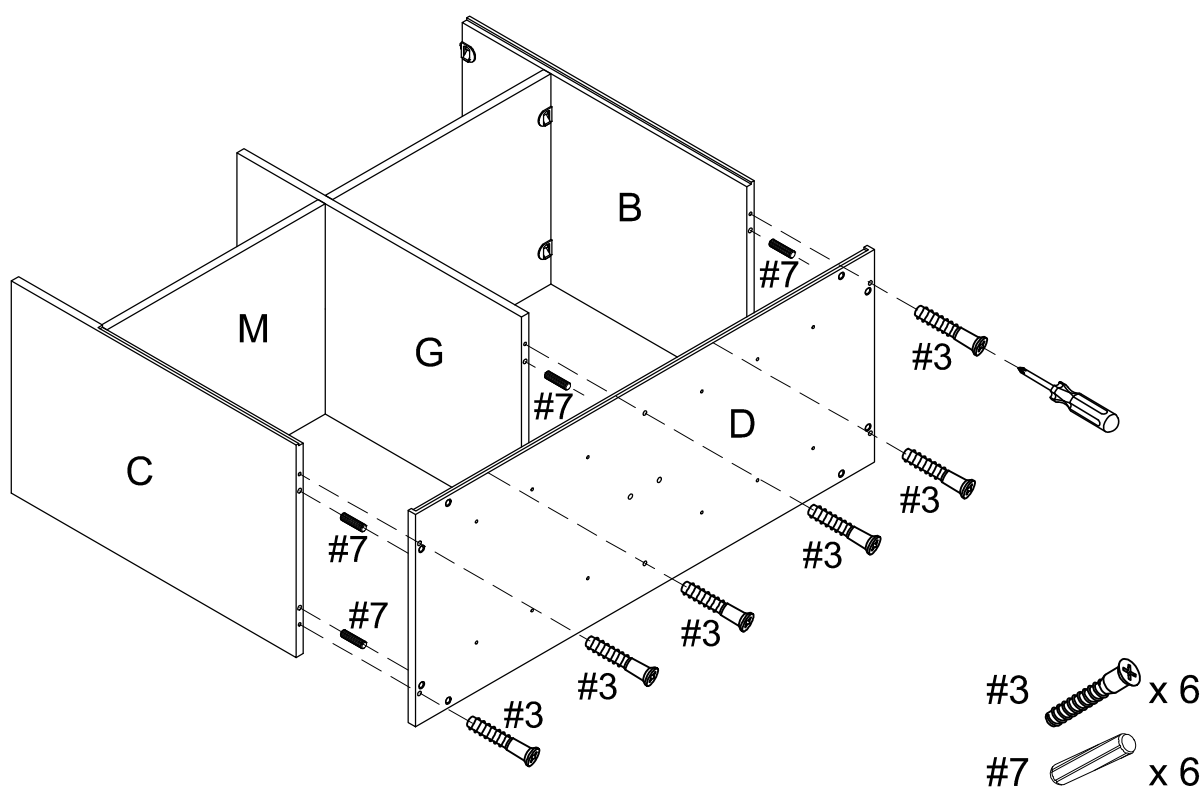 
Step 4. Attach bottom panel (part D) to assembled unit (parts B, C & G) using wood dowels (part #7), long bolts (part #3) and phillips head screwdriver.



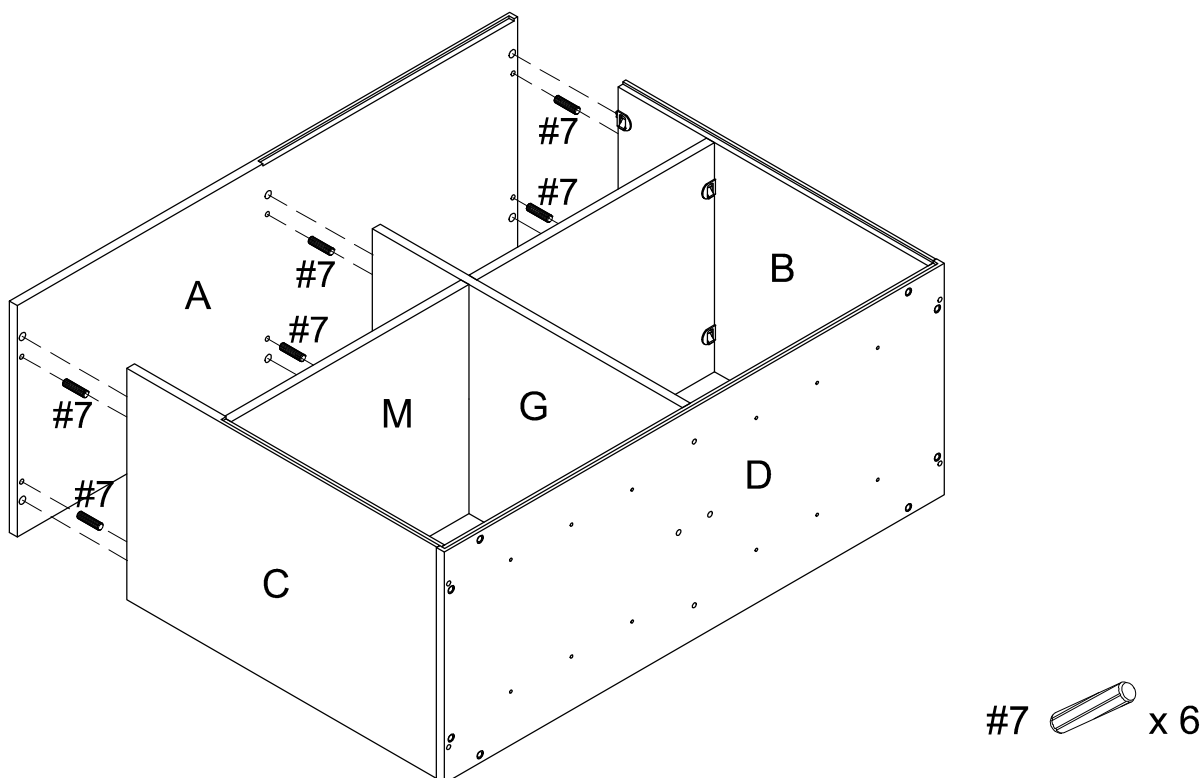 
Step 5. Attach top panel (part A) to assembled unit (parts B, C & G) using wood dowels (part #7) and lock the hardware.



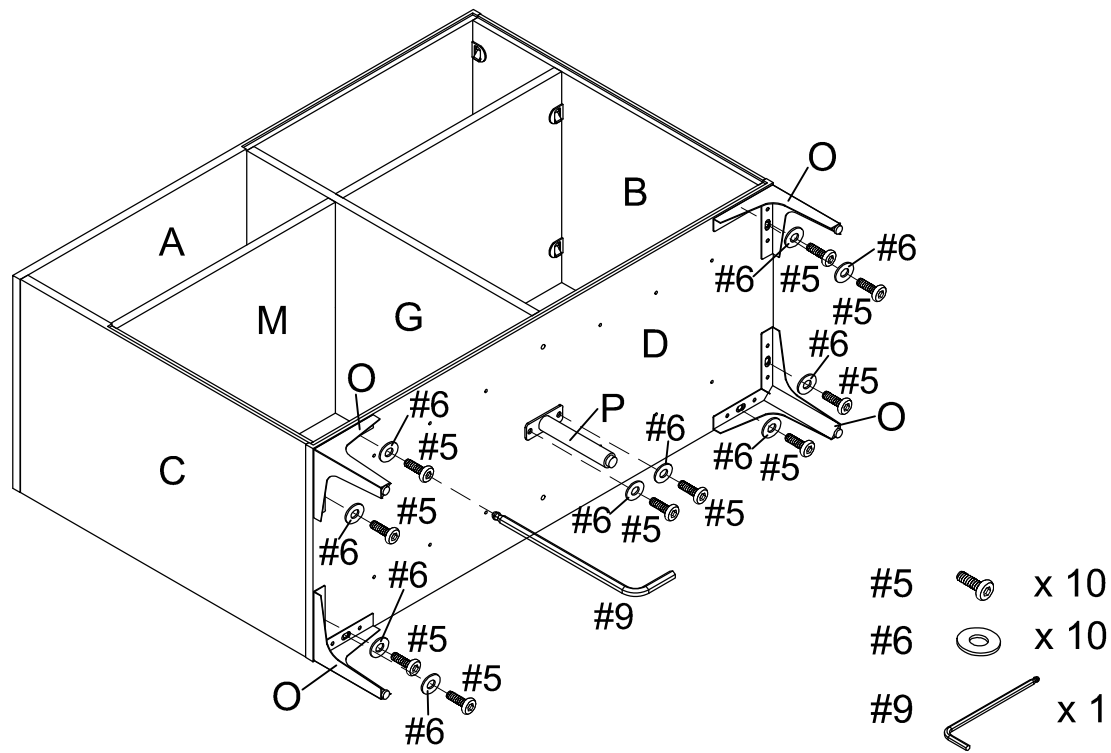 
Step 6. Attach legs (parts O & P) to bottom panel (part D) using flat washers (part #6), bolts (part #5) and allen wrench (part #9).



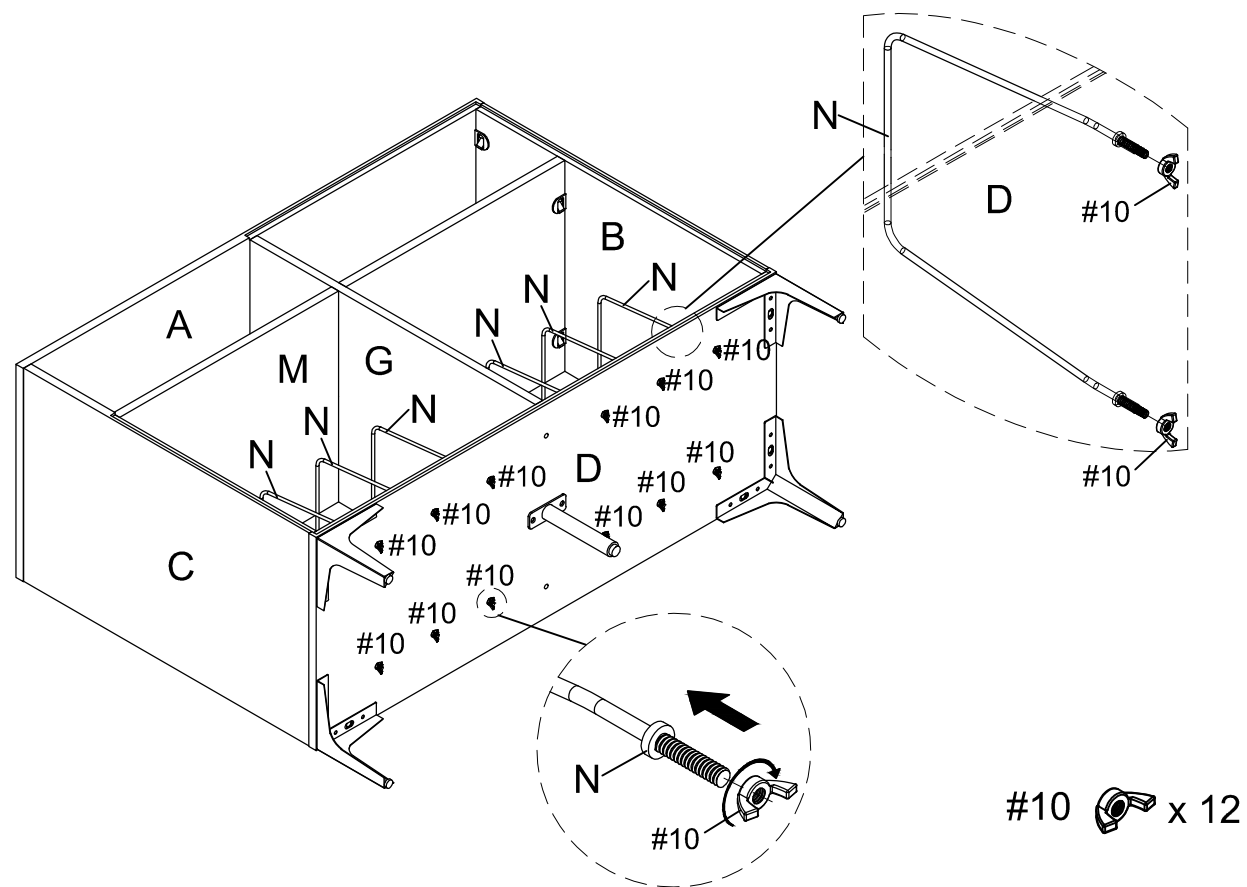 Step 7. Attach u-shaped bars (part N) to bottom panel (part D) using butterfly nuts (part #10).





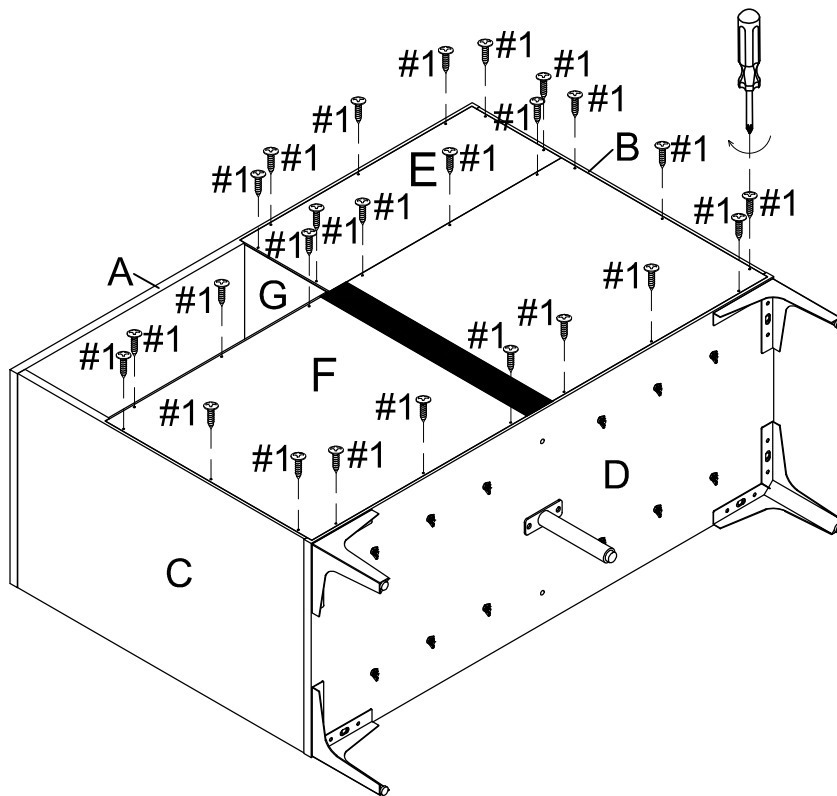 
Step 8. Attach back panels (parts E & F) to assembled unit (parts A, B, C, D & G) using short screws (part #1) and phillips head screwdriver.



#1  x 25

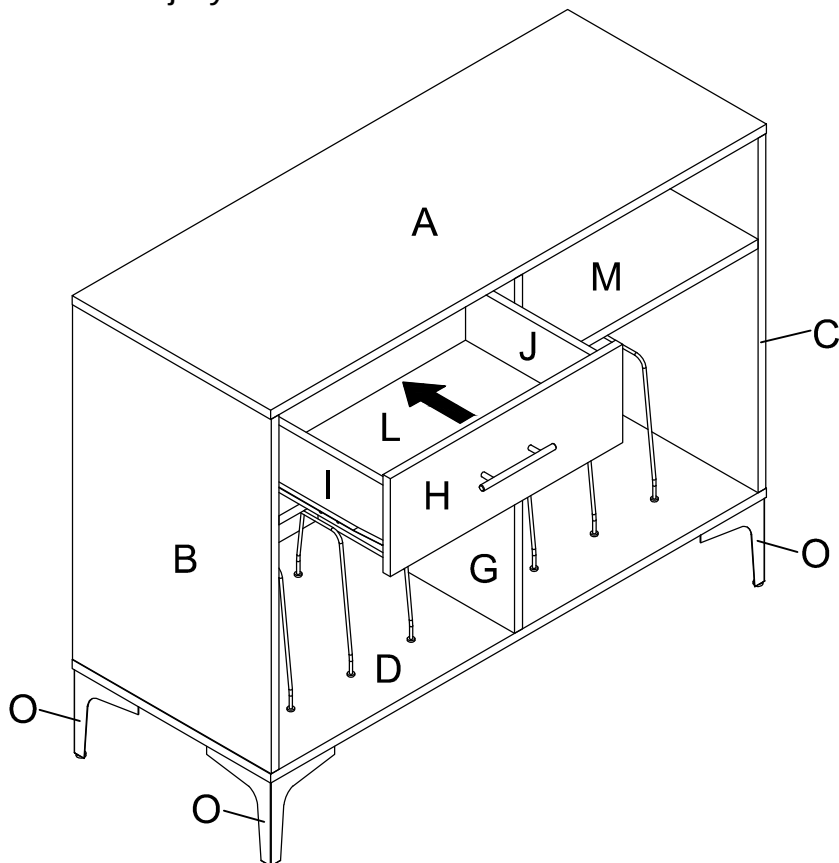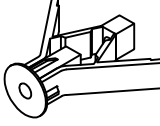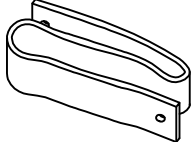   Step 9. Carefully turn unit upright. Slide assembled drawer into place.
Important: Safety strap kit (part #11) must be installed to prevent tipping, damage and/or injury.




#11	A	B	C	D	E
			 D8*3/4"	 D8*1-1/2"	
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

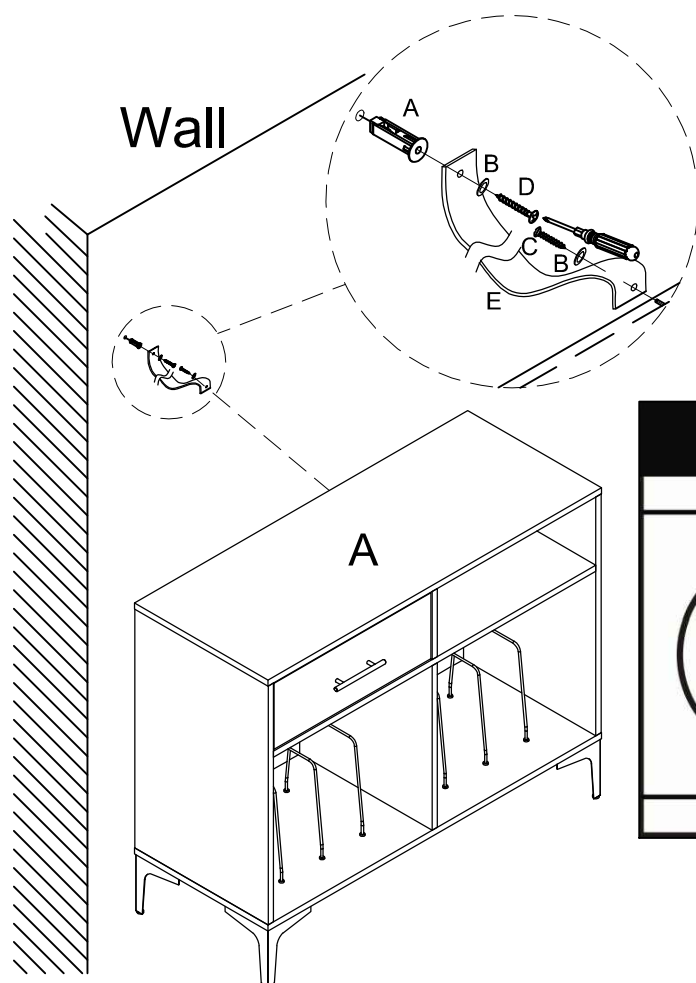 Note: This item is not intended for clothing storage use.



⚠ WARNING

Children have died from furniture tipover.

To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kgs) or less. Use with heavier television may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time,
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!