
 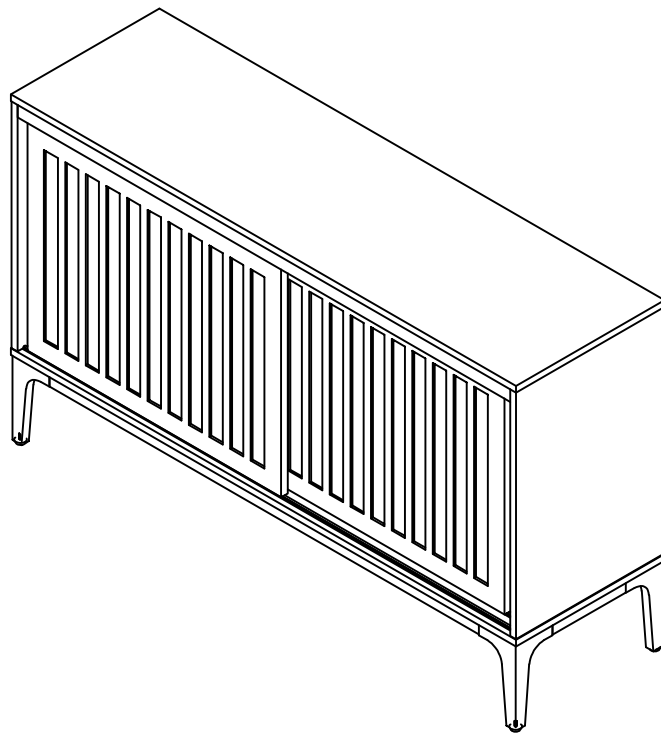
 
 
 
 
 
 
 
 

 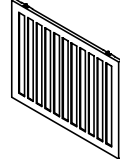


CROSLEY
FURNITURE




Sideboard
CF4219



PARTS LIST


A		B		C2		D		E	
Top Panel 1 PC		Left Panel 1 PC		Dividing Panel 1 PC		Right Panel 1 PC		Bottom Panel 1 PC	
F2		G2		H2		I		J2	
Adjustable Shelf 2 PCS		Left Back Panel 1 PC		Right Back Panel 1 PC		Top Rail 1 PC		Door 2 PCS	
K		L		M2					
Leg 4 PCS		Support Leg 1 PC		Cover 2 PCS					

   HARDWARE LIST

#1  1/4"*51mm Long Bolt 6 PCS (Extra 1)	#2  1/4"*25mm Short Bolt 14 PCS (Extra 1)	#3  1/4"*10mm Spring Washer 20 PCS (Extra 1)	#4  1/4"*13mm Flat Washer 20 PCS (Extra 1)	#5  8*30mm Wood Dowel 20 PCS (Extra 1)
#6  Cam Bolt 4 PCS (Extra 1)	#7  Cam Lock 4 PCS (Extra 1)	#8  Barrel Nut 6 PCS (Extra 1)	#9  Shelf Holder 8 PCS (Extra 1)	#10  8*3*12mm Round Head Screw 34 PCS (Extra 1)
#11  Binding Post 2 SETS (Extra 1)	#12  M4 Allen Wrench 1 PC	#13  M2 Small Allen Wrench 1 PC	#14  Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #6) into left panel (part B) and right panel (part D) using phillips head screwdriver.

Note: Do not over-tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

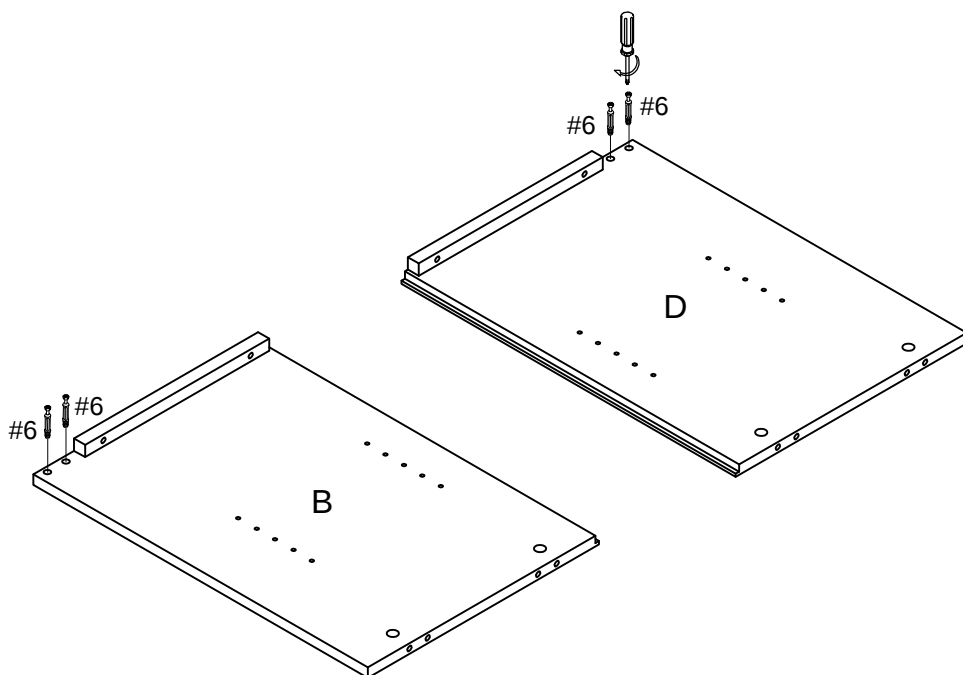

#6  x 4



Step 2. Attach covers (part M2) to back panels (parts G2 & H2) using binding posts (part #11) and small allen wrench (part #13).

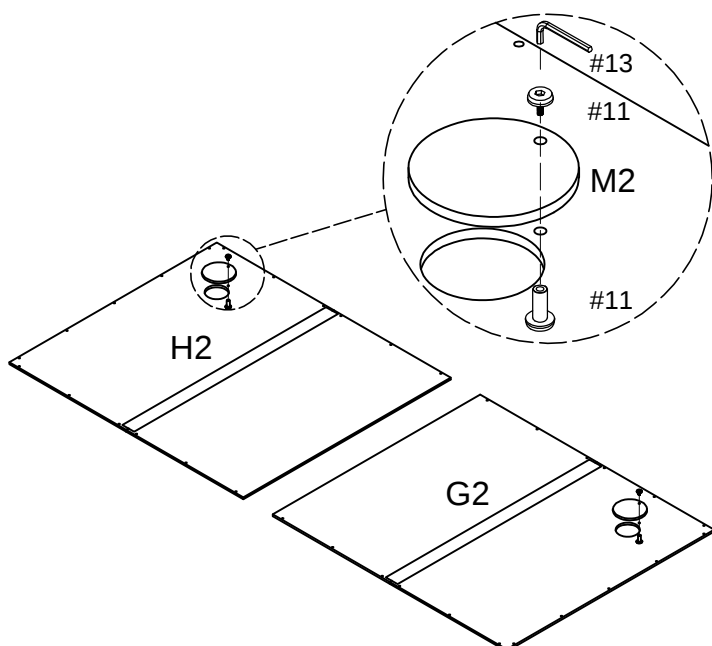

#11  x 2
#13  x 1


Step 3. Attach top rail (part I) to left panel (part B) and right panel (part D) using cam locks (part #7) and phillips head screwdriver.

Note: Cam locks must rotate full 180°. See pictured insert.

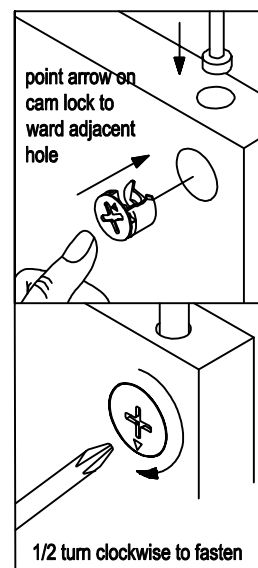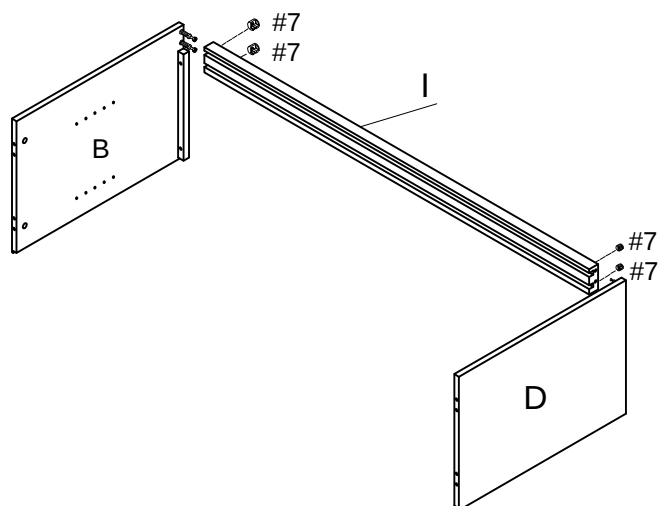


#7  x 4

Step 4. Attach dividing panel and bottom panel (parts C2 & E) to assembled unit (parts B & D) using wood dowels (part #5), barrel nuts (part #8), long bolts (part #1), spring washers (part #3), flat washers (part #4) and allen wrench (part #12).

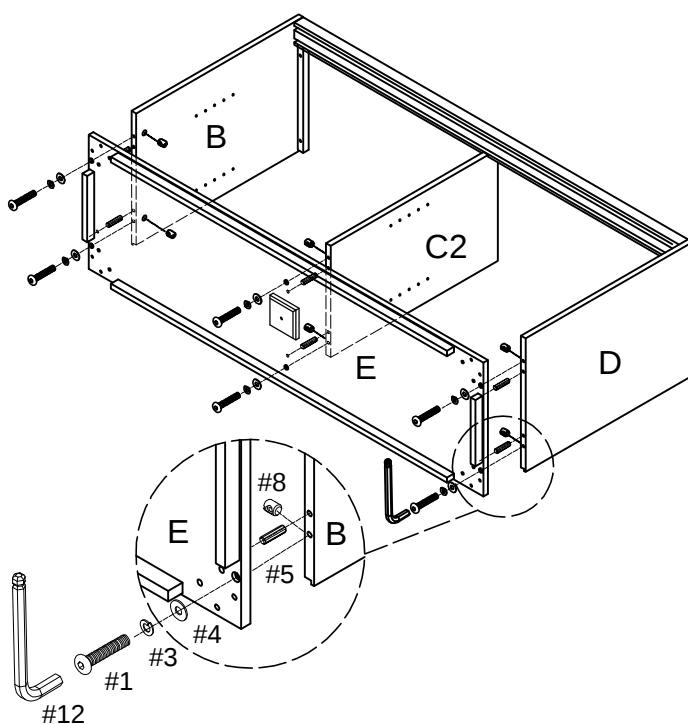


#1  x 6
 #3  x 6
 #4  x 6
 #5  x 6
 #8  x 6
 #12  x 1

Step 5. Attach legs (part K) to bottom panel (part E) using wood dowels (part #5), short bolts (part #2), spring washers (part #3), flat washers (part #4) and allen wrench (part #12). Attach support leg (part L) to bottom panel (part E).

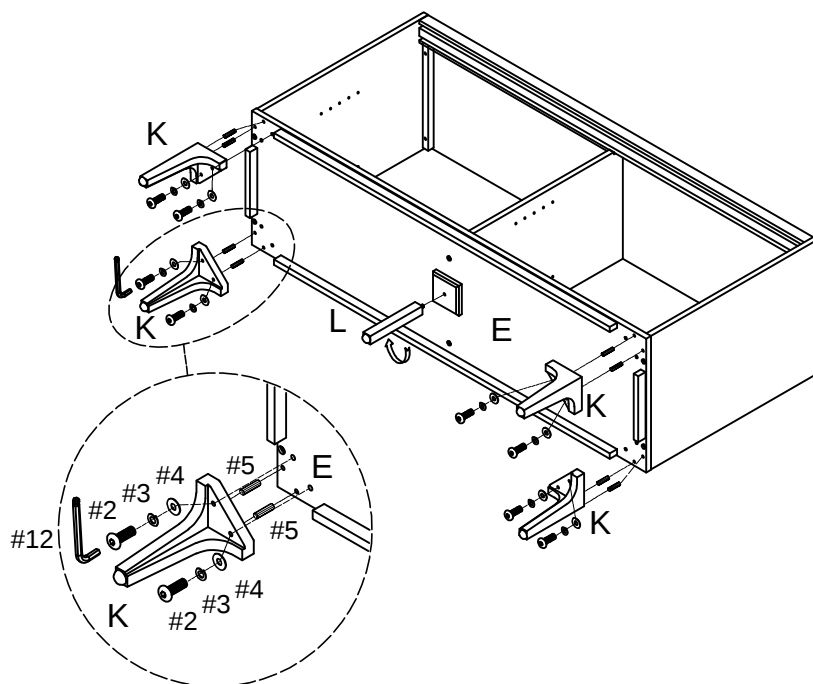


#2		x 8
#3		x 8
#4		x 8
#5		x 8
#12		x 1

Step 6. Attach top panel (part A) to assembled unit (parts B, C2 & D) using wood dowels (part #5), short bolts (part #2), spring washers (part #3), flat washers (part #4) and allen wrench (part #12).

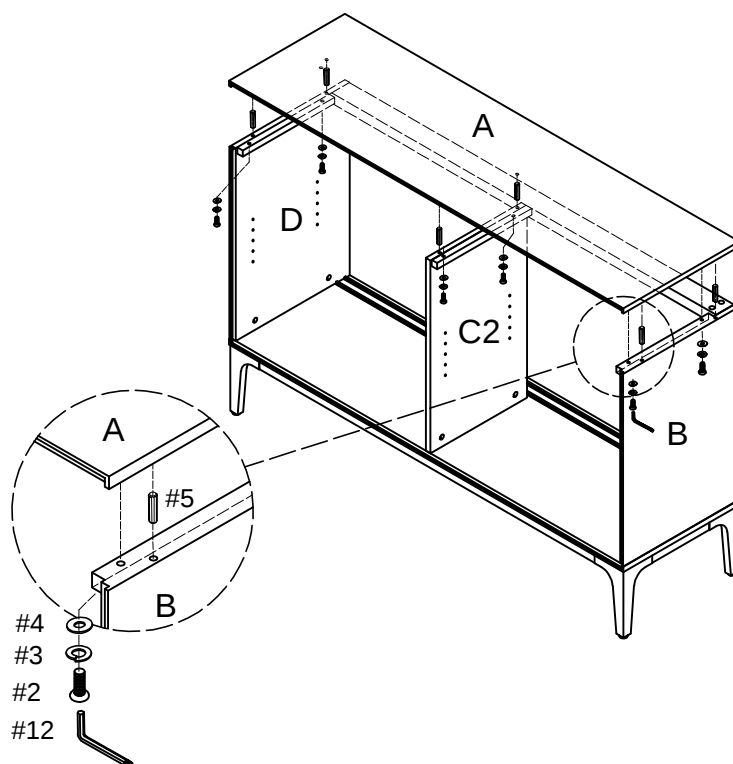


#2		x 6
#3		x 6
#4		x 6
#5		x 6
#12		x 1

Step 7. Attach back panels (parts G2 & H2) to assembled unit (parts A, B, C2, D & E) using round head screws (part #10) and phillips head screwdriver.

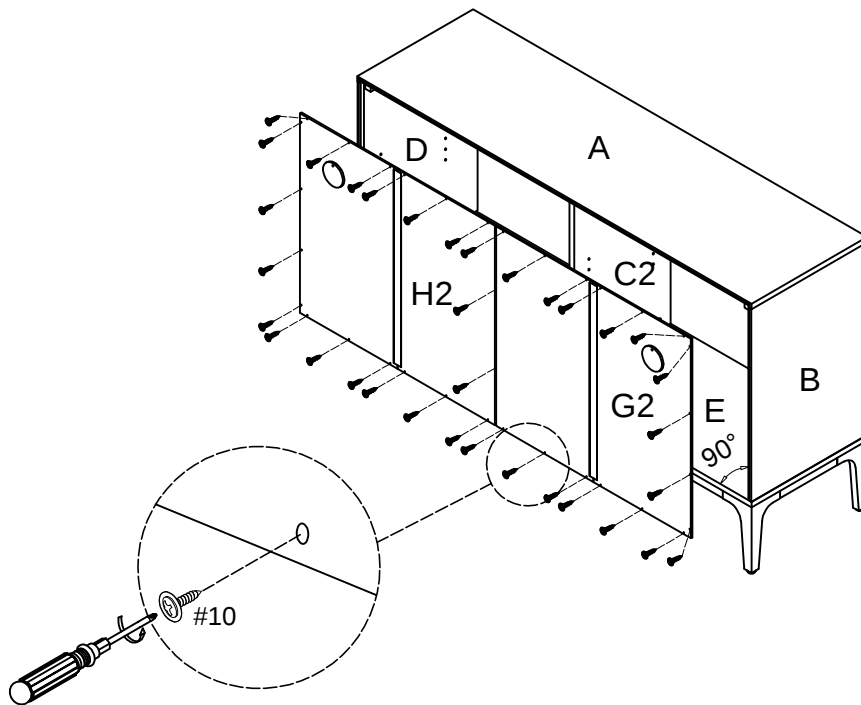


#10  x 34

Step 8. Insert shelf holders (part #9) into desired position and slide adjustable shelves (part F2) into place.

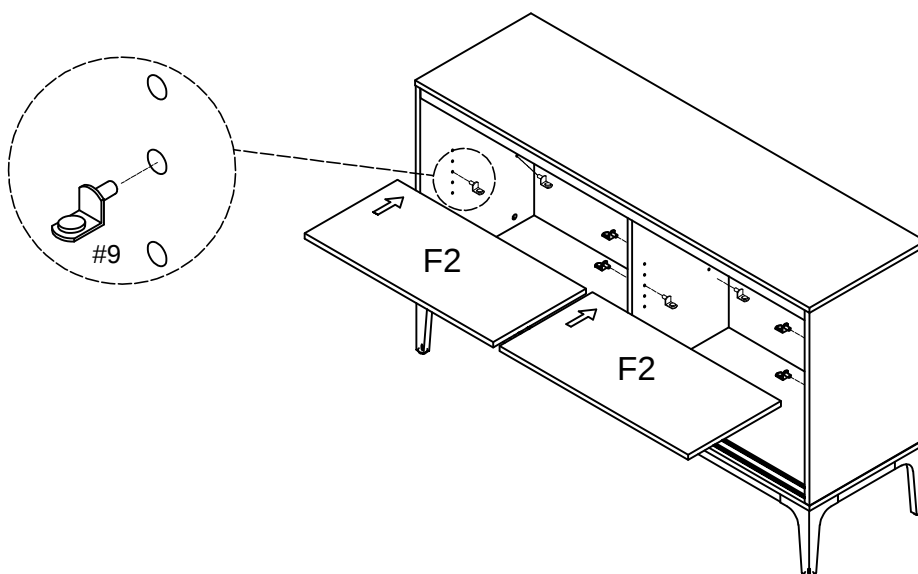

#9  x 8


Step 9. Press the door pins up, then install door (part J2) to inner runners of pre-assembled unit as shown.

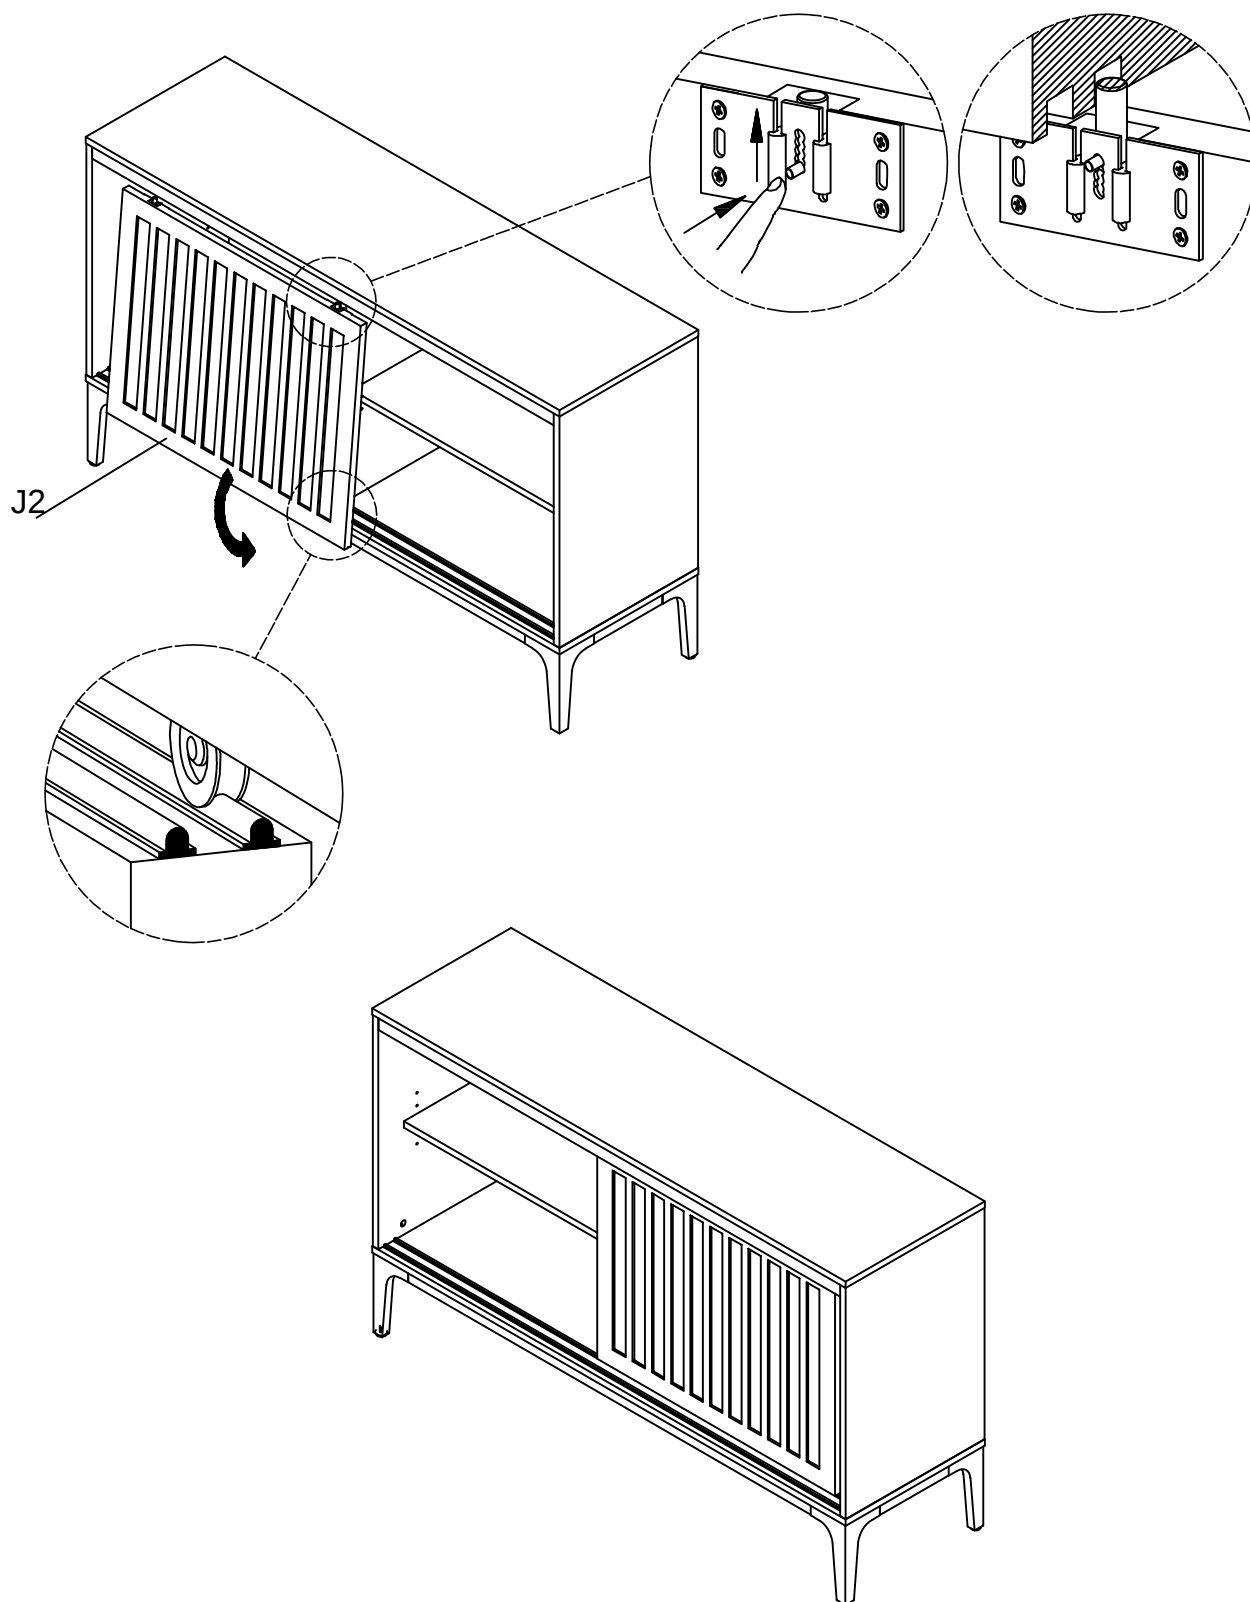


Step 10. Press the door pins up, then install door (part J2) to outer runners of pre-assembled unit as shown.

NOTE: It is important to adjust levelers once fully assembled and upright. EXTend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #14) must be installed to prevent tipping damage and/or injury.

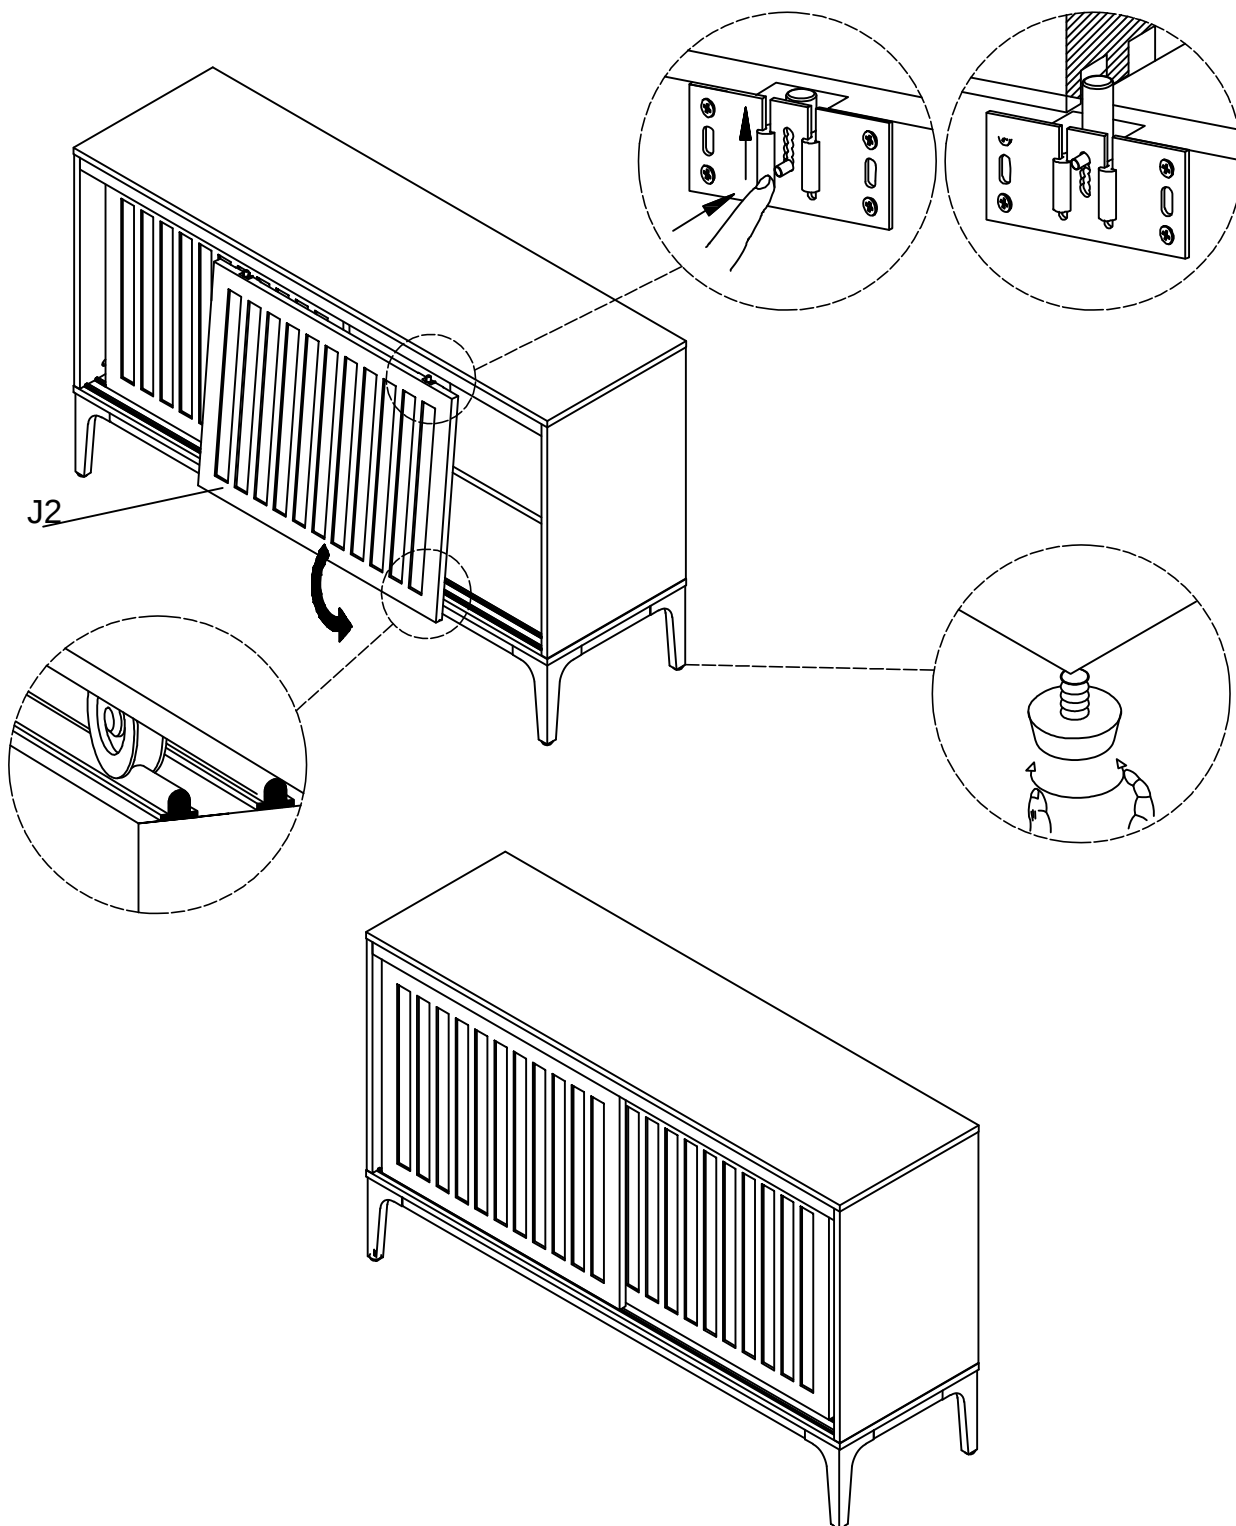

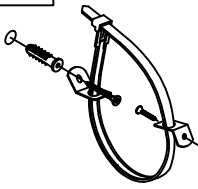
#14	A	B	C	D	E
					
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

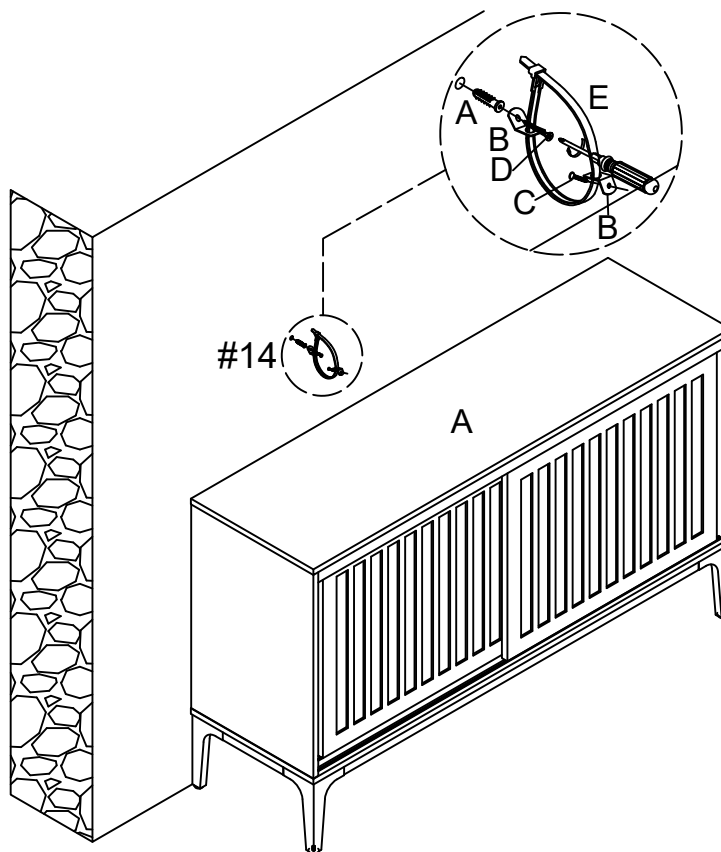

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!