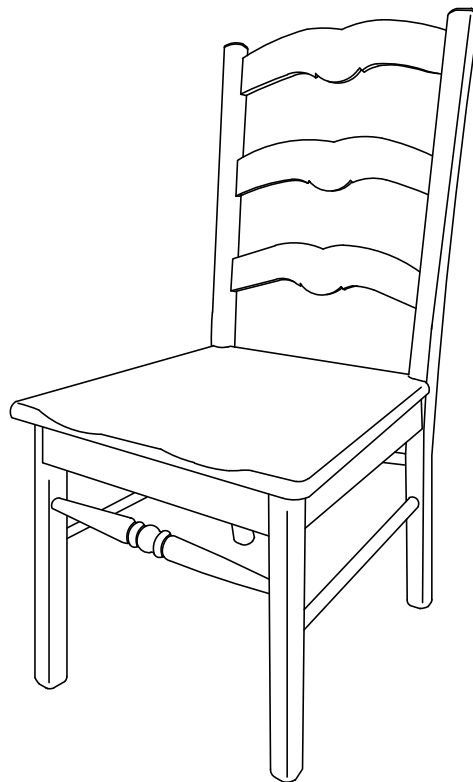 








CROSLEY

F U R N I T U R E





Dining Chair
CF503618



      PART LIST


A 	B 	C 	D 	E 
Back Panel 2 PCS	Seat Panel 2 PCS	Left Front Leg 2 PCS	Right Front Leg 2 PCS	Front Stretcher 2 PCS
F  Side Stretcher 4 PCS				

    HARDWARE LIST

#1  M6 x 80mm	#2  M6 x 50mm	#3  M6 x 40mm	#4  M6	#5  M6
Long Bolt 8 PCS (Extra 1)	Medium Bolt 8 PCS (Extra 1)	Short Bolt 4 PCS (Extra 1)	Spring Washer 20 PCS (Extra 1)	Flat Washer 20 PCS (Extra 1)
#6  4 X 38mm Screw 12 PCS (Extra 1)	#7  M4 Allen Wrench 1 PC			

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Step 1. Attach seat panel (part B) to back panel (part A) using long bolts (part #1), short bolts (part #3), spring washers (part #4), flat washers (part #5) and allen wrench (part #7).

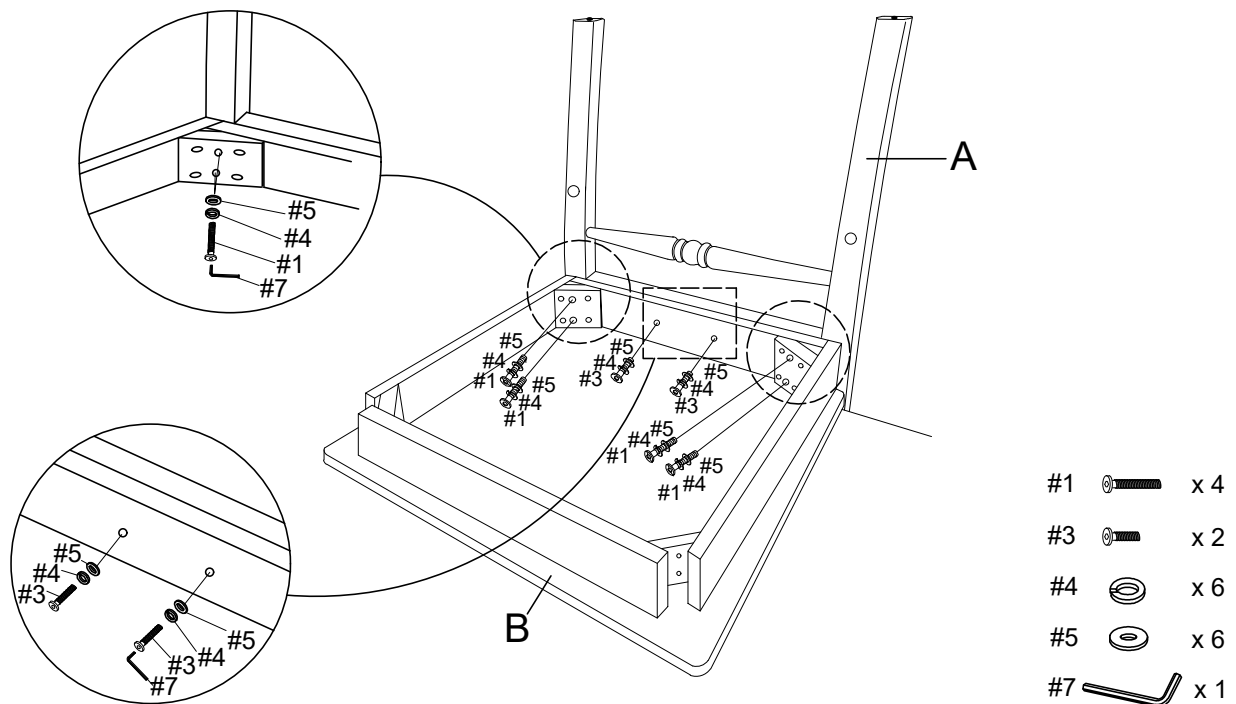 NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 2. Attach left front leg (part C) and right front leg (part D) to seat panel (part B) using medium bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #7).

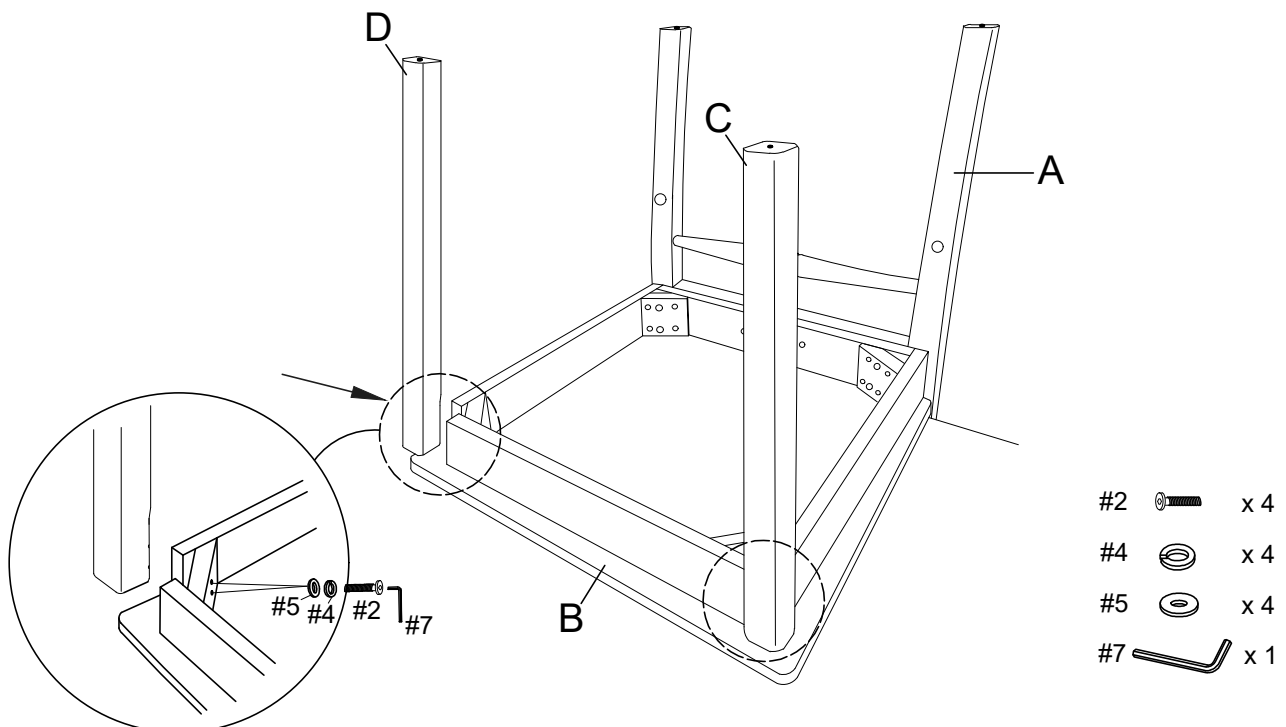 NOTE: Please do not fully tighten bolts until unit is fully assembled.




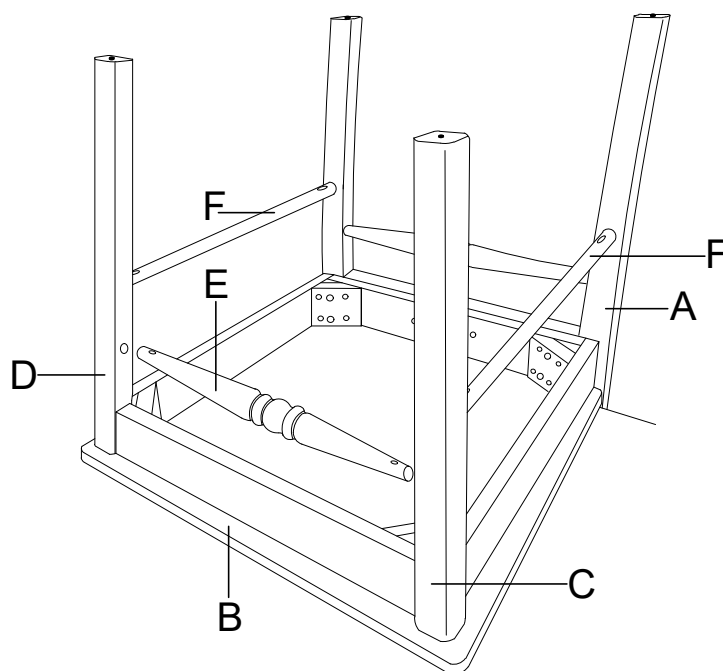 Step 3. Insert front stretcher (part E) and side stretchers (part F) into assembled unit (parts A, C & D).



Step 4. Tighten front stretcher (part E) and side stretchers (part F) using screws (part #6) and phillips head screwdriver.

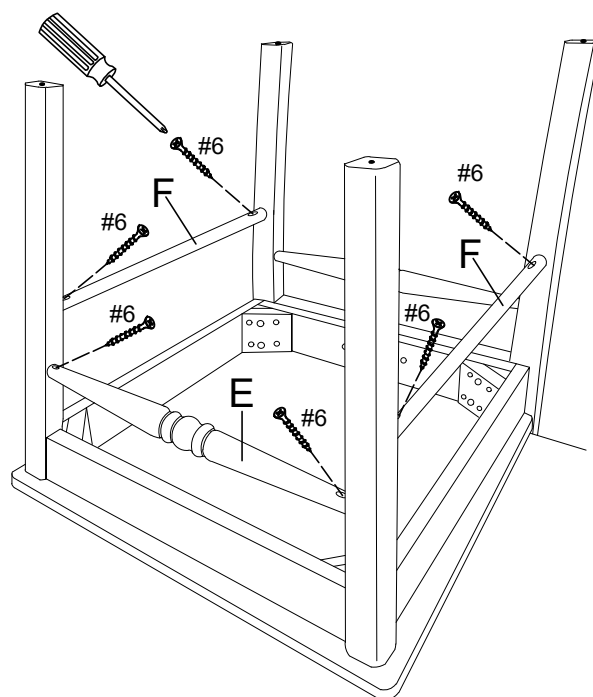 NOTE: Please fully tighten all bolts at this time.



#6  x 6

Step 5. Carefully turn unit upright. Repeat steps 1-5 to assemble remaining chair.

