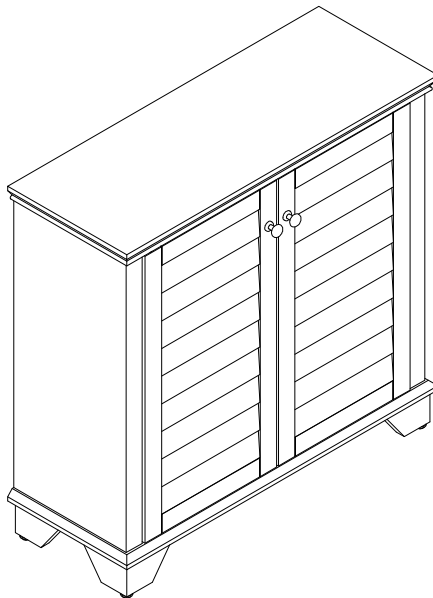 










CROSLEY

FURNITURE




Accent Cabinet CF7030



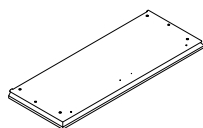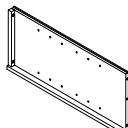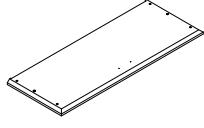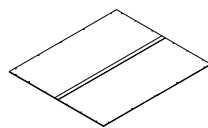        PART LIST


A		B		C		D		E	
Top Panel 1 PC		Right Panel 1 PC		Left Panel 1 PC		Bottom Panel 1 PC		Back Panel 1 PC	
F		G		H		I			
Left Door 1 PC		Right Door 1 PC		Adjustable Shelf 2 PCS		Foot 4 PCS			

   HARDWARE LIST

#1		#2		#3		#4		#5	
Bolt 12 PCS (Extra 1) Ø1/4"*1"		Wood Dowel 12 PCS (Extra 1) Ø8*30mm		Magnet 2 PCS		Round Head Screw 4 PCS (Extra 1) Ø3*16mm		Knob 2 PCS	
#6		#7		#8		#9		#10	
Round Head Bolt 2 PCS Ø5/32"*3/4"		Shelf Holder 8 PCS (Extra1)		Screw 16 PCS (Extra 1) Ø3*10mm		Allen Wrench 1 PC		Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)

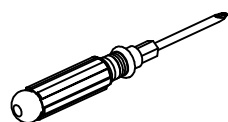 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

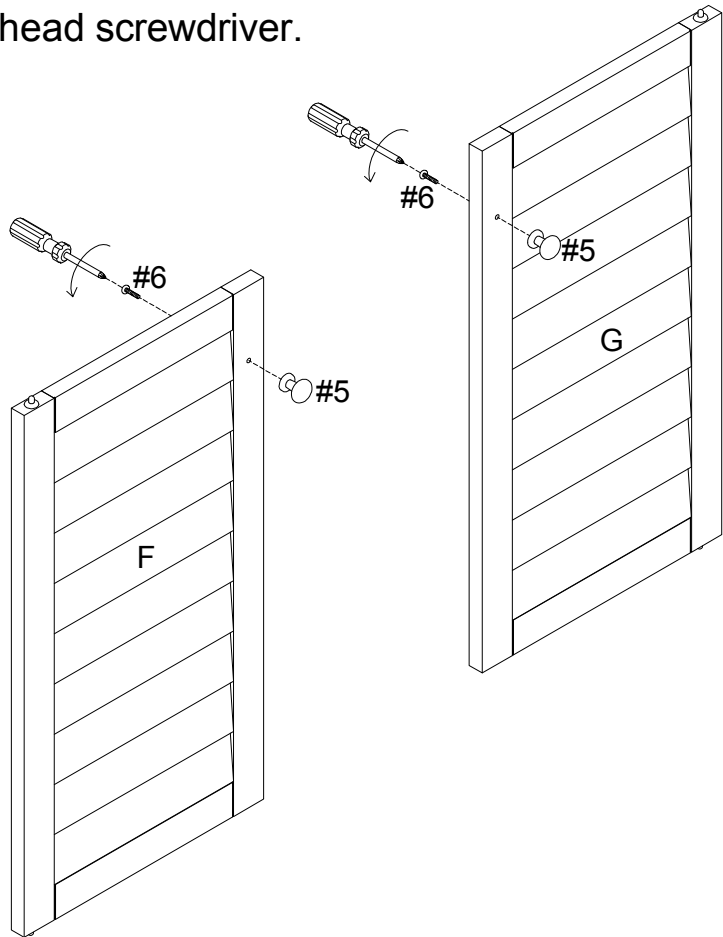 Step 1. Attach knobs (part #5) to doors (parts F & G) using round head bolts (part #6) and phillips head screwdriver.




- # 5  x 2
- # 6  x 2

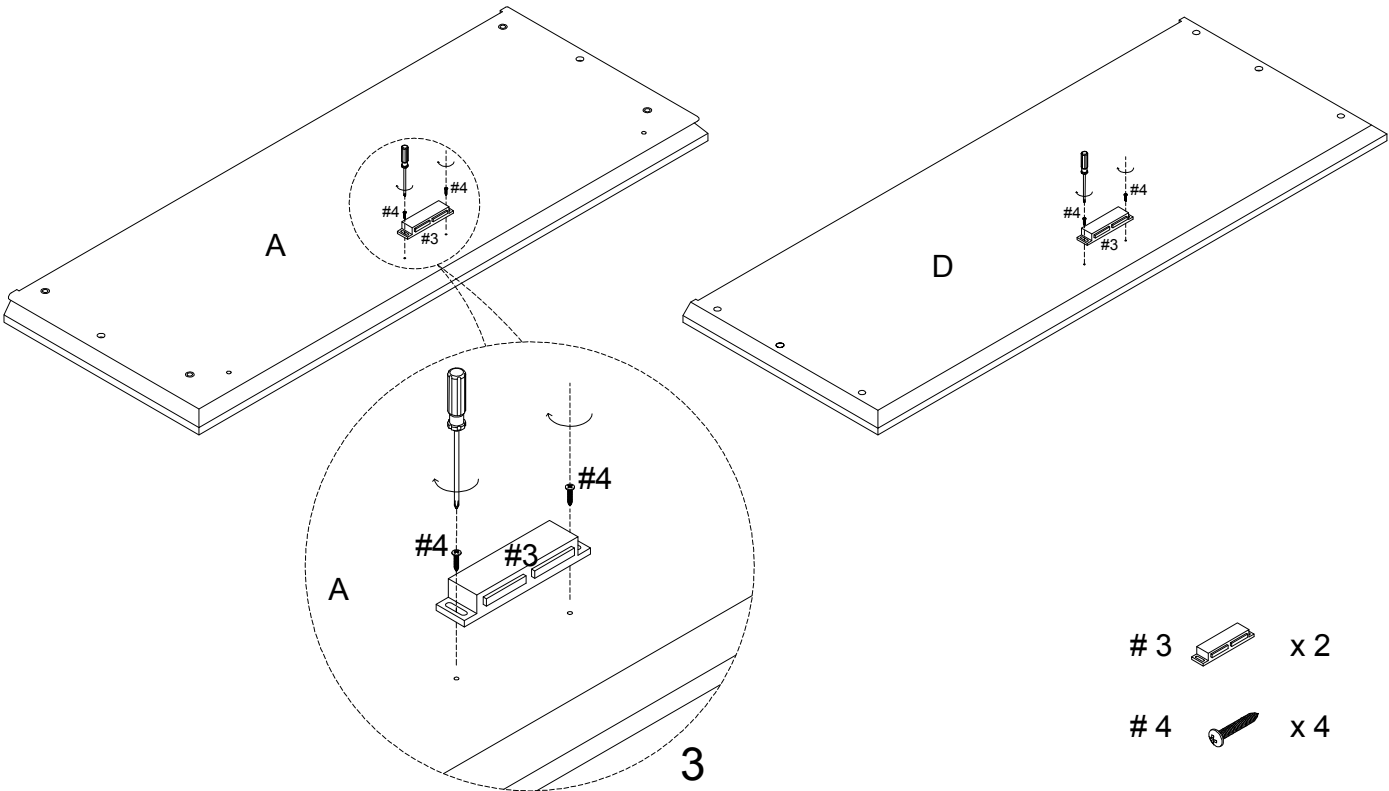 Step 2. Attach magnets (part #3) to top panel (part A) and bottom panel (part D) using round head screws (part #4) and phillips head screwdriver.




- # 3  x 2
- # 4  x 4

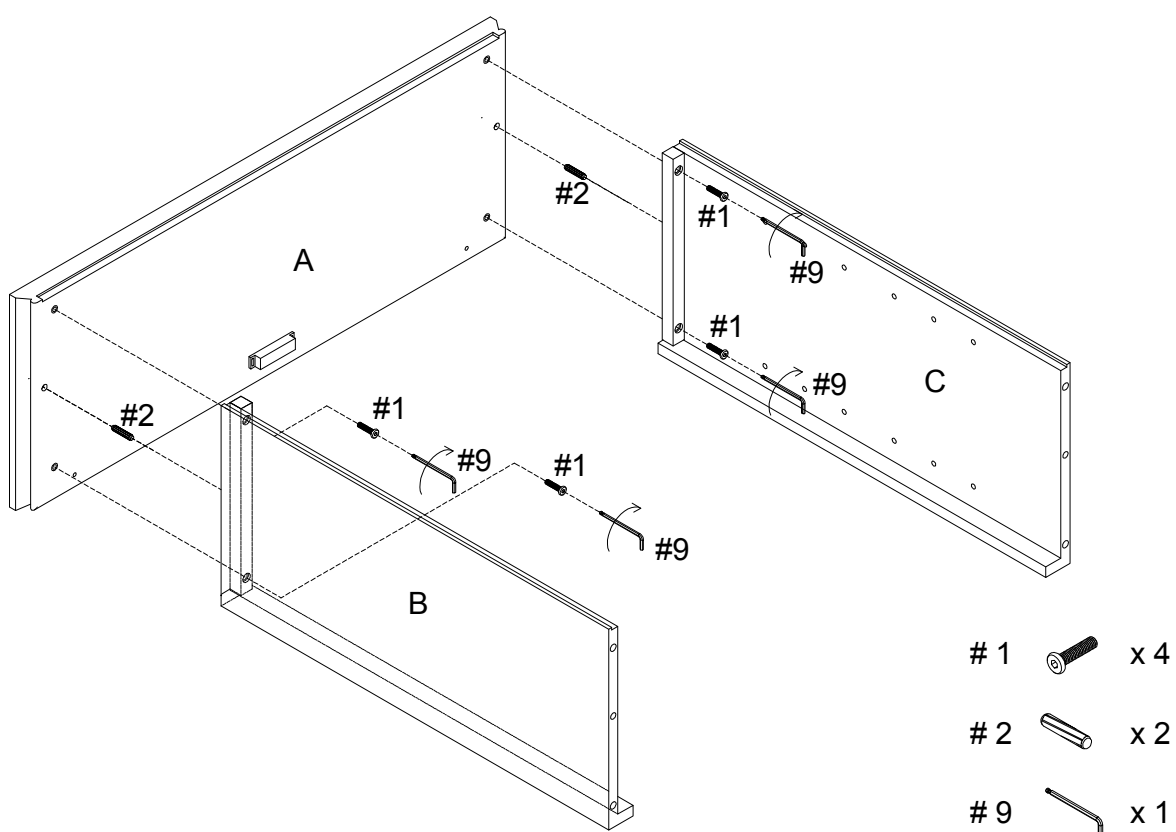 
Step 3. Attach panels (parts B & C) to top panel (part A) using wood dowels (part #2) bolts (part #1) and allen wrench (part #9).



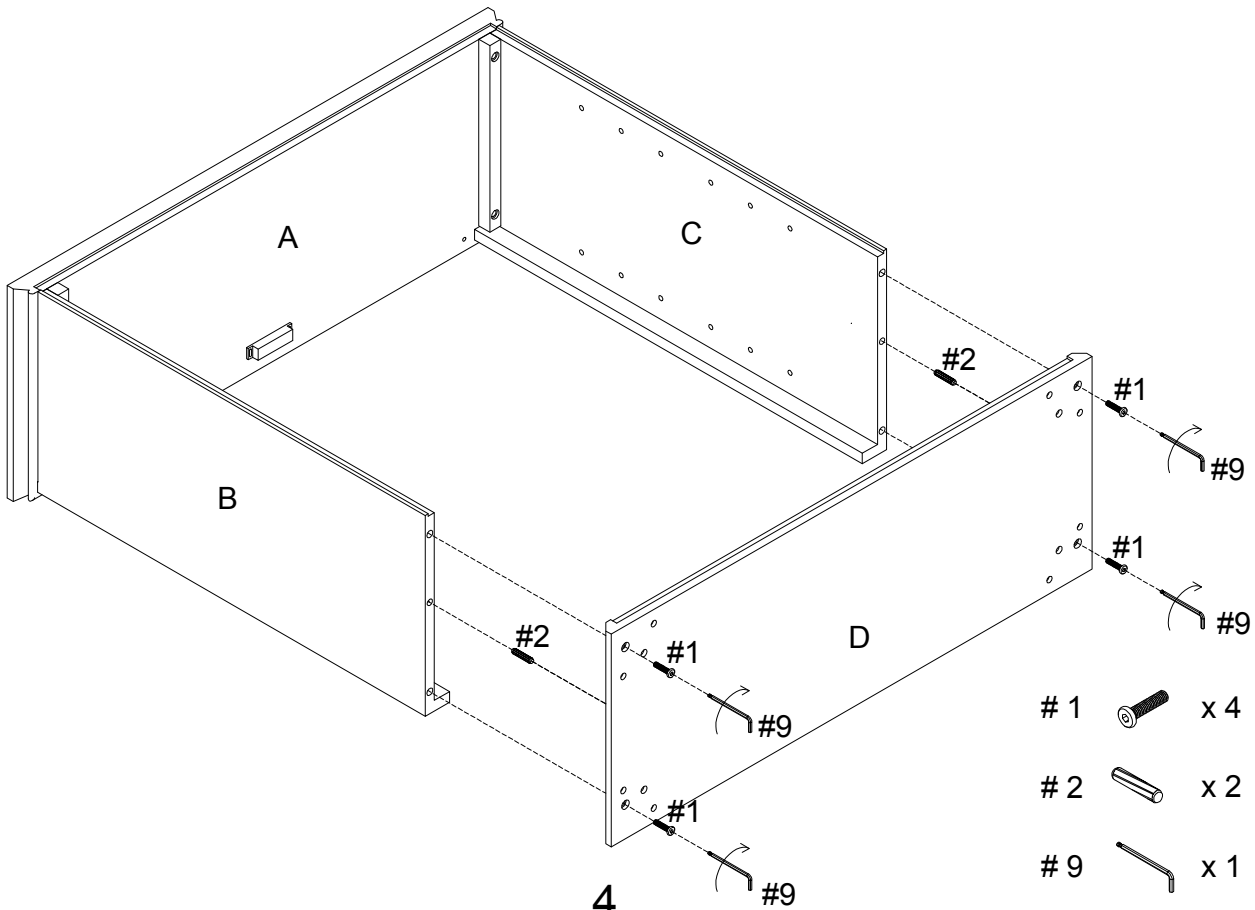 
Step 4. Attach bottom panel (part D) to panels (parts B & C) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).



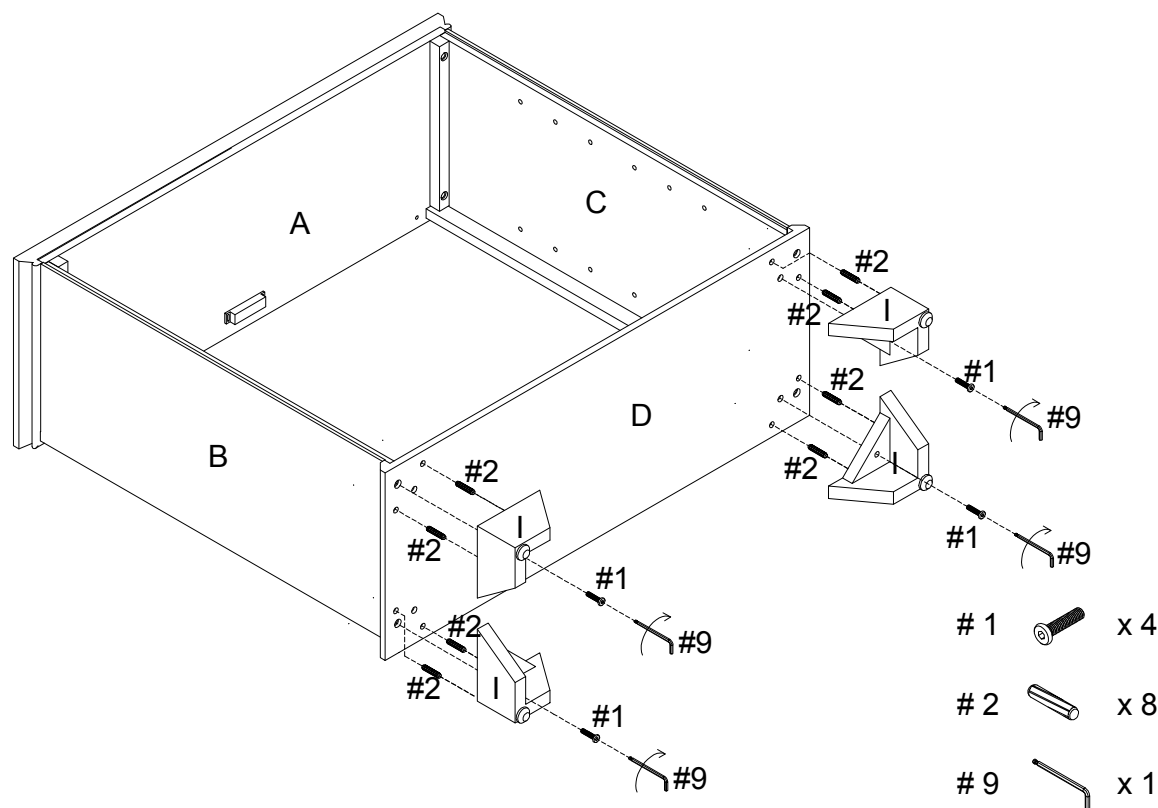 
Step 5. Attach feet (part I) to bottom panel (part D) using wood dowels (part #2), bolts (part #1) and allen wrench (part #9).



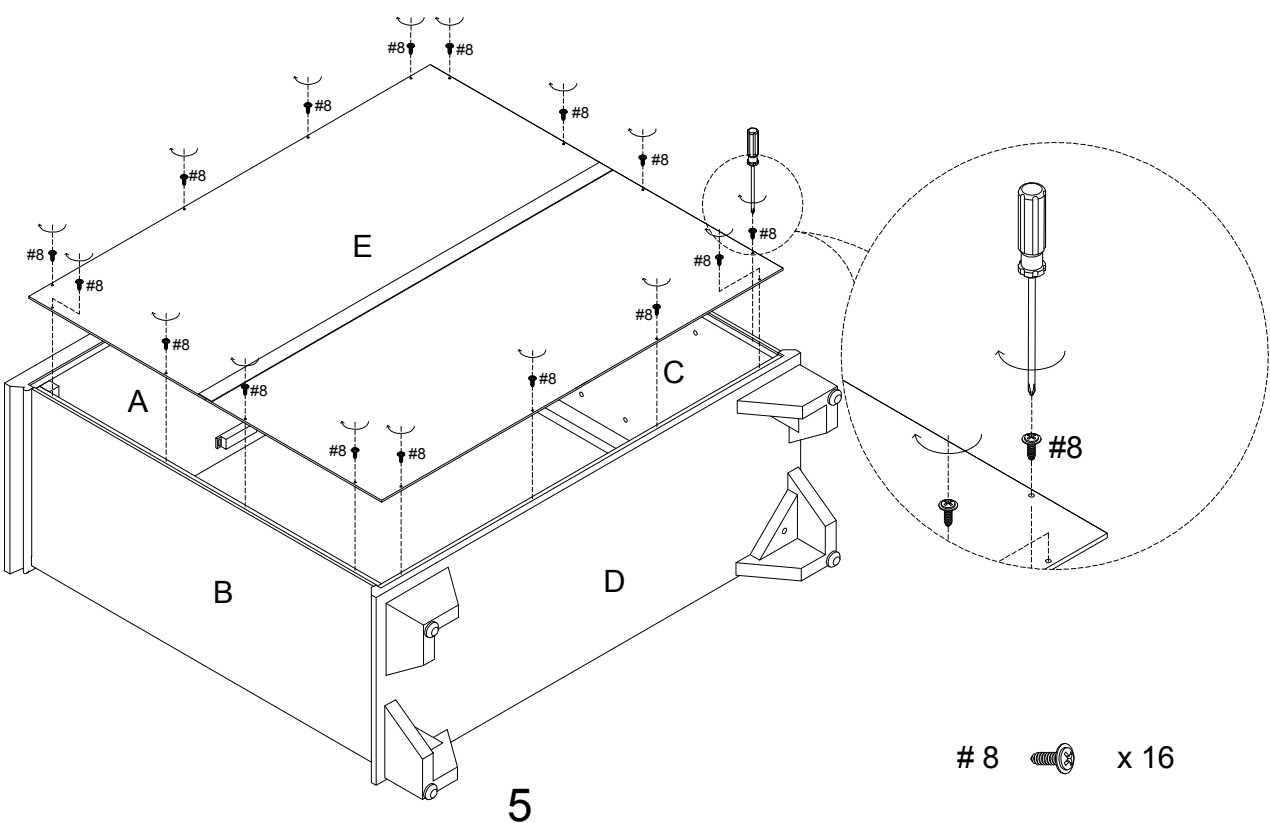 Step 6. Attach back panel (part E) to assembled unit (parts A, B, C & D) using screws (part #8) and phillips head screwdriver.



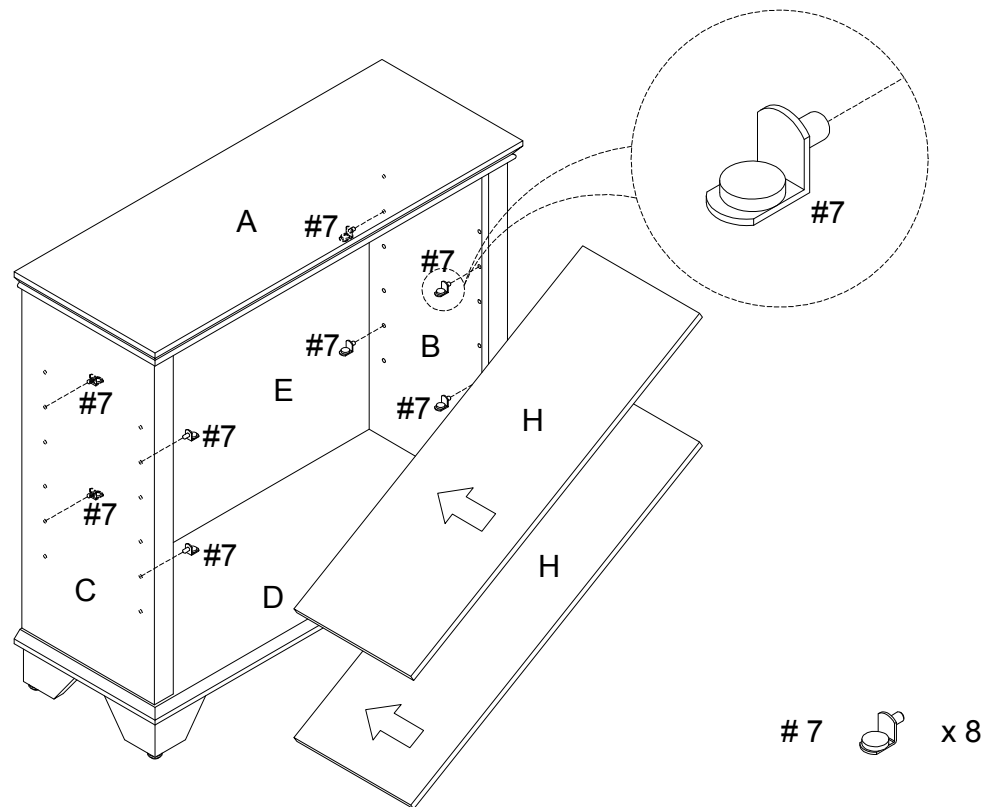 Step 7. Carefully turn unit upright. Place shelf holders (part #7) into desired position and slide adjustable shelves (part H) into place.




Step 8. Attach doors (parts F & G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

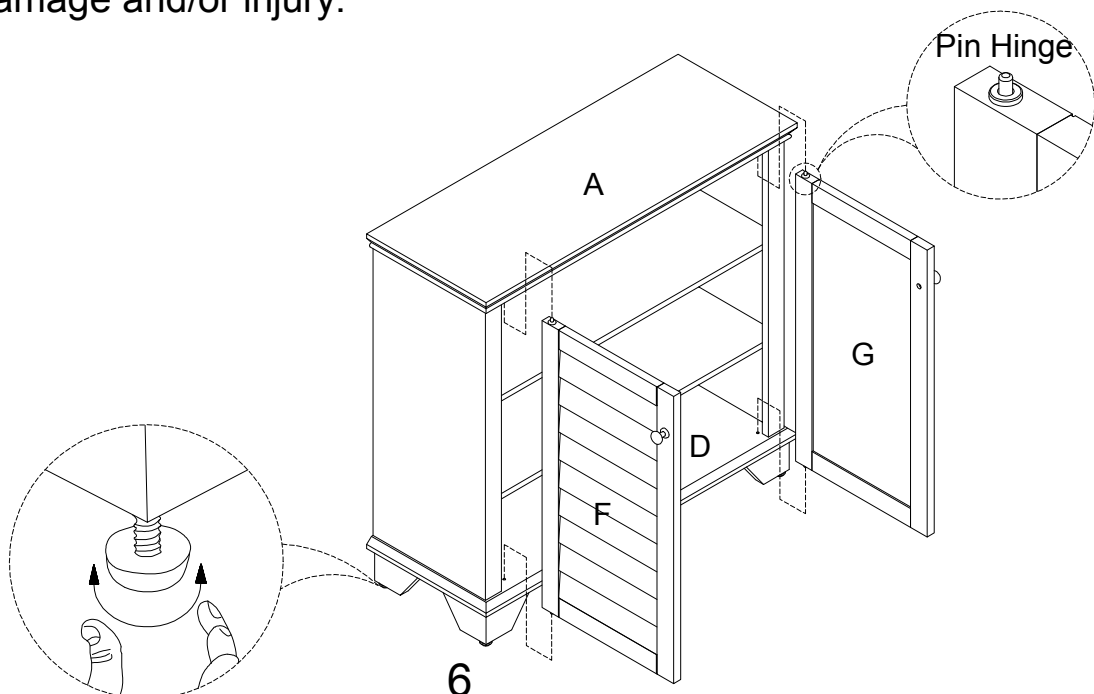 Important: Safety strap kit (part #10) must be installed to prevent tipping, damage and/or injury.



#10	A	B	C	D	E
	 1-1/2"xØ4xD8		 5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

