

CROSLEY®

INSTRUCTION FOR USE
CROSLEY P10

Dear Music Lover,
Thank you for purchasing the Crosley P10 Phono Preamp.
Please read the instructions carefully in order to achieve
maximum performance and reliability of this Phono Preamp.

Safety instructions

- Before connecting the supplied power adapter to the outlet, make sure the voltage requirements printed on the power adapter label match with your country's voltage supply.
- Do not touch the unit or the power adapter while your hands are wet.
- Store the unit and power adapter properly and keep them away from water and heat.
- Read the input, output, and channel labelling carefully before making the connections.
- Do not connect the phono preamp's output jack to the power amplifier's phono input jack (sometimes labelled gram, disc or RIAA).
- Use only the supplied power adapter that comes with the phono preamp.

Connection to the record player

Warning: this phono preamp is ONLY designed specifically for MM cartridge or a high output MC cartridge. Do not connect it to cartridges other than the ones specified above.

- Read the input and output labels carefully on your record player and phono preamp before making the connection.
- Connect the phono Output of your record player to the phono Input of Crosley P10 Phono Preamp.
- Optional: If there is a ground signal wire on your record player, you can connect it to the GND terminal at the back of the phono preamp prevent signal interference.

Connection to the amplifier

Connect the Output of your Crosley P10 Phono Preamp to the line input on your amplifier, eg. AUX, CD, Tuner, Tape

Connection of power adapter

Check the label on the supplied power adapter to ensure it is in compliance with your country's voltage system before connecting it to the power outlets. Connect the DC end of the power adapter to the INPUT DC jack of the phono preamp before connecting the AC plug into the outlets.

Note:

1. The phono preamp should be connected to a power outlet before powering on your amplifier. Make sure your power amplifier is muted while connecting the phono preamp to avoid damaging your speakers.
2. It might take up to a few seconds for the phono preamp to heat up and if there are some clicks or noise coming from the phono preamp at this time, this is normal.
3. After phono preamp is connected to power source and to your amplifier, slowly increase the volume on your amplifier to make sure the phono preamp is functioning properly.

Technical specifications

Input capacitance/input impedance, MM:	47kohms/120pF *
Gain:	40dB
Output voltage typically:	500mV/1kHz at 5mV/1kHz
Noise floor:	88dB (A weighted)
THD:	<0,04%
Input:	1 pair RCA/phono sockets
Line-level output:	1 pair RCA/phono sockets
Outboard power supply:	18V/500mA DC, suitable for your country's mains supply
Power consumption:	20mA DC
Dimensions W x H x D (D with sockets):	112 x 43 x 56mm (69mm with sockets)
Weight:	340g without power adapter

Trouble Shooting

- No signal on one or both channels:
Check the connections between the record player or power amplifier to the phono preamp to make sure they are firmly connected and connected correctly. Replace the wires if necessary to see they are broken.
- Humming noise:
Connect the ground wire of your record player to the GND jack on the phono preamp.

Limited Warranty for US & Canada

HOW DO I REGISTER MY PRODUCT

Register your product at this link: <http://crosleyradio.com/registration>

WARRANTY POLICY

Every Crosley product we sell is designed to meet and exceed your expectations. We are dedicated to providing excellent quality. However, sometimes electronics products have technical difficulties. Before determining that your product is indeed malfunctioning, please consult our TROUBLESHOOTING tips as well as your user manual for proper usage. If you have product questions outside the scope of the troubleshooting tips and manual instructions, it is best to contact our technical support team for assistance.

Crosley Consumer Support Team: Toll Free in the United States
1.866.CROSLEY (1.866.276.7539)

If you find your unit to be malfunctioning, your warranty covers defects in materials and workmanship for a period of ONE YEAR (for qualified products) from the date of original retail purchase from an authorized Crosley retailer. If a defect exists, Crosley, at its discretion, will:

- Request that the item is returned to the retailer from where it was purchased IF the malfunction occurs within said retailer's standard return period
- Repair the product at no charge using new (or refurbished) parts at their discretion
- Exchange the product with a functional equivalent

WHAT IS COVERED

Crosley Radio (Modern Marketing Concepts Inc.) warrants the electronics products produced by our firm to be free from defects in material and workmanship under normal use for a period of ONE YEAR from the original date of purchase. This warranty is not transferable and is only available for product in the United States and Canada. Units must be sent PREPAID, including proof of purchase, and a check or money order to cover return postage/shipping fees.

If the product is determined to be defective during the warranty period, the unit will be repaired or replaced at Modern Marketing Concepts, Inc.'s sole discretion. This warranty covers manufacturing defects and normal consumer use.

WHAT'S NOT COVERED

Crosley Radio (Modern Marketing Concepts Inc.) does NOT cover damage or failure as a result of abuse, accident, alterations, misuse, neglect, abnormal wear and tear, inadequate maintenance, commercial or unreasonable use, damage caused by power surges, mishandling, accident, acts of God or attempted repair by an unauthorized service agent. Also not covered are cosmetic damages, cords, antennas and consumable items such as batteries, remote controls, etc. This warranty excludes damages resulting from abuse, accident, modifications or other causes not specifically classified as defects in materials and workmanship. Customization of your product voids your warranty.

HOW DO I MAKE A CLAIM

To obtain warranty service, please contact our Crosley US Consumer Support Team toll free in the United States at

1.866.CROSLEY (1.866.276.7539)

DISCLAIMER

This Limited Warranty is the only express warranty made to you and is provided in lieu of any other express warranties or similar obligations (if any) created by any advertising, documentation, packaging, or other communications. EXCEPT FOR THE LIMITED WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CROSLEY RADIO (MODERN MARKETING CONCEPTS INC.) HEREBY DISCLAIMS ALL OTHER WARRANTIES AND CONDITIONS, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL CROSLEY RADIO (MODERN MARKETING CONCEPTS INC.) OR ITS SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR EXEMPLARY DAMAGES ARISING OUT OF THE USE OF THE PRODUCT, INCLUDING, WITHOUT LIMITATION, PROPERTY DAMAGE, LOSS OF VALUE OF THE PRODUCT OR LOSS OF USE OF THE PRODUCT, EVEN IF CROSLEY RADIO (MODERN MARKETING CONCEPTS INC.) HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

FINE PRINT

Your seller is responsible for any malfunctions during their specified return period. This warranty gives you specific legal rights, and you may have other rights that vary by state and jurisdiction. These rights shall not be affected by this limited warranty. This warranty cannot be transferred or reassigned.

There are no express warranties except as listed above. The purchaser's bill of sale is the only proof of warranty entitlement. This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state.

In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio's high standards of quality and workmanship.

CROSLLEY®