



S100A

Bluetooth Enabled Powered Speakers
Instruction Manual



Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 8 p.m., EST, Monday – Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Speakers (Left / Right)
- AC Power Cord
- RCA to 3.5mm Cable
- Speaker Wire

Please contact Crosley customer service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**

 
Specifications

Power	AC 120V~60Hz
Power Consumption	35W
Output Power	30W x 2
Speaker Driver Size	main driver- 4", tweeter – 1"
Impedance	8Ω
Frequency Response	40Hz-20KHz
Total Harmonic Distortion	1% (1KHz, 1W)
Audio Input Sensitivity	500mV
Speaker Dimension	243 x 152 x 190mm

Note:

- *Design and specifications are subject to change without notice.*

Product Description

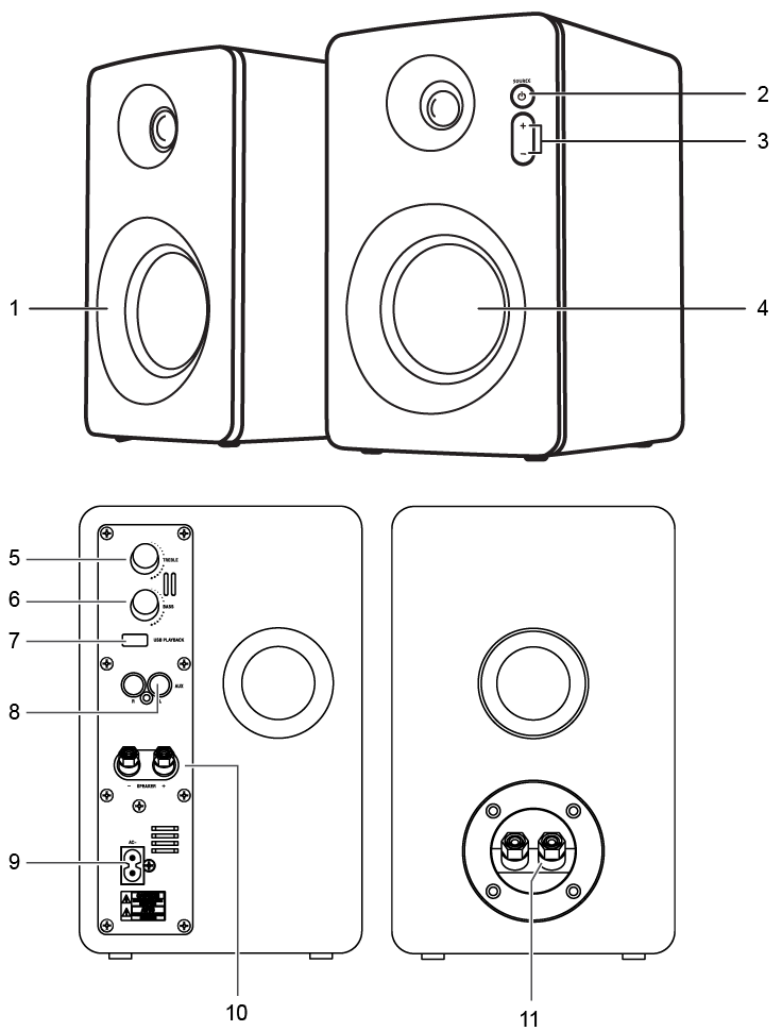


1. Speaker (Left)
2. /Source button
3. VOL+/VOL- button
4. Speaker (Right)
5. TREBLE Knob
6. BASS Knob

7. USB Jack (for SERVICE ONLY)
8. AUX IN Jacks
9. Power Jack
10. Speaker (Right) Terminals
11. Speaker (Left) Terminals

Connections



Speaker connection

 - Untighten the speaker terminals and use the speaker wire (included) to connect the speaker terminals between the left and right speakers as shown.
- Make sure the + and - terminals from one speaker are connected to their corresponding one on the other speaker correctly.
- Tighten the speaker terminals again to make a solid connection.

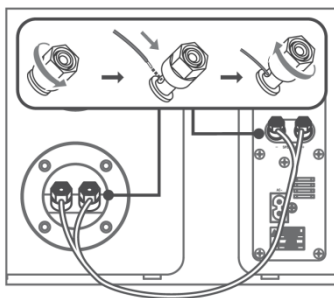


Aux Connection

  - Use a RCA to RCA audio cable (not included) to connect the RCA output jacks of your device (eg. TV) to the AUX IN Jacks of the speaker.
- Use a RCA to 3.5mm audio cable (included) to connect the headphone jack or auxiliary output jack of your device (eg. phone) to the AUX IN Jacks of the speaker.

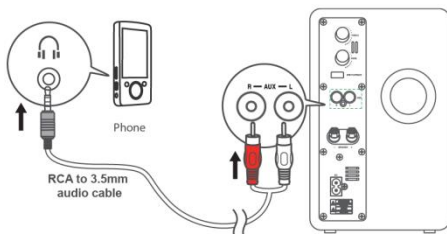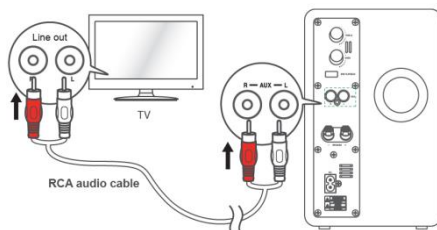

Power Connection

 - Ensure the power outlet's voltage corresponds to the input voltage of the speakers'.
- Connect the power cord to the speaker and then into the power outlet.

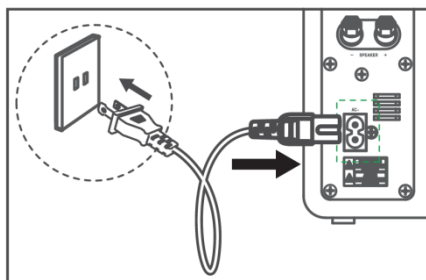

General Operation

Standby/ON

When you first connect the power cord to the power outlet, the speakers will be in Standby mode (🔌 indicator is Red).

- Press the 🔌/SOURCE button to turn on the speakers.
- Press and hold the 🔌/SOURCE button again to turn the speakers back to STANDBY mode.

Note:

- If there is no audio input (Stop or Pause) in either AUX or Bluetooth mode for over 15 minutes, the speakers will automatically switch to Standby mode.
- When the speakers are turned back on, they will resume the last mode before going to Standby.

Mode Selection

Press the 🔌/SOURCE button to switch between **AUX** and **Bluetooth** modes.

- AUX mode: 🔌 indicator is Green.
- Bluetooth mode: 🔌 indicator is Blue.

Volume Adjustment

- Press the VOL +/- button to adjust the volume.
- While adjusting the volume, the 🔌 indicator flashes quickly.
- When the volume reaches its maximum or minimum level, the 🔌 indicator will only flash once.

BASS / TREBLE Adjustment

- Rotate the BASS knob at the back to adjust the bass level, the 🔌 indicator will flash quickly.
- Rotate the TREBLE knob at the back to adjust treble level, the 🔌 indicator will flash quickly.

AUX Operation

1. Press the 🔌/SOURCE button to select AUX mode, 🔌 indicator will be Green.
2. Play music from your audio device to the speakers.

Bluetooth Operation

1. Press the  /SOURCE button to select the Bluetooth mode,  indicator will be Blue and flashing.
2. Turn on the Bluetooth function of your audio device, search for “Crosley S100A” and pair it.
3. Once your device is successfully connected with the speakers, you will hear a short confirmation sound from the speakers and  indicator will be solid Blue.
4. Play and stream music from your device to the speakers.

Note: Bluetooth version - 3.0

Troubleshooting

There is no power

- Power cord is not properly connected.
- No power at the power outlet.

There is no sound from the speakers

- Volume is muted or too low on either the speakers or the audio device.
- Loose cable connection.
- Wrong input mode is selected.

No response from the speakers

- Disconnect and reconnect the power of the speakers.

The speakers could not be connected to my Bluetooth device

- The device's Bluetooth function is not turned on.
- The speakers are actively connected to another Bluetooth device.
Disconnect that one first.

FCC Statements

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.