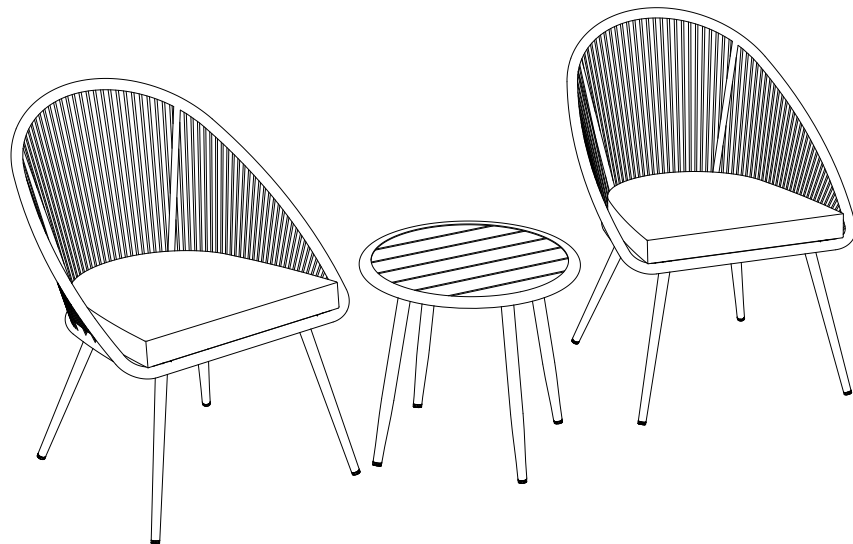 


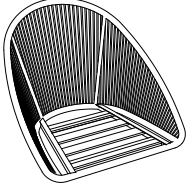 
 
 
 

 
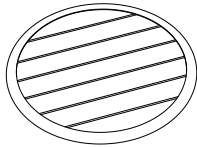 
 
CROSLEY

FURNITURE




Armchair and Coffee Table
CO7325



PART LIST

A 	B 	C 	D 	E 
Seat Panel 2 PCS	Left Front Leg 2 PCS	Right Front Leg 2 PCS	Left Back Leg 2 PCS	Right Back Leg 2 PCS
F 	G 	H  (coffee table)		
Seat Cushion 2 PCS	Top Panel 1 PC	Leg 4 PCS		

 
HARDWARE LIST

#1  M6*15mm	#2  M6mm	#3  M6mm
Bolt 32 PCS (Extra 2)	Flat Washer 32 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Lay seat panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach Legs (parts B, C, D & E) to seat panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

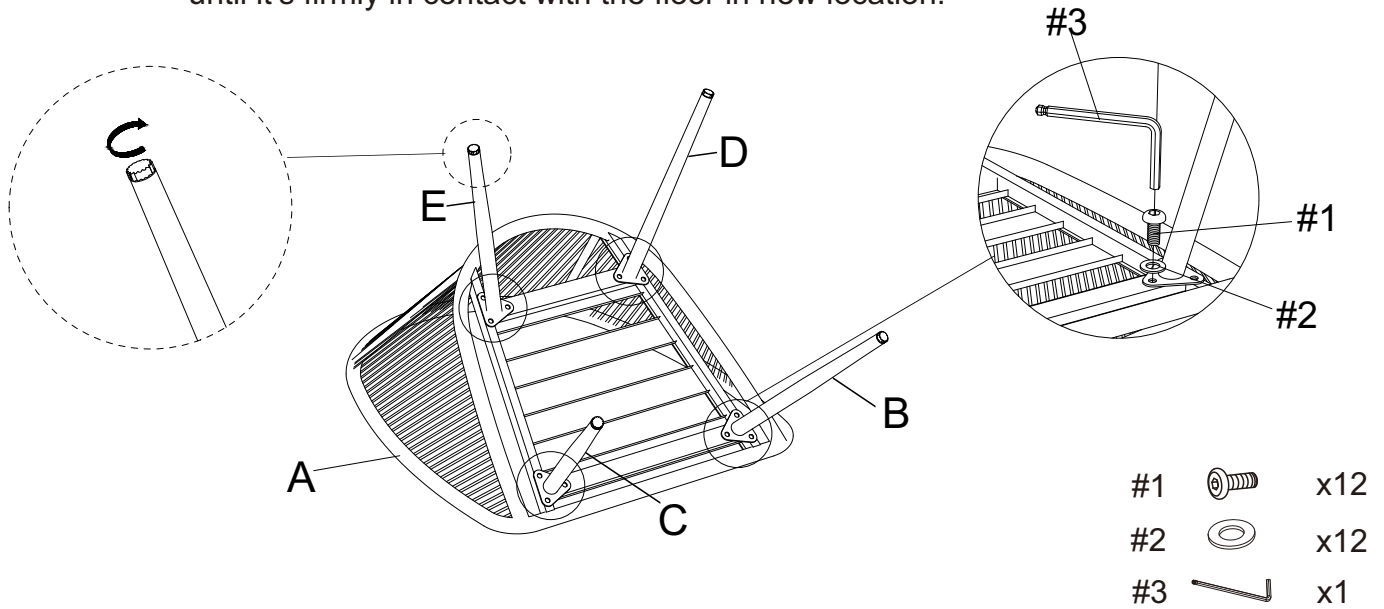 It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



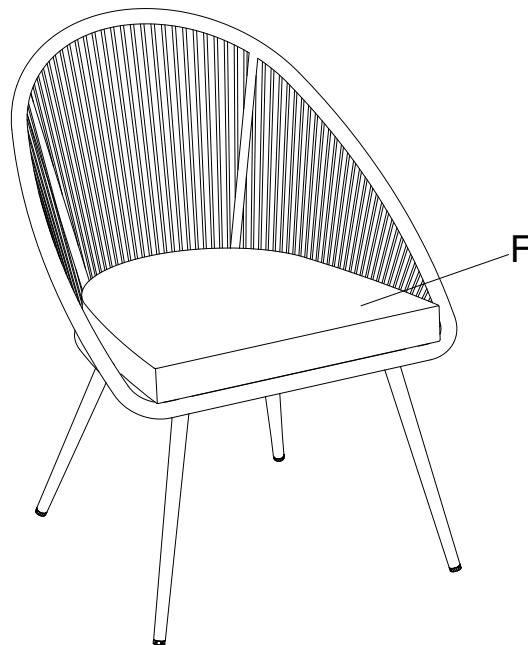 
Step 2. Carefully turn unit upright. Place seat cushion (part F) as shown below. Repeat steps 1-2 to assemble remaining chair.



Step 3. Lay top panel (part G) upside down on a soft flat surface, such as carpet, as shown below. Attach legs (part H) to top panel (part G) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.

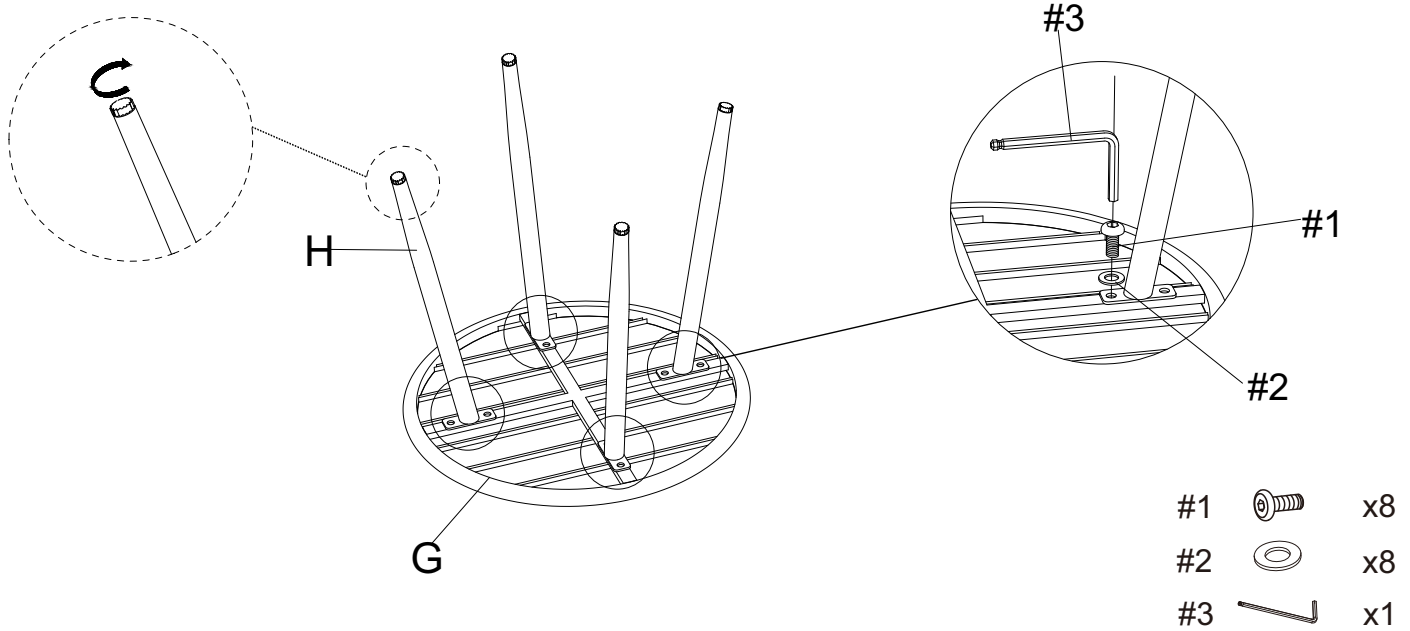 It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



Step 4. Carefully turn unit upright.

