


 

 
 
CROSLEY

FURNITURE


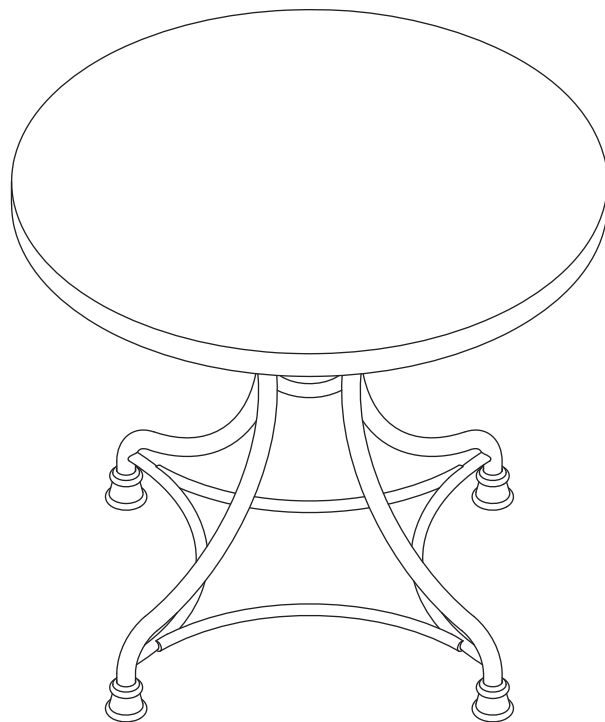


Outdoor Bistro Table CO6271



PART LIST


A	B	C	D
			
Top Panel 1 PC	Leg 4 PCS	Circle Frame 1 PC	Bottom Frame 1 PC

  HARDWARE LIST

#1	#2	#3	#4
			
1/4' x 1/2"L	1/4' x 1"L		
Bolt 12 PCS (Extra 1)	Long Bolt 4 PCS (Extra 1)	Washer 16 PCS (Extra 1)	Allen Wrench 1 PC


Step 1. Carefully lay top panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach legs (part B) to top panel (part A) using bolts (part #1), washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

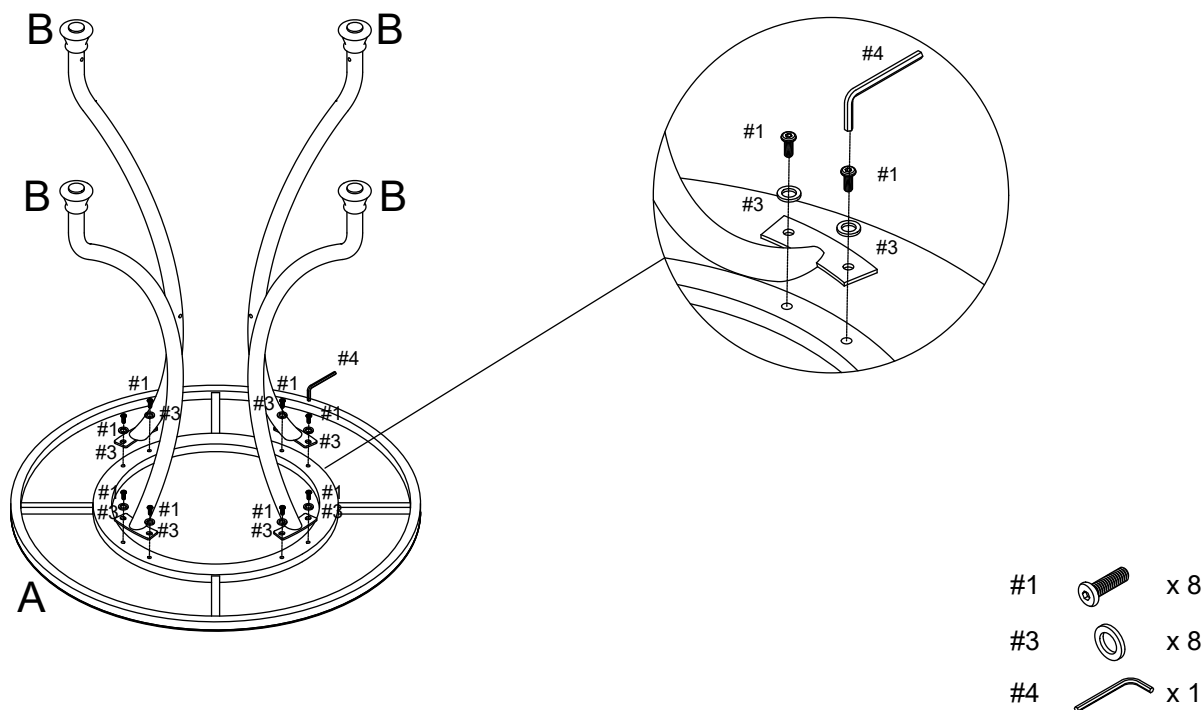


Step 2. Attach circle frame (part C) to legs (part B) using long bolts (part #2), washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

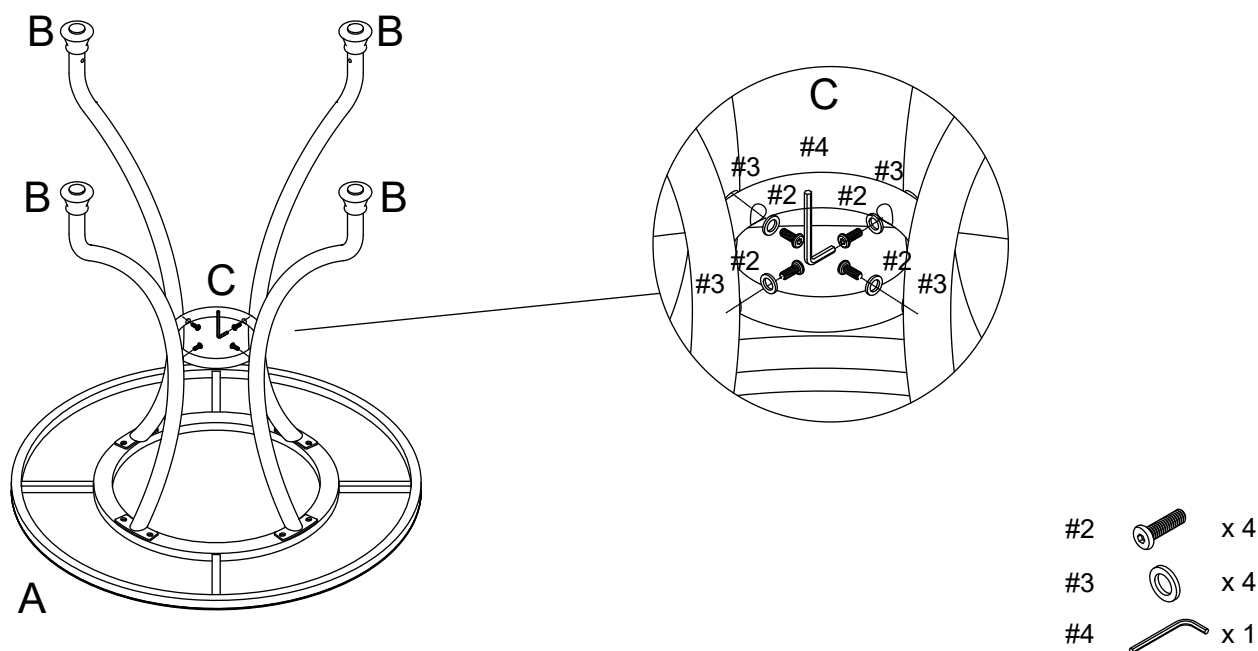

Step 3. Attach bottom frame (part D) to legs (part B) using bolts (part #1), washers (part #3) and allen wrench (part #4).

NOTE: Please fully tighten all bolts at this time.
NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

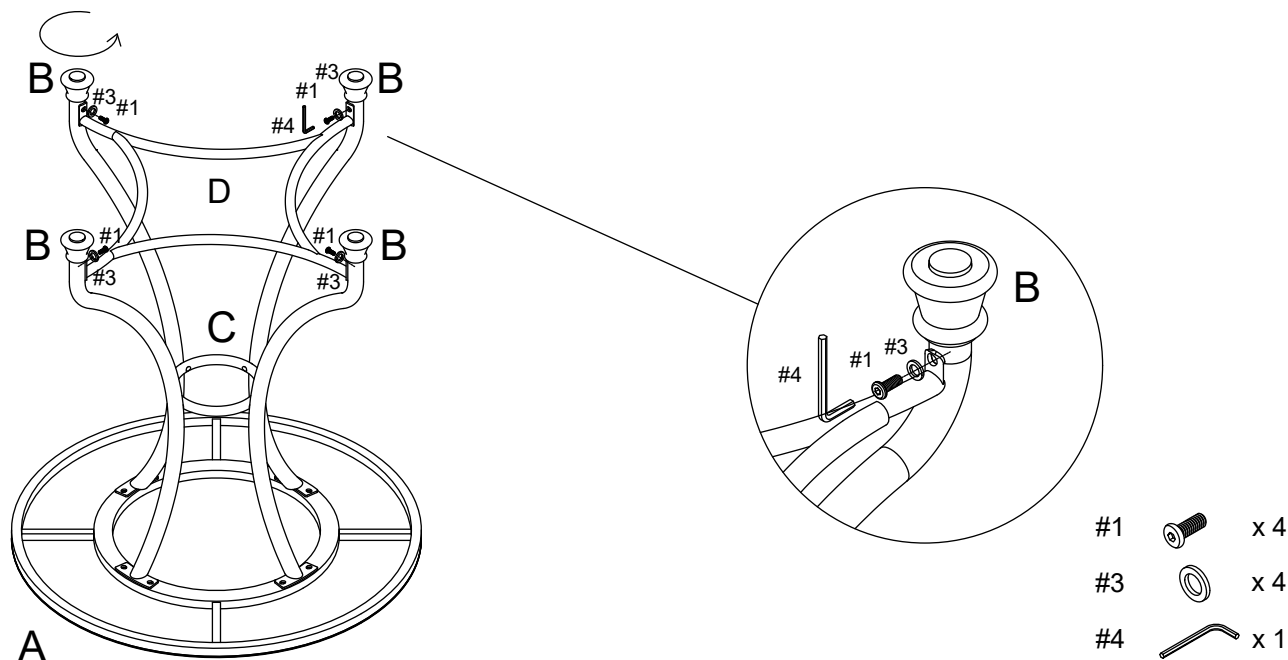

Step 4. Carefully turn unit upright.

