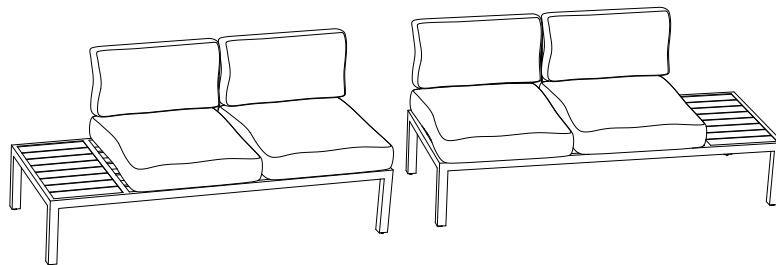


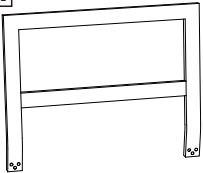
 
 
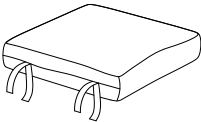
 
CROSLEY

FURNITURE

 


Outdoor 2PC Loveseat Set CO6320



PART LIST

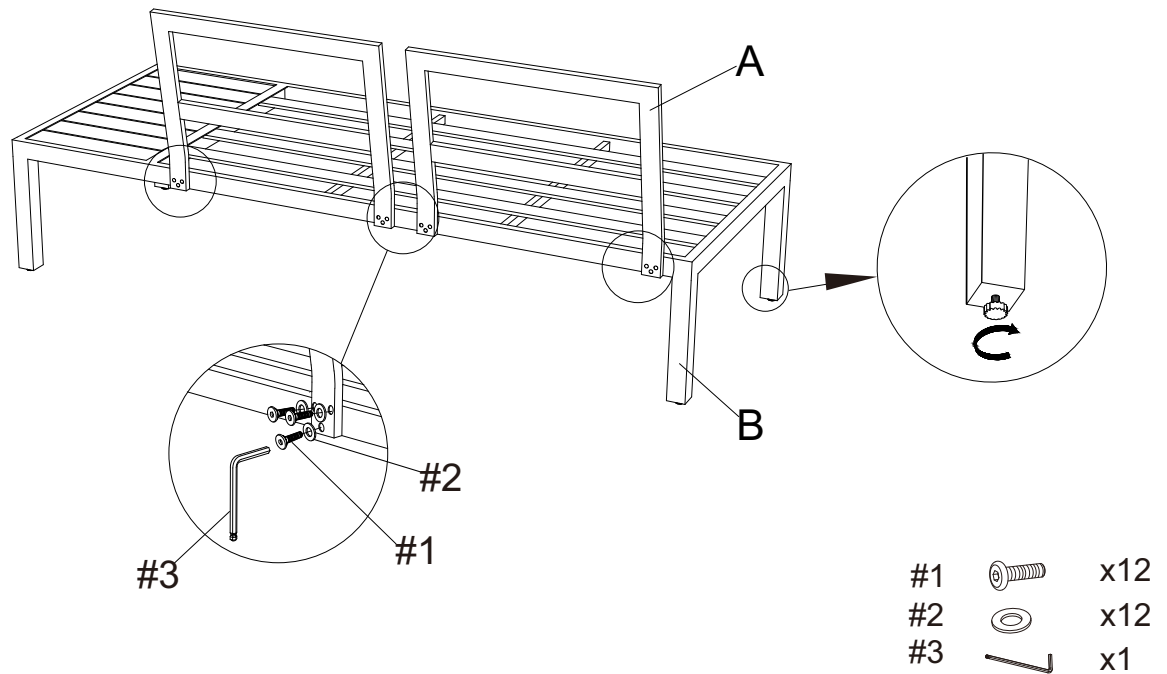
A 	B 	C 	D 	E 
Back Panel 4 PCS	Right Seat Panel 1 PC	Left Seat Panel 1 PC	Seat Cushion 4 PCS	Back Cushion 4 PCS

HARDWARE LIST

#1 	#2 	#3 
M6*35mm	M6mm	
Bolt 24 PCS (Extra 1)	Flat Washer 24 PCS (Extra 1)	Allen Wrench 1 PC

Step 1. Lay seat panel down on a soft flat surface, such as carpet, as shown below.
 Attach back panels (part A) to right seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.
 It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



Step 2. Add seat cushions (part D) and back cushions (part E) as shown below.
 Repeat steps 1-2 to assemble left loveseat.

