


# CLEANING & CARE

## FOR BUTCHERBLOCK TOPS

### CLEANING INSTRUCTIONS



For cleaning wipe down the top with warm, soapy water. The top should then be dried with a rag or towel to ensure that no water remains standing on the surface. Most normal household cleaners can also be used to clean the top.\*

If the top should stain -as a result of red wine, for example- most can be easily removed with fingernail polish remover or chlorine bleach, with no damage to the finish.

*\*Exceptions: Do not use ammonia-based products, as they can cloud the finish. Abrasive cleansers and scouring pads can scratch the top.*



*Tops must be dried after cleaning to ensure that no water remains. Leaving a wet surface can cause severe damage to the tabletop.*

### MAINTENANCE AND CARE



While NPS Butcherblock Tops feature an exceptional finish, both from an environmental and a durability standpoint, **NO FINISH IS WATERPROOF.**

To keep the top pristine, treat the top like a piece of non-laminated furniture. Based on the frequency that your tops are washed, **BUTCHERBLOCK TOPS REQUIRE REFINISHING.** Refinishing can be done fairly quickly using a rag and the right product.

#### STANDARD SATIN FINISH



*Urethane-Based  
Satin Finish*

*Refinishing can be done fairly quickly using a rag and Emmet's Good Stuff Gel Urethane*

Recommended to re-finish every 2-3 weeks depending on usage.



#### CUSTOM GLOSSY FINISH



*Varnique  
Semi-Gloss Finish*

*Refinishing can be done fairly quickly using a rag and Boos® EZ-DO Finish*

Recommended to re-finish every 3-4 weeks depending on usage.

