



$$q_v = k \times \sqrt{\Delta P_m}$$


ROL	Tuloilmasekrori Tillufts sektor Supply sektor	k			
		1500	3000	4500	6000
160	45	6,3	12,6	15,1	15,1
	90 (2x45)	12,6	15,1	15,1	15,1
	180	15,1	15,1	15,1	15,1
200	45	7,9	15,8	23,6	25,2
	90 (2x45)	15,8	25,2	25,2	25,2
	180	25,2	25,2	25,2	25,2
250	45	9,8	19,5	29,3	31,3
	90 (2x45)	19,5	31,3	31,3	31,3
	180	31,3	31,3	31,3	31,3
315	45	13,0	26,0	39,0	41,7
	90 (2x45)	26,0	41,7	41,7	41,7
	180	41,7	41,7	41,7	41,7
400	45	17,9	35,8	53,8	71,7
	90 (2x45)	35,8	71,7	71,7	71,7
	180	71,7	71,7	71,7	71,7

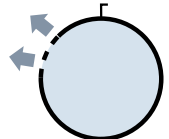


45°

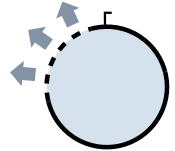




90°

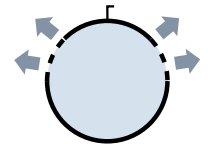

2 x 45°

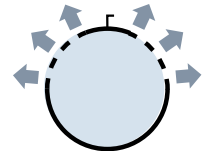

180°

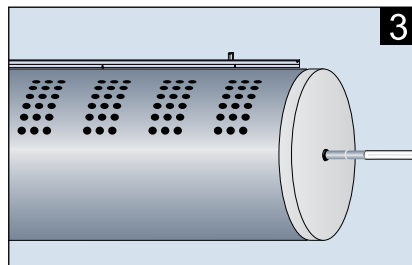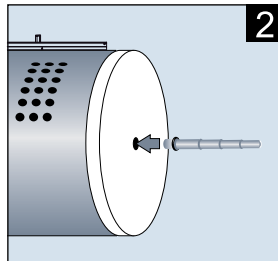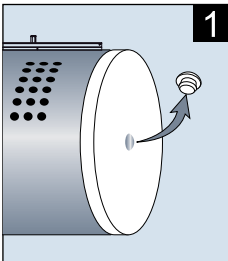

$$q_v = k \times \sqrt{\Delta P_m}$$

## ROL-S / ROX-S

ROL-S/ROX-S		k				
		125	160	200	250	315
Säätöasento Injusteringsläge Adjustment settings	4,5-5	20	33	49	90	167
	4	18	29	42	76,5	137
	3,5	15	24	33	59,5	110
	3	13	20	27	47,3	88
	2,5	10,5	16	21	38	71
	2	9	13,2	17,2	31,4	55
	1,5	7,5	10,4	13,9	26	44
	1	6	8,4	10,6	21,3	35
	0,5	5	6,5	8,2	16,8	27
	0	4	4,9	5,6	14	21

Säätösuunta • Adjustment direction • Rotationsriktningen

