



ASENNUSOHJE

SÄÄTÖOHJE

HUOLTO-OHJE

MONTERINGSANVISNING

INJUSTERINGSANVISNING

SKÖTSELANVISNING

INSTALLATION

ADJUSTMENT







MAINTENANCE

ИНСТРУКЦИЯ ПО УСТАНОВКЕ

ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ

ИНСТРУКЦИЯ ПО УСТАНОВКЕ

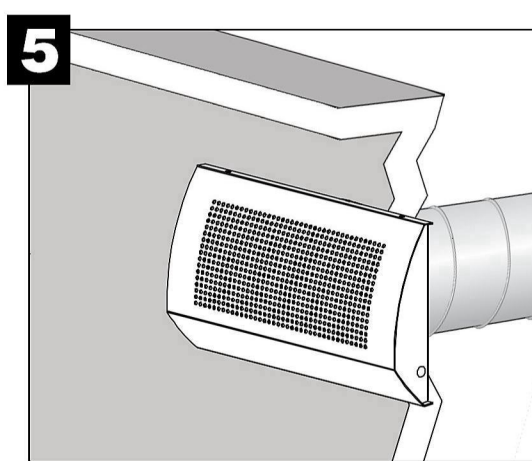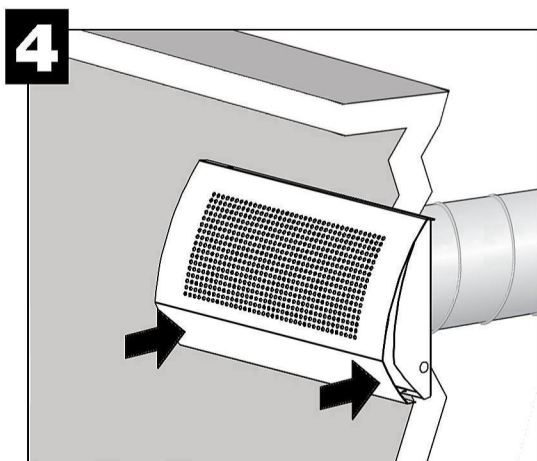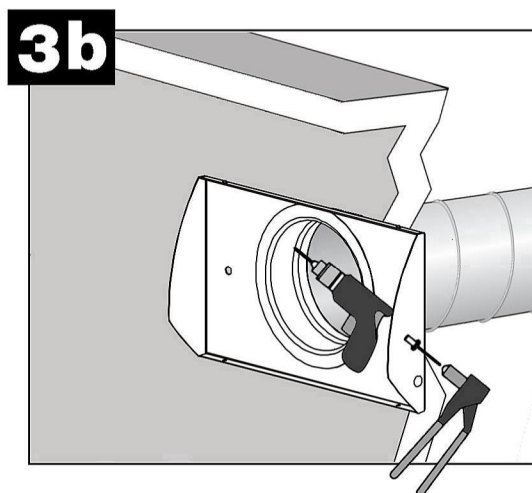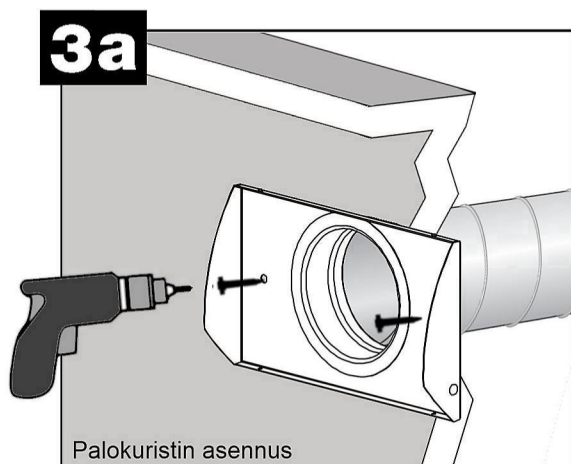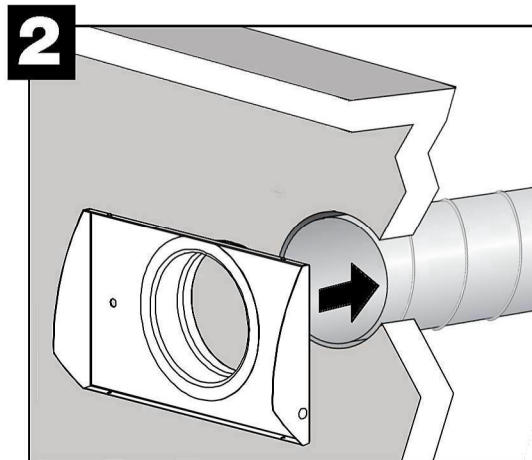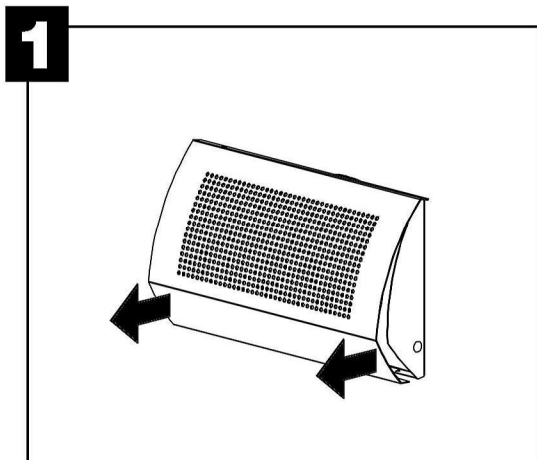


Huom!

Savunrajoittimien asennusohjeet ja asennustodistus löytyy osoitteesta www.climecon.fi






ИНСТРУКЦИЯ ПО НАСТРОЙКЕ

$$q_v = k \times \sqrt{\Delta p_m}$$

TINO		k				
		100P	125P	125	160	200
X*Y		12*37=444	12*37=444	17*38=646	23*47=1081	29*55=1595
Suljettu riviä Stängda rad Closed rows	0	3,8	3,8	5,6	9,2	14,2
	2	3,2	3,2	4,9	8,4	13,2
	4	2,5	2,5	4,3	7,6	12,2
	6	1,9	1,9	3,6	6,8	11,3
	8	1,3	1,3	2,9	6	10,3
	10	0,6	0,6	2,3	5,2	9,3
	12			1,6	4,4	8,3
	14				3,6	7,3
	16				2,8	6,4
18					5,2	

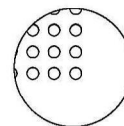

TINOq		k		
		100	125	160
A		13*30=390	16*39=624	21*50=1050
Suljettu riviä Stängda rad Closed rows	2	3,7	5,9	9,5
	4	3,2	5,2	8,6
	6	2,6	4,4	7,7
	8	2,0	3,7	6,8
	10	1,4	3,0	5,9
	12	0,9	2,2	5,0
	12		1,5	4,1

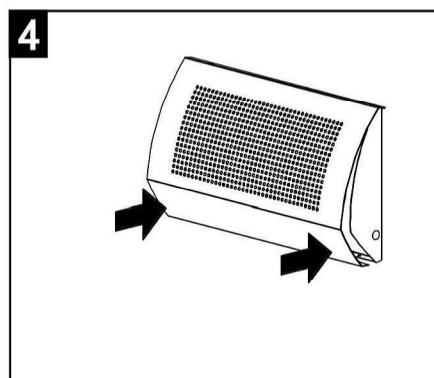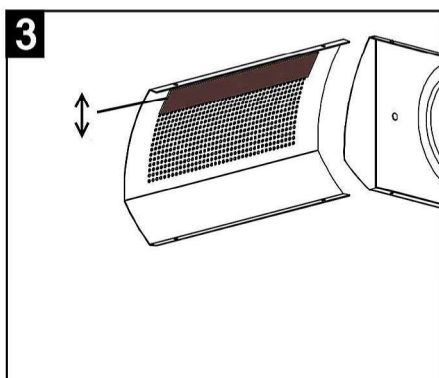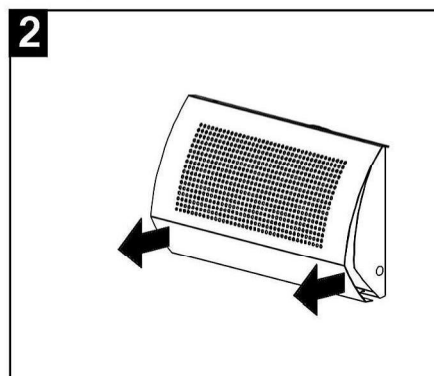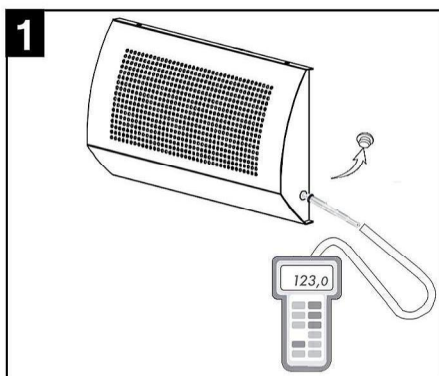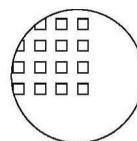

РУКОВОДСТВО ПО ТЕХНИЧЕСКОМУ ОБСЛУЖИВАНИЮ

