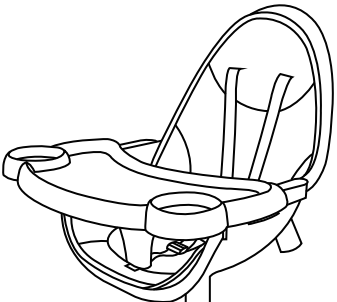 
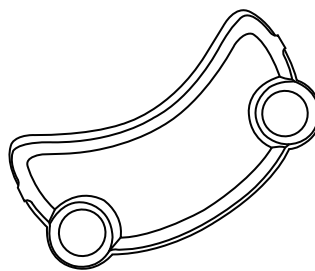 
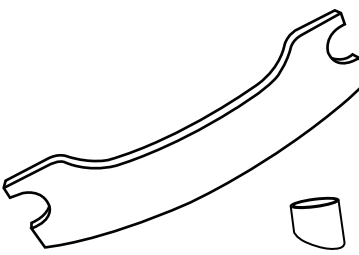 
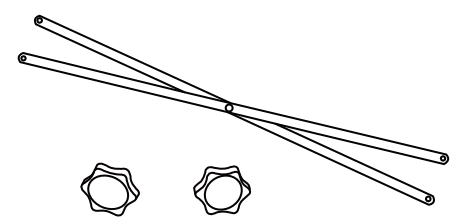 
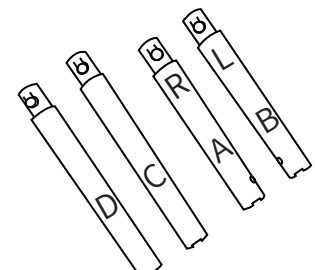 
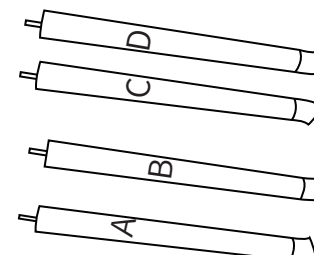 


Please confirm the package and accessories are complete and make sure there is no missing parts.

### Parts list:

 <p>Seat Unit*1</p>	 <p>Tray with cover plate*1</p>
 <p>Shorter leg cover*4 Footrest*1</p>	 <p>Bolts*2 Fixed connector*1</p>
 <p>Shorter legs A&amp;B&amp;C&amp;D</p>	 <p>Longer legs A&amp;B&amp;C&amp;D</p>

## WARNING

Highchair Condition:

- **WARNING: FALL HAZARD:** Children have suffered severe head injuries including skull fractures when falling from high chair. Fall can happen suddenly if child is not restrained properly.
- **WARNING:** Always use the restraint systems, and adjust to fit snugly.
- **WARNING:** Tray is not designed to hold child in high chair.
- **WARNING:** Stay near and watch child during use the high chair.
- **WARNING:** Use ONLY with a child that is able to hold their head up unassisted.
- **WARNING:** NEVER use on an elevated surface.
- **WARNING:** Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

 
## FLOOR SEAT CONDITION

- **WARNING: FALL HAZARD:** Infants have suffered skull fractures falling while in and from floor seats.
- **WARNING:** Use Only on the floor.
- **WARNING:** NEVER use on an elevated surface.
- **WARNING:** ALWAYS use restraints, and adjust to fit snugly.
- **WARNING:** Tray is not designed to hold child in floor seat.
- **WARNING:** NEVER lift or carry child in floor seat.
- **WARNING:** Use ONLY with a child that is able to hold their head up unassisted.
- **WARNING:** ALWAYS keep child in view while in product.
- **WARNING: DROWNING HAZARD:** Infants have drowned when floor seat has been placed in a bath tub or pool.
- **WARNING:** NEVER use in or near water.


## IMPORTANT

- High chair is intended for children from 6 months to 3years or maximum weight of 15kg.


3. Assemble footrest: Place the footrest between front short legs (1.5), please note there is a nut in the leg and screw the bolt into the nut until it is fixed (1.6).

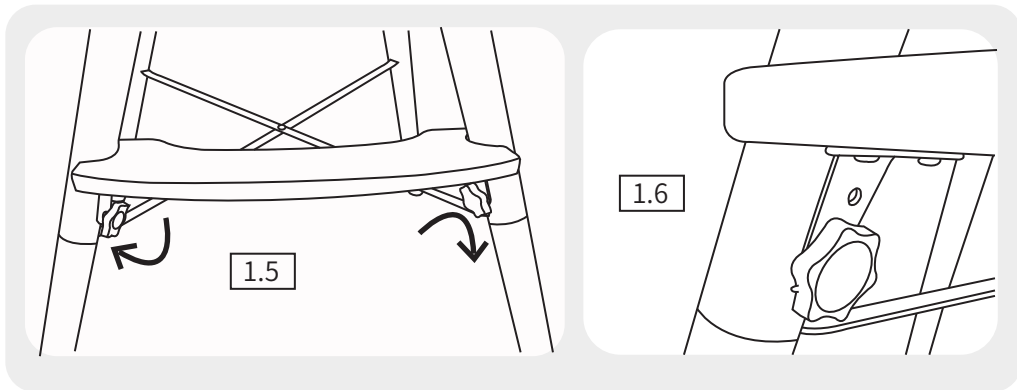

 
4. Assemble Tray: Position the tray over the armrest, holding the latch mechanism at both sides of the tray, at the same time sliding the tray onto the chair with the desired position, the release the latch and move the tray until a click sound is heard.

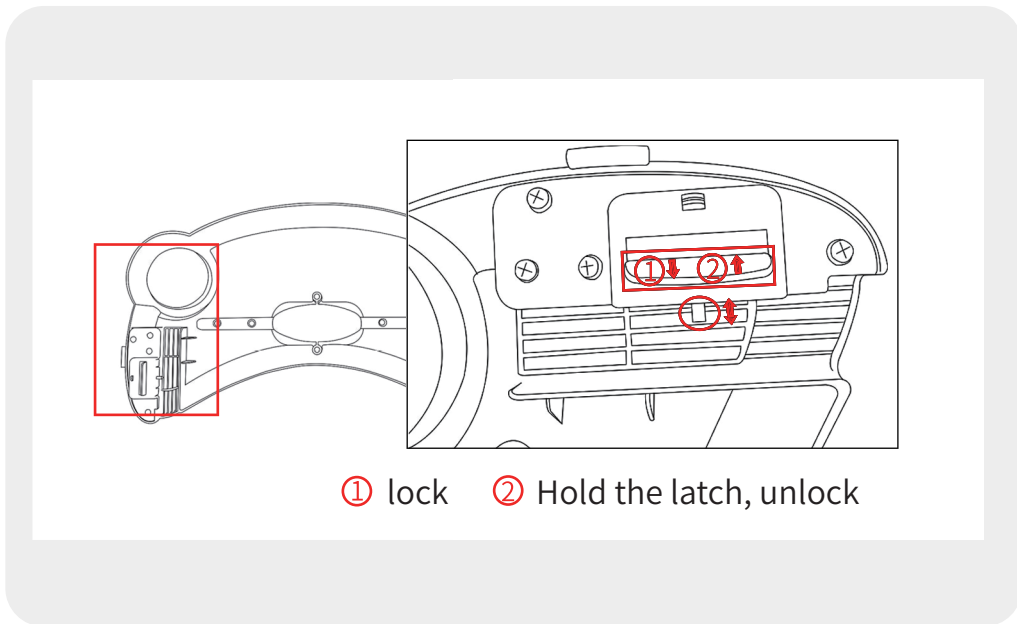

 
5. The tray can be set in four position, using the latches at both sides to adjust the position, make sure you heard click sound after change the position.

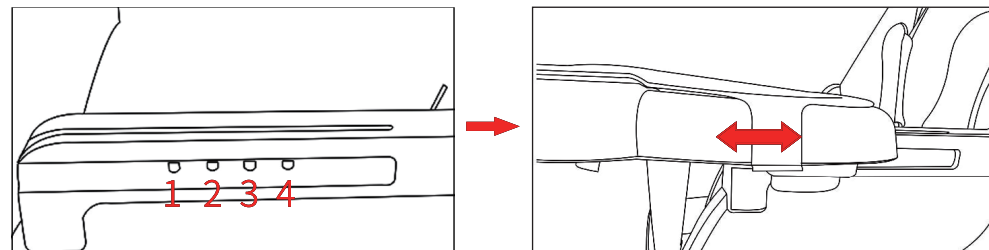

 6. In order to wash the tray, you may remove its cover plate by releasing its two catches and three blocks.

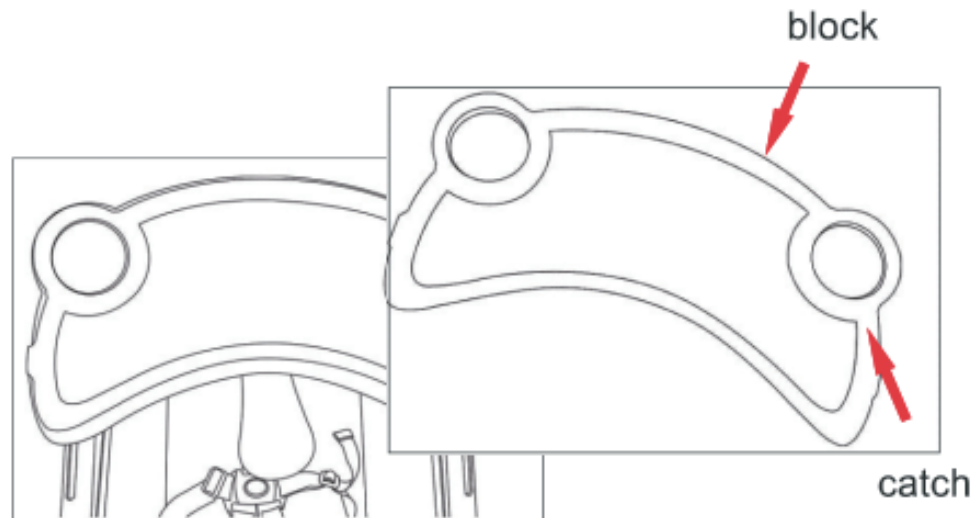

 7. Baby Highchair change to floor seat: Disassemble the four longer legs and fixed connector. Then put the four Shorter leg covers in the bottom of legs.

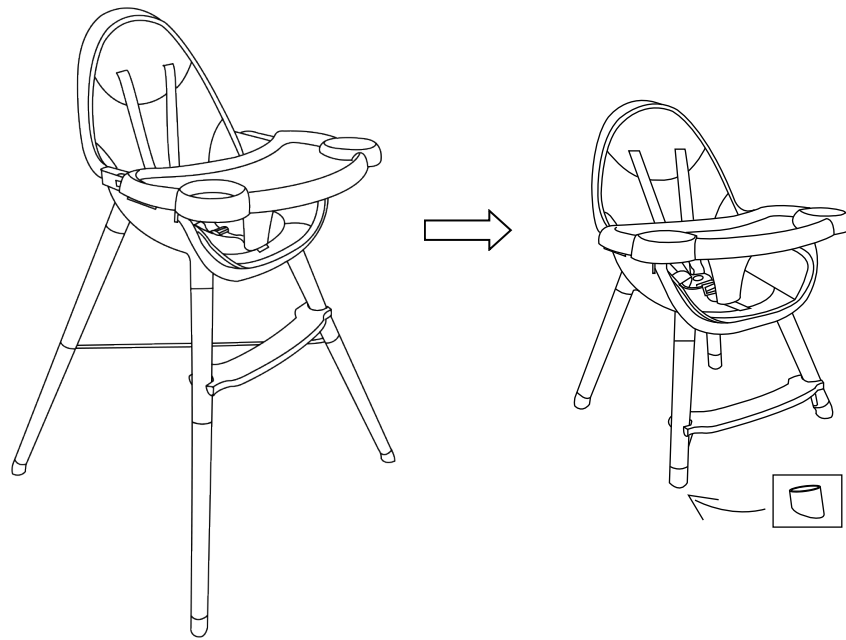


### 8. Harness system Adjustment

(1) To buckle the safety belts, connect the shoulder and waist belts and then snap them into the crotch belts clasp.

To unbuckle the safety belts, press the button in the middle of the clasp.


(2) Sliding adjusters are fitted and should be carefully adjusted so the harness fits your child comfortably.

 (3) The safety belts can be removed for cleaning purposes by sliding the end buckle of belts through the five slots.

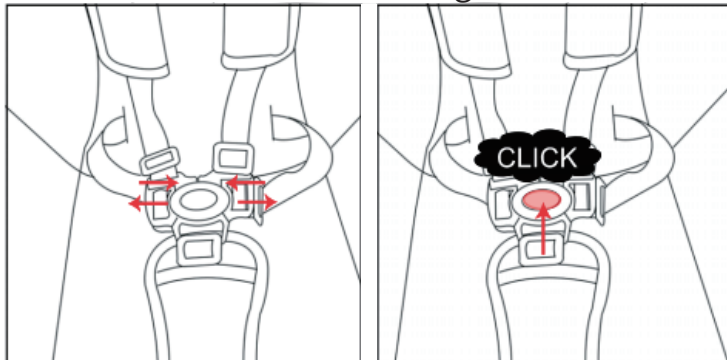


## Assembly

 1. Assemble the four shorter legs: Insert the shorter leg A & B & C & D into the exact hole at the bottom of the chair until the pin clicks into place. (1.1)

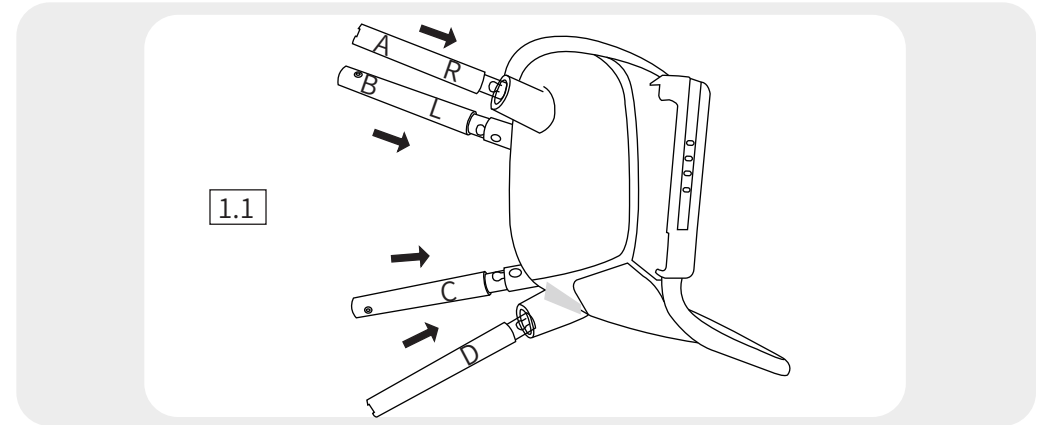

 2. Assemble four longer legs with fixed connector: Please put one side of fixed connector into groove at the bottom of short leg A (1.2), then screw the longer leg A into the shorter leg A until it is fixed (1.3). Connect short leg B with longer leg B, short leg C with longer leg C, short leg D with longer leg D in the same way.

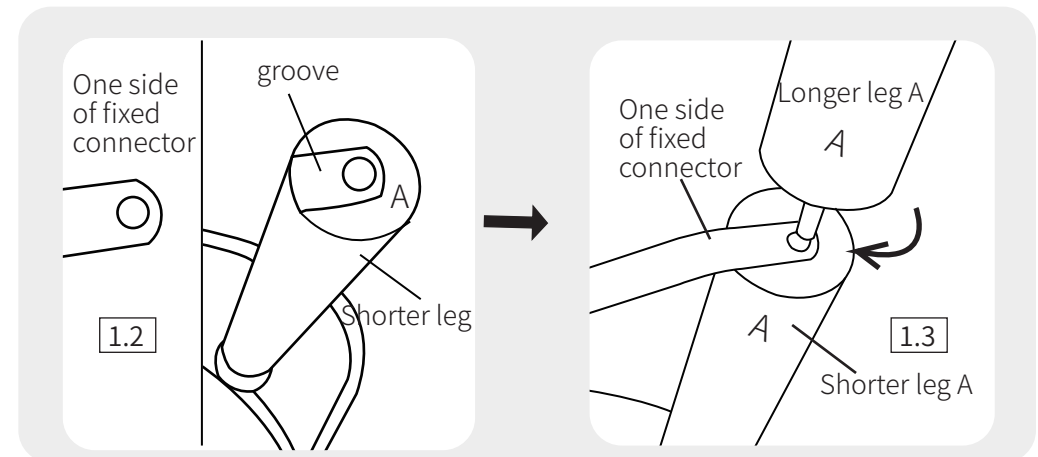

- Keep all small parts and packaging materials for this product away from babies, otherwise they may pose a choking hazard.
- The tray alone does not guarantee the safety of your child.
- Never move the product with your child seated in it.
- Do not allow other children to play unsupervised near the product or to climb on it.
- Do not use the product for more than one child at a time.
- Do not place the product near windows or walls where cords, curtains or other objects may be used by the child to climb out of the product or could represent choking or strangling hazards.
- Be aware of the risk of open fire and other sources of strong heat in the vicinity of the product.
- Always place the product on a horizontal, stable surface when the child is seated in it. Never place the product near stairs or steps.

## MAINTENANCE

Keep the highchair in a dry place.

Do not leave the highchair in the sun for a long time, it may change the color of the materials and fabric.

Regular check all parts of the highchair to ensure that they are operating correctly.

 
Do not use the product if any part is broken, torn or missing.

Only replacement parts supplied or recommended by the manufacturer should be used.

## CLEANING

Clean the fabric cover with a soft cloth soaked in water or a neutral detergent. Do not bleach, do not dry clean. Clean the plastic parts with a soft cloth soaked in water. Never use abrasive detergents or solvents. If the highchair comes into contact with water, dry the metal parts to prevent the formation of rust.

**IMPORTANT! READ ALL INSTRUCTIONS  
CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

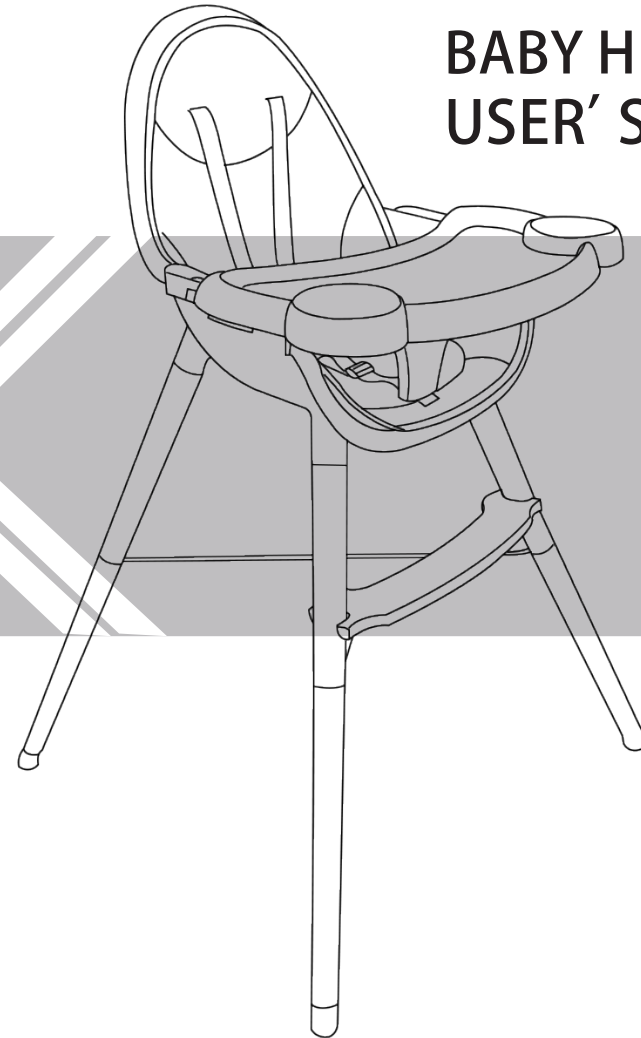

## BABY HIGHCHAIR USER'S MANUAL

If you have any questions or problems,  
Please contact us at [support@winnprime.com](mailto:support@winnprime.com)  
We will help you resolve it when we receive your email.  
We guarantee a Satisfied Solution to you.