LINSY 林氏家居

五金表/Hardware list

部件表/Parts List

安装示意图/Assembly Instruction

产品名称 Model NO.	BY037-A/BY037-B
产品规格 Specification	590*645*920-1015
安装工具 Tool	安装人数Installer

















Castor

(D) *1

气压棒

Pneumatic rod





 








内外六角耐落螺丝8*30 Inner and outer hexagon drop screws8*30 Flat head hexagon socket head drop resistant





中心座

Center seat

A

(F) *6

 
内外六角耐落螺丝8*25

Inner and outer hexagon drop screws8*25

扳手 Wrench








编号NO.	名称Name	规格 Specification	数量QTY	材质Material
1	靠背 Backrest		1	海绵+PU+多层板 Sponge+PU+Multilayer board
2	座垫 Cushion		1	海绵+PU+多层板 Sponge+PU+Multilayer board
3	左扶手 Armrest(L)		1	铁 Iron
4	右扶手 Armrest(R)	7	1	铁 Iron
(5)	底盘 Tray	~	1	铁 Iron

BY037-A/BY037-B


安装方法/Installation method

STEP 1

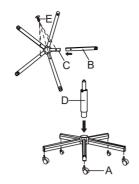

如图将五爪B插入中心座C, 使用椅脚螺丝E固定然后把脚轮A分别装入椅脚的五个脚孔, 再将气压棒D装入椅脚的中心孔 Insert the foot tube B into the center seat C as shown in the figure, fix it with the chair foot screw E, then install the caster A into the five foot holes of the chair foot, and then install the air pressure rod D into the center hole of the chair foot


STEP 2

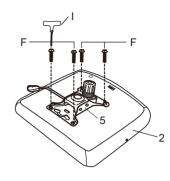

如图安装底盘,依次锁上四颗底盘螺丝F,螺丝全部锁入后用扳手加固锁紧

Install the chassis as shown in the figure, and lock four chassis screws F in turn. After all the screws are locked in, tighten them with a wrench

STEP 3

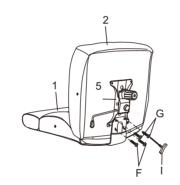

如图将靠背和坐垫连接,上端锁入螺丝G,下端锁入螺丝F,螺丝全部锁入后用扳手加固锁紧 Connect the backrest with the cushion as shown in the figure. Lock the screw G at the upper end and the screw F at the lower end. After all the screws are locked, tighten them with a wrench

STEP 4



如图将左扶手右扶手锁入两颗螺丝H,螺丝全部锁入后用扳手加固锁紧

As shown in the figure, lock the left armrest and the right armrest with two screws H. After all the screws are locked, tighten them with a wrench

STEP 5



如图将左扶手及右扶手锁入的螺丝上,依次盖上闷盖J固定

As shown in the figure, lock the left armrest and the right armrest onto the screws, and cover the J for fixation

STEP 6

