

LINSY 林氏家居

五金表/Hardware list



部件表/Parts List

安装示意图/Assembly Instruction


产品名称 Model NO. UB2M-A 1.8m高脚电视柜

产品规格 Specification 1800*398*650mm

安装工具 Tool 安装人数 Installer

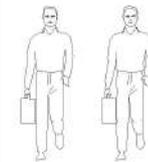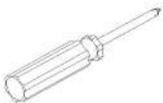

注：为保证设计效果，部分尺寸为定制尺寸，不影响使用。

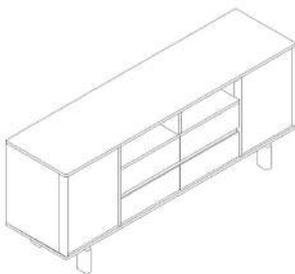


(A)* 77 二合一螺杆 2-in-1-screw	(B)* 77 大三合一锁饼 Three-in-one large lock	(C)* 32 木榫08x30mm wood tenon	(D)* 4 铰链-大弯缓冲门铰 Great bend hinge
(E)* 72 自攻螺丝M3.5x14mm Self-tapping screw	(F)* 2 反弹器 Buffer	(G)* 8 自攻大扁M4*10mm Self tapping flat screws	(H)* 4 穿线孔盖 Plastic cover
(I)* 13 背板扣 Bunk Plate Backle-White	(J)* 1 夹板条 splint strip	(K)* 4 透明防滑PVC胶塞 Rubber stopper	(L)* 1 调节五金脚-M8*30 Adjust hardware foot
(M)* 4 锤头-M8x15mm Bitmer bit	(N)* 4 斜边十字螺杆-M8x70 bevel cross screw	(O)* 4 三节滚珠导轨-10" three-section ball rail	(P)* 1 斜边十字螺杆-M8x40 bevel cross screw
(Q)* 1 家具防倒器白色 Anti-fall device			
(25) 上中侧板 Upper middle side panel	367*130*15	1	刨花板 Particle Board

编号NO.	名称Name	规格(mm) Specification	数量QTY	材质Material
①	面板Top panel	1800*398*15	1	刨花板 Particle Board
②	底板Bottom board	1800*398*15	1	刨花板 Particle Board
③	左侧板Side board(L)	455*352*15	1	刨花板 Particle Board
④	右侧板Side board(R)	455*352*15	1	刨花板 Particle Board
⑤	右侧柱Side column(R)	455*45*15	2	橡胶木 Rubber wood
⑥	左侧柱L side pillar	455*45*15	2	橡胶木 Rubber wood
⑦	左中侧板Middle side board(L)	455*331*15	1	刨花板 Particle Board
⑧	右中侧板Middle side board(R)	455*331*15	1	刨花板 Particle Board
⑨	中侧板Middle side board	310*336*15	1	刨花板 Particle Board
⑩	层板Shelf	906*367*15	1	刨花板 Particle Board
⑪	背板Back board	1778*232*5	2	纤维板 Fiberboard
⑫	前拉条Front brace	906*58*15	1	刨花板 Particle Board
⑬	左上抽屉面板 Upper drawer's panel (L)	450*142*15	1	刨花板 Particle Board
⑭	右上抽屉面板 Upper drawer's panel (R)	450*142*15	1	刨花板 Particle Board
⑮	左下抽屉面板 Bottom drawer's panel (L)	450*142*15	1	刨花板 Particle Board
⑯	右下抽屉面板 Bottom drawer's panel (R)	450*142*15	1	刨花板 Particle Board
⑰	抽屉侧板Drawer's sideboard	295*110*15	8	刨花板 Particle Board
⑱	抽屉后板Drawer's Back board	420*110*15	4	刨花板 Particle Board
⑲	抽屉底板Drawer's Bottom board	400*305*5	4	纤维板 Fiberboard
⑳	前立水Front apron	1440*40*20	1	橡胶木 Rubber wood
㉑	侧立水Side apron	238*40*20	2	橡胶木 Rubber wood
㉒	脚Foot	160*70*35	4	橡胶木 Rubber wood
㉓	中脚Middle foot	150*30*30	1	橡胶木 Rubber wood
㉔	门板Door board	451*412*15	2	刨花板 Particle Board

UB2M-A1. 8m高脚电视柜

产品分解图/Exploded drawing


部件表/Parts List

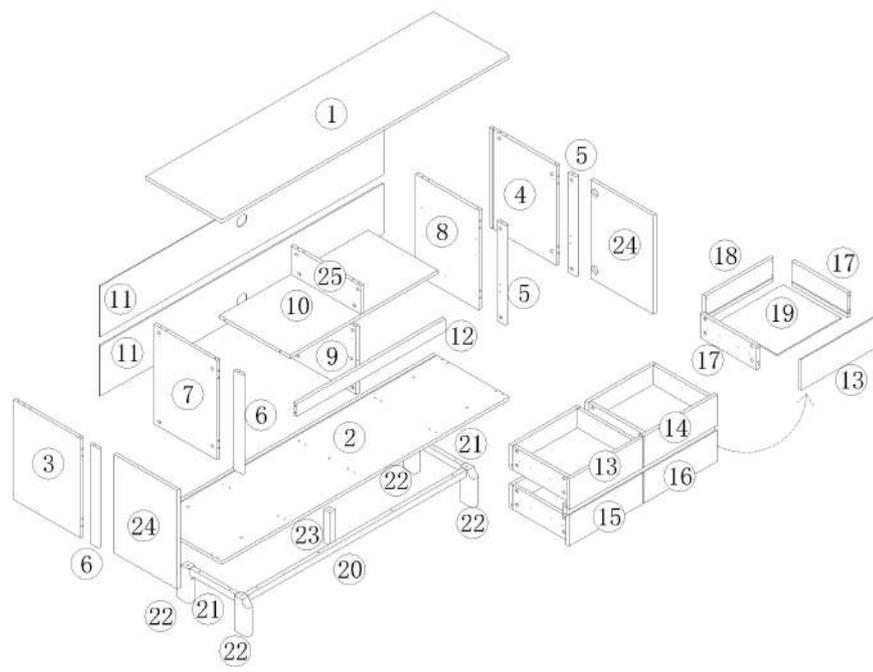

编号NO.	名称Name
①	面板Top panel
②	底板Bottom board
③	左侧板Side board(L)
④	右侧板Side board(R)
⑤	右侧柱Side column(R)
⑥	左侧柱L side pillar
⑦	左中侧板Middle side board(L)
⑧	右中侧板Middle side board(R)
⑨	中侧板Middle side board
⑩	层板Shelf
⑪	背板Back board
⑫	前拉条Front brace
⑬	左上抽屉面板 Upper drawer's panel (L)
⑭	右上抽屉面板 Upper drawer's panel (R)
⑮	左下抽屉面板 Bottom drawer's panel (L)
⑯	右下抽屉面板 Bottom drawer's panel (R)
⑰	抽屉侧板Drawer's sideboard
⑱	抽屉后板Drawer's Back board
⑲	抽屉底板Drawer's Bottom board
⑳	前立水Front apron
㉑	侧立水Side apron
㉒	脚Foot
㉓	中脚Middle foot
㉔	门板Door board
㉕	上中侧板 Upper middle side panel

UB2M-A1. 8m高脚电视柜

安装方法/
Installation method

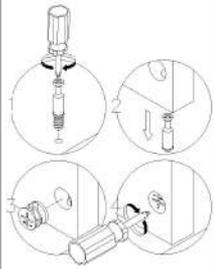

二合一 two-in-one


阀门开关(下压为开)
Valve switch (press down to open)

前 Forward 后 Back



(A)*32
(B)*32

(A)*3
(B)*3
(C)*2

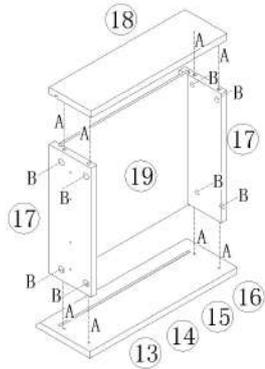


× 4

1

(E)*24
(O)*4

× 4

2


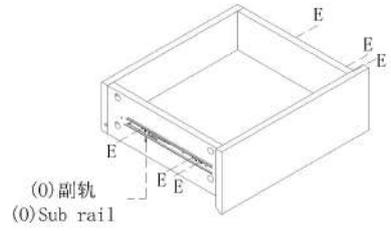


(O) 副轨
(O) Sub rail

3


(A)*8
(B)*8
(C)*8

4

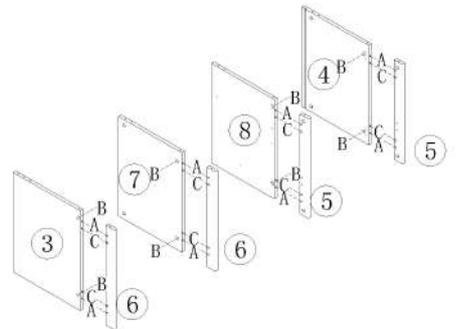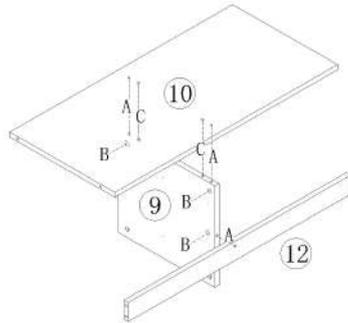


UB2M-A1. 8m高脚电视柜


安装方法/
Installation method

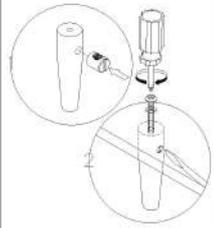

锤母
Hammer nut

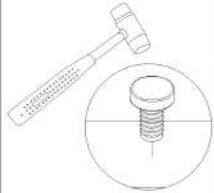


防滑PVC胶塞
Rubber stopper

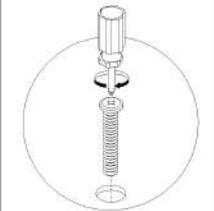


斜边十字螺杆
bevel cross screw


- (A)*10
- (B)*10

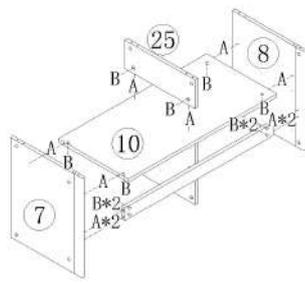


- (A)*10
- (B)*10
- (C)*10

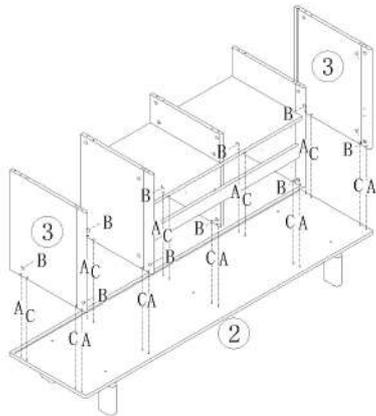

- (G)*8
- (K)*4
- (L)*1
- (M)*4
- (N)*4
- (P)*1

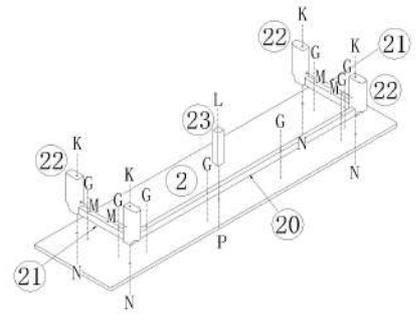


- (A)*10
- (B)*10
- (C)*10
- (H)*4
- (J)*1

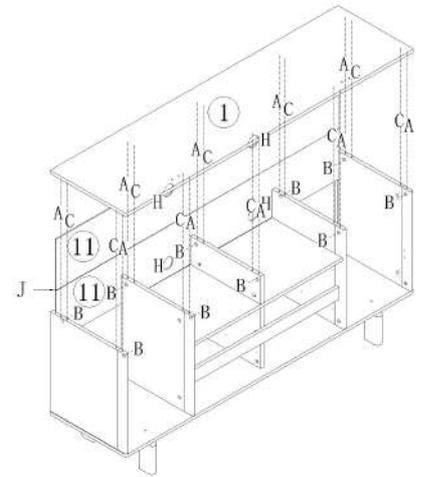


UB2M-A1. 8m高脚电视柜

安装方法/
Installation method

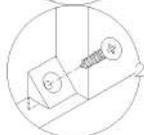

背板扣
Back Plate Buckle

- (E)*32
- (O)*4
- (F)*2

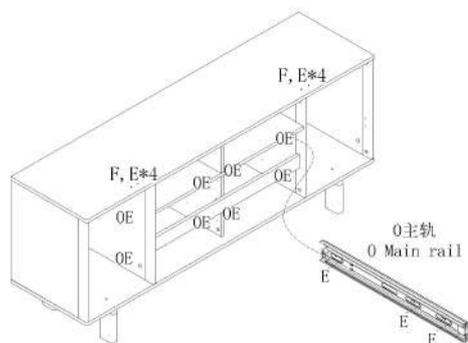


9




(D)*4

10

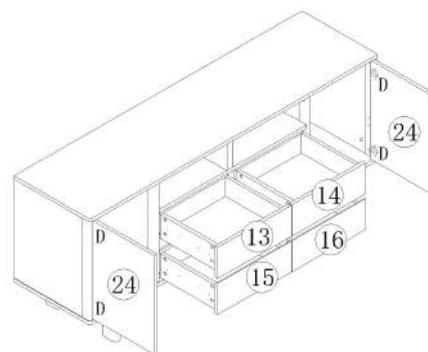


- (E)*12
- (I)*12

11

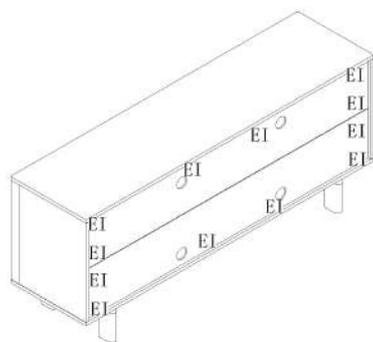

12

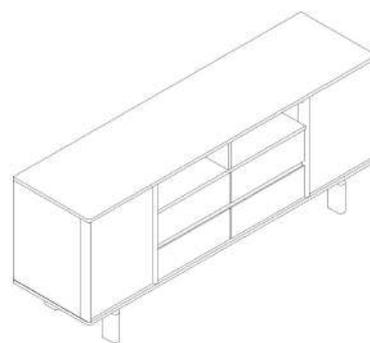

UB2M-A1. 8m高脚电视柜


(Q)*1

安装方法/

Installation method

9

