


Oil Quality Display

INSTALLATION

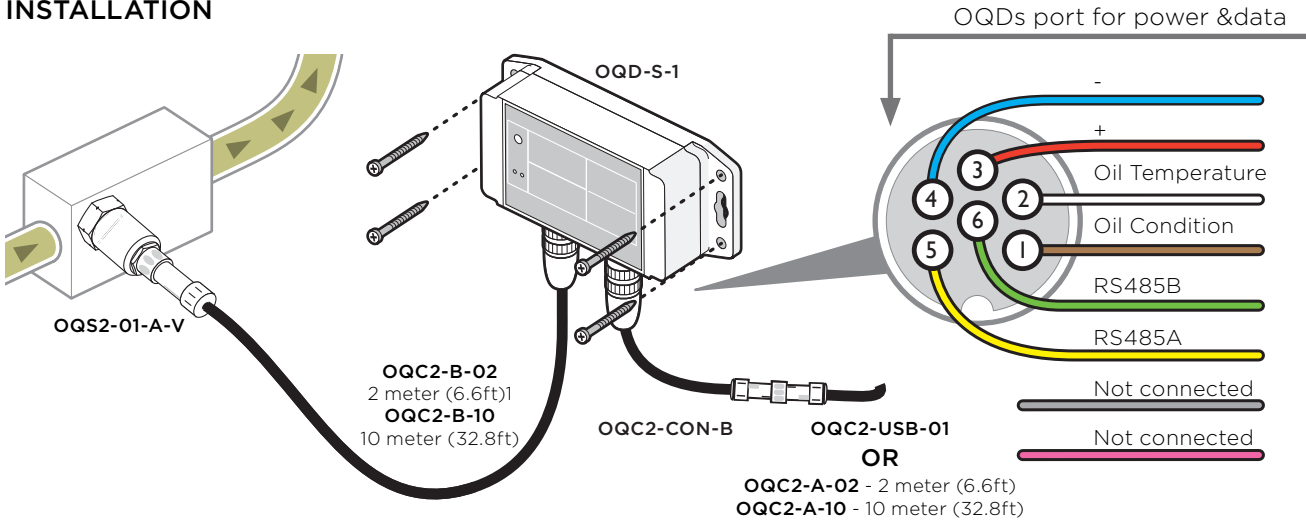


CONFIGURATION



- Install OQS & OQD configuration software
- Allow configuration cable to update drivers

Configuration parameters:


- Warning and alarm levels
- Temperature units
- Datalog interval
- Rate of change interval
- Bluetooth on/off

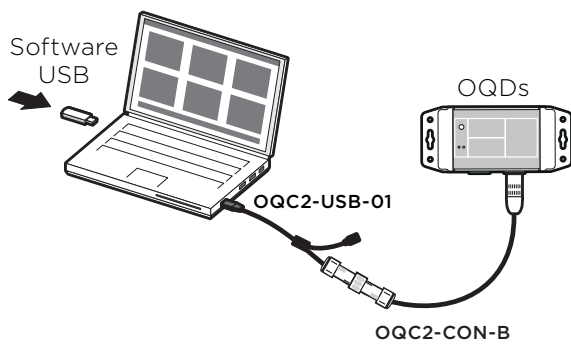

Cables are sold separately
Ensure OQS 2 is configured correctly,
refer to sensor manual

DEFAULT CONFIGURATION

(Quality warning thresholds are configurable)

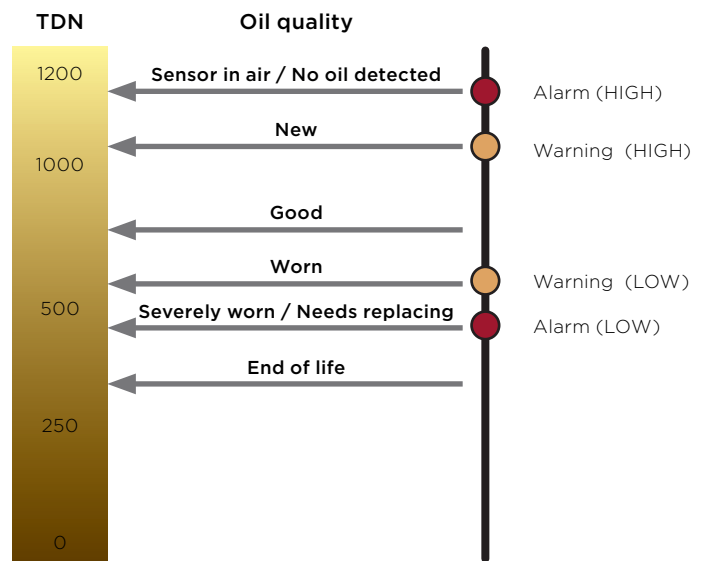

TROUBLESHOOTING

- 1 Check configuration
- 2 Refer to user manual
- 3 Contact Des-Case representative

Configurations

OIL QUALITY SENSOR



OIL QUALITY DISPLAY

