 



AUTOPACK SENTINEL SYSTEM CONNECTION GUIDE

SYSTEM CABLE BUNDLES



15 FT (4.5m) HOSE TRACTOR CABLE BUNDLE
(CBL EA15F-1RB6PP-2PL10-1PL5)

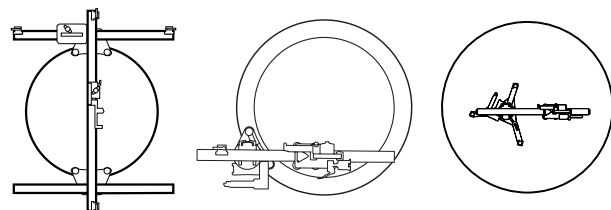

15 FT (4.5m) POSITIONER CABLE BUNDLE
(CBL EA15F-1RB6PP-2PL5)

 
2 BUNDLES REQUIRED



90° TO POSITIONER



20 FT (6m) CONTROLLER CABLE
(CBL E020F-1RB6PP)




20 FT (6m) CONTROLLER CABLE
(CBL E020F-1RB6PP)





The Power Hub can be connected using the 12v AC-DC or the 12v DC-DC supply. Both are available in US or EU versions.

 POWER CABLES




OR

 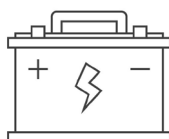

12V AC-DC US OR EU POWER SUPPLY
(CAM 410-XX)

 FOR OUTLET



12V DC-DC US OR EU POWER SUPPLY
(PHA 520-001)

FOR BATTERY



50 FT (15m) POWER CABLE EXTENSION
(CBL E050F-1RB3RP)



AUTOPACK SENTINEL SYSTEM CONNECTION GUIDE

