



SL Swivel Maintenance Kit Contents

SL 610-K	SL 600-K
BJ 062-S (ANTISEIZE, COPPER 1.3, 2g POUCH) x1	BJ 062-S (ANTISEIZE, COPPER 1.3, 2g POUCH) x1
PL 525 (SL-M9/P8 ROTARY COUPLINGS MANUAL INSERT 11 x 17) x1	PL 525 (SL-M9/P8 ROTARY COUPLINGS MANUAL INSERT 11 x 17) x1
RJ 009 (Bearing, Ball) x3	RJ 011-KC (Carbide Seat) x1
RJ 011-KC (Carbide Seat) x1	RJ 012-KTO (ASSY, HP SEAL WITH O-RING, .31OD x .23OAL) x1
RJ 012-KTO (ASSY, HP SEAL WITH O-RING, .31OD x .23OAL) x1	RJ 013-K (Coil Spring) x1
RJ 013-K (Coil Spring) x1	SL 600-P
RJ 021-S (WEEP SEAL) x1	BJ 062-S (ANTISEIZE, COPPER 1.3, 2g POUCH) x1
RJ 029 (Seal, Piston) x1	PL 525 (SL-M9/P8 ROTARY COUPLINGS MANUAL INSERT 11 x 17) x1
SL 010 (SEAL, 30mmOD, NITRILE, DOUBLE LIP W/SPRING, RUBBER COVERED (for vition see SC168 007)) x1	RJ 011 (Brass Seat) x1
SL 610-P	RJ 012-TO (ASSY, HP SEAL WITH O-RING, .37OD x .23OAL) x1
BJ 062-S (ANTISEIZE, COPPER 1.3, 2g POUCH) x1	RJ 013 (Coil Spring) x1
PL 525 (SL-M9/P8 ROTARY COUPLINGS MANUAL INSERT 11 x 17) x1	
RJ 009 (Bearing, Ball) x3	
RJ 011 (Brass Seat) x1	
RJ 012-TO (ASSY, HP SEAL WITH O-RING, .37OD x .23OAL) x1	
RJ 013 (Coil Spring) x1	
RJ 021-S (WEEP SEAL) x1	
RJ 029 (Seal, Piston) x1	
SL 010 (SEAL, 30mmOD, NITRILE, DOUBLE LIP W/SPRING, RUBBER COVERED (for vition see SC168 007)) x1	