

Kimball®

HELIO™

WORK
UNFRAMED



Helio Task Chair

Arm Caps

Apply hand pressure for front to back, side to side, and pivoting left to right positions.

Height Adjustable Arm

Engage button to slide arm up or down for height adjustability.

Width Adjustable Arm

To engage upright width adjustment, push lever down and move arm to desired position and lift lever up.

Seat Height Adjustment

Stand up and pull lever to raise seat height or pull lever while sitting in chair to lower seat height to desired position.

4-Position Synchro Lock

To lock back in upright position, lift up on lever; to unlock, push down on lever. To lock chair in another angled position lean back to desired position and lift up on lever; to unlock, push down on lever.

Seat Depth Adjustment

Pull lever up and slide seat front or back to desired position.



Kimball®

A unit of Kimball International
©2018 Kimball International, Inc.
Part No. 3141250

HELIO™
kimball.com / 800.482.1818