

WISH SEATING RIGHT SIDE ADJUSTMENTS

Rotate Arm Cap:

Press button on inside and move arm cap in or out.

Adjust Arm Cap:

Press button on outside and move arm cap backward, forward or side to side.

Adjust Arm Height 2D or 4D:

Press button on outside and lift up or down.

If arm is height adjustable only:

Press button on front of arm cap and lift up or down.

Back Support Tension:

Pull knob out and rotate clockwise to increase back tension; rotate counter-clockwise to decrease tension.

Seat Height Adjustment:

Stand up and pull lever to raise seat height or pull lever while sitting in chair to lower seat height to desired position.

Adjust width of arms:

Pull down on lever and move arm in or out and lock the lever in place.



Kimball®

A unit of Kimball International
©2016 Kimball International, Inc.
Part No. 2852811

WISH™

kimball.com / 800.482.1818

WISH SEATING LEFT SIDE ADJUSTMENTS

Adjust Lumbar Support:

Move 2 tabs on back of chair up or down to desired comfort.

Back Tilt Lock Mechanism:

To lock back in upright position, turn knob clockwise; to unlock turn knob counter-clockwise.

To lock chair in another angled position lean back and turn knob clockwise; to unlock turn knob counter-clockwise.

Seat Depth:

Pull lever up and move seat front or back to desired position.



Kimball®

A unit of Kimball International
©2016 Kimball International, Inc.
Part No. 2852811

WISH™

kimball.com / 800.482.1818