


MEDIA CART

Figure A

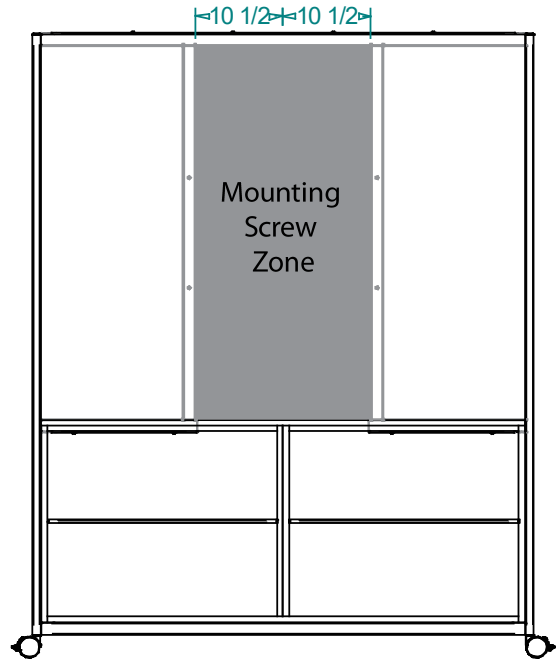

Tools Required

- Cordless driver with magnetic post and following tips
 - M5 HEX driver
 - 1/2" Deep Well Socket and Ratchet

Hardware Required (Included)

- 4-M10 Caster Stems
- 4- 65mm Locking Casters

Installation

1. Unpack Cart and all hardware.
2. Install Caster Stems using 1/2" Deep Well Socket. Ensure stem is not cross threaded before tightening. Ensure stems are securely tightened before installing Caster.
3. Locate desired position of TV Mount (Not Included) on the Face of the Media Cart. TV Mount should be installed on veneer or laminate face, not on markerboard face. TV mount should be installed per the manufacture's instruction. Wood screws should be used and should not exceed 1 1/2" in length and be within 10 1/2" of centerline of cart, See Figure A.
4. A wire passthrough hole can be added to the mounting surface anywhere in the Mounting Zone described in Figure A but ensure it will be covered by TV if a grommet is not used.
5. Before TV is Installed, Markerboard can be removed from back of cart to help route cables. This is done by loosening 4 M6 Cap screws along the top of the cart. Reinstall Markerboard before installing TV.
6. Mount TV to TV Mount per manufacture's instructions. Total Weight of TV and Mount Should not Exceed 30 lbs.

Figure B

