

HARDWIRE INFEED

Hardware

Hardware Power Infeed


Installation

1. Orient the jumper so the pen housing matches the power block, as shown in Figure A.
2. Slide the jumper on to the power block. See Figure B.
3. Connect the infeed to the building power.

Note: The conduit can be shortened if required by snapping the conduit out to the cut line.

Warning: Connection to building power must be completed by a licensed electrician. Installation must be in accordance with National Electrical Code and local codes. This system may be connected to more than one source of supply. No single circuit may be powered by more than one source. Do not interconnect system electrical power from different feed units. This can cause shock and fire hazard. Be certain all sources are disconnected prior to any servicing.

Figure A

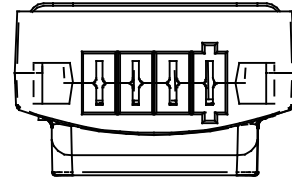

Keyed Housing

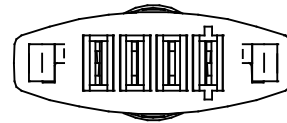


Figure B

