
MOUNTING INSTRUCTIONS MT5 TASK LIGHT

BRACKET MOUNT INSTALLATION:

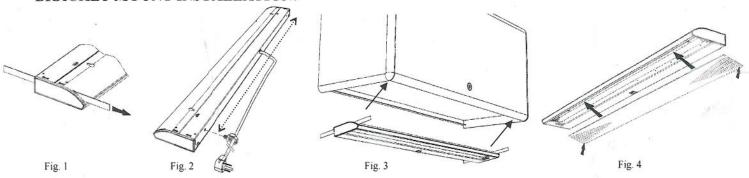

- 1. Remove from fixture package, making sure that the mounting brackets (2) unpacked.
- 2. Mounting brackets are attached by sliding through the mounting slots located in each end of the fixture. Slide from rear of the fixture to the front as in fig. 1.
- 3. If fixture cord management is necessary, press clip (located on cord) into hole on desired end of fixture, and clip cord in place. (fig 2)
- 4. Place leading edge of brackets on the underside of the front edge of the shelf. (fig. 3)
- 5. Push fixture upward and flex brackets in, to secure in place.
- 6. Install lens in place, rough side of lens down, away from lamp. For BW lens, rough side up, toward the lamp.
 - a) Insert lens into front of fixture
 - b) At rear corners of lens, press upward and push back to secure in place. (fig 4)
- 7. Plug into 120 volt, 60 HZ, grounded outlet.

SCREW MOUNT INSTALLATION:

δ		5
_	M	•

Nominal Length	Mounting Spacing	
13"	5.67"	
24"	15.93"	
36"	27.74"	
48"	39.56"	
60"	51.40"	

Predrill holes in shelf 1/8" Diameter X 1/2" Deep

- 1. Remove fixture from package and remove screw kit from cord.
- 2. Remove the lens and fluorescent bulb.
 - a) To remove lens, press lens (at ends) and slide to front of fixture. (fig. 5)
- Using the chart above, determine spacing of screws for fixture that is being mounted and drill holes in shelf.
- 4. Drive 2 screws into predrilled holes under shelf leaving approximately 1/16" between head of screw and shelf.
- Hold fixture against shelf until heads of screws pass through large end of keyhole slots. Push fixture toward back of shelf.
- 6. Tighten screws and replace fluorescent lamp.
- 7. Replace lens. Place rough side of lens down, away from lamp. For BW lens, rough side up, toward the lamp.
 - a) Insert lens into front of fixture
 - b) At rear corners of lens, press upward and push back to secure in place. (see fig 4 above)
- 8. If fixture cord management is necessary, press clip (located on cord) into desired end of fixture, and clip cord in place. (see fig 2 above)
- 9. Plug into 120 volt, 60 HZ, grounded outlet.

